



Mercedes-Benz

Transporters • Electrical System
VITO/VIANO (Model 639)

Wiring Diagrams

Technical training for Customers



As at 06/05



Global Training.

The finest automotive learning

Wiring Diagram Manuals Part Number: Z6517 2111 02

This document is intended solely for use in training and is not subject to regular updating. Part numbers and documentation included in this document may change and the latest information should always be used.

Printed in England

© 2005 Copyright DaimlerChrysler UK LTD

Publisher: Mercedes-Benz CV Electrics & Telematics Team

This document with all its sections is protected under the laws of copyright. Its use for any purpose whatsoever requires the prior written consent of DaimlerChrysler UK LTD. This applies in particular to its reproduction, distribution, modification, translation, recording on microfilm or storage and/or processing in electronic systems, including databases and on-line services.

Note:

The term »employees« does not imply any preference of gender and incorporated male and refers to male and female employees alike.

Contents

Chapter Title

- 1 Use of wiring diagrams
- 2 Abbreviations for wiring diagrams
- 3 Location and assignment of ground points
- 4 Location and assignment of plug connectors
- 5 Battery starting charging circuit
- 6 Voltage supply fuses
- 7 Fuse and relay board (SRB)
- 8 Signal Acquisition and actuation module (SAM)
- 9 Exterior lights
- 10 Central locking
- 11 CAN bus
- 12 Instrument cluster (IC)
- 13 Electronic ignition switch (EIS)
- 14 Electronic stability control (ESP)
- 15 Common rail diesel injection (CDI)
- 16 Standard heater

Use of Wiring Diagrams

Chapter 1

| | | | |
|---------------------|------------------------|--|--|
| OV00.01-S-1901-03VA | Use of wiring diagrams | | |
|---------------------|------------------------|--|--|

Wiring diagrams

/ The wiring diagrams are assigned to the familiar function groups 00-91. The systems are listed alphabetically with an indication of the function group/ function subgroup in the "Search aid for all wiring diagram groups"

OV00.01-S-1901VA or A3 (paper version).

/ The wiring diagrams are filed in the respective function group arranged according to the PE number,

e.g.: PE07.16-S-2000VA
PE07.16-S-2000IVB

To check the completeness of the volume the sequence of the wiring diagrams filed can be seen from the lists of contents of the respective function group. For supplements the wiring diagrams should be filed as per the supplement sheet.

e.g.: PE00.19-P-1100VA Overview of wiring diagrams....

/ The wiring diagrams are prepared as function diagrams or control unit diagrams and are built up as follows:

-Function diagrams

The control units and electrical components belonging to the function are shown as symbols. The functional connections are realized by direct lines or by the data bus.

-Control unit diagrams

Control units are represented complete with all connected components. The feed of the control units appears first.

The wiring diagrams also contain linkages of possible versions and functions.

Linkages, recognizable as versions, are framed and provided with an abbreviated designation/ abbreviation.

The versions are designated with 1 and 2


/ Notes on the accompanying documents for connectors/ terminal blocks (B1)

Special equipment (SA) is specifically highlighted in the notes column. For connectors, which are installed in special equipment, the special equipment is specified in the notes column in the row in front of the connector designation. For connectors, which are installed as standard, special equipment specification is noted directly at the respective jack and/or connector.

The feed of the terminal blocks is shown by means of an arrow pointing to the left, the outputs by means of arrows pointing to the right. The grouping of the individual variants/ special equipment (SA) is highlighted by means of broken lines. All outputs to components, which are installed as standard, are listed up to the first broken line.

Connection designation


- a Component
- b Clutch
- c Socket

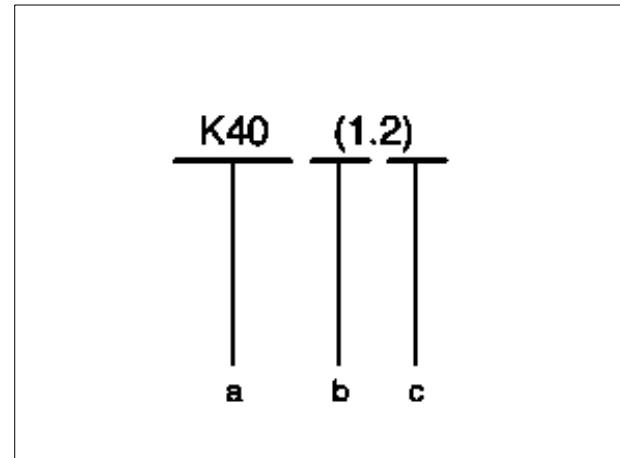

P00.19-0402-01

Wire designation


- a Conductor cross-section in mm²
- b Basic color
- c Identification color

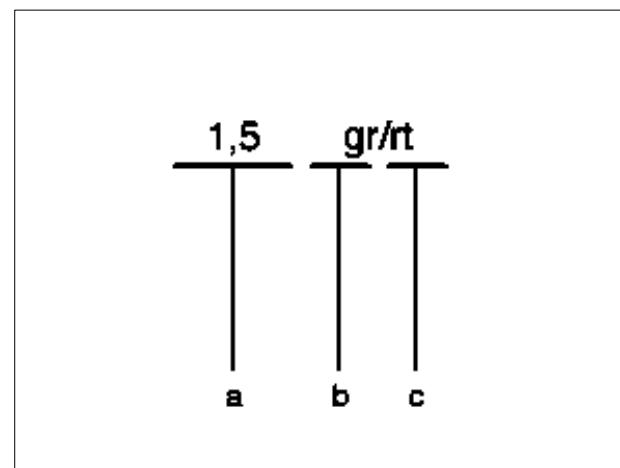

P00.19-0403-01


Identification of truncated wires

- a Component to which the truncated electric line leads
- b Connection designation on component

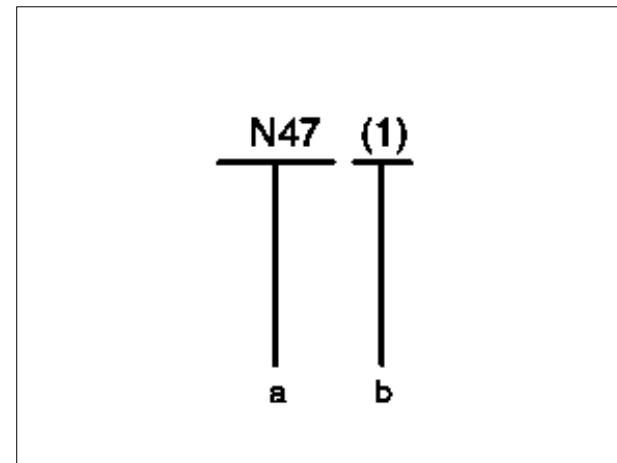


Fuse blocks

- a Receptacle numbering, output (A, B, C or D)
- b Line bridge
- c Terminal designation
- d Fuse rating in amp(s)
- e Receptacle numbering, input (E)
- f Fuse number

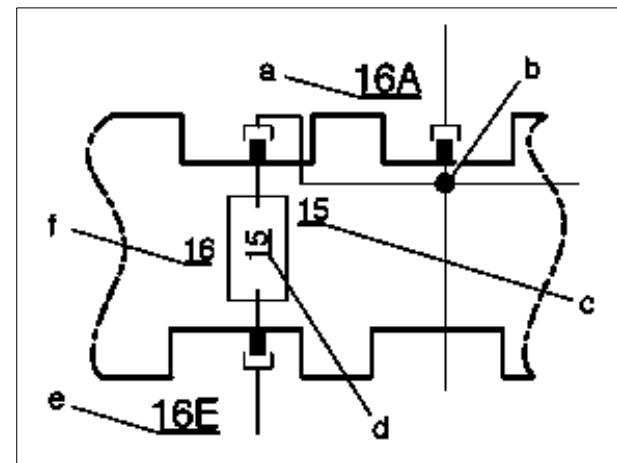


Components and switches

- a Component which are not represented completely are shown dismantled.
- b Switching contacts are shown in the rest position.

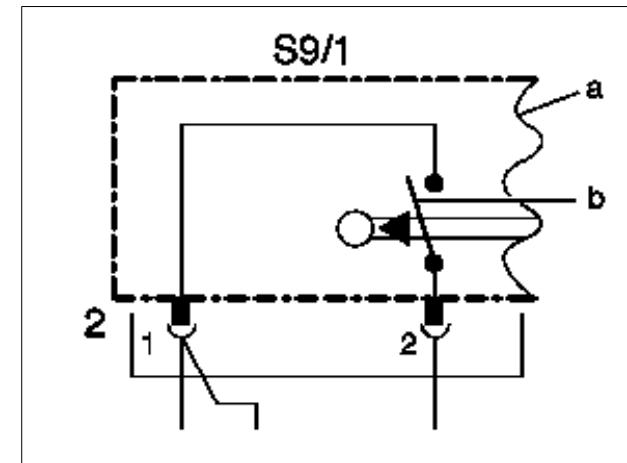


- a Illustration of a function-specific component with connection designation and corresponding line
- b Illustration of a function-independent component connection with corresponding line

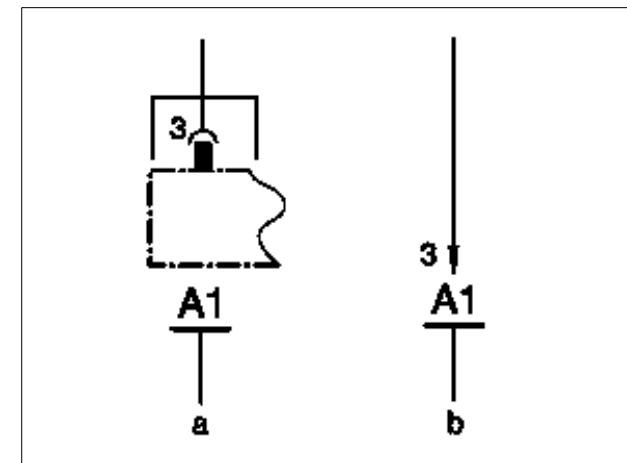

Looped lines


- a Function-specific components
- b The looped line connects two function-specific components across one or more function-independent component connections.

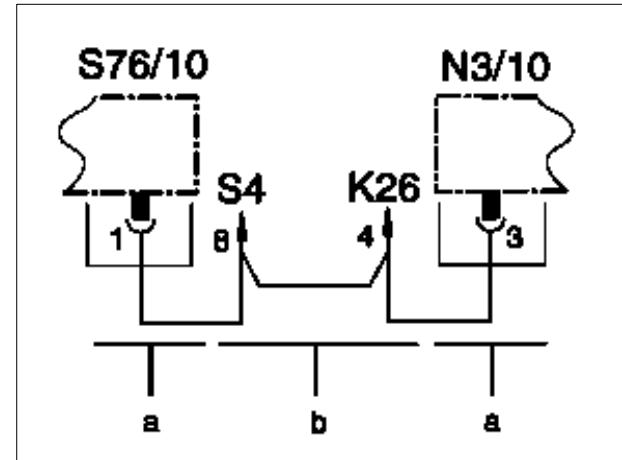

P00.19-2089-01


Indirect line (only for terminal 31 or terminal 58)

- a Function-specific component
- b Indirect line for more than two intermediate function-independent component connections/loops.
- c Connection to either terminal 31 or terminal 58

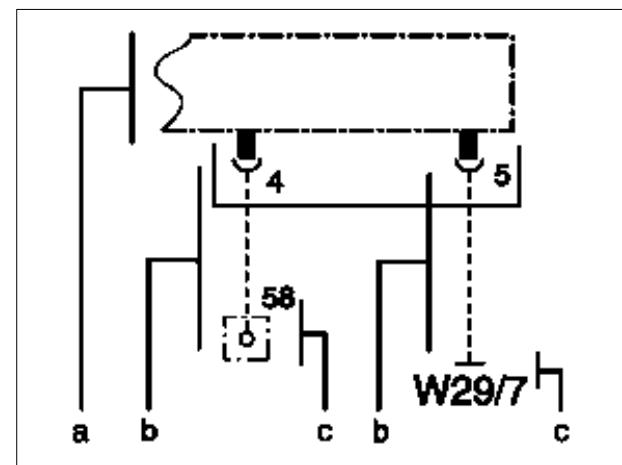

Installation date

- a Installation of a component up to date
- b Installation of a component as of date

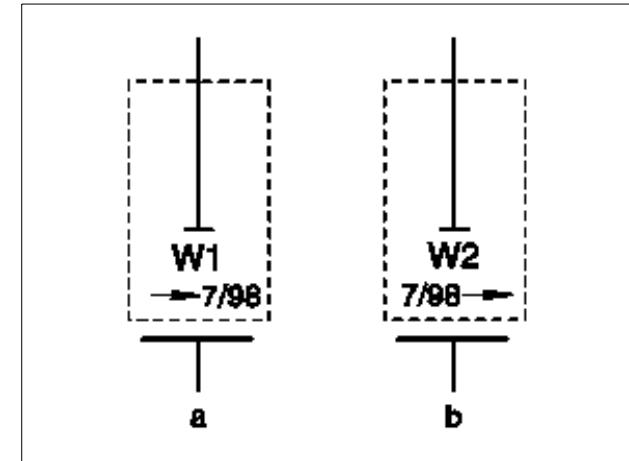

P00.19-2094-01

| | | | |
|----|---|-------------|---------------|
| BK | = | Black | = black |
| BN | = | Brown | = brown |
| BU | = | blue | = blue |
| GN | = | green | = green |
| GY | = | gray | = gray |
| OG | = | orange | = orange |
| PK | = | pink | = pink |
| RD | = | red | = red |
| TR | = | transparent | = transparent |
| VT | = | violet | = violet |
| WH | = | white | = white |
| YE | = | yellow | = yellow |

Abbreviations for Wiring Diagrams

Chapter 2

| | | | |
|---------------------|-----------------------------------|---|--|
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | MODEL 639.601/603/605/701/703/ 705/711/713/811/813/815 | |
|---------------------|-----------------------------------|---|--|

| Abbreviation | Designation | Code | FG.FUG |
|--------------|--|--|----------------|
| AB | Airbag | | 91.00 |
| ABL | Exterior lights | | 82.10 |
| ABS | Antilock brake system | | 42.30 |
| AT | Automatic transmission | G40 - Automatic transmission | 27.19 |
| AHV | Trailer hitch | Q22 - Fixed trailer hitch Q50 - Trailer hitch with detachable ball head | 31.19 |
| AKC | Anti-knock control | | |
| ACSR | Automatic child seat recognition | | 91.60 |
| BCAPC | Barometric pressure/charge air pressure compensation | | |
| APS | Auto pilot system | EN2 - Auto pilot system with TMC interface EN4 - Auto pilot system with TMC interface, large display EN9 - Auto pilot system for Japan, large display | 82.61 |
| EGR | Exhaust gas recirculation | | 14.20 |
| ART | Adaptive cruise control | IN18 - Distronic | |
| DSV | Drive authorization system shutoff valve (DSV) | | 80.35 |
| ASR | Acceleration slip regulation | BB3 - Electronic Stability Program (ESP) | 42.40 |
| ATS | Antenna systems | | 82.62 82.70 |
| BAS | Brake Assist | BB3 - Electronic Stability Program (ESP) | 42 |
| CDI | Common rail diesel injection | | 07.16 |
| CDC | CD changer | EP5 - CD changer | 82.64 |
| D2B | Digital data bus | EH3 - Portable CTEL preinstallation linked to D2B network | 82 |

| | | | |
|----------|--|--|-------|
| OCP | Overhead control panel control unit | LD0 - Dome lamp with reading lamp for driver/front passenger | 54.21 |
| DTR | Distronic (adaptive cruise control) | IN18 - Distronic | |
| EDC | Electronic diesel control | | 07.16 |
| EDS | Electronic diesel system | | 07 |
| ATA | Anti-theft alarm system | FZ5 - Anti-theft alarm system | 80.50 |
| EFH | Power windows | | 72.29 |
| ISC | Electronic idle speed control | | 07 |
| ELC | Electronic level control | CL0 - Rear lowerable/raisable air suspension | 32.33 |
| ESP | Electronic stability program | BB3 - Electronic Stability Program (ESP) | 42.45 |
| ESA | Electric seat adjustment | SF1 - Electrically adjustable luxury driver seat | 91.00 |
| DFI | Diesel injection system (electronic distributor-type fuel injection) | | 07.16 |
| EIS | Electronic ignition switch control unit | | 54.21 |
| RFL/IRCL | Radio frequency locking/infrared remote central locking | FZ5 - Anti-theft alarm system | 80.50 |
| HFS | Hands-free system | | 82.70 |
| GPS | Global positioning system | | |
| ETR | Emergency tensioning retractor | | 91.00 |
| HEAT | Automatic heater | | 83 |
| HFM-SFI | HFM sequential multiport fuel injection/ignition system | | 07.61 |
| HHS | Heated rear window | | 67.29 |
| IRCL | Infrared remote central locking | | 80.20 |
| IMS | Interior motion sensor | | 80.50 |
| TWC | Catalytic converter | | 07 |
| IC | Instrument cluster | | 54.30 |
| AAC | Automatic air conditioning | HH4- Automatic air conditioning | 83.00 |
| LHD | Left-hand drive vehicle | | |
| ISC | Idle speed control | | |
| LS | Power steering gear | | |

| | | | |
|----------|--|--|----------------|
| HRA | Headlamp range adjustment | | 82.10 |
| ME-SFI | ME-SFI fuel injection and ignition system | | 07.61 |
| MT | Manual transmission | | |
| MOST | Media Oriented System Transport | | 82 |
| REST | Residual engine heat utilization system | | |
| OSL | Orthopedic seat backrest | | |
| PTS | Parktronic system | EZ8 - Parktronic System (PTS) | 54.65 |
| RHD | Right-hand drive vehicle | | |
| SR | Tilting/sliding roof | D24 - Glass tilting/sliding roof in passenger compartment D27 - Glass tilting/sliding roof in driver compartment | 54.21 77.20 |
| HS | Heated seats | H15 - Heater for front passenger H16 - Heater for driver seat | 91.00 |
| SOUND | SOUND systems | | 82.85 |
| SPH | Mirror heater | | 88.79 |
| HCS | Headlamp cleaning system | | 82.35 |
| STH | Stationary heater | H12 - Warm water auxiliary heater H85 - Preinstallation for auxiliary heater HZ1 - Warm air auxiliary heater (Westfalia) | 83.70 |
| TEL | Telephone | EH3 - Portable CTEL preinstallation linked to D2B network JV4 - Portable CTEL telephone preinstallation | 82.70 |
| TELE AID | Telematic Alarm Identification on Demand (emergency call system) | EZ9 - Car telephone emergency call system (Tele Aid) | |
| DCU | Door control unit | | 72.29 |
| HB | Heater booster | HZ9 - Heater booster | 83.70 |
| CL | Central locking | | 80.20 |

| | | | |
|---------------------|---|--|--|
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | |
|---------------------|---|--|--|

| Abbreviation | Designation | Notes |
|--------------|--|-------|
| (+) | Positive | |
| (-) | Negative | |
| 15 | Switched positive | |
| 30 | Battery voltage, positive (continuous positive) | |
| 31 | Return line to battery negative or ground, direct | |
| 49 | Turn signal generator input | |
| 49a | Turn signal generator output | |
| 49L | Left turn signal lamp | |
| 49R | Right turn signal lamp | |
| 50 | Starter control (direct) | |
| 55 | Front fog lamp | |
| 56 | Headlamp light | |
| 56a | High beam and high beam indicator | |
| 56b | Low beam | |
| 58 | Position, tail, license plate and instrument lamps | |
| 58d | Variable instrument/switch illumination | |
| 61 | Alternator monitor | |
| 85 | Negative or ground winding end | |
| 86 | Start of winding | |
| 87 | Input | |
| 87a | First output (NC side) | |
| 87b | Second output | |
| 87c | Third output | |
| A-CDW-SIG | CD-player with changer signal | |

| | | |
|---------------|---|--|
| A-P-EV1 | Output - pulse width signal - injection valve, cyl. 1 | |
| A-P-EV2 | Output - pulse width signal - injection valve, cyl. 2 | |
| A-P-EV3 | Output - pulse width signal - injection valve, cyl. 3 | |
| A-P-EV4 | Output - pulse width signal - injection valve, cyl. 4 | |
| A-S-LSHVVK | Output - shift signal - oxygen sensor heater | |
| A-S-RPR | Output - fuel pumps signal - relay | |
| A-STAR | Output - starting relay | |
| A-T-LUES | Output, fan control | |
| A-ZUE1 | Output, ignition coil 1 | |
| A-ZUE2 | Output, ignition coil 2 | |
| AE | Trailer recognition | |
| AKSE (CSD) | Automatic child seat recognition (ACSR) | |
| AL | Exit lamp | |
| AS | Towing sensor | |
| ASS/IRS | Towing sensor/interior protection | |
| ASV 1 | Intake solenoid valve 1 | |
| ASV 2 | Intake solenoid valve 2 | |
| Autom. Ant. | Automatic antenna | |
| A_AGR | Actuation of exhaust gas recirculation positioner | |
| A_ANR | Output, fuse and relay box | |
| A_Dachz_1 | Roof sign lamp | |
| A_Dachz_2 | Roof sign lamp | |
| A_DKS | Intake air throttle valve actuator | |
| A_DRV | Grounded output, pressure regulator valve | |
| A_EC_Daten | Mirror taximeter | |
| A_EKA | Actuation of inlet port shutoff switchover valve | |
| A_EKP | Actuation of inlet port shutoff switchover valve | |
| A_IRS_2_ALARM | Interior protection | |
| A_IRS_2_ALARM | Output, alarm | |
| A KEH | Grounded output, vent line heater element | |

| | |
|------------------|---|
| A_KI.31_MIC | Voltage supply, microphone ground |
| A_LDR | Grounded output, boost pressure control pressure transducer |
| A_LED_Funk | Roof sign switch LED |
| A_LSH1 | Output, O2 sensor, upstream from TWC |
| A_Mute | Radio muting |
| A_RS485_H | RS 485 interface, high signal |
| A_RS485_L | RS 485 interface, low signal |
| A_TEL_Mute | Telephone muting |
| A_VDK | Actuation of intake air throttle valve actuator |
| A_Wegstr_SPT | Output, mirror taximeter vehicle speed signal |
| A_ZME | Grounded output, quantity control valve |
| B - | Battery negative |
| B+ | Battery positive |
| B-D-DIAK | Bus - data transfer - diagnosis (K-line) |
| BBVVR | Brake wear, right front |
| BF | Front passenger |
| BFT | Front passenger door |
| BLS | Stop lamp switch NO contact |
| BS | Stop lamp switch NC contact |
| BSA (17, ADXL76) | Acceleration pick-up (piezoelectric, micromechanical) |
| CAN (H) | CAN (high) |
| CAN (L) | CAN (low) |
| CD | Compact Disc |
| CDW Bus | CD changer bus |
| CDW Masse | CD changer ground |
| CDW Steuerung | CD changer control |
| CDW Versorg. | CD changer supply |
| Cod. RXD | Coding for service bus (RXD) |
| Cod. TXD | Coding for service bus (TXD) |
| CROA | Crash output, analog |

| | |
|-------------|---|
| D- | Dynamo, negative |
| D+ | Dynamo, positive |
| D2B IN | Input, digital data bus |
| D2B OUT | Output, digital data bus |
| Daten IR | Infrared |
| DBE | Overhead control panel |
| DFA hi.li. | Rpm sensor output, left rear |
| DFA hi.re. | Rpm sensor output, right rear |
| DFA-HR | Rpm sensor output, right rear |
| DFHL | Rpm sensor, left rear |
| DFHR | Rpm sensor, right rear |
| DFVL | Rpm sensor, left front |
| DFVR | Rpm sensor, right front |
| Diag. | Diagnosis |
| Diag. Sthzg | Stationary heater diagnosis |
| DRS-1 | Yaw rate and lateral acceleration sensor |
| DRS-AY | Yaw rate and lateral acceleration sensor |
| DRS-Ref | Yaw rate and lateral acceleration sensor |
| DRSS | Yaw rate and lateral acceleration sensor |
| DS | Pressure switch |
| E-A-Crash | Input - analog signal - crash |
| E-A-Kupp. | Input - analog - clutch switch |
| E-A-LSVK | Input - analog - oxygen sensor |
| E-A-TMOT | Input - analog - coolant temperature |
| E-F-KS | Input frequency - knock sensor |
| E-F-KWDGB | Input frequency - crankshaft sensor |
| E-F-NWHG | Input frequency - camshaft Hall sensor |
| E-S-AUS | Input - shift signal - off |
| E-S-FSMOEL | Input - signal - oil fill level and temperature |
| E-S-KSK | Input - shift signal - control shift contact |

| | | |
|----------------------------|--|--|
| E-S-S+B | Input - shift signal - set plus accelerate | |
| E-S-S-B | Input - shift signal - set - accelerate (decelerate) | |
| E-S-v. Begr. | Input - signal - variable limit | |
| E-S-WA | Input - shift signal - resume | |
| ED | Duty cycle | |
| EDW D | ATA data | |
| EDW M | Ground | |
| EDW-ZA | ATA state display | |
| EHD | Electrohydraulic pressure supply | |
| ELV Magnetabsch. | Solenoid switch for electric steering adjustment | |
| ELV-Daten | Electric steering lock control unit data | |
| EMV | Electromagnetic compatibility | |
| ENR-OFF | Actuation of level control lock-out switch LED | |
| ER | Capacitor | |
| ESG | Electrical control unit | |
| E_AT_NOTA | Input, emergency alarm system activate button | |
| E_Dachz/Funk_UBF | Input, roof sign switch | |
| E_DPF | Input, pressure differential sensor CAT (NAFTA) | |
| E_HFM | Input, mass air flow sensor hot film | |
| E_HFM2 | Input, mass air flow sensor hot film | |
| E_HFMT1 | Input, mass air flow sensor hot film, temperature 1 | |
| E_IRS_2_DATAS | Signal, interior protection sensor, rear | |
| E_KIK | Input, kickdown switch pedal value sensor | |
| E_KT_Dachz/Stat WLH_WVC | Input, taximeter | |
| E_KUP1 | Input, clutch pedal switch | |
| E_KW+ | Signal, crankshaft position sensor | |
| E_KW- | Signal, crankshaft position sensor | |
| E_LDF | Input, charge pressure sensor | |
| E_LSH1 | Input, O2 sensor, upstream from TWC | |

| | | |
|-------------------------|--|--|
| E_LSIA1 | Input, O2 sensor, upstream from TWC | |
| E_L SIP1 | Input, O2 sensor, upstream from TWC | |
| E_L SIP2 | Input, common rail high pressure pump | |
| E_L SUN1 | Input, O2 sensor, upstream from TWC | |
| E_L SVM1 | Input, O2 sensor, upstream from TWC | |
| E_MOK | Input, oil sensor (oil level, temperature and quality) | |
| E_NWDG | Input, Hall sensor for camshaft | |
| E_P1 | Input, pressure sensor, downstream from air filter | |
| E_P3 | Input, charge pressure sensor | |
| E_PWG1 | Input, pedal value sensor | |
| E_PWG2 | Input, pedal value sensor | |
| E_RDS | Input, rail pressure sensor | |
| E_RT_NOTA | Input, emergency alarm system cancel button | |
| E_Sitz_Bel/Stat ASD_WVC | Input, pop-up roof (Westfalia) | |
| E_T1_2 | Input, mass air flow sensor hot film | |
| E_TANS | Input, charge air temperature sensor | |
| E_TKS | Input, fuel temperature sensor | |
| E_TMOT | Input, coolant temperature sensor | |
| E_WSG | Input, fuel filter water level sensor | |
| F | Driver | |
| FMEA | Failure mode and effect analysis | |
| FSB | Parking brake | |
| FT | Driver door | |
| FTA | Failure tree analysis | |
| Fz | Vehicle | |
| GAL | Speed-dependent volume control | |
| Gnd. RF-Ant. | Ground, radio frequency antennae | |
| GPS-Ant. | Global positioning system antenna | |
| GS | Emergency tensioning retractor | |
| GSL | Seat belt buckle | |

| | | |
|---------------|---|--|
| GSLBF + | Front passenger seat belt buckle, positive | |
| GSLFA+ | Driver seat belt buckle, positive | |
| GUSFO li. - | Left rear emergency tensioning retractor, negative | |
| GUSFO li.+ | Left rear emergency tensioning retractor, positive | |
| GUSFO re. - | Right rear emergency tensioning retractor, negative | |
| GUSFO re.+ | Right rear emergency tensioning retractor, positive | |
| HFE | Remote trunk lid release | |
| HFE-HS | Switch on rear lock for remote trunk lid release | |
| HFE-IS | Interior switch for remote trunk lid release | |
| HHS | Heated rear window | |
| HL AV | Left rear pressure reduction solenoid valve | |
| HL EV | Left rear pressure hold solenoid valve | |
| HR AV | Right rear pressure reduction solenoid valve | |
| HR EV | Right rear pressure hold solenoid valve | |
| IP1S | Actual value potentiometer 1 | |
| IP2S | Actual value potentiometer 2 | |
| IPA | Drive actual value potentiometer | |
| IPDK | Throttle valve actual value potentiometer | |
| IRS1 | Signal, interior protection sensor, front | |
| IS | Interior safety switch | |
| KDS | Kickdown switch position | |
| L/R | Left/right | |
| Lsp. hi.li. + | Left rear speaker, positive | |
| Lsp. hi.li. - | Left rear speaker, negative | |
| Lsp. hi.re. + | Right rear speaker, positive | |
| Lsp. hi.re. - | Right rear speaker, negative | |
| L_GAL | Speed-dependent volume control | |
| L_MIC | Microphone for speed-dependent volume control | |
| M SENS | Ground, sensor | |
| M-C-KS | Ground - knock sensor | |

| | |
|-----------|---|
| M-C-KWDGB | Ground - crankshaft sensor |
| M-R-LSVK | Ground - oxygen sensor |
| MBBVVR | Ground, brake pad wear, right front |
| MDFHL | Ground, vehicle speed sensor, rear left |
| MDFHR | Ground, vehicle speed sensor, right rear |
| MDFVL | Ground, vehicle speed sensor, left front |
| MDFVR | Ground, vehicle rpm sensor, right front |
| MH | Engine hood |
| Mikr. - | Microphone negative |
| Mikr.+ | Microphone positive |
| MKL | Multicontour backrest |
| MMV | Solenoid valve |
| MRS | Multiple restraint system |
| MTSG | Motor - door control unit |
| MV+ | Solenoid valve positive |
| M_AGR | Ground, exhaust gas recirculation positioner |
| M_DPF | Ground, pressure differential sensor CAT (NAFTA) |
| M_EDW | Ground, interior protection sensor, rear |
| M_EKA | Ground, inlet port shutoff switchover valve |
| M_HFM | Ground, mass air flow sensor hot film |
| M_KW | Ground, crankshaft position sensor |
| M_LDF | Ground, charge pressure sensor |
| M_MOK | Ground, oil sensor (oil level, temperature and quality) |
| M_NWDG | Ground, Hall sensor for camshaft |
| M_P1 | Ground, pressure sensor, downstream from air filter |
| M_PWG1 | Ground, pedal value sensor |
| M_PWG2 | Ground, pedal value sensor |
| M_RDS | Ground, rail pressure sensor |
| M_TANS | Ground, charge air temperature sensor |
| M_TKS | Ground, fuel temperature sensor |

| | |
|----------|---|
| M_TMOT | Ground, coolant temperature sensor |
| M_VDK | Ground, intake air throttle valve actuator |
| M_WSG | Ground, fuel filter water level sensor |
| N-R-NWHC | Ground - camshaft Hall sensor |
| NAV MUTE | Navigation system muting |
| NAV NF - | Navigation low frequency negative |
| NF | Low frequency |
| NF li | Low frequency, left |
| NF re | Low frequency, right |
| NOE | Emergency opening |
| NSL -LL | Rear fog lamp - left-hand drive vehicle |
| NSL -RL | Rear fog lamp - right-hand drive vehicle |
| NV | Ancillary consumer (accessory) |
| P1 | Gearshift lever gear recognition |
| P2 | Selector lever gear recognition |
| P3 | Shift intention detection |
| PIC | Peripheral integrated circuit (peripheral component with various functions) |
| Poti (+) | Potentiometer (positive) |
| Poti (-) | Potentiometer (negative) |
| Pu | Vacuum |
| PÜ | Overpressure |
| RL | Backup lamp |
| RT | Interior temperature |
| RW | Residual heat utilization |
| SAB | Sidebag |
| SAL | Left sidebag |
| SAR | Right sidebag |
| SBE | Seat occupied recognition |
| SEO | Selective unlocking |
| SFS | Safingswitch, mechanical safety switch |

| | |
|--------------|--|
| Sig. | Signal |
| Sig. RF-Ant. | Signal, radio frequency antenna |
| SL -1 | Signal, level sensor, left rear |
| SL -2 | Signal, level sensor, left rear |
| SL-GND | Ground, level sensor, left rear |
| SL_Vcc | Voltage supply, level sensor, left rear |
| SN | Lock switch |
| SN-HD | Trunk lid lock switch (voltage-coded) |
| SN1 | Lock switch 1 |
| SN2 | Lock switch 2 |
| SP1M | Set value potentiometer 1 ground |
| SP1S | Set value potentiometer 1 signal |
| SP2M | Set value potentiometer 2 ground |
| SP2S | Set value potentiometer 2 signal |
| SR-1 | Signal, level sensor, right rear |
| SR-2 | Signal, level sensor, right rear |
| SR-GND | Ground, level sensor, right rear |
| SRU | Manifold vacuum assist |
| SR_Vcc | Voltage supply, level sensor, right rear |
| STÖ | Tappet switch (trunk lid) |
| T-HS | Raise/lower level adjustment switch |
| T-OFF | Level control lock-out switch |
| TD | Tank lid |
| Temp - | Temperature negative |
| Temp+ | Temperature positive |
| TK | Door contact |
| TKBFT | Door contact front passenger door |
| TKFT | Door contact driver door |
| TKHT | Door contact rear doors and tailgate |
| U87 | Voltage supply, circuit (terminal) 87 |

| | |
|----------|---|
| UB | Voltage operation |
| ÜKB | Excess force limiter |
| UMRFP | Return flow pump monitor |
| USP1 | Voltage supply, set value potentiometer 1 |
| USP2 | Voltage supply, set value potentiometer 2 |
| USV 1 | Switchover solenoid valve 1 |
| USV 2 | Switchover solenoid valve 2 |
| U_DPF | Voltage supply, pressure differential sensor CAT (NAFTA) |
| U_DRV | Voltage supply, pressure regulator valve |
| U_DRVa | Voltage supply, pressure regulator valve |
| U_EDW | Voltage supply, interior protection sensor, rear |
| U_HFMc | Voltage supply, mass air flow sensor hot film |
| U_KEH | Voltage supply, vent line heater element |
| U_LDF | Voltage supply, charge pressure sensor |
| U_LDRb | Voltage supply, boost pressure control pressure transducer |
| U_MOK | Voltage supply, oil sensor (oil level, temperature and quality) |
| U_NWDG | Voltage supply, Hall sensor for camshaft |
| U_P1 | Voltage supply, pressure sensor, downstream from air filter |
| U_PWG | Voltage supply, pedal value sensor |
| U_RDS | Voltage supply, rail pressure sensor |
| U_V2 | Voltage supply, charge pressure sensor |
| U_WSGb | Voltage supply, fuel filter water level sensor |
| U_ZMEa | Voltage supply, grounded output |
| U_ZMEb | Voltage supply, common rail high pressure pump |
| V-AB | Air suspension compressor assembly valve |
| V-QL | ELC [ENR] valve unit |
| V-QR | ELC [ENR] valve unit |
| VL AV | Left front pressure reduction solenoid valve |
| VLEV | Left front pressure hold solenoid valve |
| vo.li. - | Left front negative |

| | |
|----------------|---|
| vo.li. + | Left front positive |
| vo.re. + | Right front positive |
| vo.re. - | Right front negative |
| VR AV | Right front pressure reduction solenoid valve |
| VR EV | Right front pressure hold solenoid valve |
| V_Signal_Eing. | Input, mirror taximeter vehicle speed signal |
| WALA | See WL |
| WL (SRS) | Warning lamp (supplemental restraint system) |
| ZA | State display |
| ZA-LED | State displays - light emitting diode |
| ZK | Ignition circuit(s) |
| Zp. AB, BF- | Front passenger airbag squib, negative |
| Zp. AB, BF+ | Front passenger airbag squib, positive |
| Zp. AB, FA- | Driver airbag squib, negative |
| Zp. AB, FA+ | Driver airbag squib, positive |
| Zp. GS, BF - | Front passenger ETR [GUS] squib, negative |
| Zp. GS, BF+ | Front passenger ETR [GUS] squib, positive |
| Zp. GS, FA - | Driver ETR [GUS] squib, negative |
| Zp. GS, FA+ | Driver ETR [GUS] squib, positive |
| Zp. SB,li. - | Left sidebag squib, negative |
| Zp. SB,li.+ | Left sidebag squib, positive |
| Zp. SB,re. - | Right sidebag squib, negative |
| Zp. SB,re.+ | Right sidebag squib, positive |

Location and assignment of ground points

Chapter 3

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

| | | | |
|---------------------|---|--|---------------------|
| W10 | Ground (battery) | | GF00.19-S-2000-04VB |
| W10/4 | Ground (additional battery) | | GF00.19-S-2000-05VB |
| W12 | Ground (cockpit and center console) | | GF00.19-S-2000-26VB |
| W2 | Ground (right front lamp unit) | | GF00.19-S-2000-02VB |
| W2/1 | Ground (right front ABS) | | GF00.19-S-2000-02VB |
| W26 | Ground (restraint systems control unit) | | GF00.19-S-2000-26VB |
| W29/8 | Ground (left D-pillar) | | GF00.19-S-2000-21VB |
| W29/9 | Ground (right D-pillar) | | GF00.19-S-2000-21VB |
| W33/4 | Ground (tank filler neck) | | GF00.19-S-2000-25VB |
| W38 | Ground (roof) | | GF00.19-S-2000-24VB |
| W43/1 | Ground (left interior compartment firewall) | | GF00.19-S-2000-30VB |
| W43/2 | Ground (right interior compartment firewall) | | GF00.19-S-2000-34VB |
| W9 | Ground (left front lamp unit) | | GF00.19-S-2000-01VB |
| W9/3 | Ground (left front ABS) | | GF00.19-S-2000-01VB |
| | | | |
| GF00.19-S-2000-01VB | Arrangement and assignment of ground points, engine compartment, left | | GF00.19-S-2000-01VB |
| GF00.19-S-2000-02VB | Location and assignment of ground points, engine compartment, right | | GF00.19-S-2000-02VB |
| GF00.19-S-2000-04VB | Arrangement and assignment of ground points - interior left | | GF00.19-S-2000-04VB |
| GF00.19-S-2000-05VB | Location and assignment of ground points, interior compartment, right | | GF00.19-S-2000-05VB |
| GF00.19-S-2000-21VB | Location and assignment of ground points - rear-end | | GF00.19-S-2000-21VB |

GF00.19-S-2000-01VB

Location and assignment of ground points,
engine compartment, left

Model 639



N01.00-2433-06

| Ground point | Designation | Component | Designation | Con- nector. Pin |
|--------------|-------------|-----------|-------------|------------------------|
| | | | | |

| | | | | |
|------|--------------------------------------|-----------|--|-------|
| W9 | Ground (left front lamp unit) | → E1 | Lamp unit, left front | 3 |
| | | → E1 | Lamp unit, left front | 4 |
| | | → E1 | Lamp unit, left front | 8 |
| | | → E22/1 | Additional turn signal lamp, left | 2 |
| | | → K40/9 | Fuse and relay block | MK2.7 |
| | | → M5/1 | Windshield washer fluid pump | 2 |
| | | → M5/2 | HCS [SRA] pump | 2 |
| | | → M5/3 | Rear window washer fluid pump | 2 |
| | | → M5/31 | Rear window washer fluid pump with headlamp cleaning system | 2 |
| | | → M6/1 | Windshield wiper motor | 4 |
| | | → N3/9 | CDI control unit | 2.2 |
| | | → N3/9 | CDI control unit | 2.4 |
| | | → N3/9 | CDI control unit | 2.6 |
| | | → N3/10 | ME control unit | 5.5 |
| | | → N3/10 | ME control unit | 5.6 |
| | | → N3/10 | ME control unit | 5.7 |
| | | → N3/10 | ME control unit | 5.8 |
| | | → N3/20 | CDI control unit | 2.2 |
| | | → N3/20 | CDI control unit | 2.4 |
| | | → N3/20 | CDI control unit | 2.6 |
| | | → N14/2 | Glow output stage | 2.1 |
| | | → S11 | Brake fluid indicator switch | 1 |
| | | → S62/5 | Emergency alarm system cancel button | 3 |
| | | → X15 | Engine fan 100 °C temperature switch connector | 2 |
| | | → X25/14 | O2 sensor/exhaust gas temperature sensor connector | 11 |
| | | → Y19/2k1 | Water valve relay | 9 |
| W9/3 | Ground (left front ABS) | → N30/4 | ESP control unit | A. 1 |
| | | → N30/4 | ESP control unit | A. 5 |

GF00.19-S-2000-02VB

Location and assignment of ground points,
engine compartment, right

Model 639



N62.20-2030-06

| Ground point | Designation | Component | Designation | Con- nector. Pin |
|--------------|-------------|-----------|-------------|------------------------|
| | | | | |

| | | | | |
|------|---------------------------------------|----------|--|-------|
| W2 | Ground (right front lamp unit) | → M13/5 | Heating water circulation pump | 1 |
| | | → E2 | Lamp unit, right front | 3 |
| | | → E2 | Lamp unit, right front | 4 |
| | | → E2 | Lamp unit, right front | 8 |
| | | → E22/2 | Additional turn signal lamp, right | 2 |
| | | → H1 | Audible warning device | A |
| | | → H3/1 | Alarm signal horn with additional battery | 2 |
| | | → K2 | Headlamp cleaning system relay | 4 |
| | | → K40/9 | Fuse and relay block | MK2.7 |
| | | → M5/1 | Windshield washer fluid pump | 2 |
| | | → M5/2 | HCS [SRA] pump | 2 |
| | | → M5/3 | Rear window washer fluid pump | 2 |
| | | → M5/31 | Rear window washer fluid pump with headlamp cleaning system | 2 |
| | | → N14/2 | Glow output stage | 2.1 |
| | | → N3/9 | CDI control unit | 2.2 |
| | | → N3/9 | CDI control unit | 2.4 |
| | | → N3/9 | CDI control unit | 2.6 |
| | | → N3/10 | ME control unit | 5.5 |
| | | → N3/10 | ME control unit | 5.6 |
| | | → N3/10 | ME control unit | 5.7 |
| | | → N3/10 | ME control unit | 5.8 |
| | | → N3/20 | CDI control unit | 2.2 |
| | | → N3/20 | CDI control unit | 2.4 |
| | | → N3/20 | CDI control unit | 2.6 |
| | | → S11 | Brake fluid indicator switch | 1 |
| | | → X25/14 | O2 sensor/exhaust gas temperature sensor connector | 11 |
| | | → X42/30 | ATA [EDW] separation point, engine hood contact | 2 |
| W2/1 | Ground (right front ABS) | → N30/4 | ESP control unit | A. 1 |
| | | → N30/4 | ESP control unit | A. 5 |

GF00.19-S-2000-04VB

Arrangement and assignment of ground points -
interior left

Type 639




N91.10-2171-11

| Ground point | Designation | Component | Designation | Connector. Pin |
|--------------|------------------|-----------|-------------|-------------------|
| W10 | Ground (battery) | → G1 | Battery | 2 |

GF00.19-S-2000-05VB

Location and assignment of ground points,
interior compartment, right

Type 639

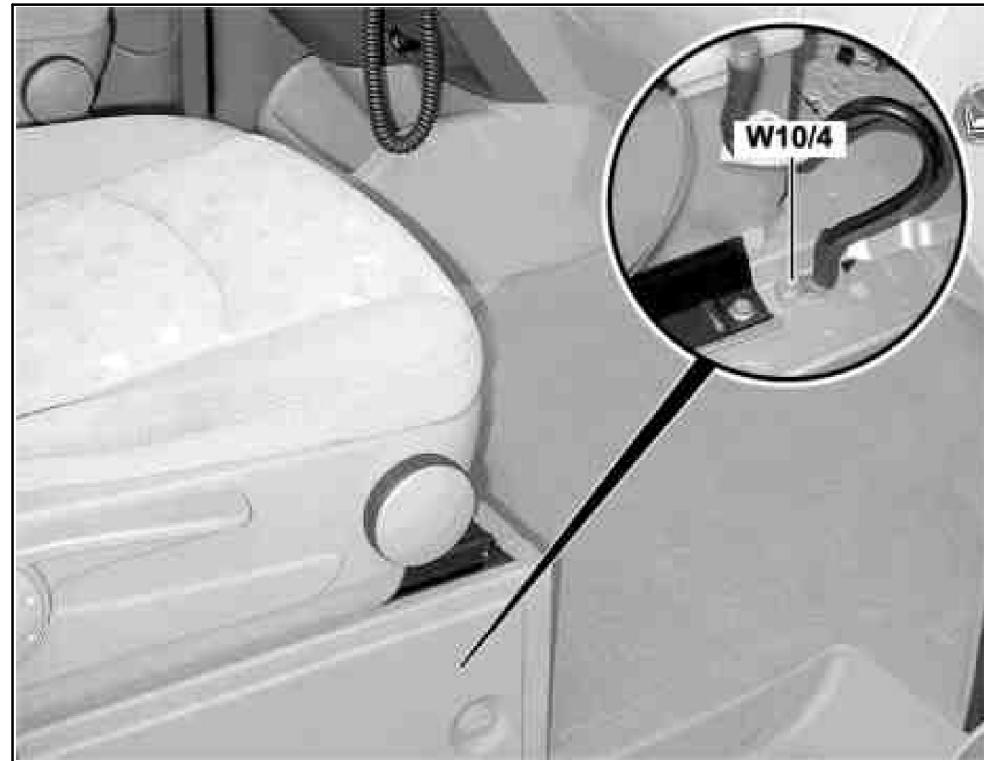


N91.10-2170-11

| Ground point | Designation | Component | Designation | Connector. Pin |
|--------------|-----------------------------|-----------|--------------------|-------------------|
| W10/4 | Ground (additional battery) | → G1/1 | Additional battery | 2 |


GF00.19-S-2000-21VB

Location and assignment of ground points - rear-end

Type 639

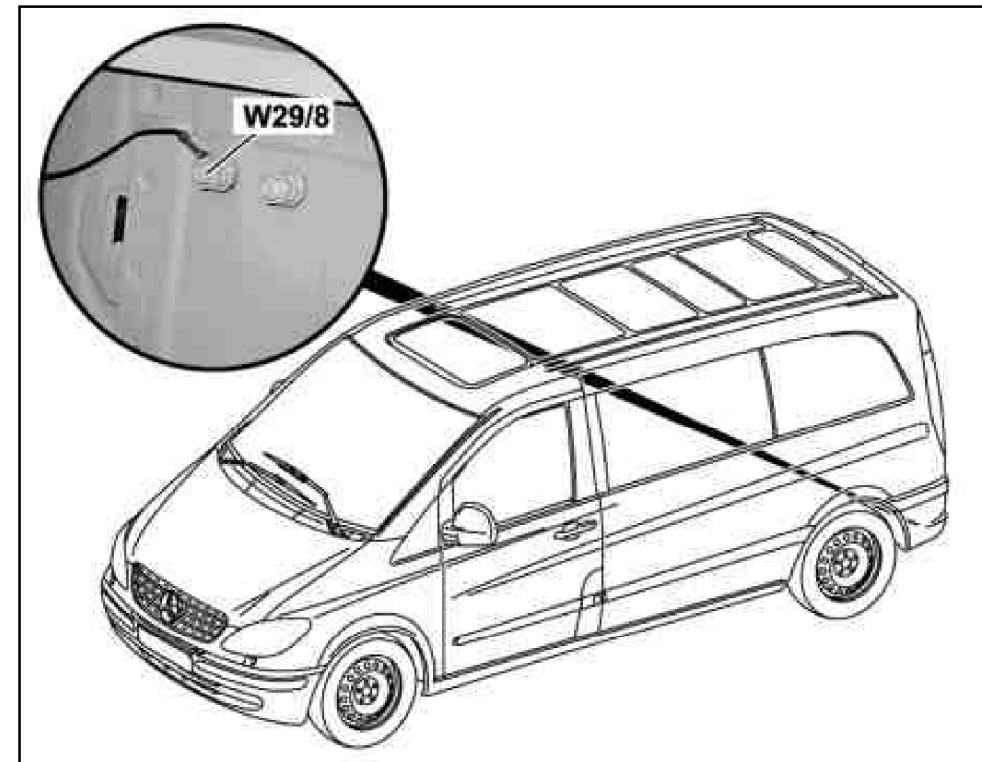

N64.20-2014-11

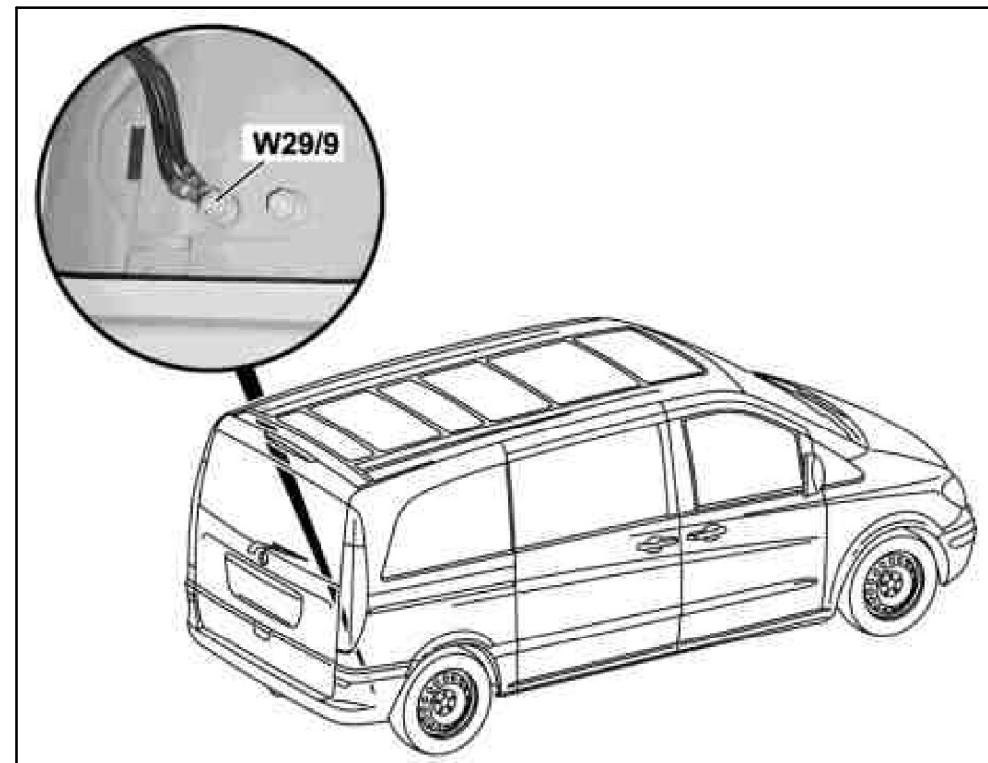

N64.20-2015-11

| Ground point | Designation | Comp-onent | Designation | Con- nector. Pin |
|--------------|-------------|------------|-------------|------------------------|
| | | | | |

| | | | | |
|-------|--------------------------------|----------|--|------|
| W29/8 | Ground (left D-pillar) | → E3 | Taillamp, left | 3 |
| | | → E22/3 | Additional turn signal lamp, left rear | |
| | | → N19/3 | Rear AC control unit FONDKLA | A. 4 |
| | | → N125 | Telephone high frequency compensator | 1.2 |
| | | → S81/1 | Rear heater operating switch | A. 4 |
| | | → X8/22 | Left rear-end door connector | 8 |
| | | → X8/23 | Left rear-end door connector | 1 |
| | | → X8/23 | Left rear-end door connector | 5 |
| | | → X52/5 | Left taillamp connector | 3 |
| | | → X58/4 | Load compartment socket, left front | 1 |
| | | → X96/5 | Rear recirculation unit connector 3 | |
| | | → Y67 | Refrigerant shutoff valve | 1 |
| W29/9 | Ground (right D-pillar) | → A9/1 | Air suspension compressor assembly | 1.2 |
| | | → E4 | Taillamp, right | 3 |
| | | → E22/4 | Additional turn signal lamp, right rear | |
| | | → H3/4 | Backup warning horn | 2 |
| | | → N9/1 | Additional turn signal module control unit | 17 |
| | | → N28/1 | Trailer connection unit [AAG] control unit | 1.3 |
| | | → N28/1 | Trailer connection unit [AAG] control unit | 2.2 |
| | | → N51/3 | ENR control unit | 1.6 |
| | | → S77 | Raise/lower level adjustment switch | 10 |
| | | → S77/1 | Level control lock-out switch | 10 |
| | | → X8/20 | Right rear-end door connector | 6 |
| | | → X8/20 | Right rear-end door connector | 8 |
| | | → X8/21 | Tailgate connector | 1 |
| | | → X8/21 | Tailgate connector | 5 |
| | | → X8/24 | Pop-up roof connector (Westfalia) | 8 |
| | | → X11/35 | Air suspension compressor assembly connector | 1 |
| | | → X20/11 | Center high-mounted stop lamp connector, rear-end door | 2 |
| | | → X52/6 | Right taillamp connector | 3 |
| | | → X58 | Trailer hitch socket (13-pin) | 3 |
| | | → X58 | Trailer hitch socket (13-pin) | 13 |
| | | → X58/12 | Load compartment socket, right rear | 1 |



N65.00-2028-11

| Ground point | Designation | Component | Designation | Con- nector. Pin |
|--------------|----------------------|---|---|---------------------------------|
| W38 | Ground (roof) | → A50 | Taximeter | 8 |
| | | → E15 → E15/6 → E15/7 → E15/8 → E15/9 → E25/7 → E25/8 | Dome lamp with reading lamp, front Interior lamp, left front grab handle Interior lamp, right front grab handle Interior lamp, left rear grab handle Interior lamp, right rear grab handle Transistor lamp, left Transistor lamp, right | 1 A A A A 2 2 |

| | | |
|----------|--|-----|
| → N70 | Overhead control panel control unit | 1.2 |
| → N70/1 | Rear sliding roof unit control unit (SDE-H) | 1.2 |
| → S62/6 | Emergency alarm system activate button | 2 |
| → S138/1 | Left sun visor illumination switch | 2 |
| → S138/2 | Right sun visor illumination switch | 2 |
| → X2/17 | Antenna amplifier voltage supply connector | 1 |
| → X2/79 | TV antenna selector connector | 1 |
| → X2/97 | TV double amplifier 1 connector | 1 |
| → X2/98 | TV double amplifier 2 connector | 1 |
| → X8/25 | Sliding roof in pop-up roof separation point (Westfalia) | 2 |
| → X29/17 | MQS coupling (10-pin) | 8 |
| → X41/6 | Mirror taximeter separation point | 2 |
| → Z20/62 | Screening end connector sleeve | |
| → Z83/15 | Shielding connector sleeve | |


GF00.19-S-2000-26VB

Location and assignment of ground points -
center console

Model 639



N68.20-2061-11

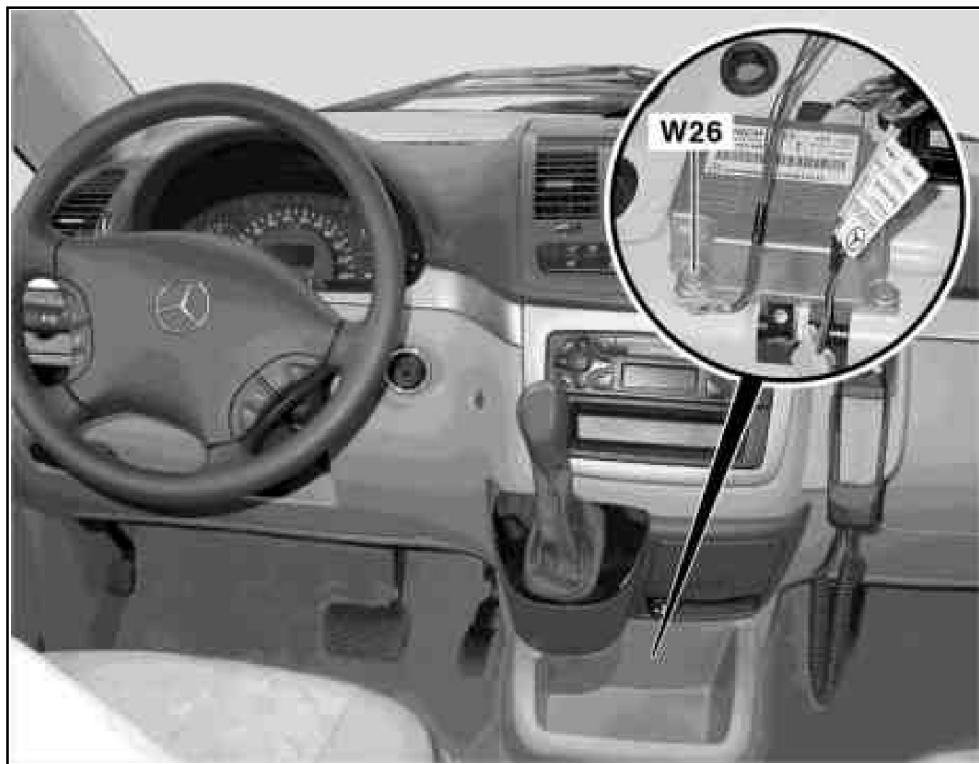

N68.20-2062-11

| Ground point | Designation | Component | Designation | Con- nector. Pin |
|--------------|-------------|-----------|-------------|------------------------|
| | | | | |


| | | | | |
|-----|--|----------|---|--------|
| W12 | Ground (cockpit and center console) | → A1 | Instrument cluster | 8 |
| | | → A1 | Instrument cluster | 12 |
| | | → A2/77 | Telephone and communication unit | j8.12 |
| | | → A2/77 | Telephone and communication unit | j8.13 |
| | | → A2/78 | Audio-Video-Navigation (AVN) | AB. A8 |
| | | → A35/11 | SBS control unit | 1.3 |
| | | → A35/13 | D2B telephone transmitter/receiver | 1.3 |
| | | → A45/1 | Steering wheel clock spring contact | 9 |
| | | → A49 | Taxi two-way radio | 1.8 |
| | | → A49/4 | STH radio receiver | 6 |
| | | → A56 | Modular tachograph | A. 5 |
| | | → E9/7 | Illumination, front ashtray | 1 |
| | | → E13/1 | Glove compartment light | 1 |
| | | → K23/1 | Blower motor relay | 6 |
| | | → N15/5 | Electronic selector lever module control unit | 1.2 |
| | | → N26/5 | Electric steering lock control unit | 3 |
| | | → N33/4 | Heater booster control unit | PTCA |
| | | → N66/4 | Rear conversation unit control unit | 1.1 |
| | | → N72/1 | Upper control panel control unit | 1.1 |
| | | → N73 | EIS [EZS] control unit | B. 2 |
| | | → N123 | Hands-free system control unit | 1.1 |
| | | → R3 | Front cigar lighter (with illumination) | 1 |
| | | → S13/3 | Taxi two-way radio/roof sign switch | 10 |
| | | → S16/2 | Backup lamp switch | 1 |
| | | → S46/10 | Stationary heater switch | 10 |
| | | → S66/4 | Rear entertainment system switch | 10 |
| | | → S98 | Air conditioning operating module | B. 12 |
| | | → S144 | Combination switch | 4 |
| | | → X11 | Data link connector | 4 |
| | | → X11 | Data link connector | 5 |
| | | → X11/32 | Connector between selector lever module and data link connector | 2 |
| | | → X31/12 | Blower connector, terminal 31 | MK2.7 |
| W26 | Ground (restraint systems control unit) | → A53 | Thoraxbag and windowbag sensor, left | 1 |

| | | |
|----------|--|------|
| → A54 | Thoraxbag and windowbag sensor, right | 1 |
| → N2/2 | SRS control unit | 1.83 |
| → N2/2 | SRS control unit | 1.84 |
| → N2/10 | SRS control unit | 1.83 |
| → N2/10 | SRS control unit | 1.84 |
| → N2/11 | ARCADE airbag control unit | 1.15 |
| → N2/11 | ARCADE airbag control unit | 1.16 |
| → X28/18 | Seat occupied recognition with ACSR [AKSE] connector | 3 |
| → X55/32 | Switch connector, driver seat belt buckle | 1 |
| → X55/42 | Switch connector, front passenger seat belt buckle | 1 |

GF00.19-S-2000-25VB

Location and assignment of ground points - side panel

Type 639

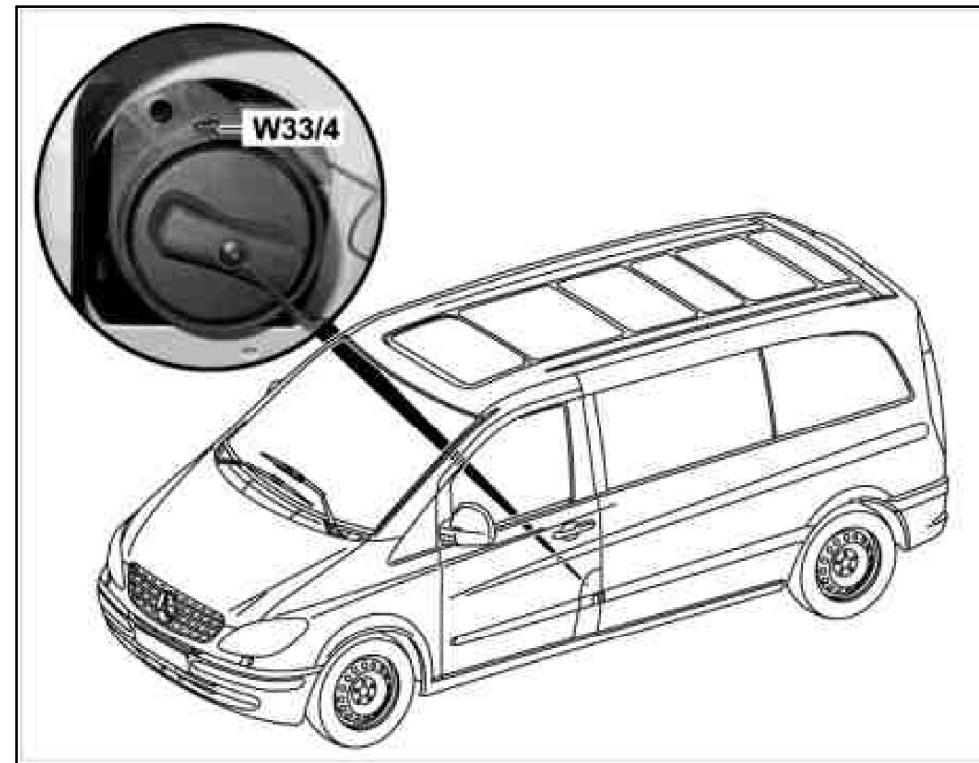

N63.00-2004-11

| Ground point | Designation | Component | Designation | Connector. Pin |
|--------------|---------------------------|-----------|---|-------------------|
| W33/4 | Ground (tank filler neck) | → W43/1 | Ground (left interior compartment firewall) | |



N62.25-2068-11


| Ground point | Designation | Component | Designation | Connec-tor. Pin |
|--------------|---|-----------|--|--------------------|
| W43/1 | Ground (left interior compartment firewall) | → A6n1 | STH control unit | 1.2 |
| | | → K40/9 | Fuse and relay block | I1.6 |
| | | → M3/3 | Fuel pump with fuel level sensor | 4 |
| | | → M28/11 | Lumbar support adjustment motor, right | 2 |
| | | → M28/12 | Lumbar support adjustment motor, left | 2 |
| | | → M46/1 | STH fuel metering pump | 2 |
| | | → N10/16 | COU [ZBE] control unit | 1.8 |
| | | → N10/16 | COU [ZBE] control unit | 1.25 |

| | | |
|----------|--|------|
| → N32/1 | Left front seat adjustment control unit with memory | 2.2 |
| → N32/2 | Right front seat adjustment control unit with memory | 2.2 |
| → N33/5 | Hot air stationary heater control unit | 1.10 |
| → N34 | STH timer | 1.4 |
| → N69/1 | Door control unit, left front | 2.4 |
| → S12 | Parking brake indicator switch | 1 |
| → X54/29 | Heated seats connector, left front | 1 |
| → X54/30 | Heated seats connector, right front | 1 |
| → X58/1 | Interior socket | 1 |
| → X58/17 | 12V socket | 1 |

GF00.19-S-2000-34VB

Location and assignment of ground points - right
firewall

Type 639

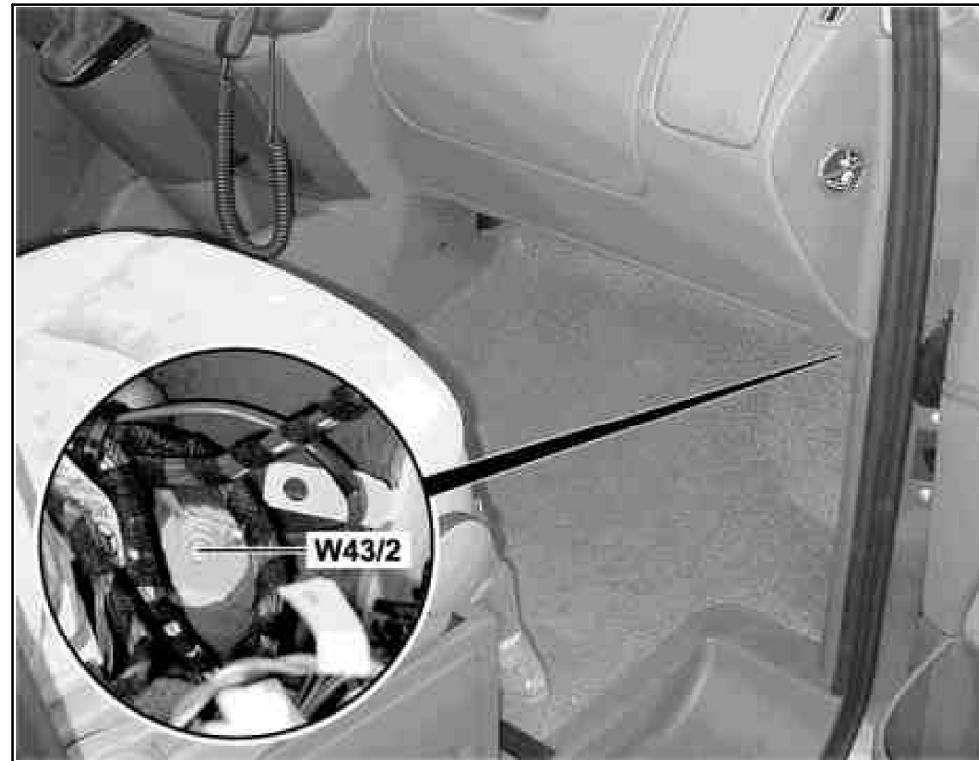

N62.25-2067-11

| Ground point | Designation | Component | Designation | Connec-tor. Pin |
|--------------|---|-----------|---|--------------------|
| W43/2 | Ground (right interior compartment firewall) | → A6n1 | STH control unit | 1.2 |
| | | → B37/3 | Pedal value sensor | 2.2 |
| | | → K2 | Headlamp cleaning system relay | 4 |
| | | → K40/9 | Fuse and relay block | I1.6 |
| | | → M28/11 | Lumbar support adjustment motor, right | 2 |
| | | → M28/12 | Lumbar support adjustment motor, left | 2 |
| | | → N26/15 | PSM control unit | 2.3 |
| | | → N32/1 | Left front seat adjustment control unit with memory | 2.2 |

| | | | |
|--|------------|--|------|
| | → N32/2 | Right front seat adjustment control unit with memory | 2.2 |
| | → N62 | PTS control unit | 1.10 |
| | → N69/2 | Door control unit, right front | 2.4 |
| | → S12 | Parking brake indicator switch | 1 |
| | → S40/3 | Clutch pedal switch | 1 |
| | → X30/27 | Engine CAN bus connector | 1.3 |
| | → X54/29-2 | Heated seats connector, left front | 1 |
| | → X54/30-1 | Heated seats connector, right front | 1 |

Location and assignment of plug connections


Chapter 4

| | | | |
|--------|---|--|---------------------|
| X1/30 | Speaker connector | | GF00.19-S-1000-05VB |
| X8/20 | Right rear-end door connector | | GF00.19-S-1000-20VB |
| X8/22 | Left rear-end door connector | | GF00.19-S-1000-20VB |
| X11/32 | Connector between selector lever module and data link connector | | GF00.19-S-1000-05VB |
| X15 | Engine fan 100 °C temperature switch connector | | GF00.19-S-1000-33VB |
| X18/2 | Load compartment lamp connector | | GF00.19-S-1000-05VB |
| X18/23 | Telephone ON Telephone connector | | GF00.19-S-1000-05VB |
| X26/23 | Engine compartment to cockpit connector | | GF00.19-S-1000-05VB |
| X28/23 | Airbag connector, driver and front passenger | | GF00.19-S-1000-28VB |
| X30/24 | Interior CAN bus connector | | GF00.19-S-1000-05VB |
| X30/27 | Engine CAN bus connector | | GF00.19-S-1000-05VB |
| X52 | Trailer hitch connector | | GF00.19-S-1000-20VB |
| X54/12 | 2-pin heated seats connector, left and right | | GF00.19-S-1000-05VB |
| X62/6 | Rpm sensor and brake wear sensor connector, right front | | GF00.19-S-1000-33VB |
| X62/7 | Rpm sensor and brake wear sensor connector, left front | | GF00.19-S-1000-33VB |
| X62/8 | Rpm sensor and brake wear sensor connector, left rear | | GF00.19-S-1000-24VB |
| X62/21 | ABS/ASR rpm signal connector, left rear | | GF00.19-S-1000-24VB |
| X62/22 | ABS/ASR rpm signal connector, right rear | | GF00.19-S-1000-24VB |
| X62/28 | Rpm sensor connector | | GF00.19-S-1000-05VB |
| X62/39 | BBV rear axle connector, left | | GF00.19-S-1000-24VB |
| X62/40 | BBV rear axle connector, right | | GF00.19-S-1000-24VB |
| X72 | STH connector | | GF00.19-S-1000-05VB |

GF00.19-S-1000-05VB

Location and assignment of line and plug
connectors, interior compartment, right

Model 639

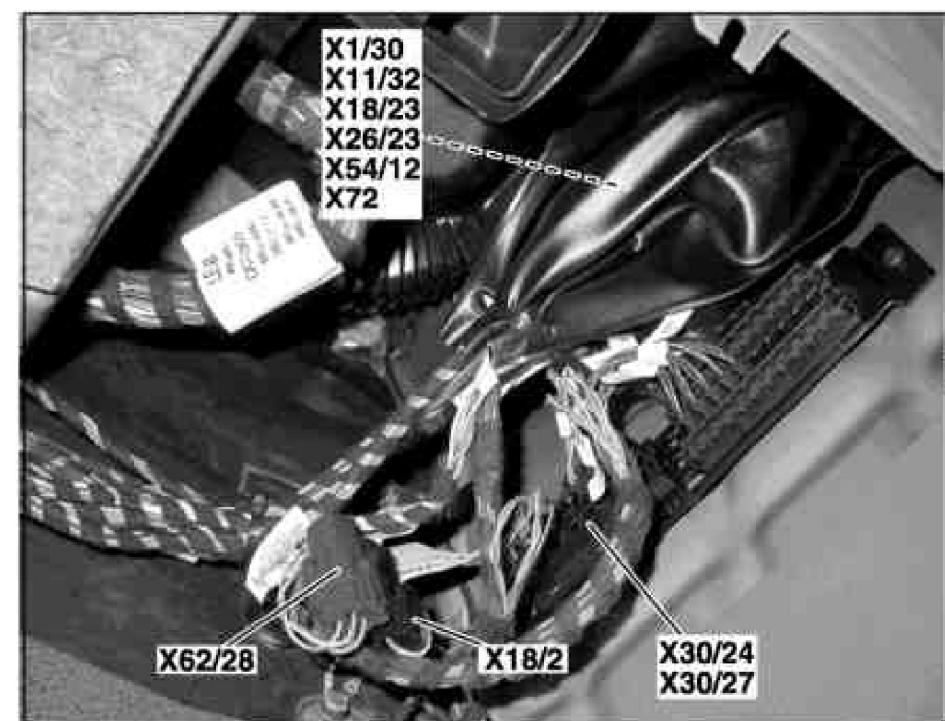

N68.10-2199-08

| Code | Designation | Cable colors | Cable colors | Notes |
|------|-------------|--------------|--------------|-------|
|------|-------------|--------------|--------------|-------|

| | | | |
|--------|---|---|--|
| X1/30 | Speaker connector | GY — 1 ↗ GY BNGY — 2 ↗ BNGY WH — 3 ↗ WH BNWH — 4 ↗ BNWH green — 5 ↗ gn BNGN — 6 ↗ BNGN BU — 7 ↗ BU BUBN — 8 ↗ BUBN | |
| X11/32 | Connector between selector lever module and data link connector | PKYE — 1 ↗ PKYE bn — 2 ↗ bn | |
| X18/2 | Load compartment lamp connector | RDWH — 1 ↗ RDWH RD — 2 ↗ RD | |
| X18/23 | Telephone ON Telephone connector | YE — 1 ↗ YE | |

| | | | |
|--------|--|---|--|
| X26/23 | Engine compartment to cockpit connector | GNGY — 3 ↗ GNGY GNWH — 4 ↗ GNWH GNYE — 5 ↗ GNYE BNBU — 7 ↗ BNBU BURD — 8 ↗ BURD green — 9 ↗ GNWH BUVT — 10 ↗ BU BUWH — 11 ↗ BUWH BUGY — 12 ↗ BUGY YERD — 13 ↗ YERD YEWH — 14 ↗ YEWH RDBU — 15 ↗ RDBU GNYE — 16 ↗ GNYE BKGN — 17 ↗ BKGN BN — 18 ↗ BN RDGN — 19 ↗ RDGN BNGN — 20 ↗ BNGN BKBU — 21 ↗ BKBU | |
| X30/24 | Interior CAN bus connector | — 1 ↗ BNRD — 2 ↗ BN | |
| X30/27 | Engine CAN bus connector | — 1 ↗ GNWH — 2 ↗ GN — 3 ↗ BNYE | |
| X54/12 | 2-pin heated seats connector, left and right | BKVT — 1 ↗ BKVT BKGY — 2 ↗ BKGY | |

| | | | |
|--------|----------------------|--|--|
| X62/28 | Rpm sensor connector | BUBN — 1 ↗— BUBN BU — 2 ↗— BU YEBN — 3 ↗— YEBN YE — 4 ↗— YE | |
| X72 | STH connector | VTGN — 1 ↗— VTGN VTBK — 2 ↗— VTBK VTYE — 3 ↗— VTYE OG — 4 ↗— OG YEGN — 5 ↗— YEGN BUGY — 6 ↗— BUGY | |

GF00.19-S-1000-20VB

Location and assignment of line and plug
connectors - rear

Model 639



N68.30-2073-12

| Code | Designation | Cable colors | Cable colors | Notes |
|------|-------------|--------------|--------------|-------|
|------|-------------|--------------|--------------|-------|


| | | | |
|-------|-------------------------------|---|--|
| X8/20 | Right rear-end door connector | BURD — 1 ↗— BURD BUBK — 2 ↗— BUBK BUWH — 3 ↗— BUWH BUGN — 4 ↗— BUGN BKYE — 5 ↗— BKYE BN — 6 ↗— BN GYGN — 7 ↗— GYGN BN — 8 ↗— BN BUWH — 10 ↗— BUWH | |
| X8/22 | Left rear-end door connector | GYGN — 7 ↗— GYGN BN — 8 ↗— BN BUGN — 9 ↗— BUGN BUWH — 10 ↗— BUWH | |
| X52 | Trailer hitch connector | BKBN — 1 ↗— BKBN | |
| | | BKRD — 2 ↗— BKRD RDYE — 3 ↗— RDYE BNBU — 4 ↗— BNBU BN — 5 ↗— BN | |

GF00.19-S-1000-24VB


Location and assignment of line and plug
connectors - underfloor

Model 639

Shown on left side of vehicle

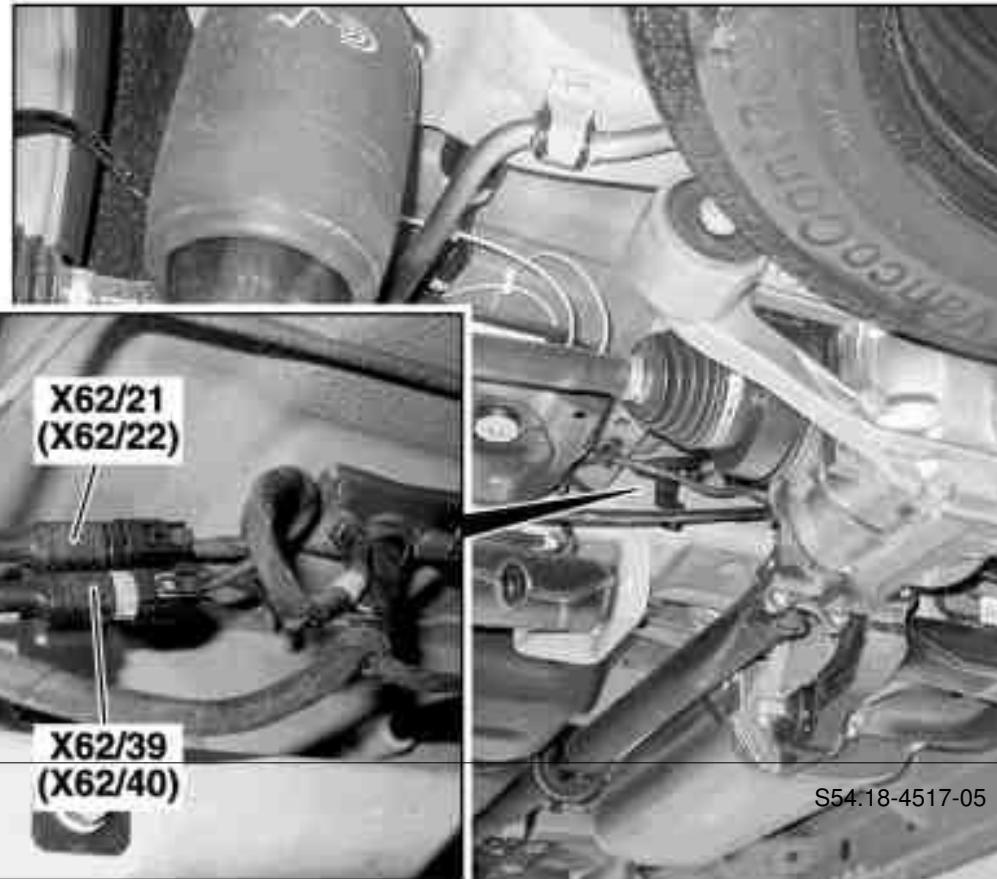

Illustrated on right side of vehicle

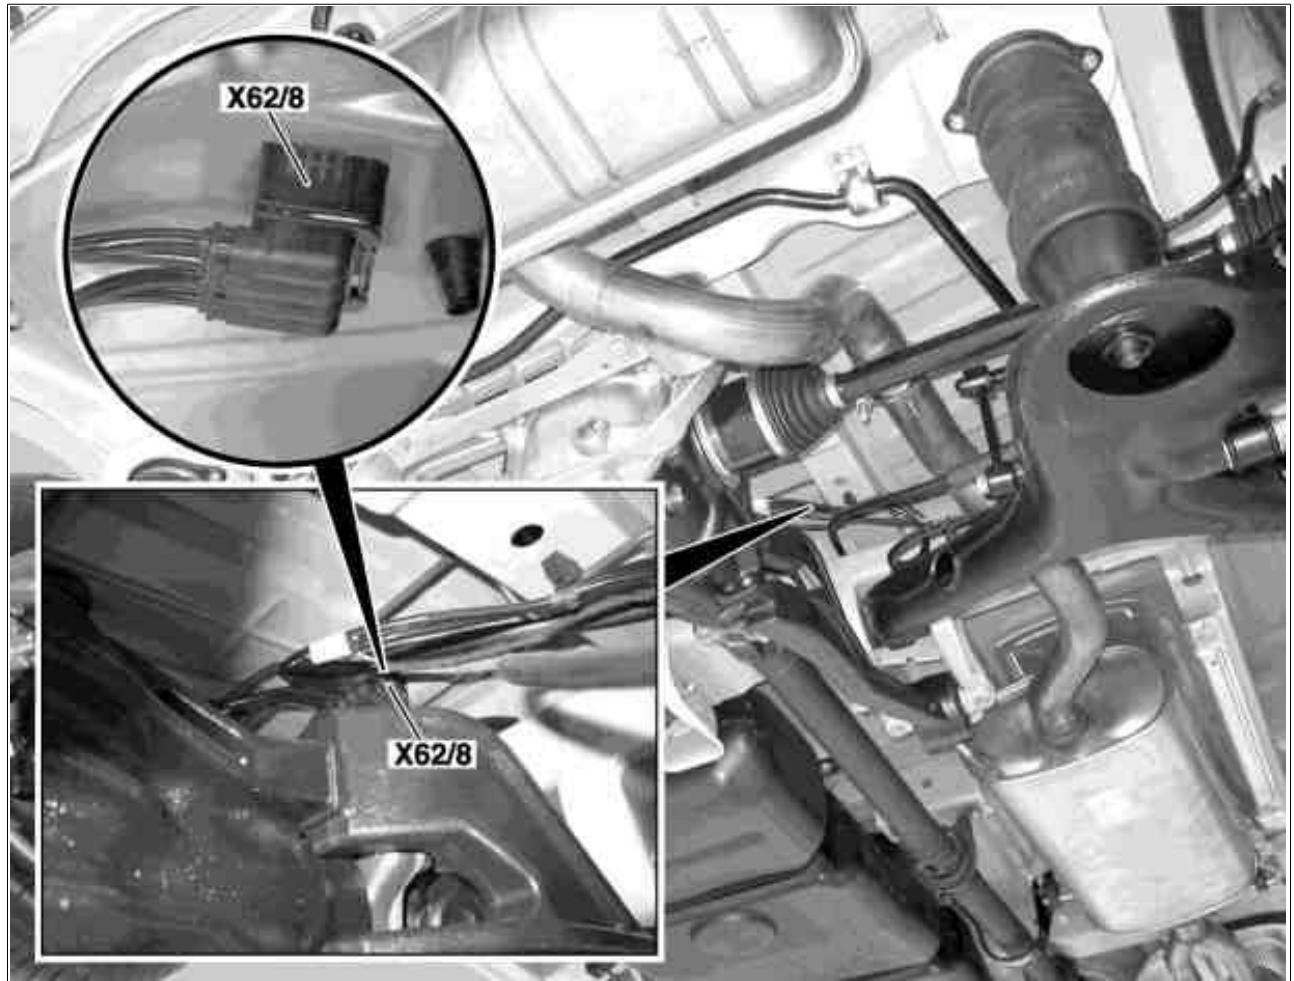

S35.00-4510-06


| Code | Designation | Cable colors | Cable colors | Notes |
|-------|---|----------------|--------------|--------------------|
| X62/8 | Rpm sensor and brake wear sensor connector, left rear | BK WH WH | 1 2 1 | GNRD GNBN BU |

| | | | |
|--------|--|--|--|
| | | BK — 2 ↗ BUBN WH — 1 ↗ YE BK — 2 ↗ YEBN BK — 1 ↗ green WH — 2 ↗ GNRD | |
| X62/21 | ABS/ASR rpm signal connector, left rear | WH — 1 ↗ YE BK — 2 ↗ YEBN | |
| X62/22 | ABS/ASR rpm signal connector, right rear | WH — 1 ↗ BU BK — 2 ↗ BUBN | |
| X62/39 | BBV rear axle connector, left | BK — 1 ↗ GN WH — 2 ↗ GNRD | |
| X62/40 | BBV rear axle connector, right | BK — 1 ↗ GNRD WH — 2 ↗ GNBN | |


GF00.19-S-1000-28VB

Location and assignment of line and plug
connectors - center console

Model 639

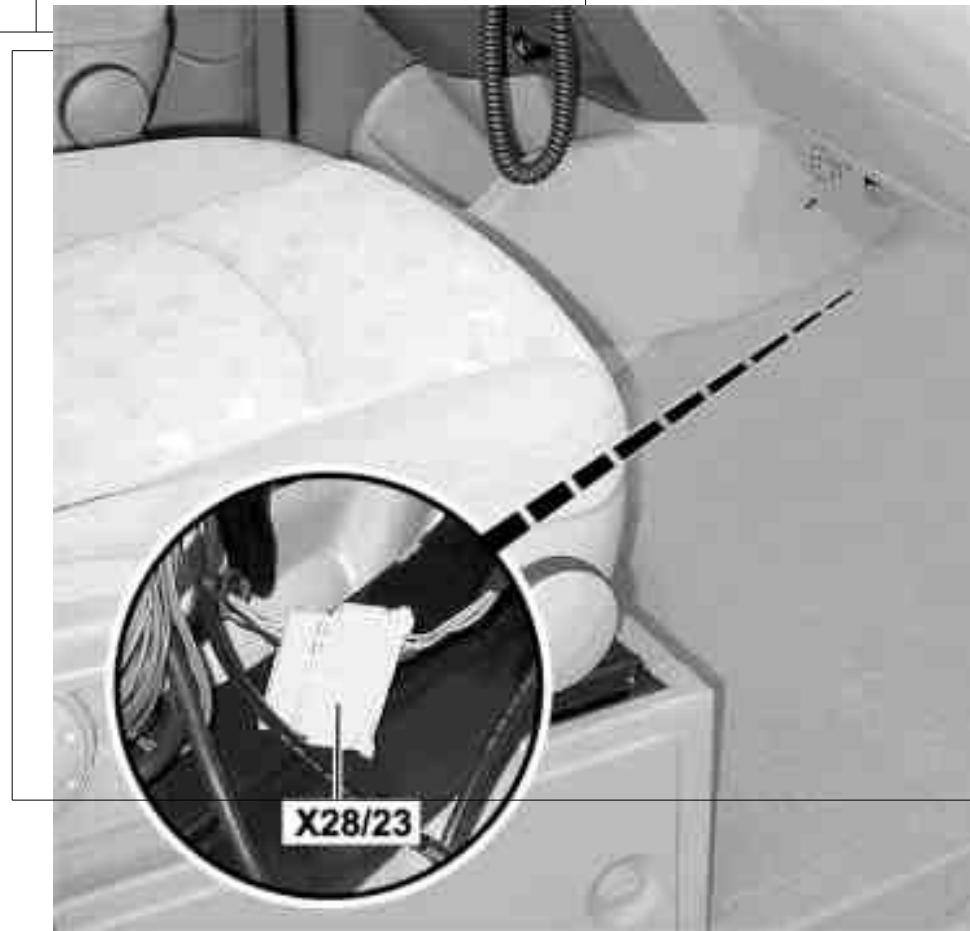

| Code | Designation | Cable colors | Cable colors | Notes |
|--------|--|--|--|-------|
| X28/23 | Airbag connector, driver and front passenger | VT — 1 GN — 2 BUGN — 3 BNBK — 4 | 1 — VT 2 — GN 3 — BUGN 4 — BNBK | |

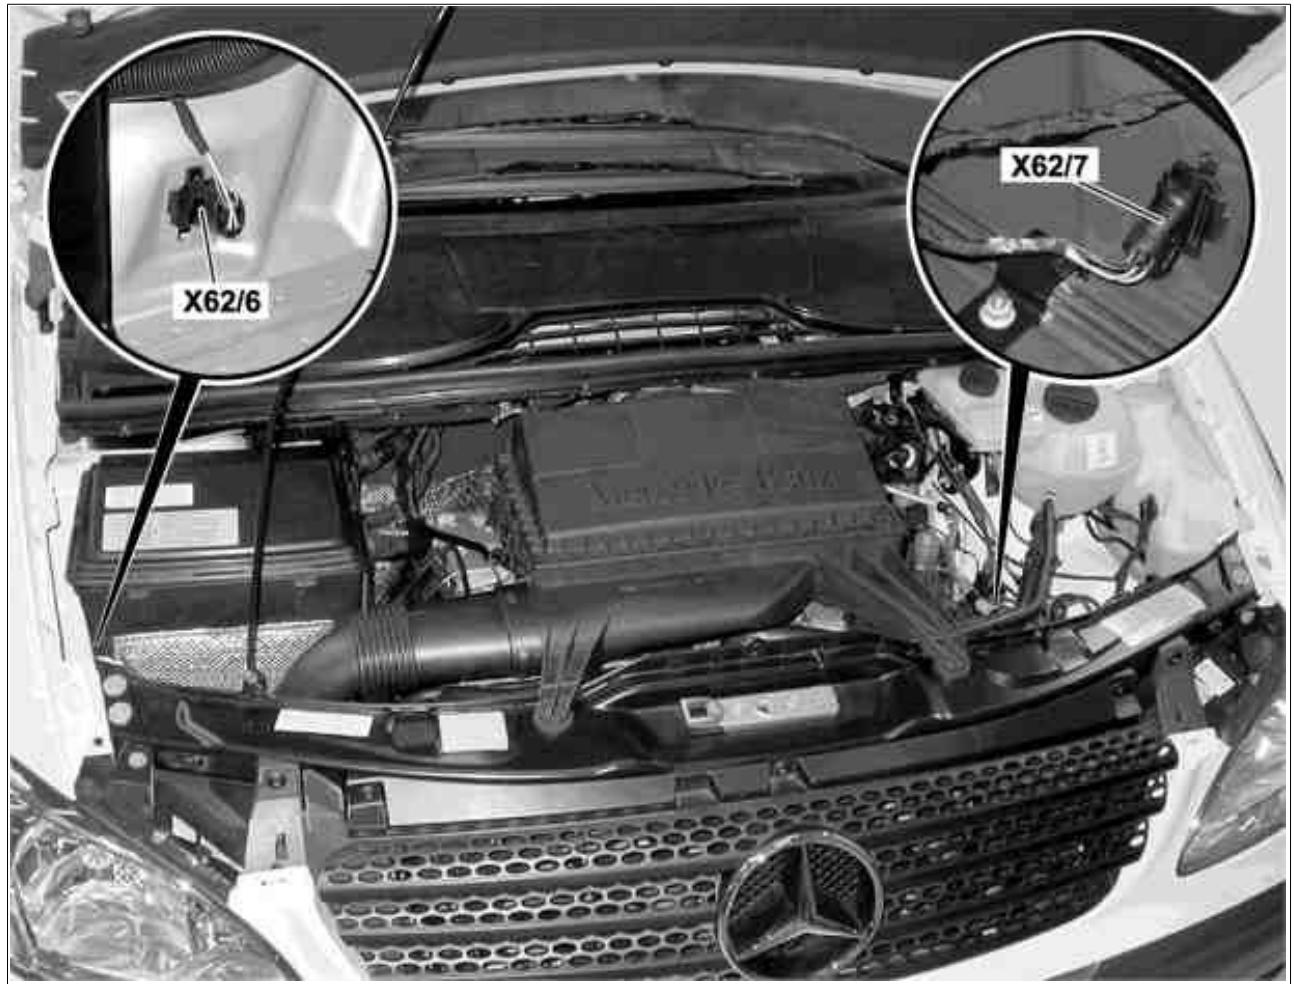

N01.00-2432-06

| Code | Designation | Cable colors | Cable colors | Notes |
|------|--|------------------------------|----------------------------|-------|
| X15 | Engine fan 100 °C temperature switch connector | RD — 1 BN — 2 BUVT — 3 | 1 — RD 2 — BN 3 — BU | |

| | | | |
|-------|---|-----------------|--|
| | | BUWH — 4 ↗ BUWH | |
| X62/6 | Rpm sensor and brake wear sensor connector, right front | WH — 1 ↗ WH | |
| | | BK — 2 ↗ WHYE | |
| | | BK — 1 | |
| | | WH — 2 | |
| | | 3 ↗ YEVT | |
| | | 4 ↗ VTGN | |
| X62/7 | Rpm sensor and brake wear sensor connector, left front | WH — 1 ↗ BK | |
| | | BK — 2 ↗ BKYE | |
| | | BK — 1 | |
| | | WH — 2 | |
| | | 3 ↗ VTWH | |
| | | 4 ↗ YEVT | |

Battery, starting charging circuit

Chapter 5

ENGINES 646.982 /983, 112.951 /976, 642.990 up to 28.2.05 in MODELS 639.601 /603 /605 /701 /703 /705 up to 28.2.05


ENGINES 646.982, 112.951 /976, 642.990 up to 28.2.05 in MODELS 639.711 /713 /811 /813 /815 up to 28.2.05


| | | | |
|---------------------|--|------------------------|---------------------|
| PE15.00-S-2000-99VA | Wiring diagram for starter, alternator | | PE15.00-S-2000-99VA |
| PE15.00-S-2000-60VA | Legend of wiring diagram for starter, alternator | | PE15.00-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box - location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|--|--|
| PE15.00-S-2000-60VA | Legend of wiring diagram for starter, alternator | ENGINES 646.982 /983, 112.951 /976, 642.990 up to 28.2.05 in MODELS 639.601 /603 /605/ 701 /703 /705 up to 28.2.05 ENGINES 646.982, 112.951 /976, 642.990 up to 28.2.05 in MODELS 639.711 /713 /811 /813 /815 up to 28.2.05 | |
|---------------------|--|--|--|

| Code | Designation | Coordinates |
|-------|---|-------------------------------|
| A0 | Color code key | 48L |
| F1 | 1-pin prefuse box | 12G |
| F4 | Fuse box (1-pin) | 27L |
| F5 | Fuse box (1-pin) | 24L |
| F34 | Fuse block, 22-pin | 29K |
| F35 | Fuse block, 22-pin | 32L |
| G1 | Battery | 12K |
| G2/2 | Alternator | 40A |
| G2/5 | 200 A Alternator | 4A |
| K40/9 | Fuse and relay block | 2K 9K 19K 21K 39K |
| M1 | Starter | 10A |
| N3/9 | CDI control unit | 5K |
| N14/2 | Glow output stage | 34K |
| N33/4 | Heater booster control unit | 16K |
| U53 | Valid for automatic air conditioning "Thermotronic" | 26H |
| U54 | Valid for regulated air conditioning "Tempmatic" | 26H |
| U1001 | Valid for engine OM 646 with automatic transmission | 1A |
| U1002 | Valid for PTC element | 16H |

| | | |
|-------|---|------------|
| U1080 | Valid for alternator 14V / 200 A without automatic transmission | 41F |
| U150 | Valid for engine M 112 | 24H 37B |
| U740 | Valid for engine OM 646 | 34H |
| U999 | Valid for engine OM 646 without automatic transmission | 37A |
| X22 | Engine compartment and engine connector | 3H |
| Z66/1 | Additional fuse box feed connector sleeve | 30F |

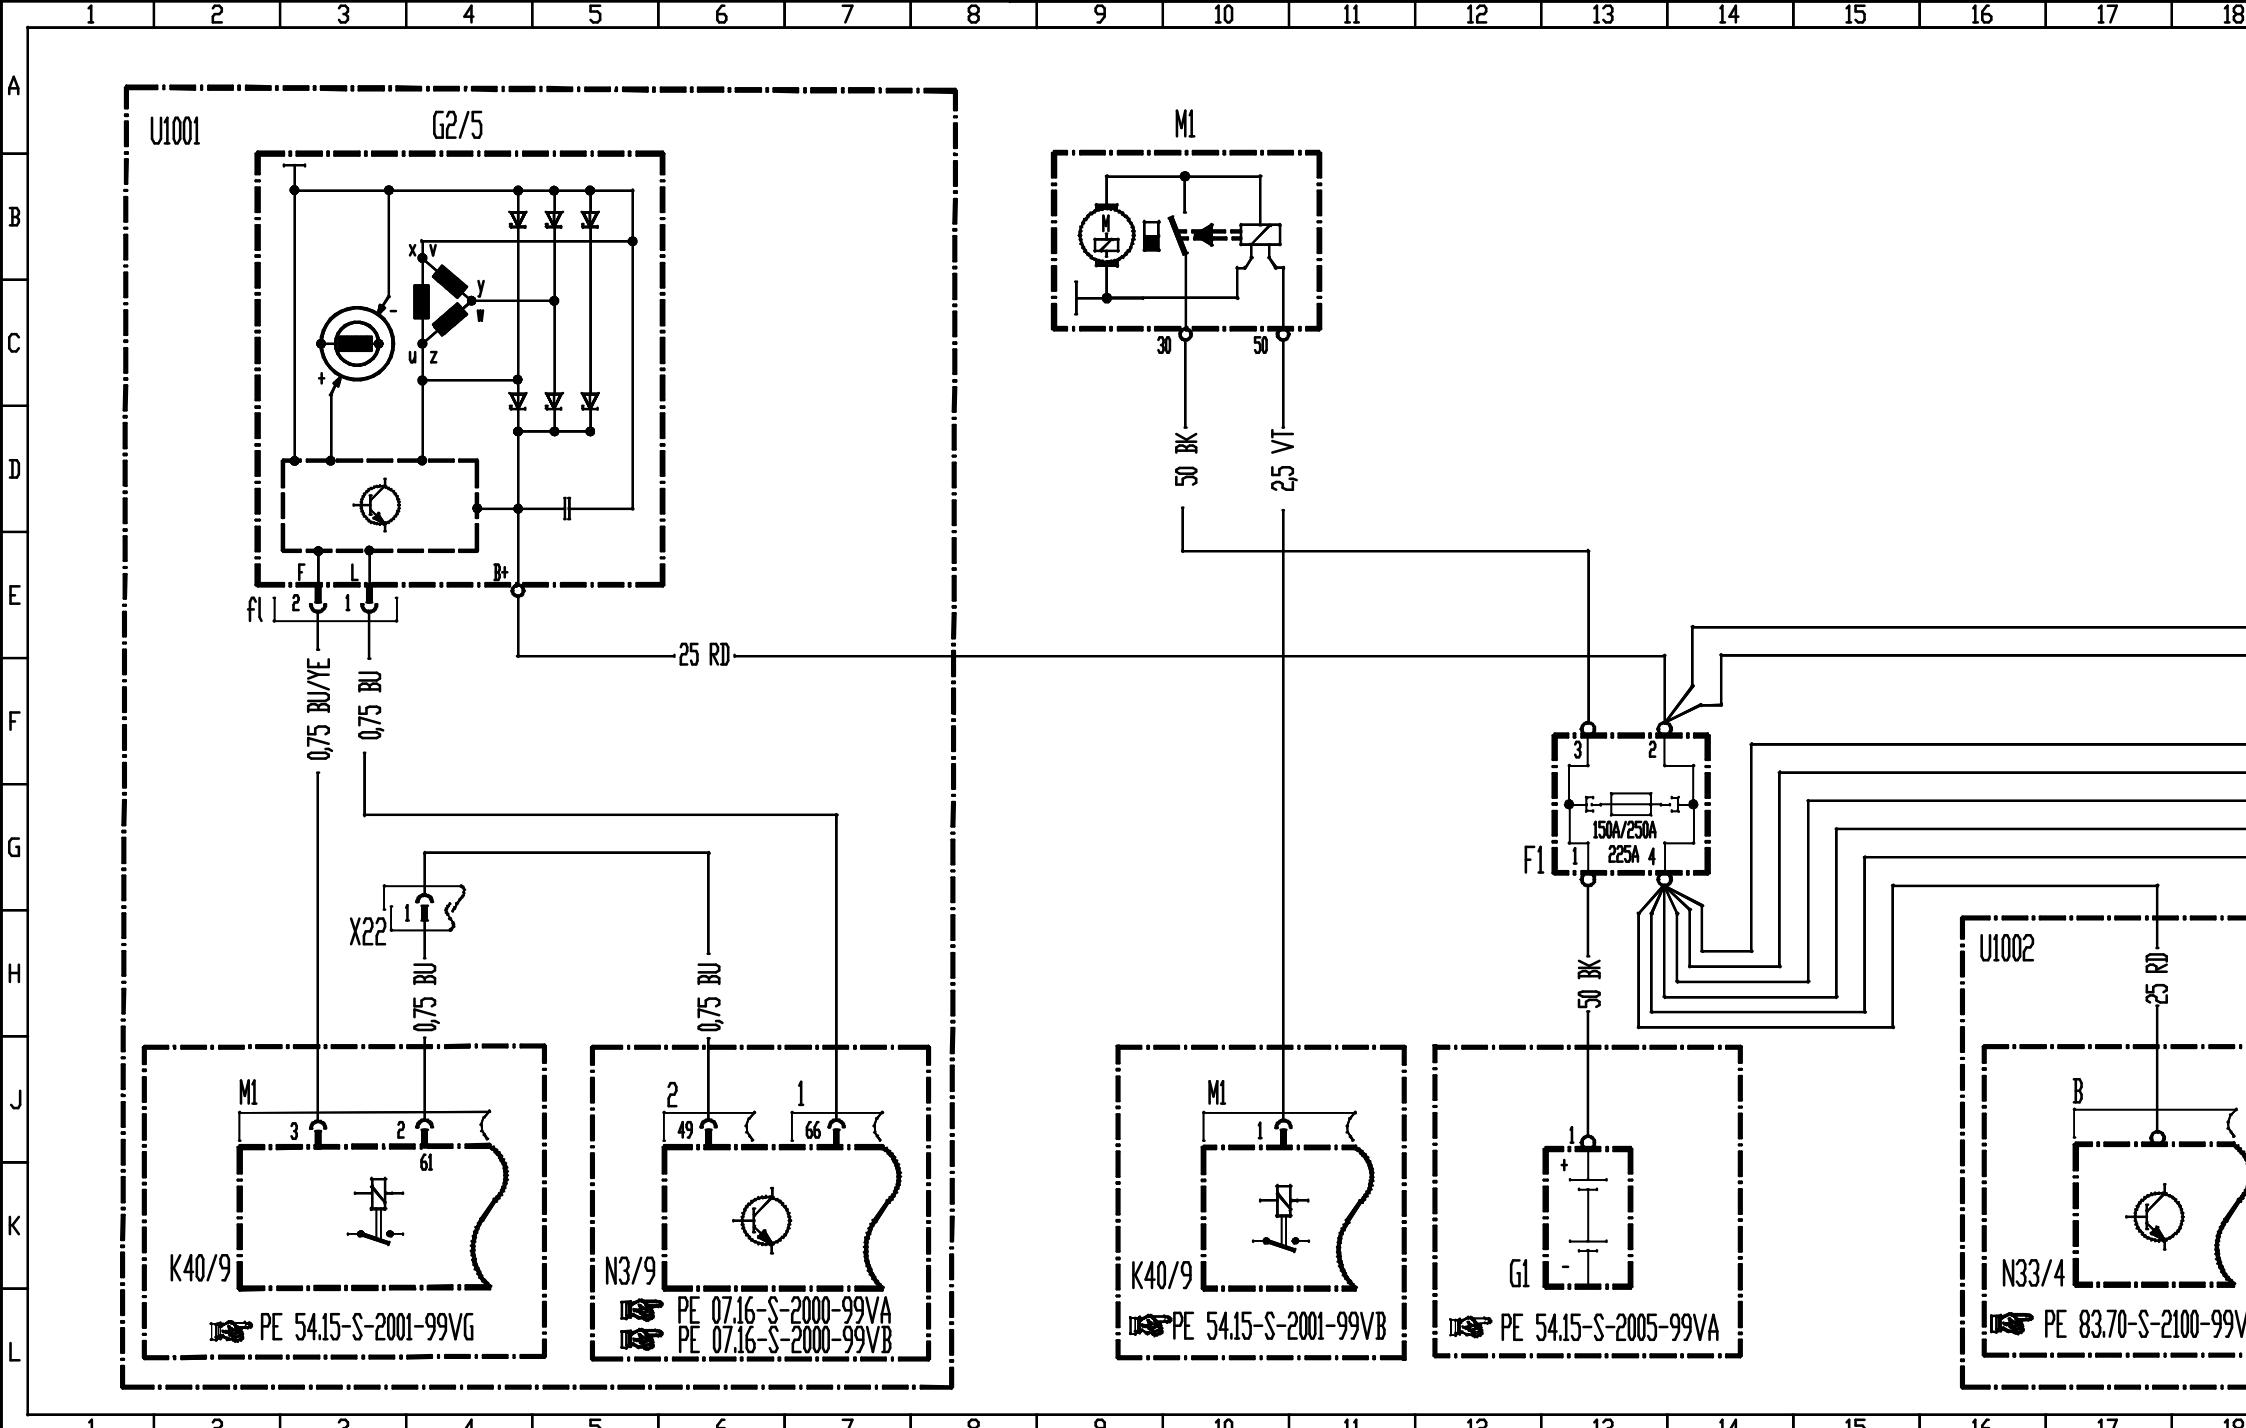

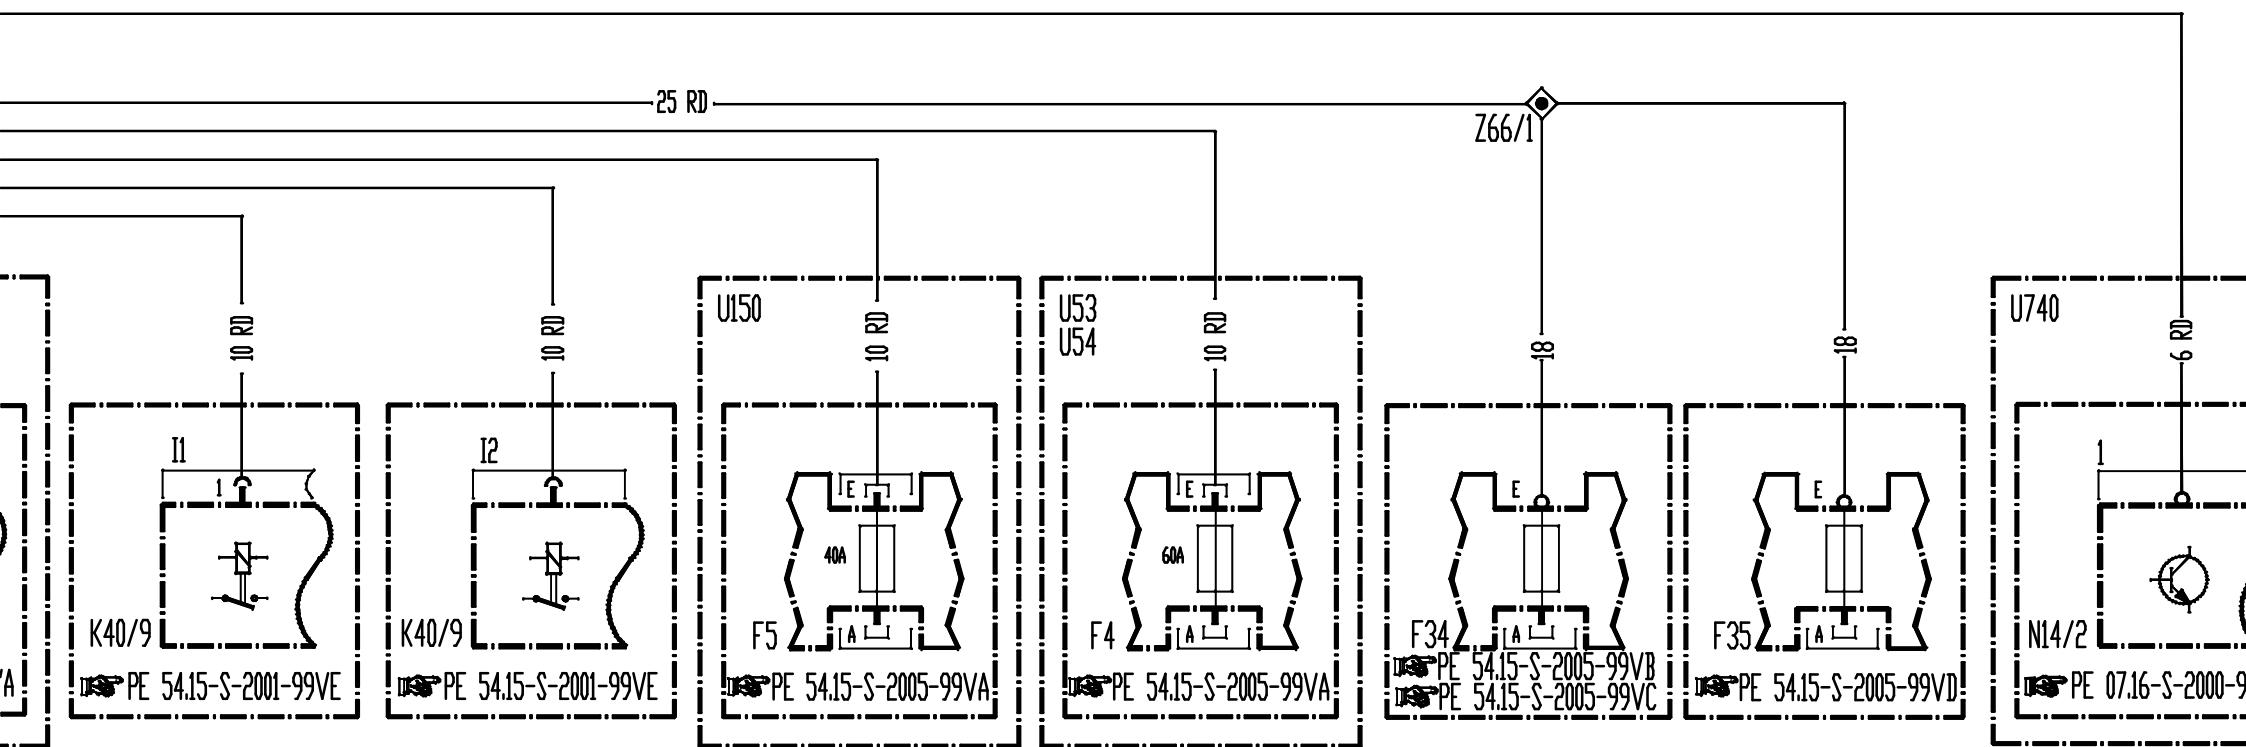

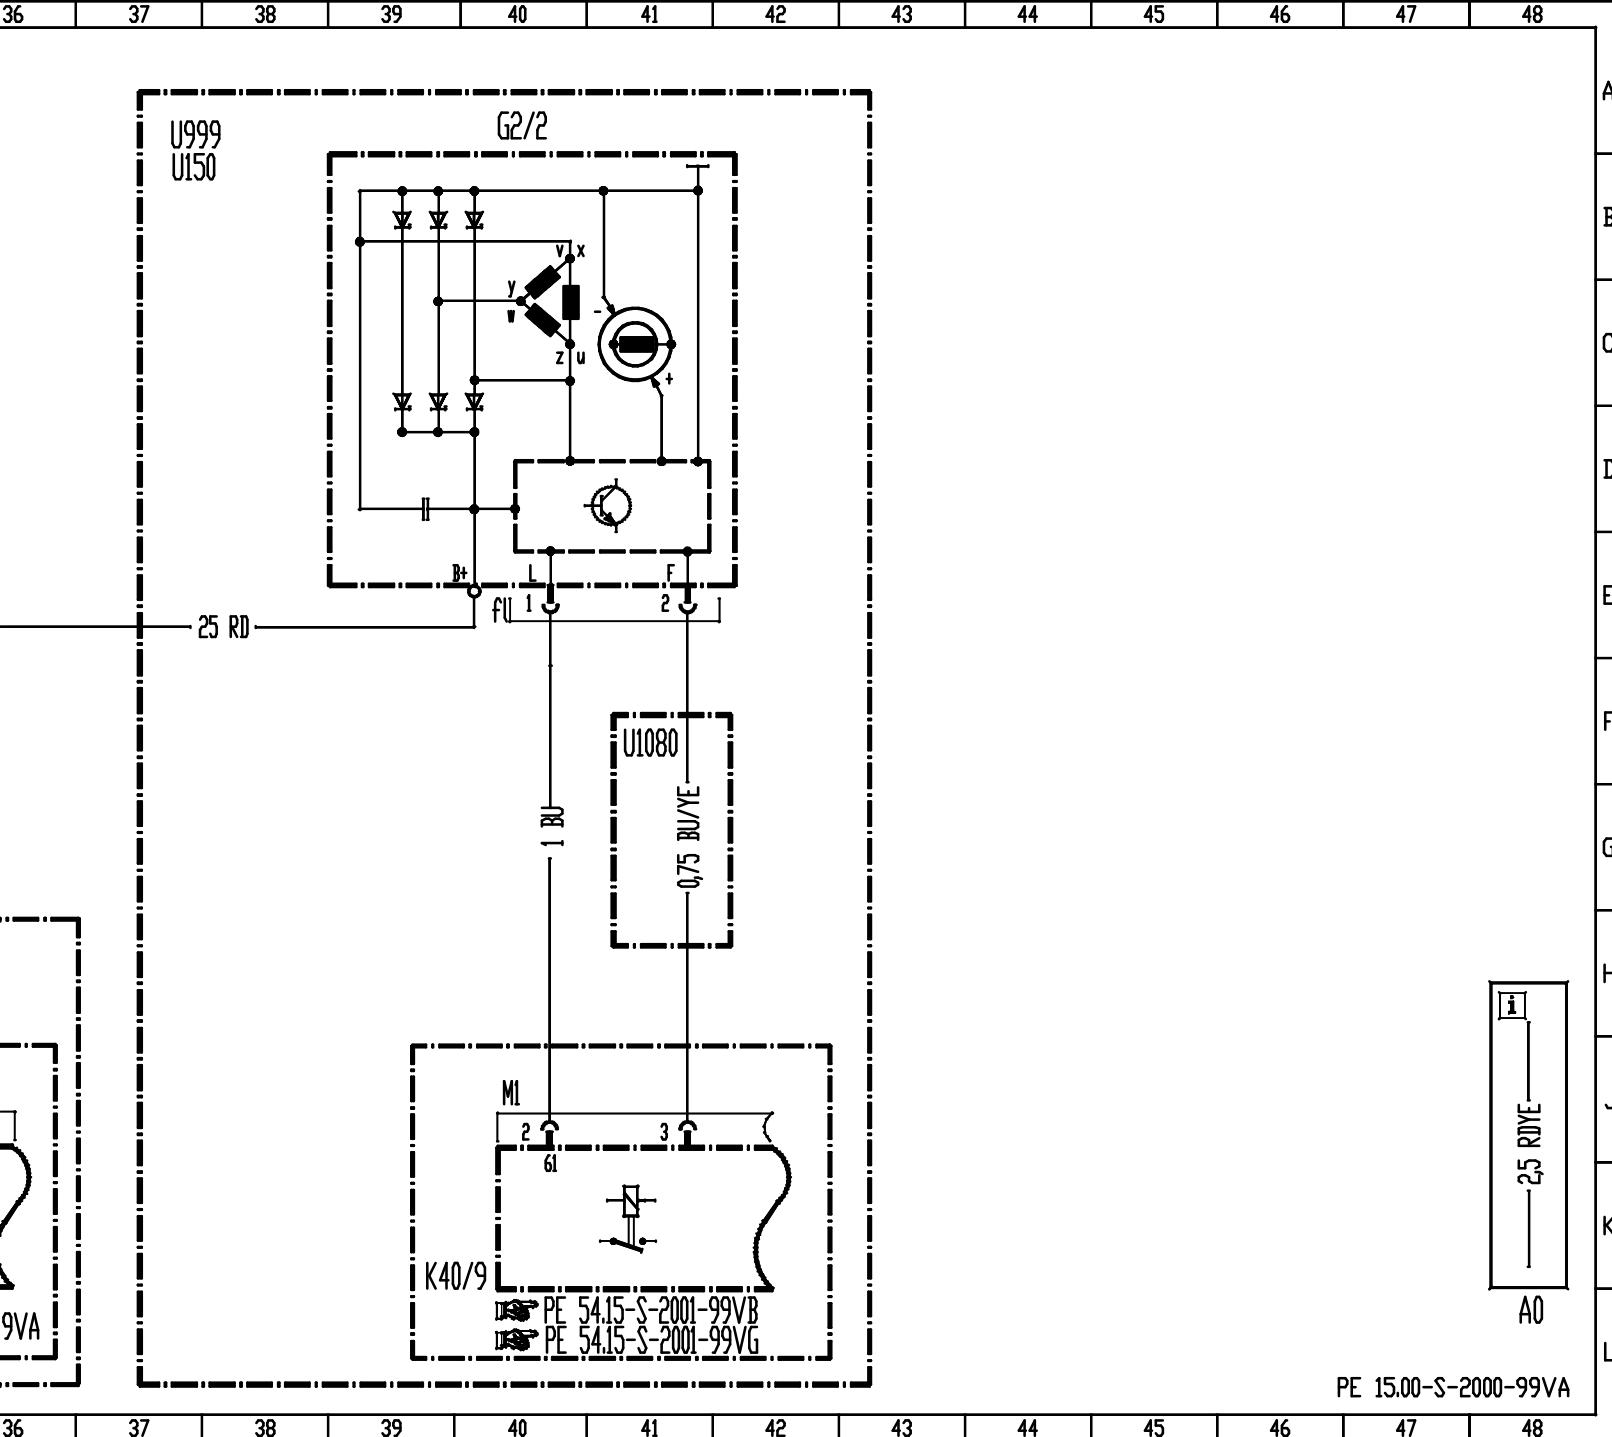

ENGINES 646.982 /983, 112.951 /976, 642.990 as of 1.3.05 in MODELS 639.601 /603 /605 /701 /703 /705 as of 1.3.05

ENGINES 646.982, 112.951 /976, 642.990 as of 1.3.05 in MODELS 639.711 /713 /811 /813 /815 as of 1.3.05

| | | | |
|---------------------|--|------------------------|---------------------|
| PE15.00-S-2000-99VB | Wiring diagram for starter, alternator | | PE15.00-S-2000-99VB |
| PE15.00-S-2000-60VB | Legend of wiring diagram for starter, alternator | | PE15.00-S-2000-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box - location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|--|--|--|
| PE15.00-S-2000-60VB | Legend of wiring diagram for starter, alternator | ENGINES 646.982 /983, 112.951 /976, 642.990 from 1.3.05 in MODELS 639.601 /603 /605/ 701 /703 /705 from 1.3.05 ENGINES 646.982, 112.951 /976, 642.990 from 1.3.05 in MODELS 639.711 /713 /811 /813 /815 from 1.3.05 | |
|---------------------|--|--|--|

| Code | Designation | Coordinates |
|-------|-------------------------------|---------------------------------------|
| A0 | Color code key | 64L |
| F1 | 1-pin prefuse box | 31G |
| F4 | Fuse box (1-pin) | 53K |
| F5 | Fuse box (1-pin) | 50K |
| F34 | Fuse block, 22-pin | 42K |
| F35 | Fuse block, 22-pin | 44K |
| G1 | Battery | 35K |
| G2/2 | Alternator | 24B |
| G2/5 | 200 A Alternator | 17B |
| G2/6 | Alternator 200 A with LIN bus | 4B |
| K40/9 | Fuse and relay block | 8K 15K 22K 29K 37K 40K |
| M1 | Starter | 29A |
| N3/9 | CDI control unit | 18K |
| N3/20 | CDI control unit | 3L |
| N14/2 | Glow output stage | 58K |
| N14/3 | Glow output stage | 11L 55K |

| | | |
|--------|---|------------|
| N33/4 | Heater booster control unit | 47L |
| U53 | Valid for automatic air conditioning "Thermotronic" | 52H |
| U54 | Valid for regulated air conditioning "Tempmatic" | 52H |
| U1001 | Valid for engine OM 646 with automatic transmission | 15B |
| U1002 | Valid for PTC element | 47H |
| U1080 | Valid for alternator 14V / 200 A without automatic transmission | 23G |
| U150 | Valid for engine M 112 | 21B 50H |
| U740 | Valid for engine OM 646 | 58H |
| U960 | Valid for engine OM 642 | 1B 55H |
| U999 | Valid for engine OM 646 without automatic transmission | 21B |
| X22 | Engine compartment and engine connector | 16H |
| Z66/1 | Additional fuse box feed connector sleeve | 43G |
| Z203/3 | Alternator connector sleeve | 3H |

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18

A

B

C

D

E

F

G

H


J

K

L


U960

G2/6



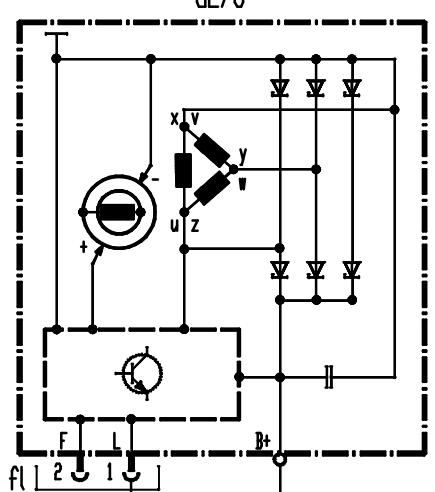


U1001

G2/5

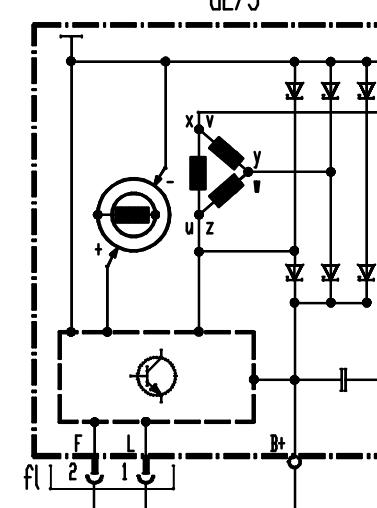

Z203/3

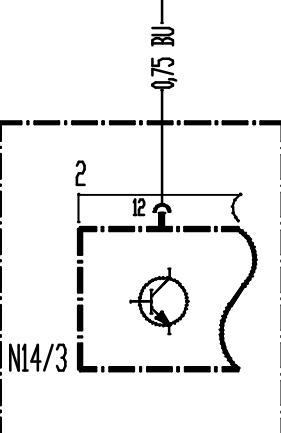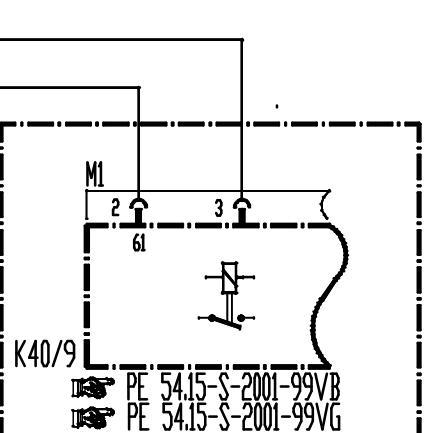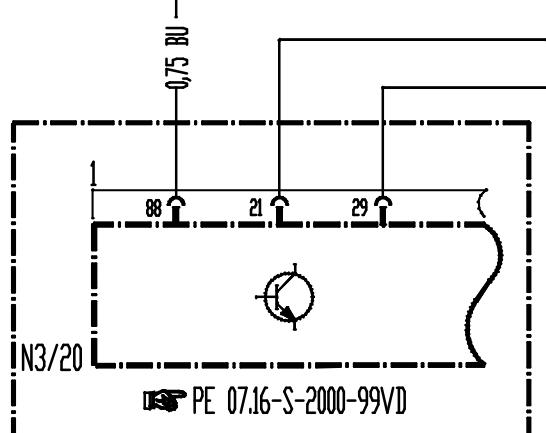


PE 07.16-S-2000-99V/D

PE 54.15-S-2001-99VB
PE 54.15-S-2001-99VG


K40/9
PE 54.15-S-2001-99VB
PE 54.15-S-2001-99VG

1 2 3 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

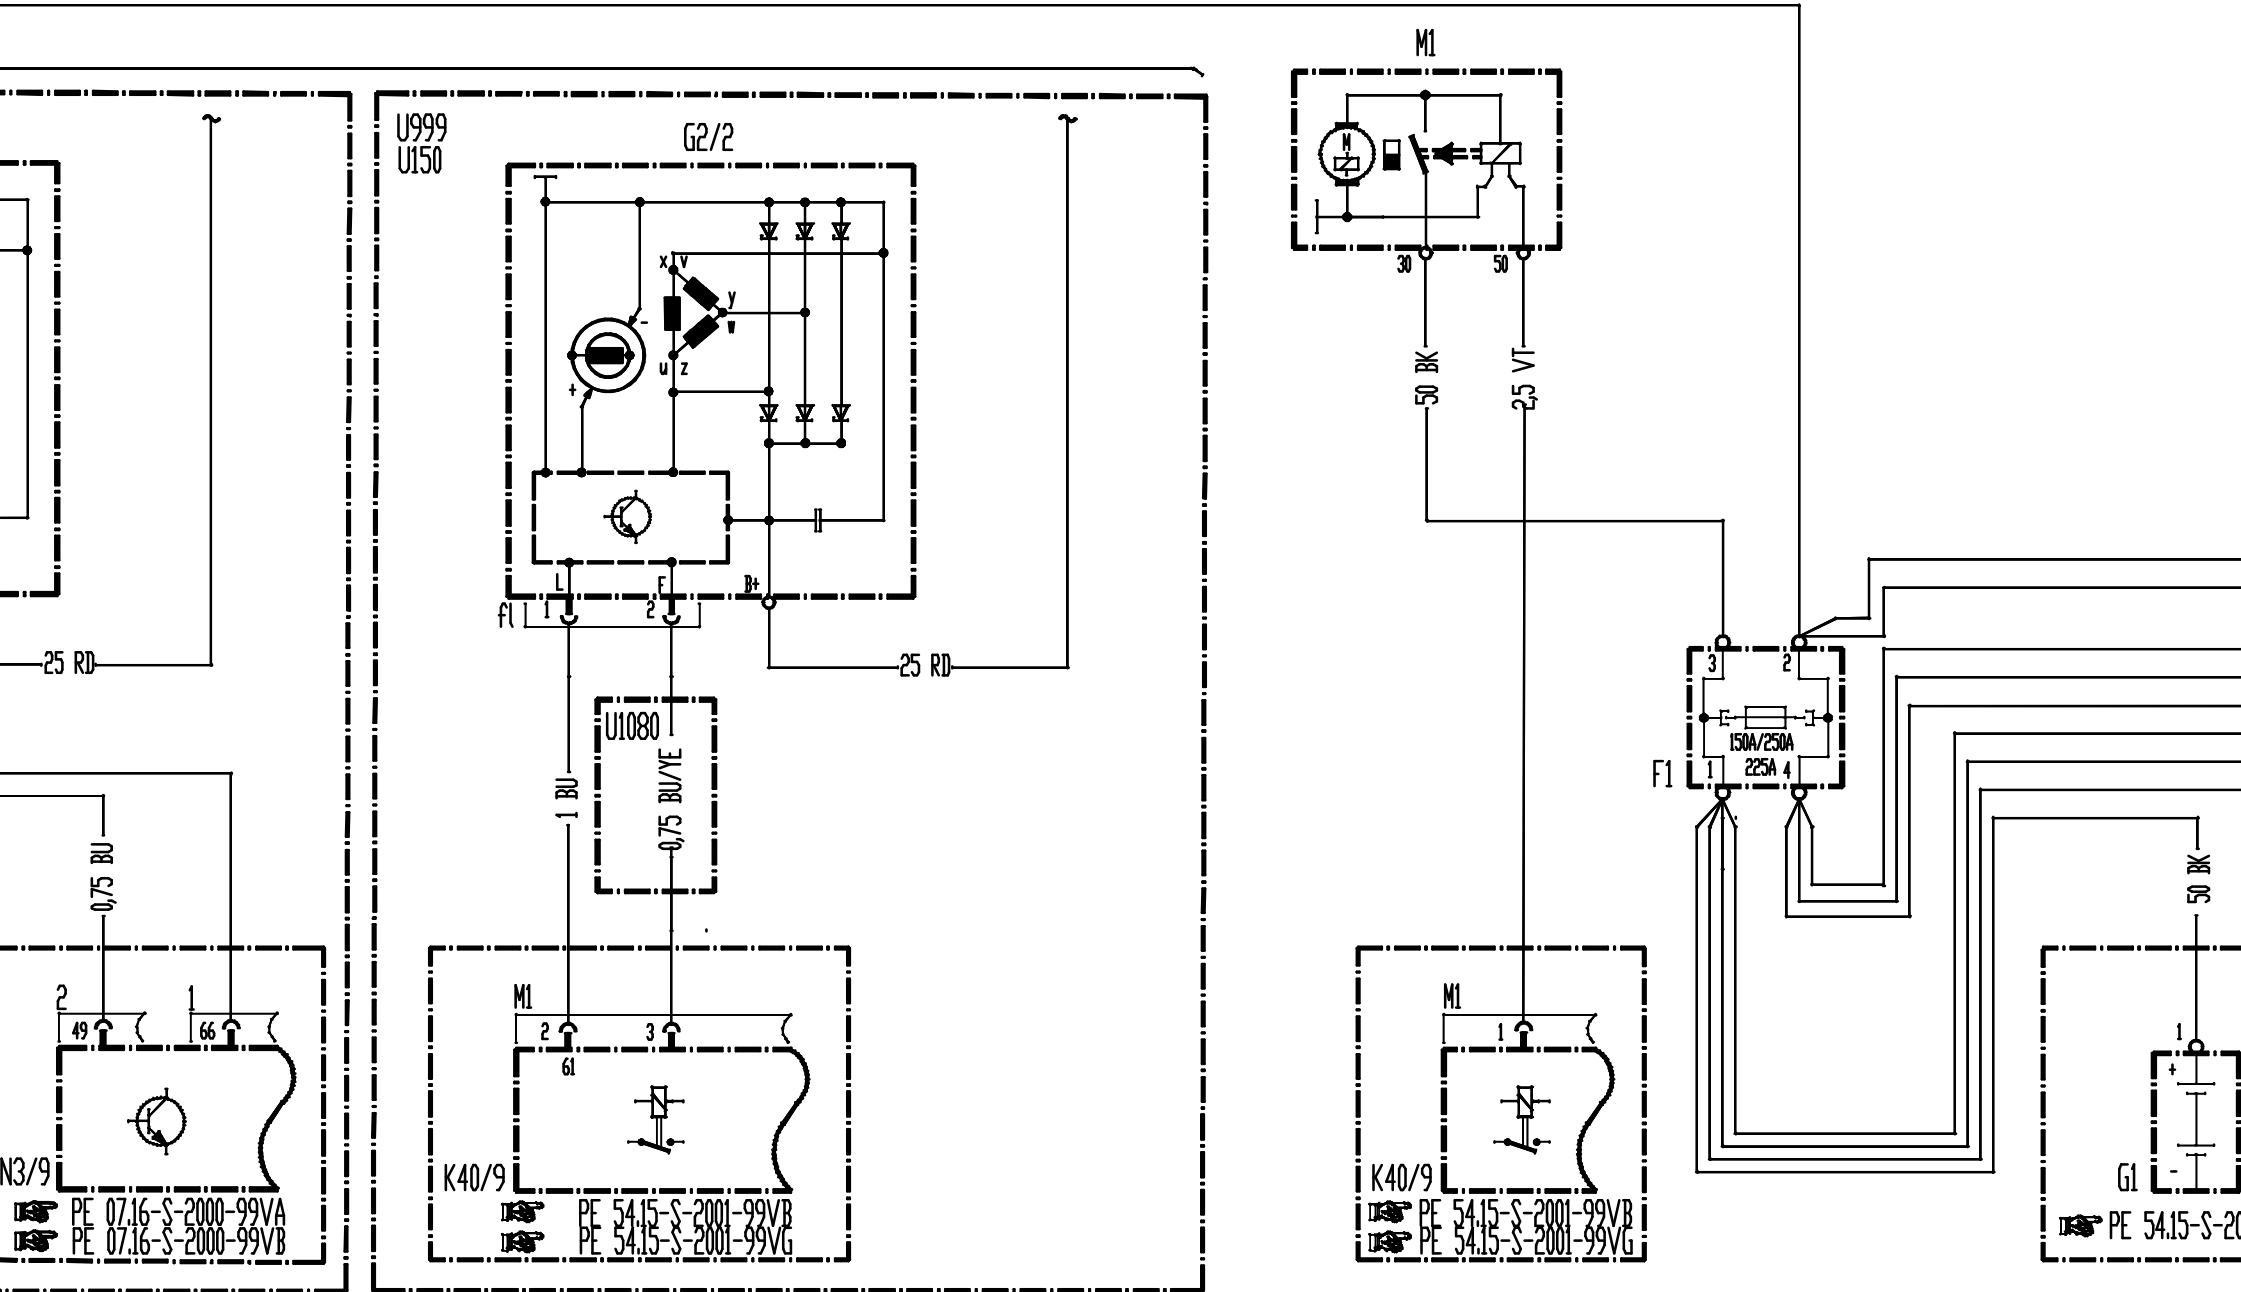

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

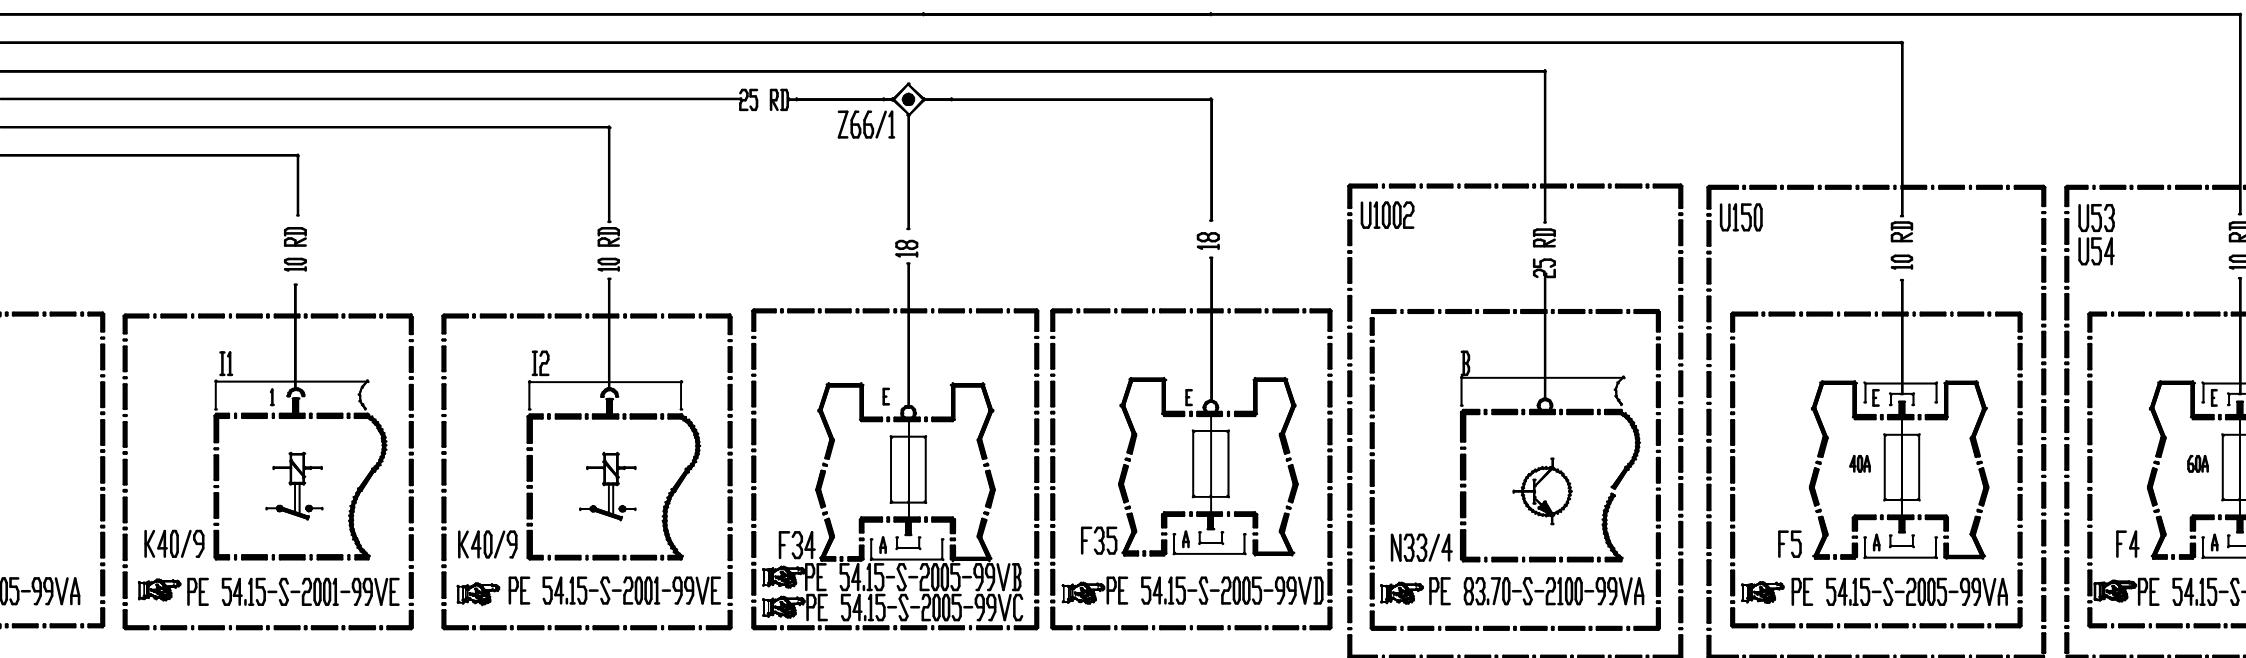

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

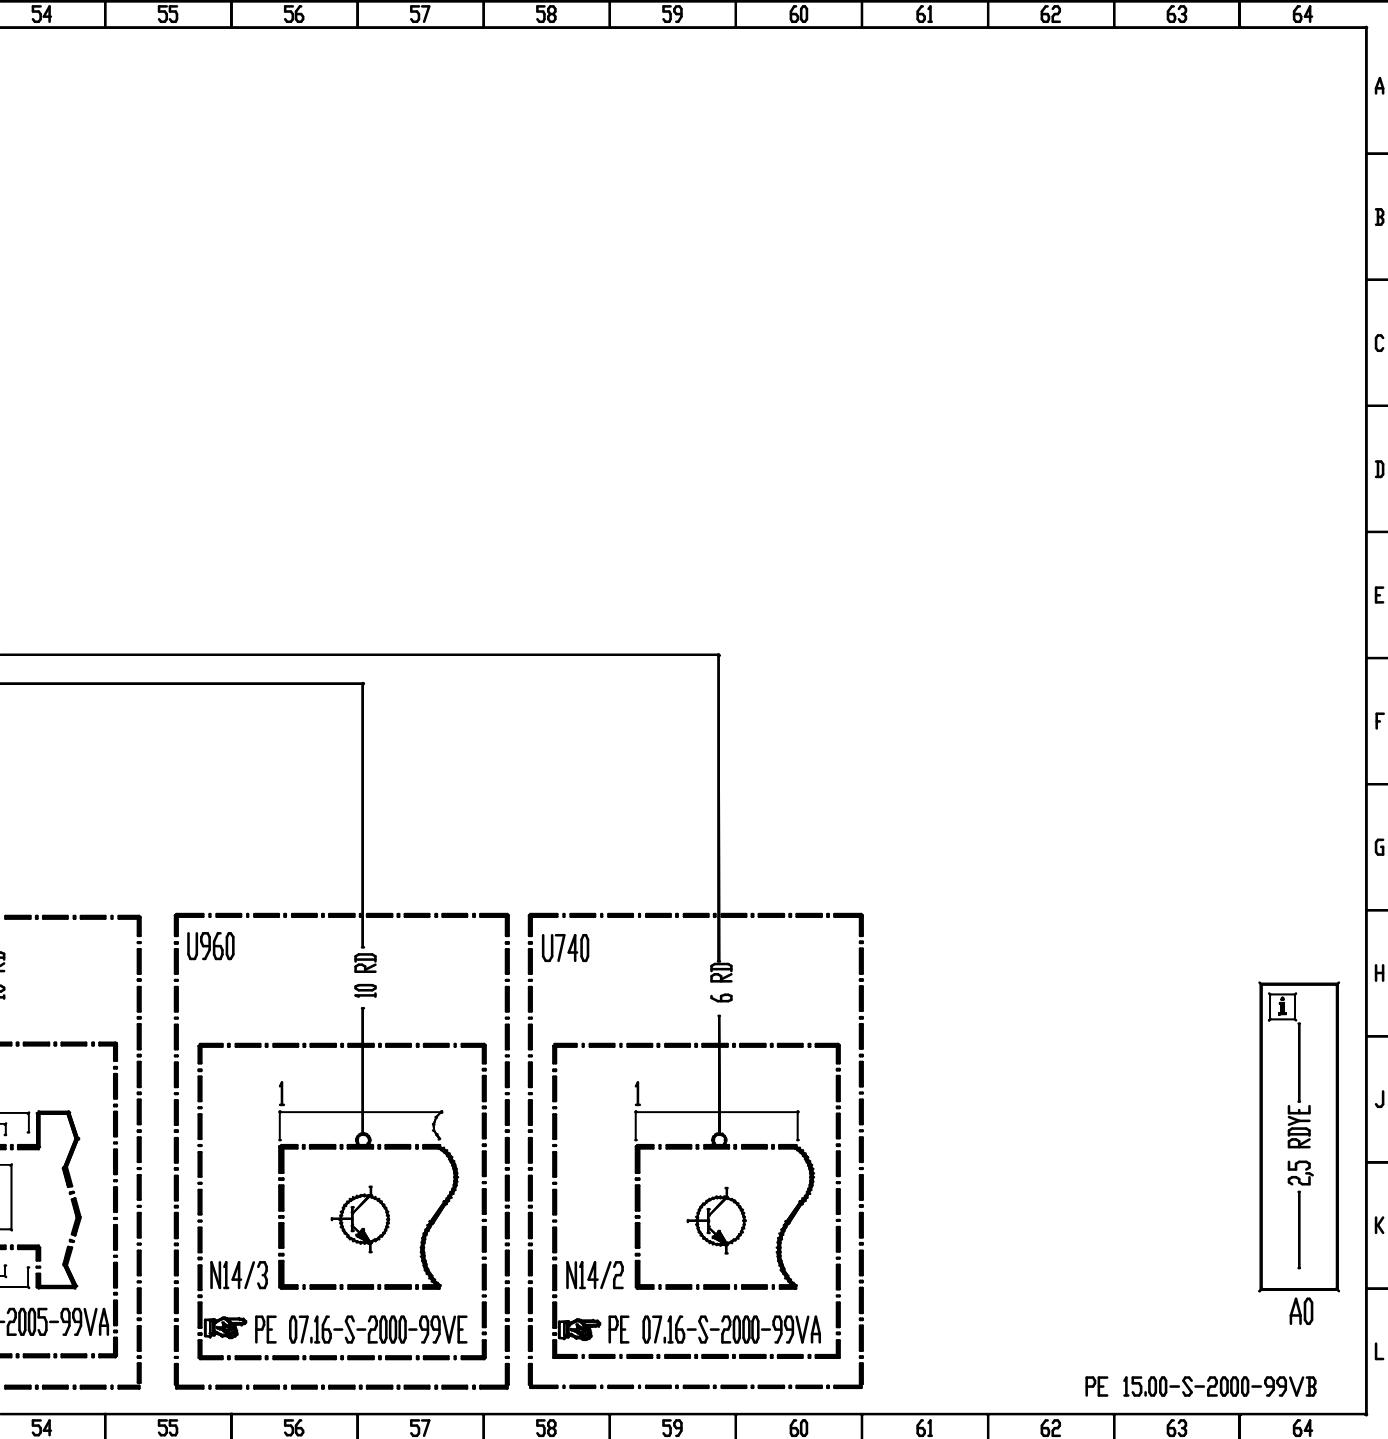

Voltage supply fuses

Chapter 6

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


left seat frame


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2005-99VA | Wiring diagram of voltage supply of fuses | | PE54.15-S-2005-99VA |
| PE54.15-S-2005-60VA | Legend of wiring diagram for voltage supply of fuses | | PE54.15-S-2005-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|---|--|
| PE54.15-S-2005-60VA | Legend of wiring diagram for voltage supply of fuses | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 left seat frame | |
|---------------------|--|---|--|

| Code | Designation | Coordinates |
|--------|---|-------------|
| E25/7 | Transistor lamp, left | 24K |
| E25/8 | Transistor lamp, right | 27K |
| F6 | Fuse box (1-pin) | 3E |
| F7 | Fuse block (9-pin) | 6E |
| F7-b1 | Fuse connector (2-pin) | 7D |
| F7-b2 | Fuse connector (2-pin) | 12D |
| F7-b3 | Fuse connector (2-pin) | 17D |
| F7-b4 | Fuse connector (2-pin) | 22D |
| F7-b5 | Fuse connector (1-pin) | 34D |
| F7f1 | Left door control unit fuse | 7D |
| F7f2 | Right door control unit fuse | 9D |
| F7f3 | Fuse 1 (PSM) | 12D |
| F7f4 | Fuse 2 (PSM) | 14D |
| F7f5 | 12V socket fuse, front passenger seat box | 17D |
| F7f6 | Charge line to vehicle battery fuse | 20D |
| F7f7 | Timer and illumination power supply fuse | 22D |
| F7f8 | STH power supply fuse | 30D |
| F7f9 | Pop-up roof power supply fuse | 34D |
| G1 | Battery | 1E |
| G1/1 | Additional battery | 37E |
| K40/9 | Fuse and relay block | 3K |
| N26/15 | PSM control unit | 12K |
| N33/5 | Hot air stationary heater control unit | 30K |

| | | |
|--------|---|-------------------|
| N34 | STH timer | 22K |
| N69/1 | Door control unit, left front | 6K |
| N69/2 | Door control unit, right front | 9K |
| U26 | Valid for taxi version with emergency alarm system | 11G |
| U27 | Valid for taxi version without emergency alarm system | 11G |
| U1025 | Valid for warm air auxiliary heater with timer and temperature control | 29G |
| U1036 | Valid for freezer vehicle | 11H |
| U1037 | Valid for refrigerator vehicle | 11H |
| U1038 | Valid for FUN equipment line with refrigerator box | 16G 19B |
| U1039 | Valid for warm air auxiliary heater with timer and temperature control with FUN equipment line or comfort plus package | 21G |
| U1040 | Valid for FUN equipment line or comfort plus package without additional heavy-duty battery | 29B |
| U1041 | Valid for FUN equipment line or comfort plus package with heavy-duty battery in addition or for "Marco Polo" camper | 31B |
| U1042 | Valid for electrohydraulic "Easy up" pop-up roof without heavy-duty battery in addition | 33B |
| U1043 | Valid for electrohydraulic "Easy up" pop-up roof with heavy-duty battery in addition or gel additional battery 12V 80Ah | 35B |
| U914 | Valid for rental vehicle package with emergency alarm system | 11H |
| U934 | Valid for rental vehicle package without emergency alarm system | 11J |
| U947 | Valid for parameterizable special module | 11G 14C |
| U953 | Valid for electrohydraulic "Easy up" pop-up roof | 11G 34G |
| U978 | Valid for FUN equipment line | 24G |
| U980 | Valid for "Marco Polo" camper | 19G 20B 24G |
| W10 | Ground (battery) | 2L |
| W10/4 | Ground (additional battery) | 37L |
| X8/24 | Pop-up roof connector (Westfalia) | 34L |
| X8/29 | Separation point 2 (Westfalia) | 20L |
| X58/17 | 12V socket | 16K |

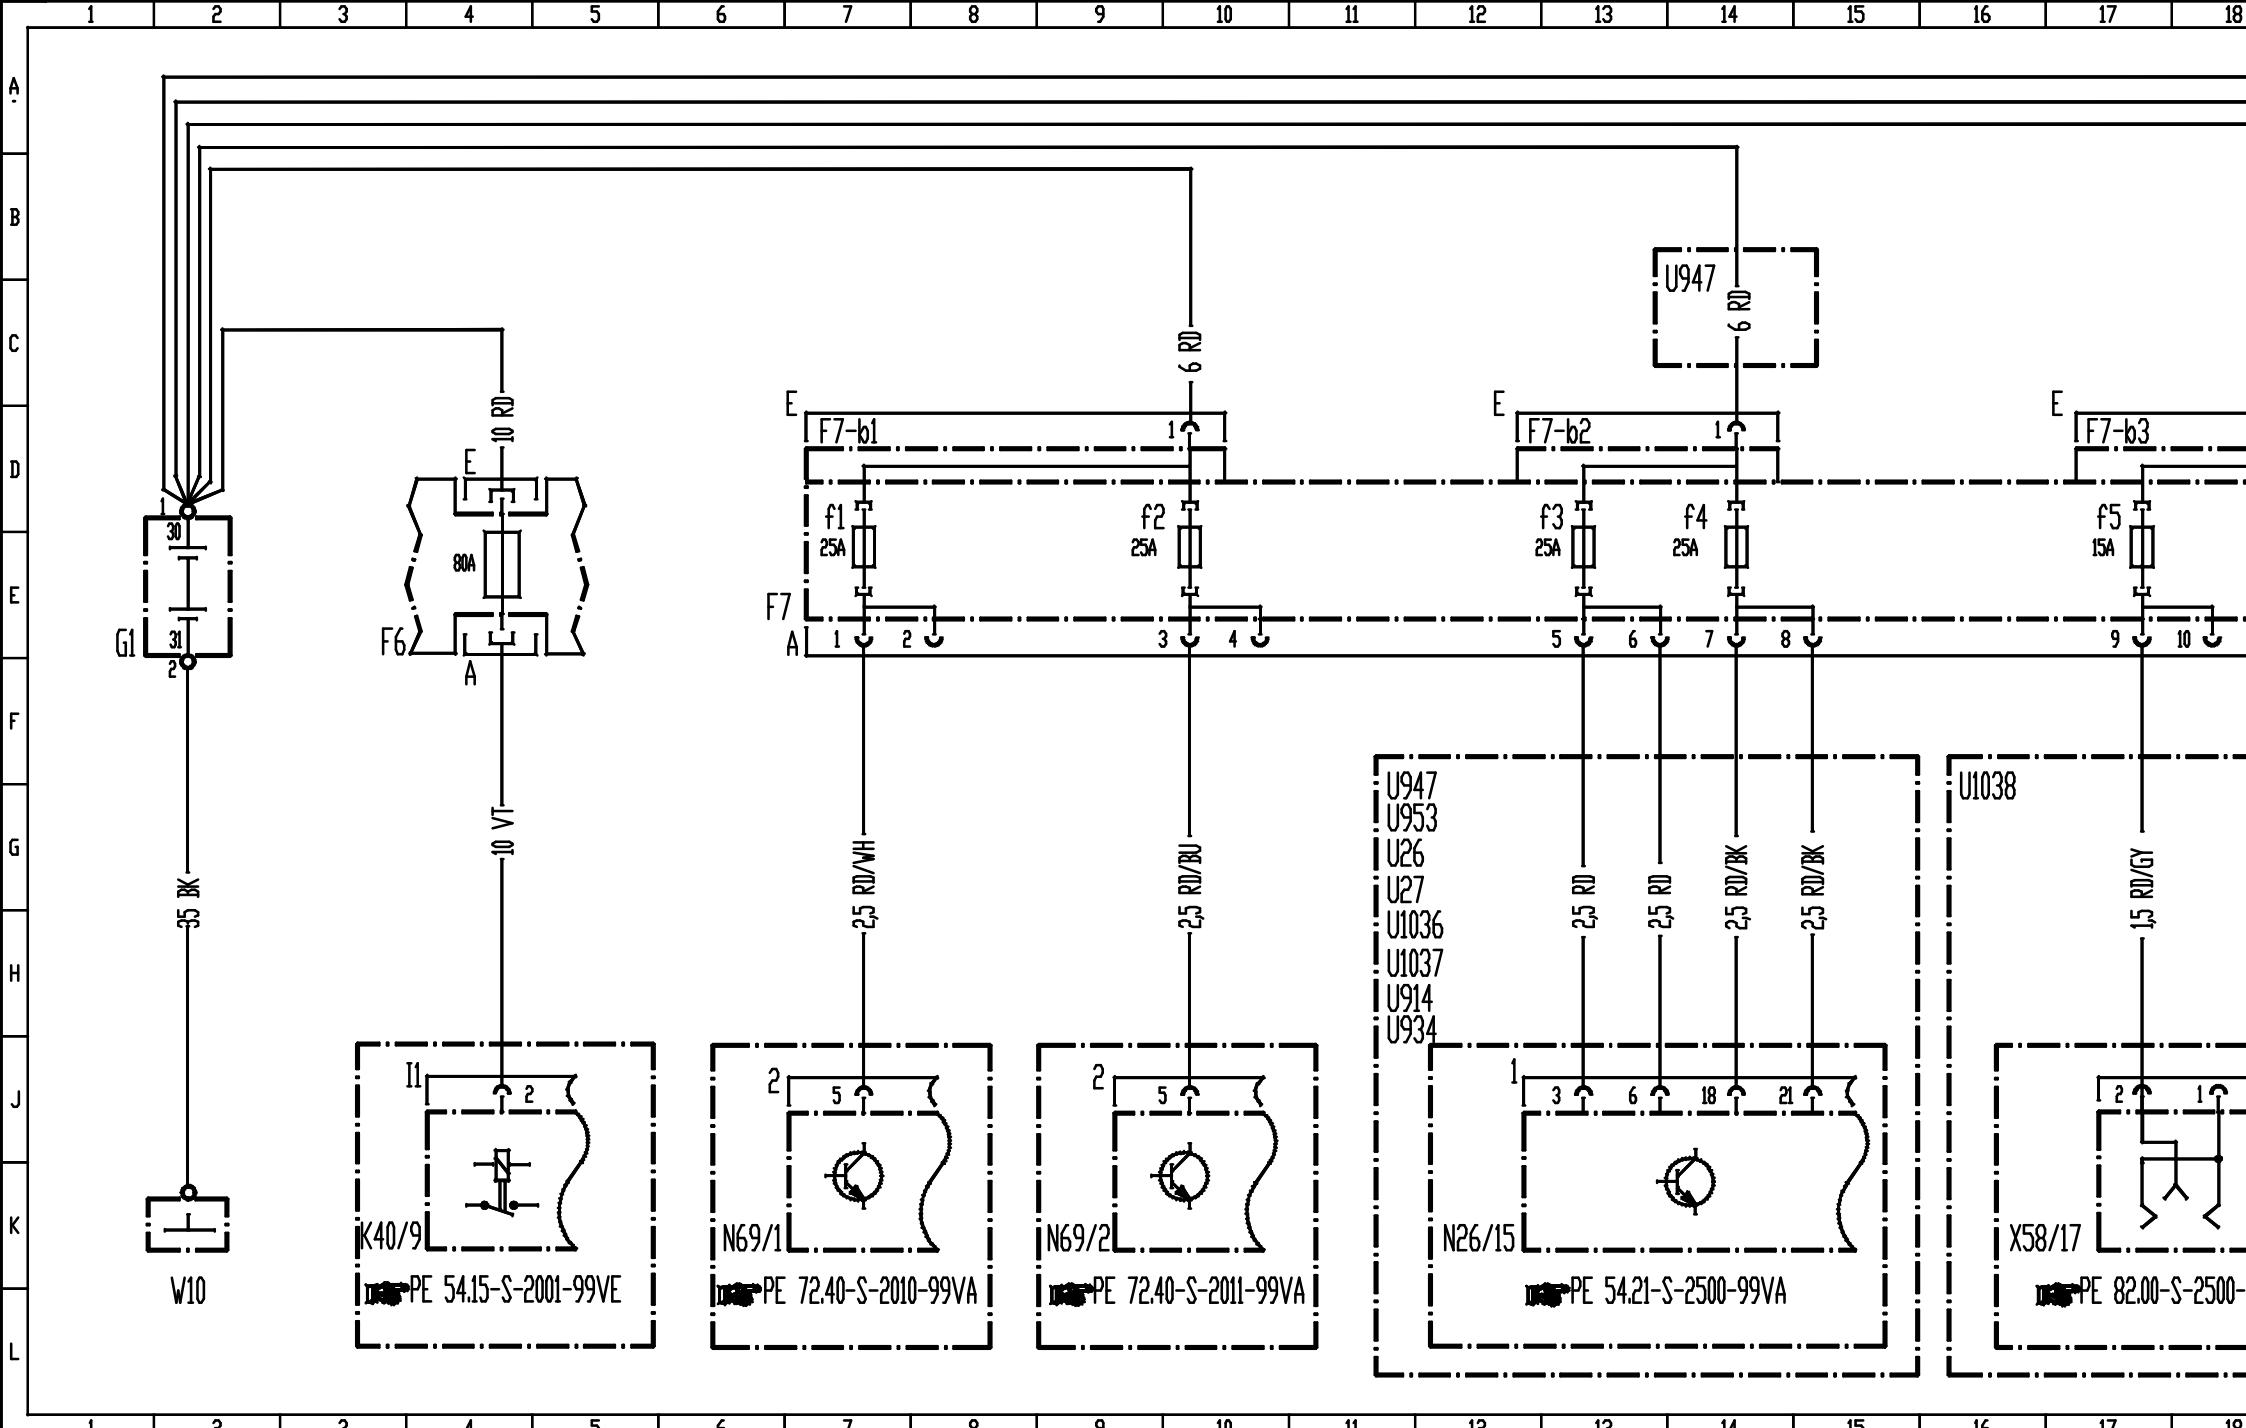

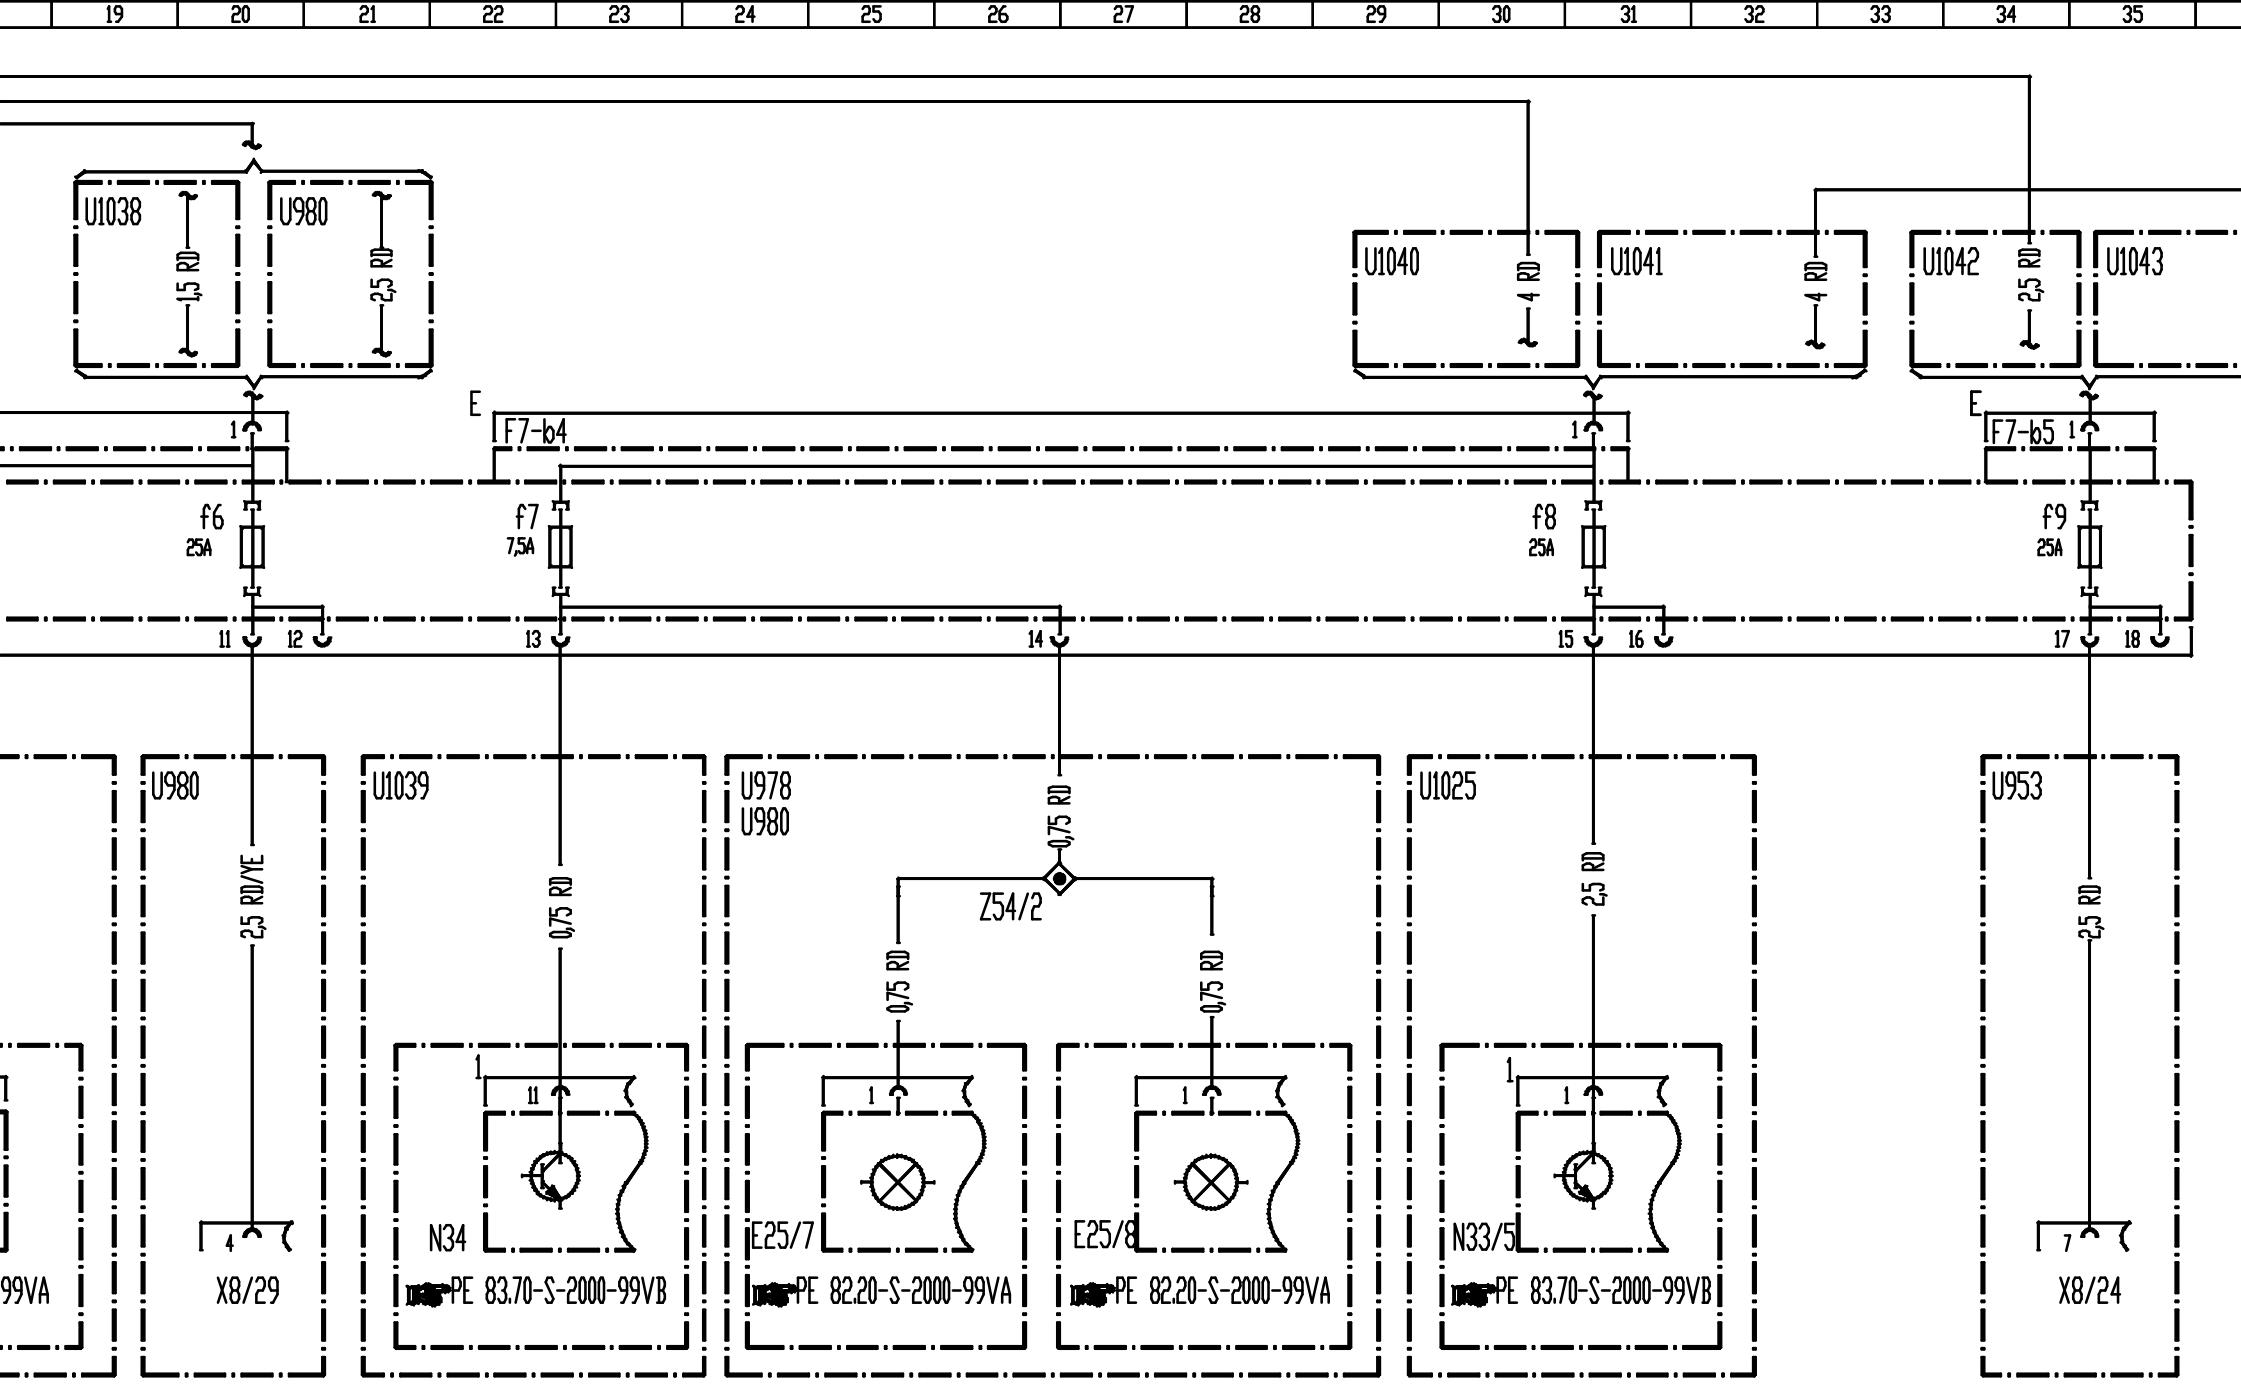

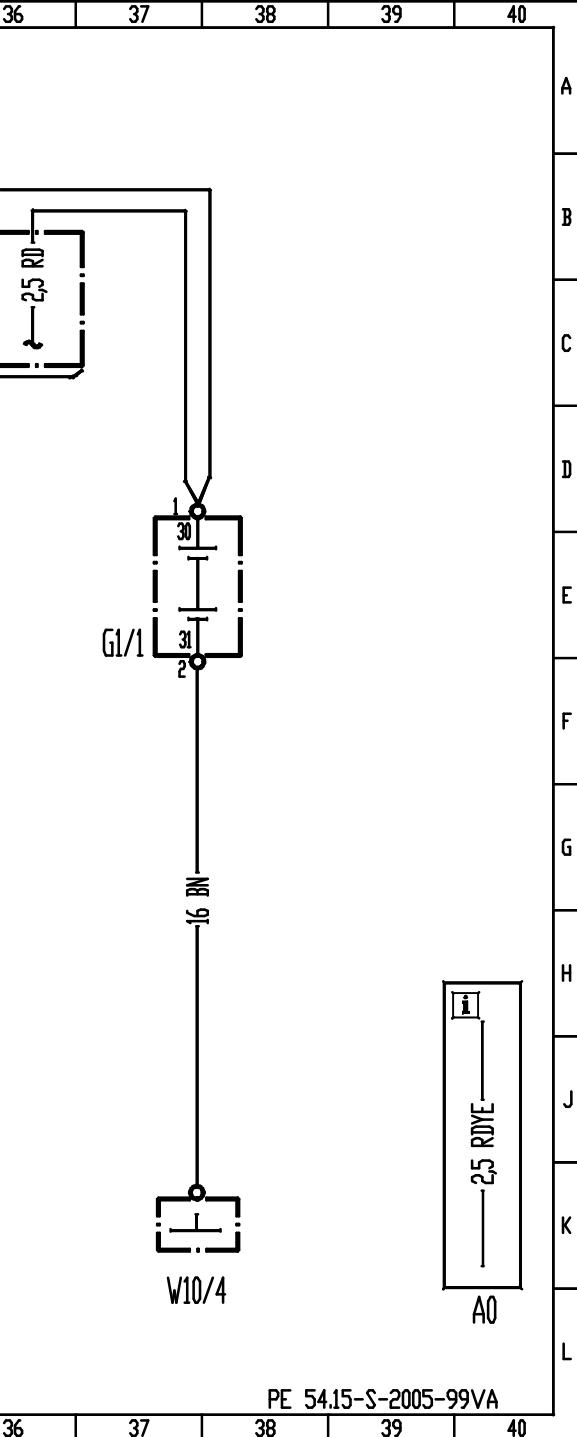

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 1,
E-box F34


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2005-99VB | Wiring diagram of voltage supply of fuses | Sheet 1 | PE54.15-S-2005-99VB |
| PE54.15-S-2005-60VB | Legend of wiring diagram for voltage supply of fuses | Sheet 1 | PE54.15-S-2005-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|---|--|
| PE54.15-S-2005-60VB | Legend of wiring diagram for voltage supply of fuses | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 1, E-box F34 | |
|---------------------|--|---|--|

| Code | Designation | Coordinates |
|--------|--|-------------|
| A49/4 | STH radio receiver | 69K |
| E15 | Dome lamp with reading lamp, front | 54K |
| E15/3 | Dome lamp, front of rear | 50K |
| E15/4 | Dome lamp, rear of rear | 48K |
| E15/6 | Interior lamp, left front grab handle | 37K |
| E15/7 | Interior lamp, right front grab handle | 39K |
| E15/8 | Interior lamp, left rear grab handle | 42K |
| E15/9 | Interior lamp, right rear grab handle | 45K |
| E15/29 | Load compartment lamp 1, right | 20K 30K |
| E15/30 | Load compartment lamp 2, left | 23K 33K |
| E18/1 | Trunk lamp | 17K 27K |
| F34 | Fuse block, 22-pin | 6C |
| F34f21 | Exterior lamp switch fuse | 7B |
| F34f22 | TV console fuse | 11B |
| F34f23 | Interior lamps fuse | 37B |
| F34f24 | SHD overhead control panel fuse | 58B |
| F34f25 | Rear sliding roof fuse | 64B |
| F34f26 | STH radio receiver fuse | 69B |
| F34f27 | Front climate control fuse | 73B |
| F34f28 | Socket fuse, TV console | 76B |



| | | |
|-------|---|-------------------|
| N66/4 | Rear conversation unit control unit | 13K 75K |
| N70 | Overhead control panel control unit | 58K |
| N70/1 | Rear sliding roof unit control unit (SDE-H) | 65K |
| N72/1 | Upper control panel control unit | 6K |
| S1 | Exterior lamp switch | 4K |
| S66/4 | Rear entertainment system switch | 11K |
| S98 | Air conditioning operating module | 72K |
| U15 | Valid for screen in rear and DVD player | 11D 75D |
| U16 | Valid for screen in rear, DVD player and TV tuner | 11E 75E |
| U37 | Valid for ATA [EDW] I | 57E |
| U38 | Valid for ATA [EDW] II | 57E |
| U53 | Valid for automatic air conditioning "Thermotronic" | 72D |
| U54 | Valid for regulated air conditioning "Tempmatic" | 72E |
| U1003 | Valid for additional interior lamp in passenger compartment | 26E 36G |
| U1004 | Valid for interior lamp in rear | 26E 47G |
| U1005 | Valid without additional interior lamp in passenger compartment | 16E |
| U1006 | Valid without interior lamp in rear | 16E 20G 30G |
| U1007 | Valid for additional interior lamp in load compartment without interior lamp in rear | 23G 33G |
| U1009 | Valid for light/rain sensor | 57E |
| U1011 | Valid without glass tilting/sliding roof in passenger compartment | 53G |
| U1012 | Valid without glass tilting/sliding roof in driver/passenger compartment | 53G |
| U1013 | Valid without anti-theft alarm system with interior protection (EDW II) | 53G |
| U1014 | Valid for warm water auxiliary heater with radio remote control | 68D |
| U1015 | Valid for glass tilting/sliding roof in passenger compartment and roof and rear-end doors, high version | 65E |
| U1016 | Valid for glass tilting/sliding roof in passenger compartment without roof and rear-end doors, high version | 65D |

| | | |
|-------|---|-------------------|
| U1017 | Valid for electrohydraulic "Easy up" pop-up roof and glass sliding/lifting roof in driver area/front passenger area | 62D |
| U1018 | Valid without EDW I | 53H |
| U1019 | Valid without light/rain sensor | 53H |
| U1024 | Valid for DBE with 2 reading spotlights or garage door opener without glass tilting/sliding roof in driver/passenger compartment, glass tilting/sliding roof in passenger compartment, light/rain sensor, EDW II or EDW I | 59D |
| U949 | Valid for glass tilting/sliding roof in passenger compartment | 57E |
| U954 | Valid for glass tilting/sliding roof in driver/passenger compartment | 57D |
| U955 | Valid for alternator 14V / 200 Ah | 72E |
| U978 | Valid for FUN equipment line | 17G 27G 36G |
| U980 | Valid for "Marco Polo" camper | 17H 27H 36G |
| U982 | Valid for MPV | 17G 27G |
| U983 | Valid for TREND equipment line | 17G 27G |
| U984 | Valid for AMBIENTE equipment line | 17H 27H |
| U987 | Valid without DBE with 2 reading spotlights | 53H |
| W29/9 | Ground (right D-pillar) | 62L |
| X8/25 | Sliding roof in pop-up roof separation point (Westfalia) | 63L |
| X18/2 | Load compartment lamp connector | 21F 30F |
| Z4/1 | Ceiling illumination terminal 30 connector sleeve | 41G 49G 54G |
| Z66/1 | Additional fuse box feed connector sleeve | 1G |

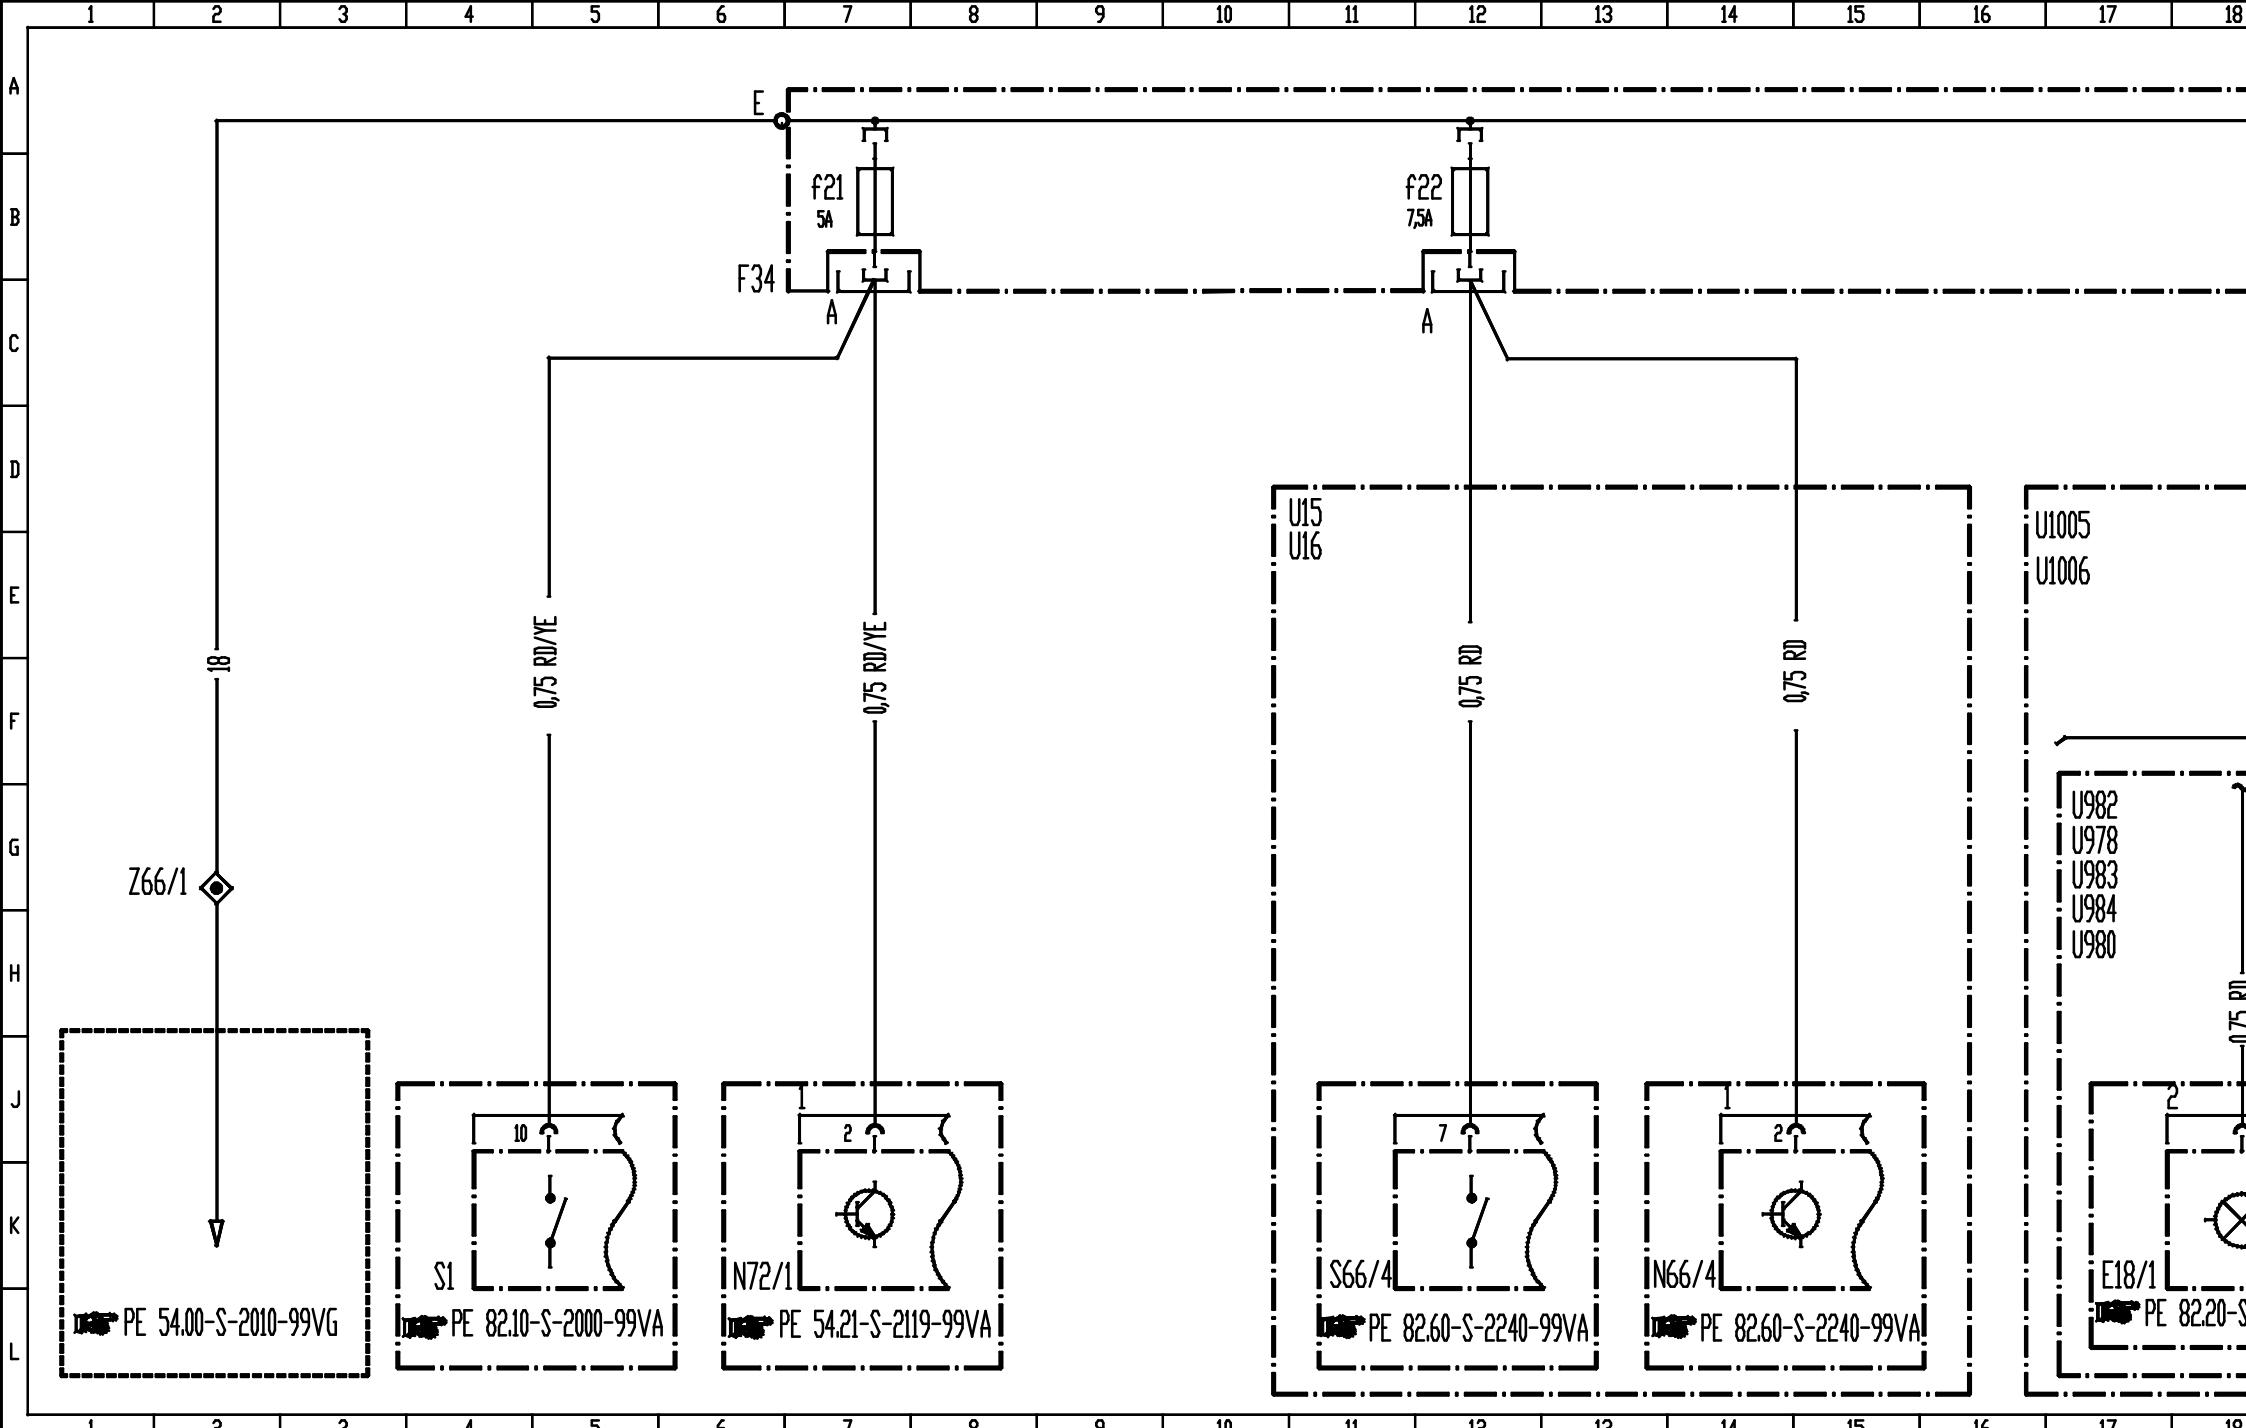

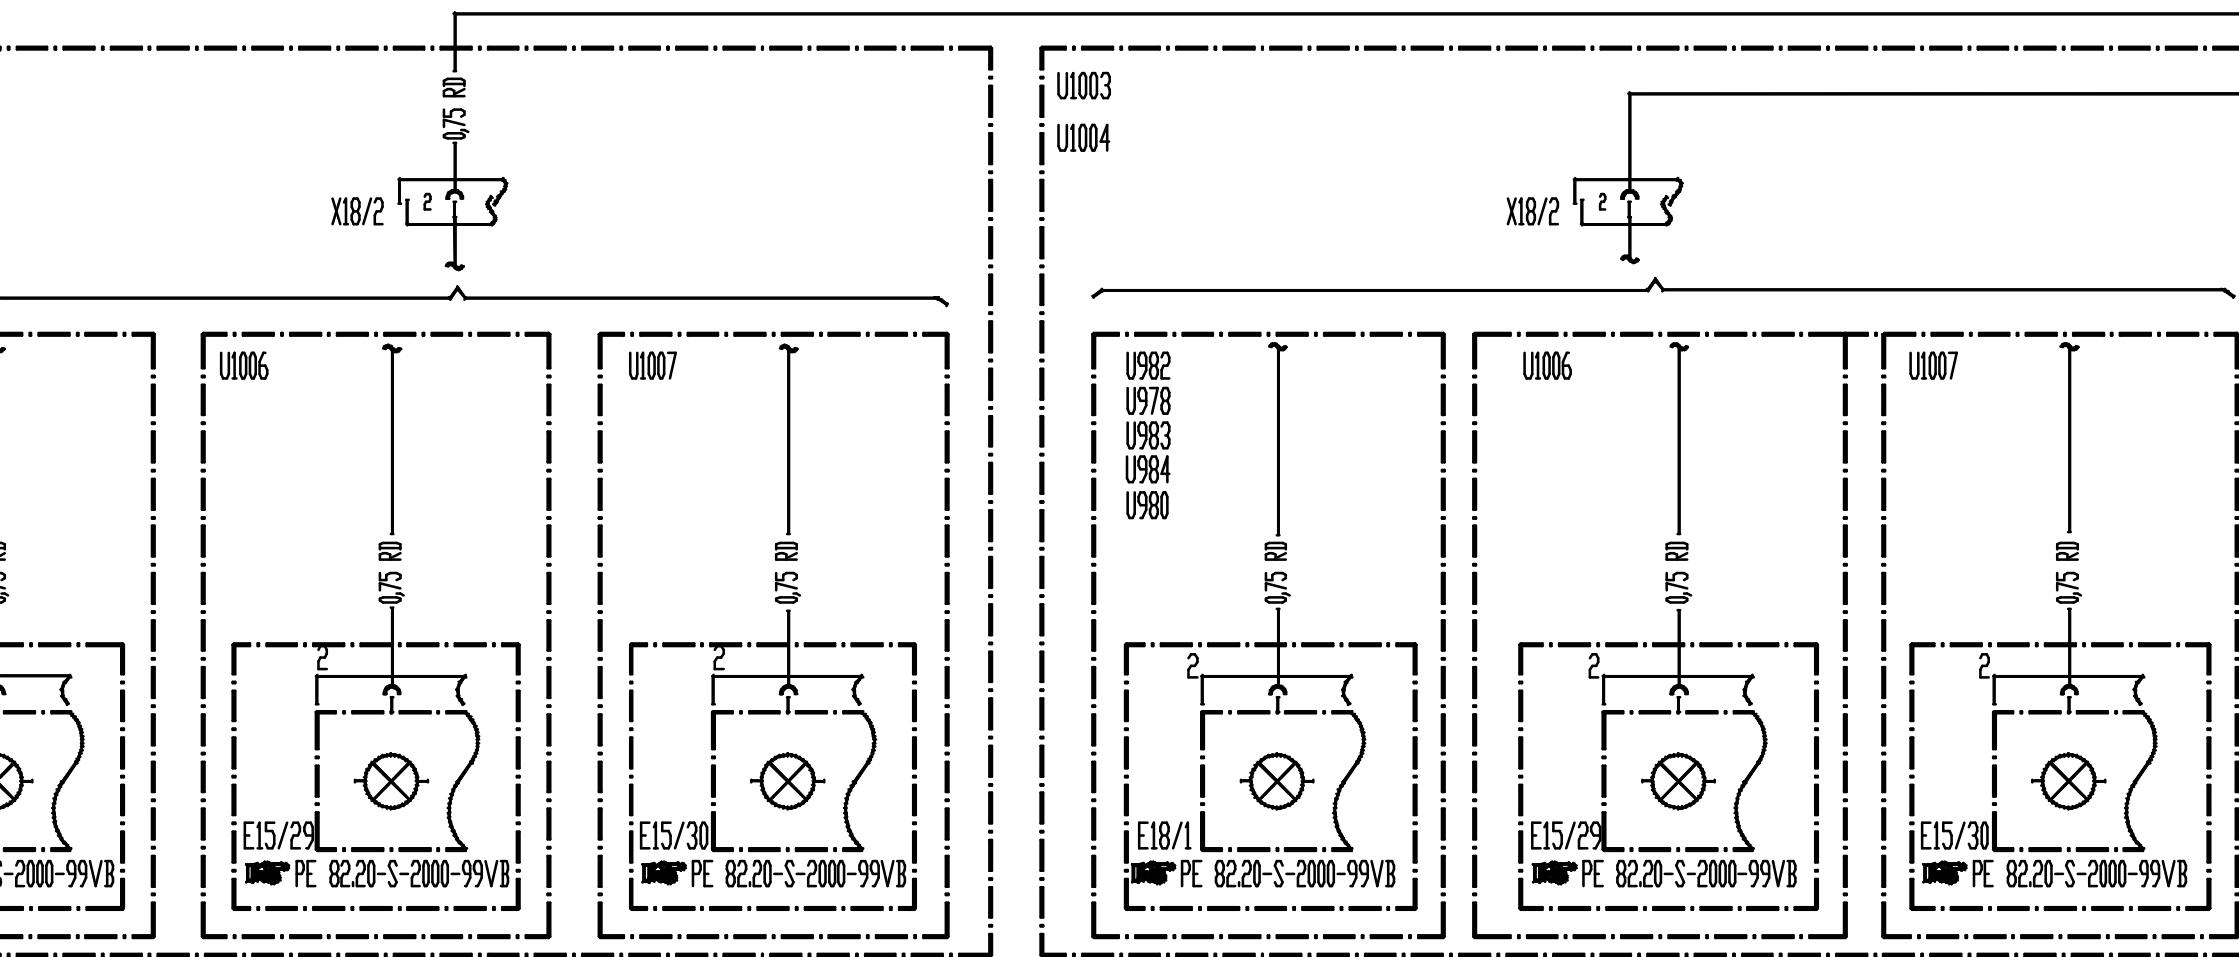



36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

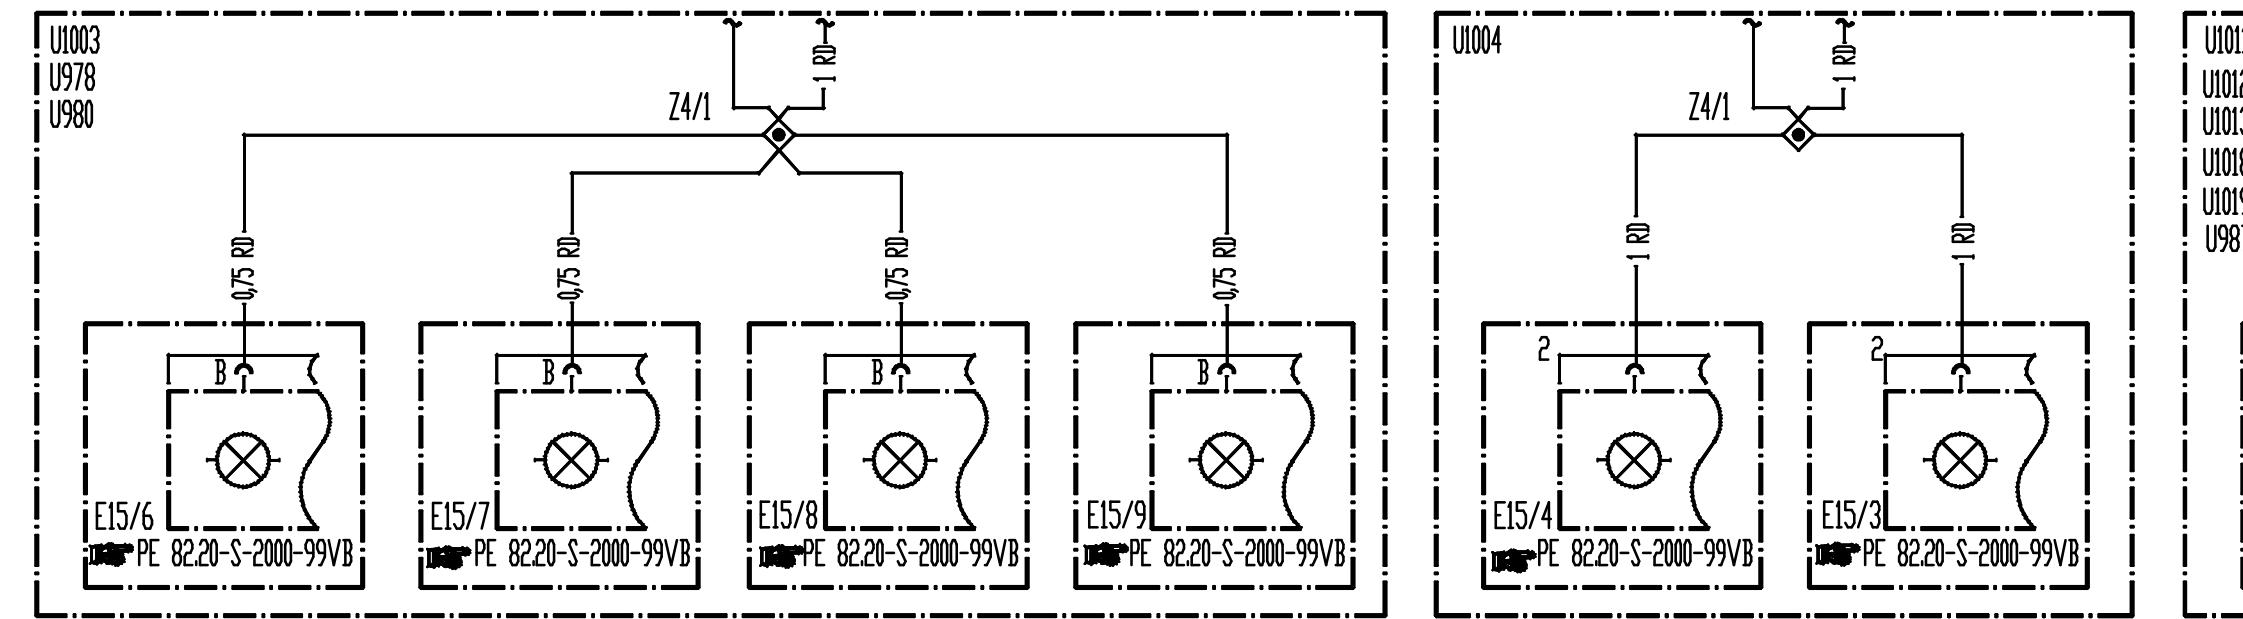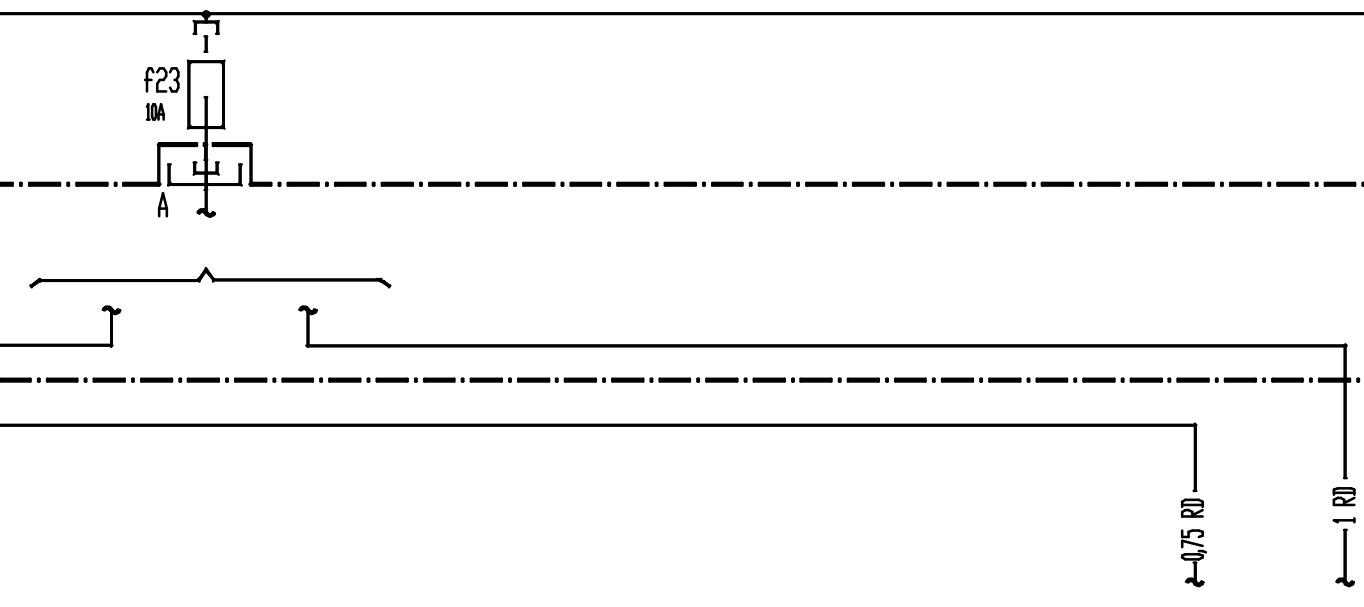

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

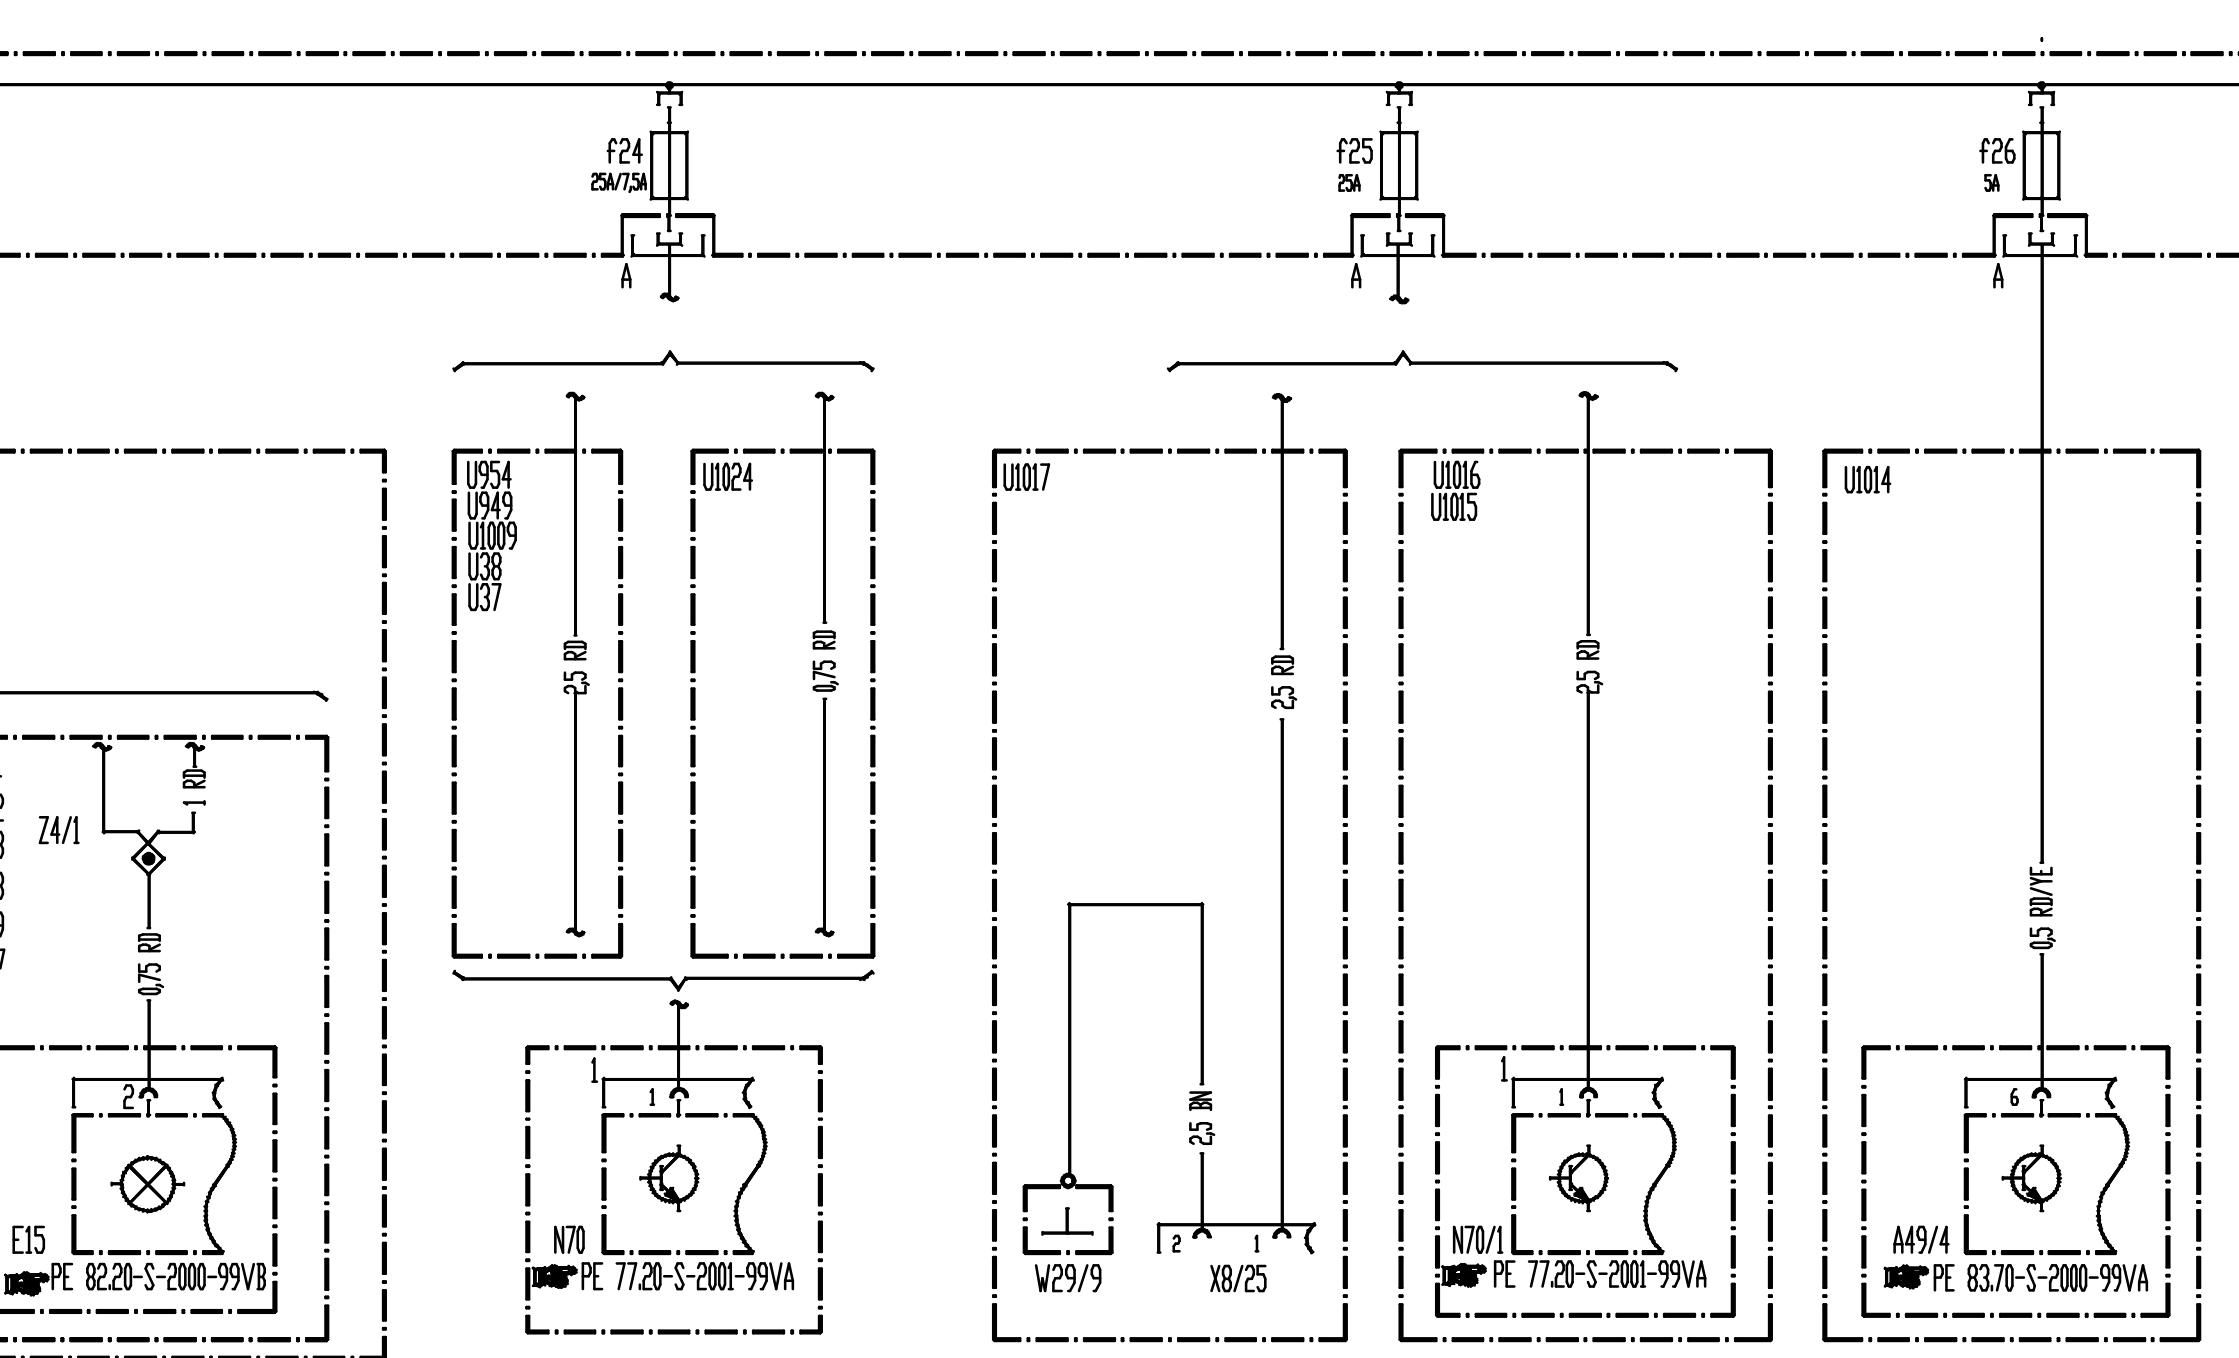

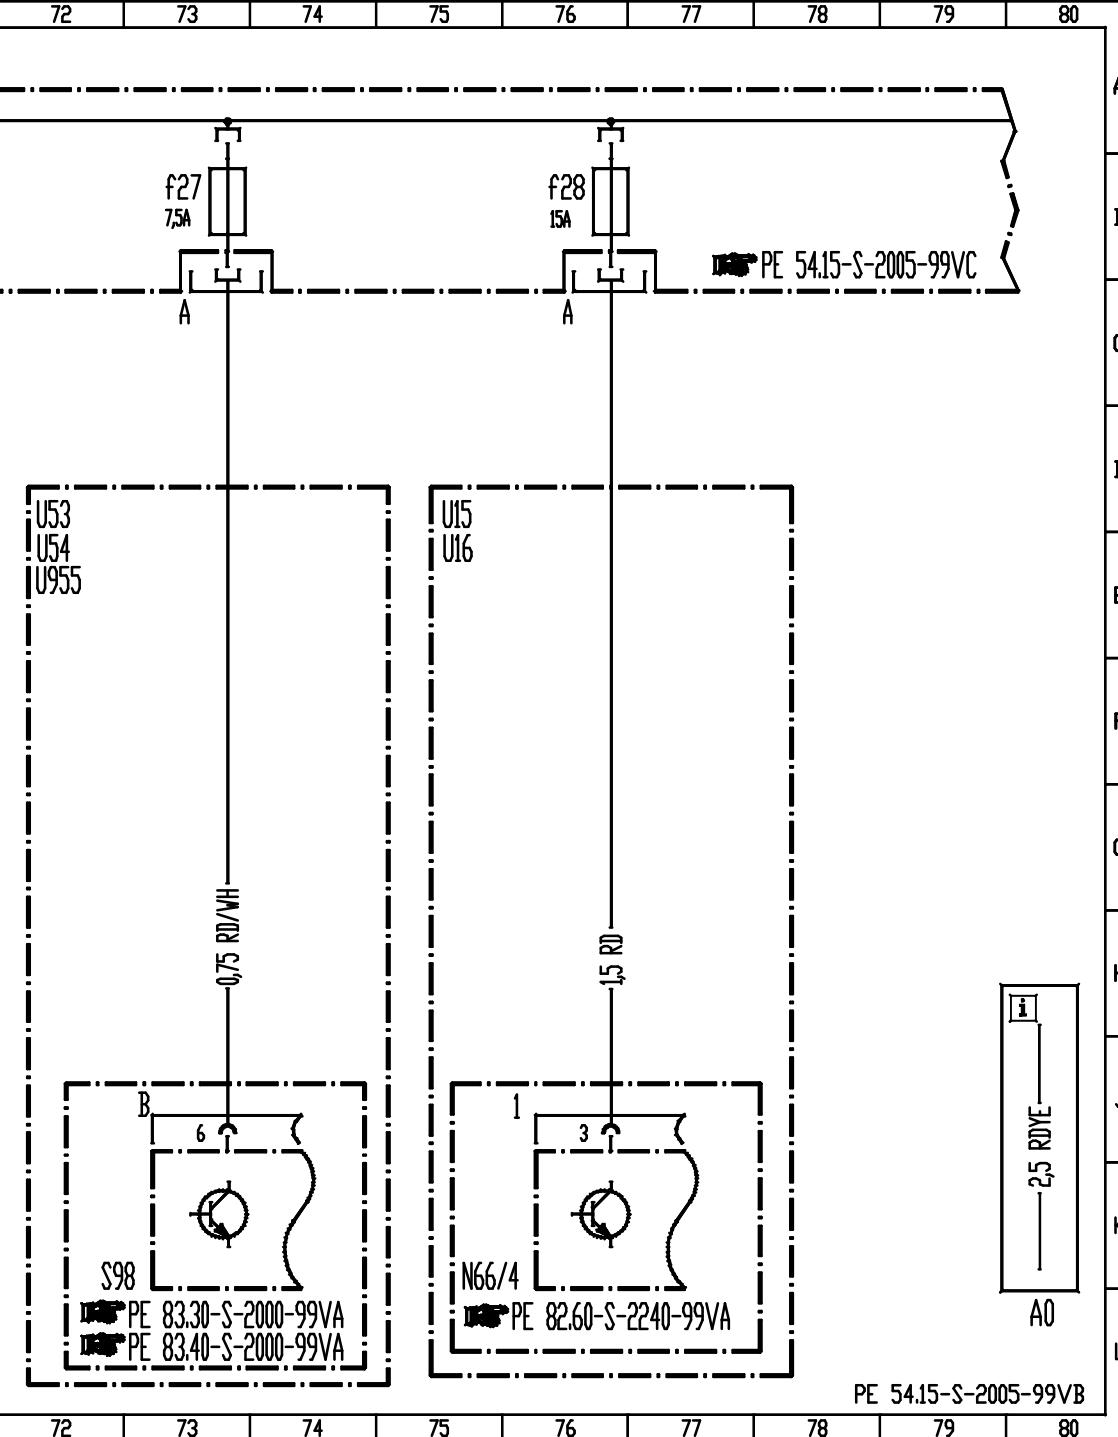

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 2,
E-box F34


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2005-99VC | Wiring diagram of voltage supply of fuses | Sheet 2 | PE54.15-S-2005-99VC |
| PE54.15-S-2005-60VC | Legend of wiring diagram for voltage supply of fuses | Sheet 2 | PE54.15-S-2005-60VC |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|--|---|--|
| PE54.15-S-2005-60VC | Legend of wiring diagram for voltage supply of fuses | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 2, E-box F34 | |
|---------------------|--|---|--|


| Code | Designation | Coordinates |
|--------|---|-------------------|
| A0 | Color code key | 72L |
| A2 | Radio / Sound 10 / Sound 40 / Audio 10 | 58K 61K 64K |
| A2/56 | Radio and navigation unit | 54K |
| A2/78 | Audio-Video-Navigation (AVN) | 51K |
| A35/11 | SBS control unit | 4L |
| A35/13 | Telephone transmitter/receiver, D2B | 7L |
| A40/3 | COMAND operating, display and control unit | 48L |
| A56 | Modular tachograph | 17K |
| F34 | Fuse block, 22-pin | 7C |
| F34f29 | D2BPortable CTEL fuse, portable CTEL and SBS | 8B |
| F34f30 | Heated seats fuse | 14B |
| F34f31 | Fuse, tachograph | 18B |
| F34f32 | Fuse 32 | 20B |
| F34f33 | Data link connector fuse | 23B |
| F34f34 | Fuse 34 | 24B |
| F34f35 | Air conditioning pulsed valve power supply fuse | 26B |
| F34f36 | SRA fuse | 27B |
| F34f37 | ATA [EDW] siren fuse | 30B |
| F34f38 | EIS [EZS] steering lock fuse | 33B |
| F34f39 | Front blower fuse | 36B |
| F34f40 | Brake system valve fuse | 45B |

| | | |
|--------|---|-----|
| F34f41 | Brake system delivery pump fuse | 46B |
| F34f42 | Radio fuse or DIN navigation | 57B |
| H3/1 | Alarm signal horn with additional battery | 30K |
| K2 | Headlamp cleaning system relay | 27K |
| K23/1 | Blower motor relay | 41L |
| N30/4 | ESP control unit | 45K |
| N72/1 | Upper control panel control unit | 14K |
| N73 | EIS [EZS] control unit | 33K |
| N123 | Hands-free system control unit | 10L |
| S98 | Air conditioning operating module | 36L |
| U10 | Valid for Sound 40 Pro radio | 64D |
| U11 | Valid for radio with cassette drive, Latin America | 61E |
| U13 | Valid for auto pilot system with TMC interface | 48D |
| U38 | Valid for ATA [EDW] II | 30D |
| U51 | Valid for telephone preinstallation | 10D |
| U52 | Valid for voice control | 4D |
| U53 | Valid for automatic air conditioning "Thermotronic" | 38G |
| U55 | Not valid for air conditioning | 35G |
| U285 | Valid for partially electric seat adjustment, driver | 14E |
| U286 | Valid for partially electric seat adjustment, front passenger | 14E |
| U507 | Valid for Electronic Stability Program (ESP) | 45D |
| U909 | Valid for radio preinstallation | 67D |
| U910 | Valid for radio Sound 10 with cassette drive | 57D |
| U913 | Valid for networked telephone preinstallation | 7D |
| U922 | Valid for heater for front passenger seat | 14D |
| U923 | Valid for heater for driver seat | 14D |
| U928 | Valid for headlamp cleaning system | 27D |
| U956 | Valid for auto pilot system for Japan, large display | 51D |
| U957 | Valid for Audio 10 radio with cassette drive | 61D |
| U958 | Valid for Audio 10 radio with CD | 61E |


| | | |
|--------|--|-----|
| U959 | Valid for Audio 30 APS radio with TMC interface | 54D |
| U968 | Valid for 1 day/2 driver tachograph | 17D |
| U998 | Valid for auxiliary heater without air conditioning system | 41G |
| W12 | Ground (cockpit and center console) | 20L |
| X31/9 | Blower switch feed-in connector | 36F |
| Z66/1 | Additional fuse box feed connector sleeve | 2G |
| Z151/3 | A/C 1st stage connector sleeve | 39H |

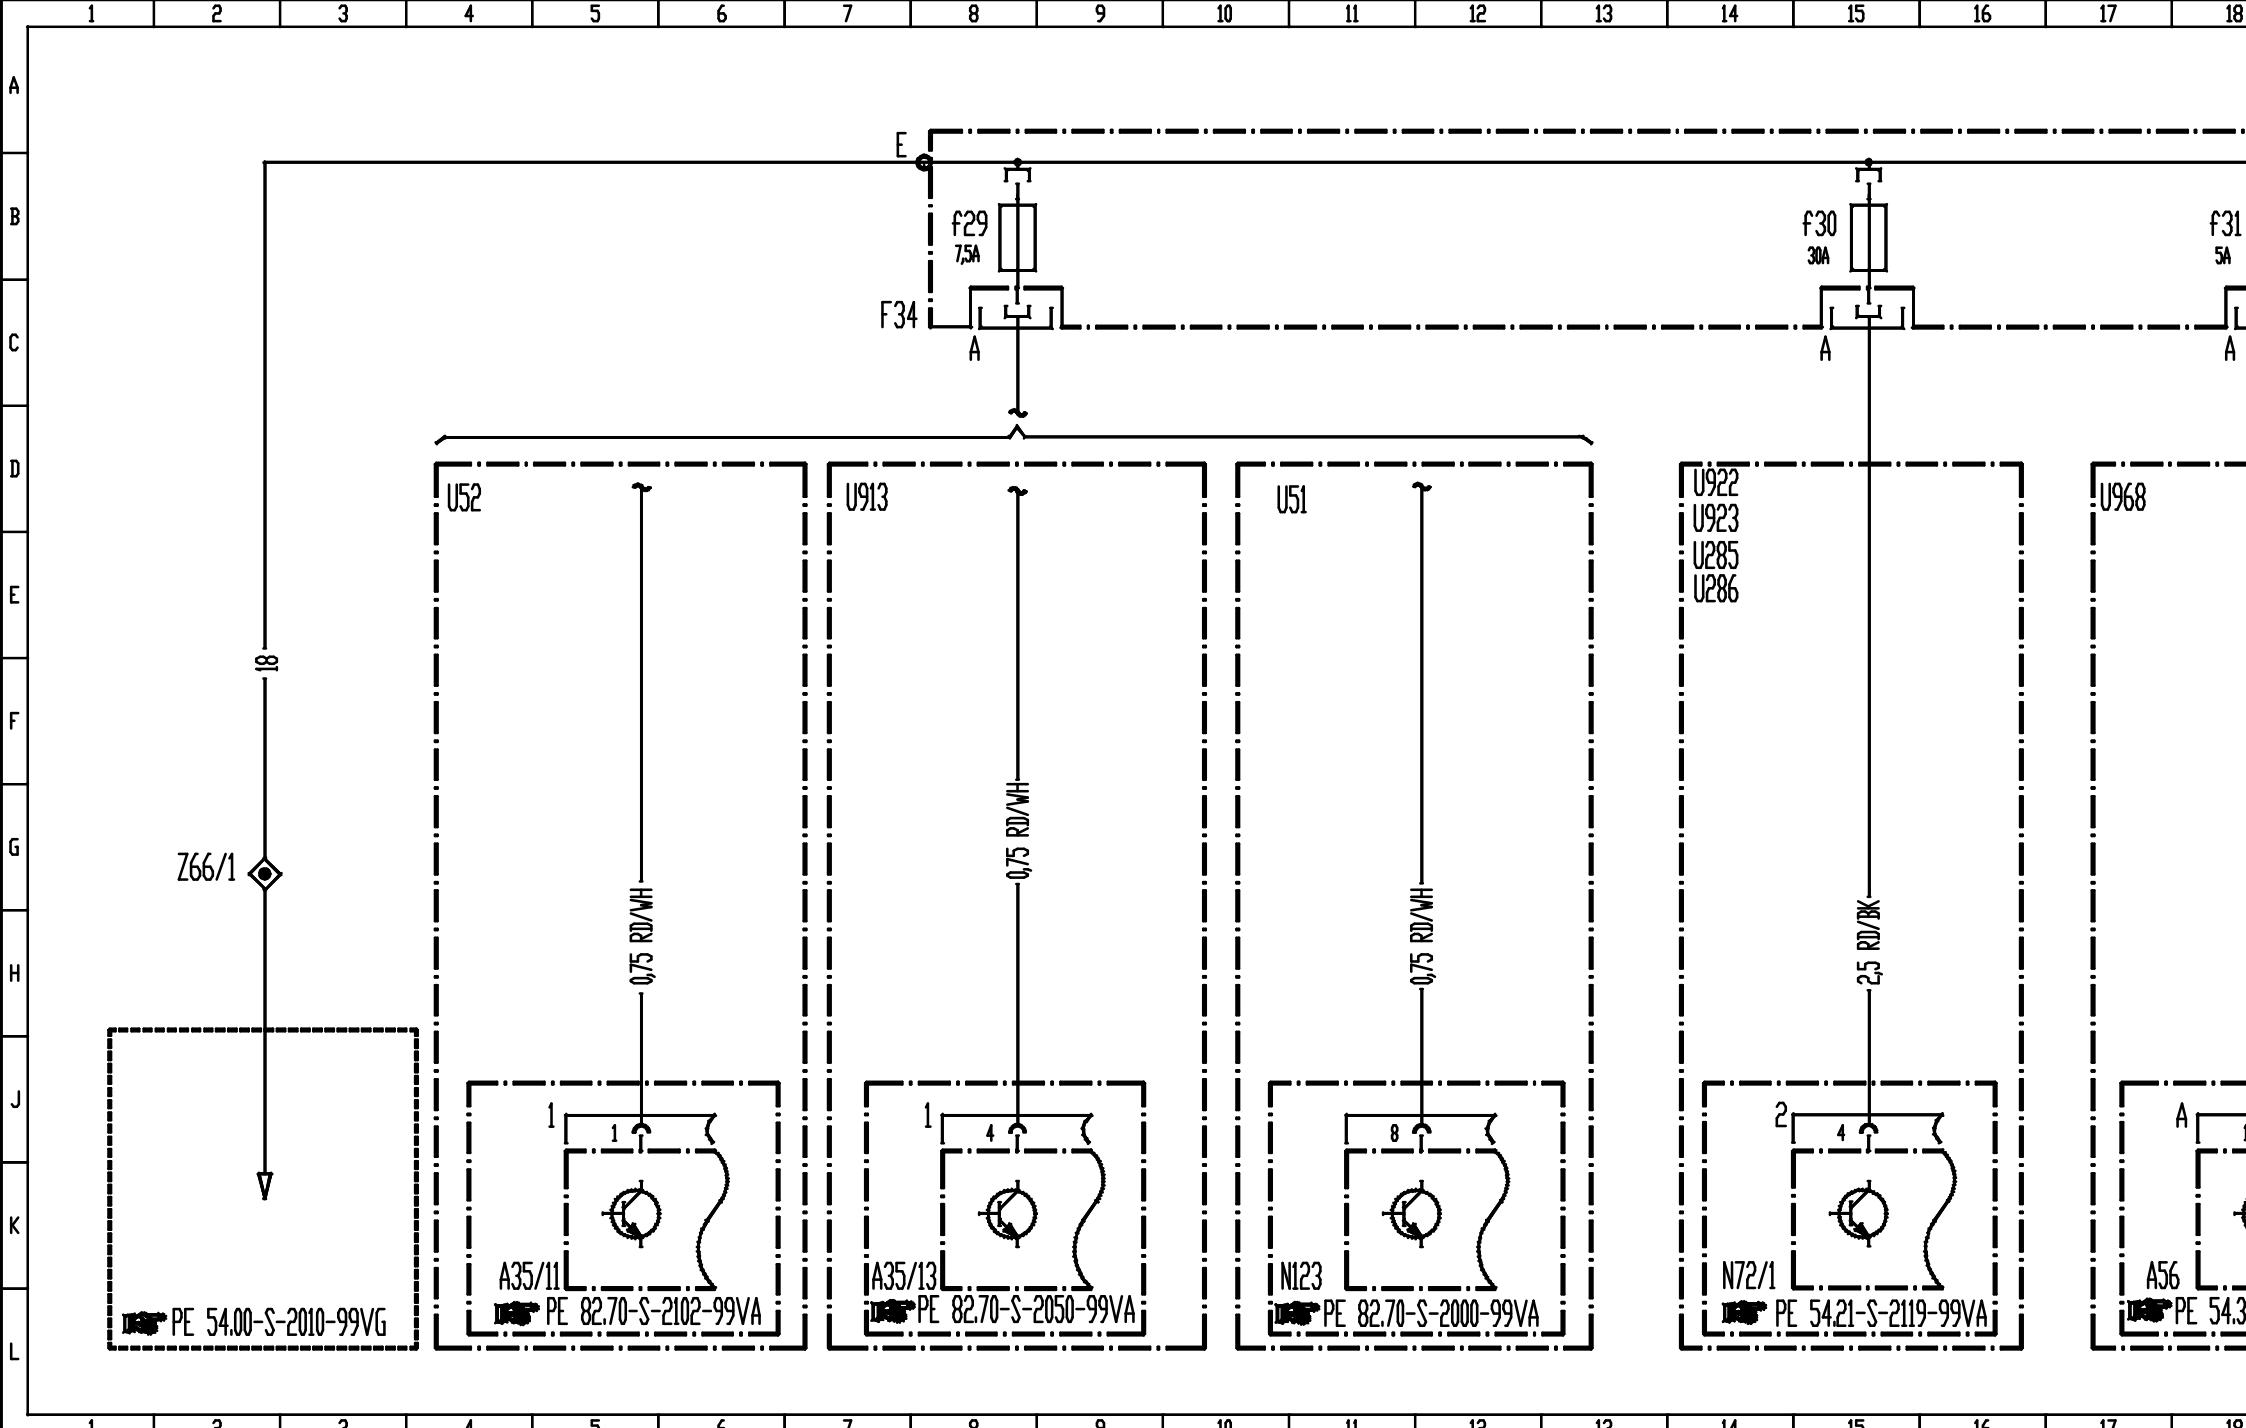


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

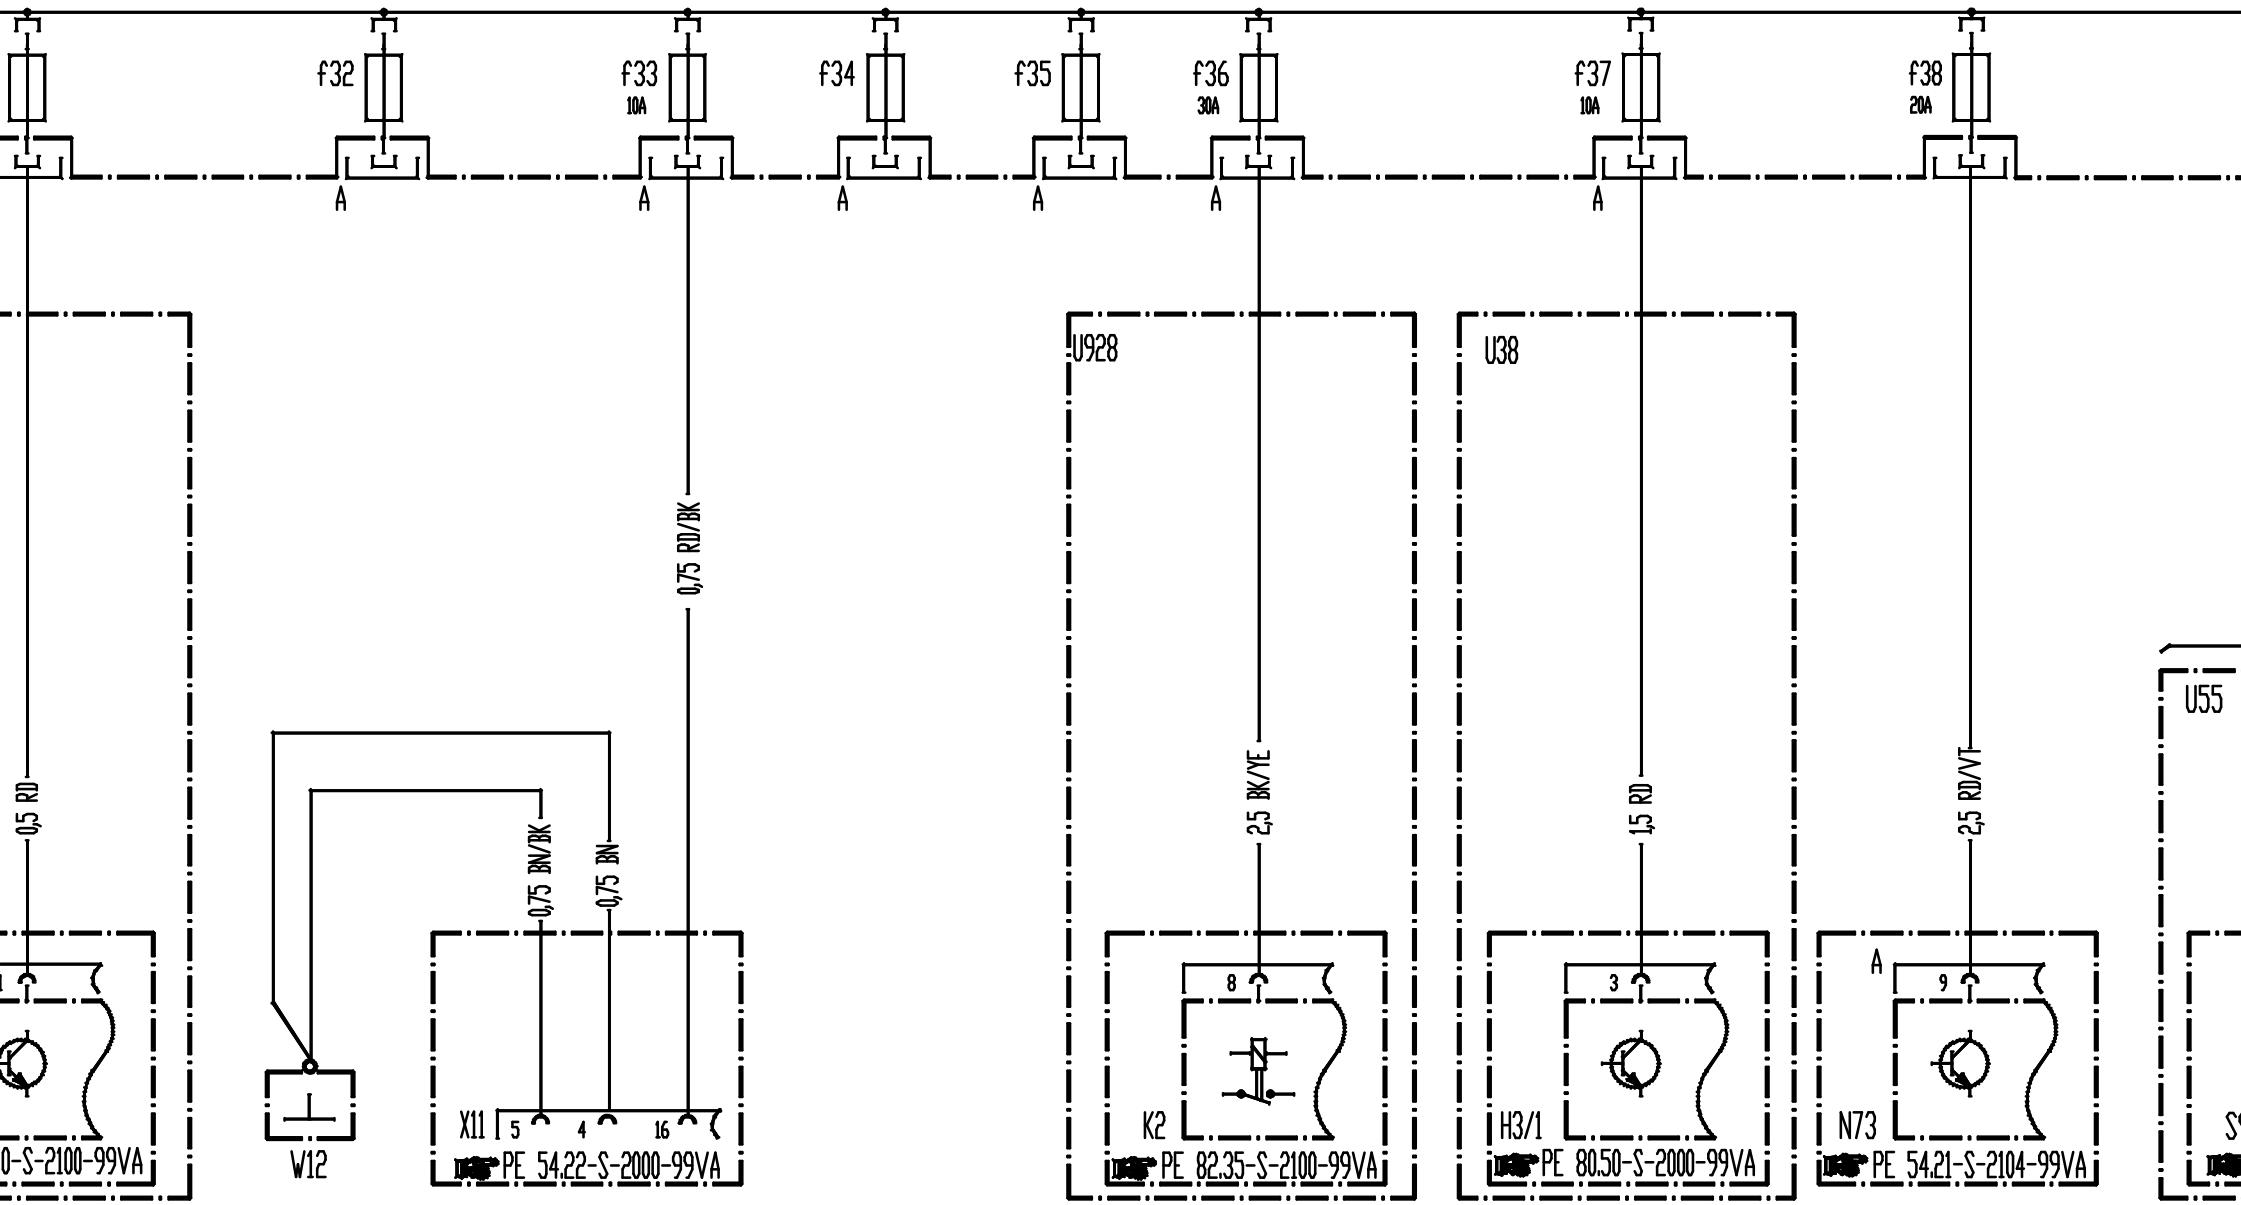

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

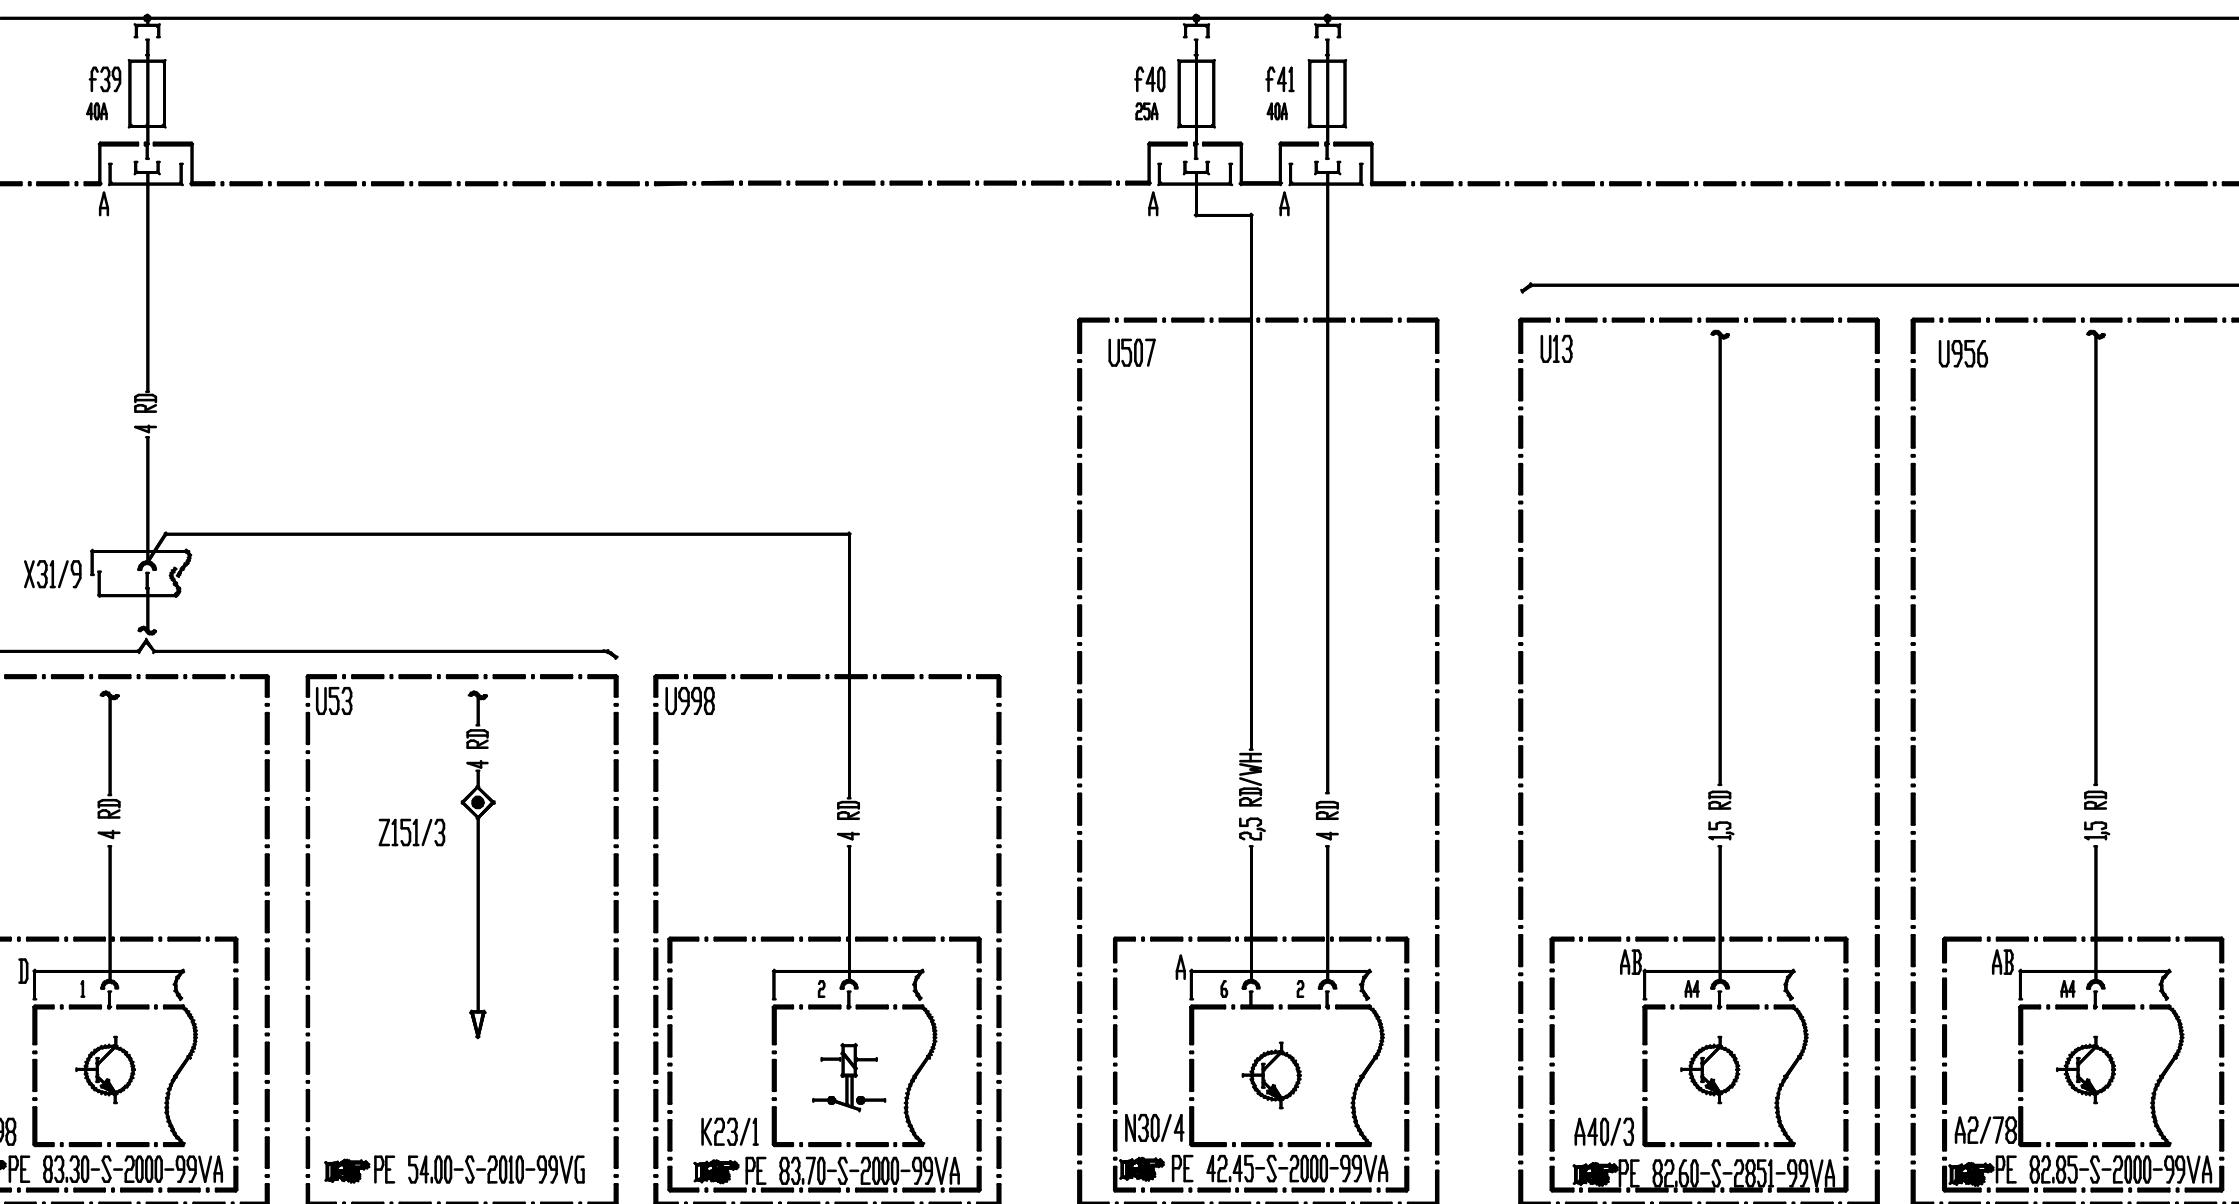

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

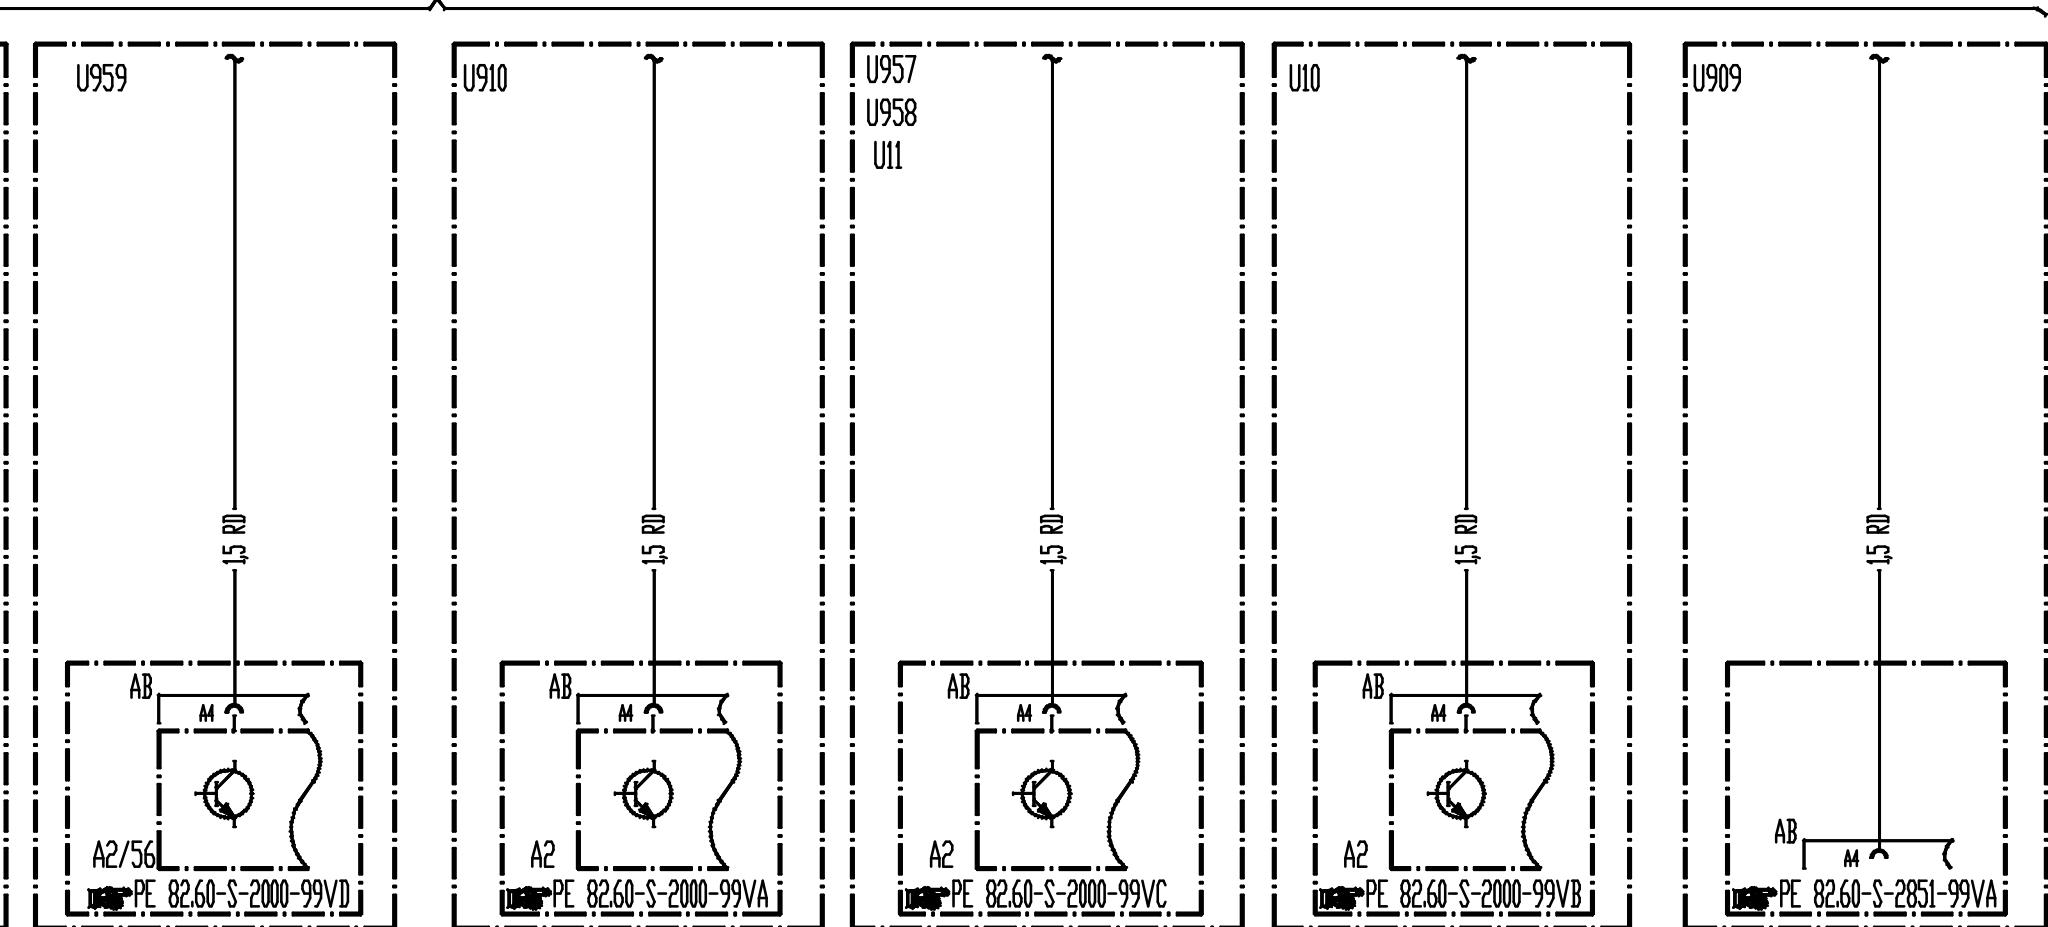

PE 54.15-S-2005-99

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

E-box F35

| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2005-99VD | Wiring diagram of voltage supply of fuses | | PE54.15-S-2005-99VD |
| PE54.15-S-2005-60VD | Legend of wiring diagram for voltage supply of fuses | | PE54.15-S-2005-60VD |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|---|--|
| PE54.15-S-2005-60VD | Legend of wiring diagram for voltage supply of fuses | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 E-box F35 | |
|---------------------|--|---|--|


| Code | Designation | Coordinates |
|--------|---|-------------|
| A2/17 | Antenna amplifier voltage supply | 58K |
| A2/77 | Telephone and communication unit | 50K |
| A6n1 | STH control unit | 63K |
| A32/1 | Rear air recirculation heater | 35K |
| A32/2 | Rear automatic air conditioning air unit | 38K |
| F35 | Fuse block, 22-pin | 5B |
| F35f21 | Left passenger compartment 12V socket fuse | 7B |
| F35f22 | Right passenger compartment 12V socket fuse | 10B |
| F35f23 | Trailer socket fuse | 16B |
| F35f24 | AAG fuse | 23B |
| F35f25 | Driver seat adjustment fuse | 27B |
| F35f26 | Front passenger seat adjustment fuse | 31B |
| F35f27 | Left electric sliding door fuse | 33B |
| F35f28 | Right electric sliding door fuse | 35B |
| F35f29 | Rear blower fuse | 37B |
| F35f30 | Air suspension or all-wheel drive fuse | 42B |
| F35f31 | PTS fuse | 46B |
| F35f32 | Tire pressure monitoring system fuse | 49B |
| F35f33 | Communications unit (Japan) or telephone (USA) fuse | 51B |
| F35f34 | Compensator fuse, VICS and TV amplifier (Japan) | 58B |
| F35f35 | STH control unit fuse | 63B |
| F35f36 | Tailgate power closing fuse | 67B |
| F35f37 | Rear air conditioning fuse | 68B |

| | | |
|--------|---|-------------------------|
| F35f38 | Brake controller fuse (NAFTA) | 70B |
| F35f39 | Front blower fuse | 71B |
| F35f40 | Rear 12V socket fuse | 73B |
| F35f41 | Additional turn signal module fuse | 76B |
| F35f42 | Fuse 42 | 78B |
| N9/1 | Additional turn signal module control unit | 76K |
| N19/3 | Rear AC control unit FONDKLA | 66K |
| N28/1 | Trailer connection unit [AAG] control unit | 18K 22K |
| N32/1 | Left front seat adjustment control unit with memory | 26K |
| N32/2 | Right front seat adjustment control unit with memory | 31K |
| N51/3 | ENR control unit | 42K |
| N62 | PTS control unit | 45K |
| N125 | Telephone high frequency compensator | 55K |
| S81/1 | Rear automatic air conditioning operating switch | 69K |
| U1026 | Valid for ashtray and beverage holder in passenger compartment | 2H 6D |
| U1027 | Valid for additional heat exchanger in passenger load compartment | 2F 34D 35G 69D |
| U1028 | Valid for socket 12V in passenger compartment | 2E 72D |
| U1107 | Valid up to 08/2005 | 15D 22D |
| U1108 | Valid as of 09/2005 | 18D |
| U285 | Valid for partially electric seat adjustment, driver | 2G 26D |
| U286 | Valid for partially electric seat adjustment, front passenger | 2G 30D |
| U538 | Valid for Parktronic System | 2F 45D |
| U913 | Valid for networked telephone preinstallation | 2E 54D |


| | | |
|--------|--|--------------------------------|
| U939 | Valid for socket for rear-mounted bicycle carrier repeater lamps | 2E 15E 15G 18D 22D |
| U940 | Valid for electrical system for trailer socket | 2D 15E 18E 22E |
| U941 | Valid for fixed trailer hitch | 2H 15E 15G 18E 22E |
| U942 | Valid for removable trailer hitch | 2H 15E 15H 18E 22E |
| U945 | Valid for warm water auxiliary heater | 2F 63D |
| U946 | Valid for diesel heater booster | 63D |
| U951 | Valid for raisable/lowerable rear air suspension | 2D 41D |
| U952 | Valid for Tempmatic/Additional air conditioning in rear | 2G 34D 38G 66D |
| U956 | Valid for auto pilot system for Japan, large display | 50D 58D |
| U976 | Valid for additional turn signal lamps on rear of roof | 2G 75D |
| X2/18 | Antenna amplifier voltage supply connector | 51F |
| X52 | Trailer hitch connector | 15F |
| X58 | Trailer hitch socket (13-pin) | 15K |
| X58/4 | Load compartment socket, left front | 7K |
| X58/12 | Load compartment socket, right rear | 72K |
| X58/15 | Load compartment socket, right front | 10K |

| | | |
|--------|---|-----|
| X96/4 | Rear recirculation unit connector 2 | 37F |
| X137/1 | VICS+ETC voltage supply separation point | 61L |
| Z51 | ELC [ENR] terminal 30 connector sleeve | 42G |
| Z66/1 | Additional fuse box feed connector sleeve | 3G |

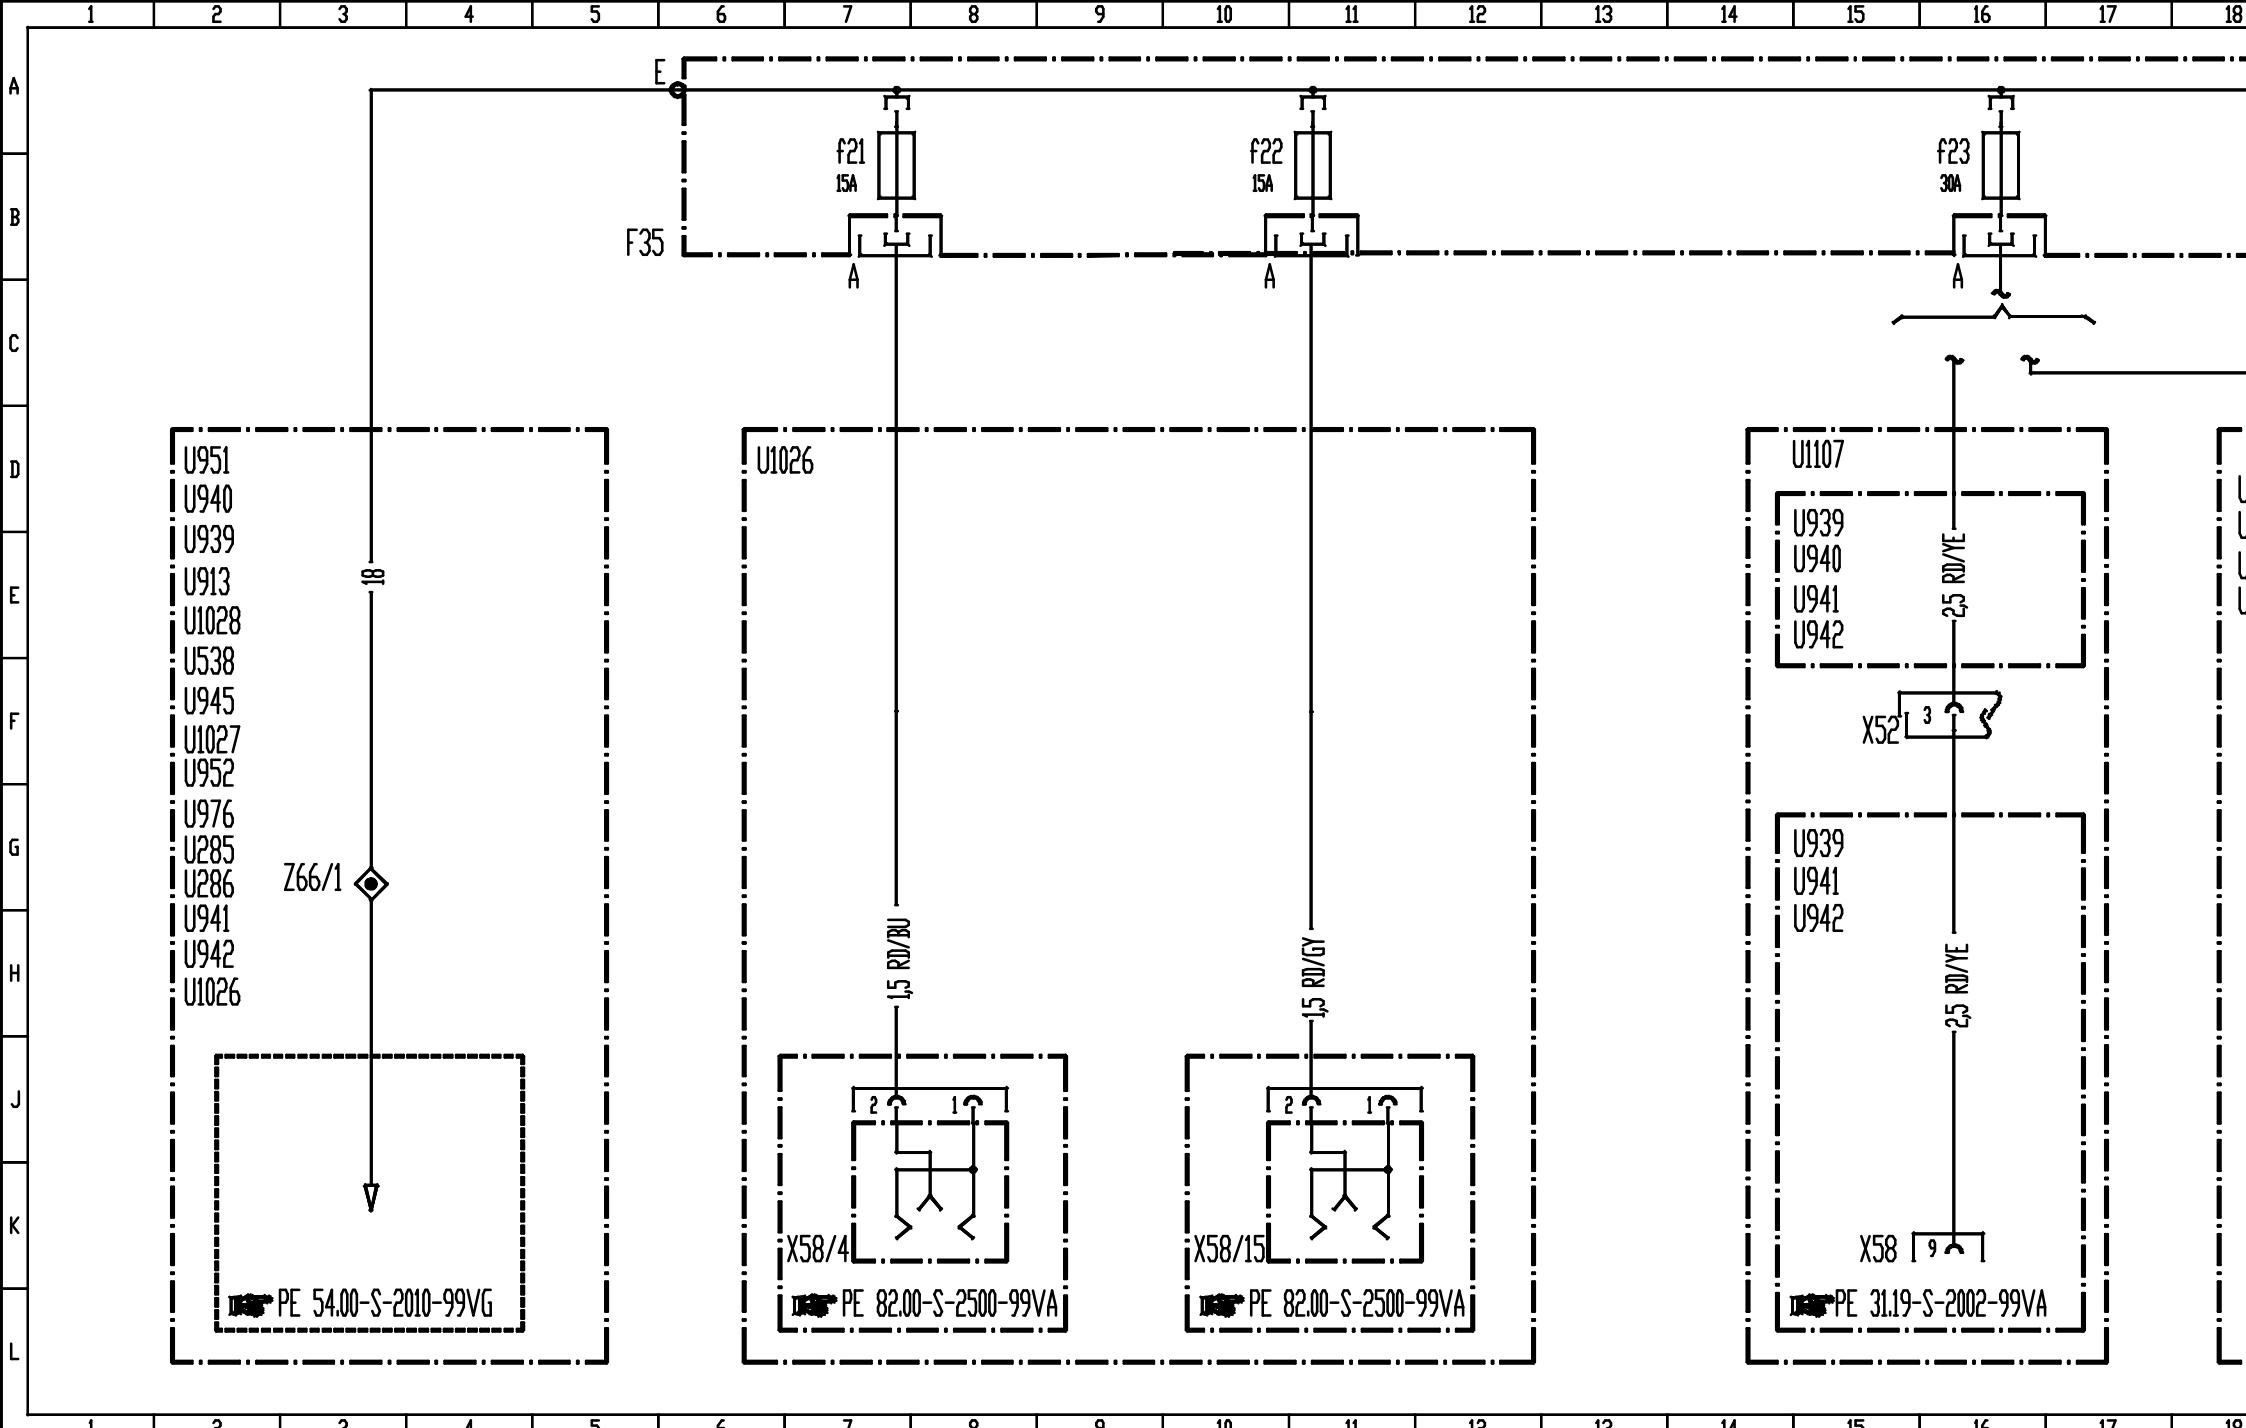

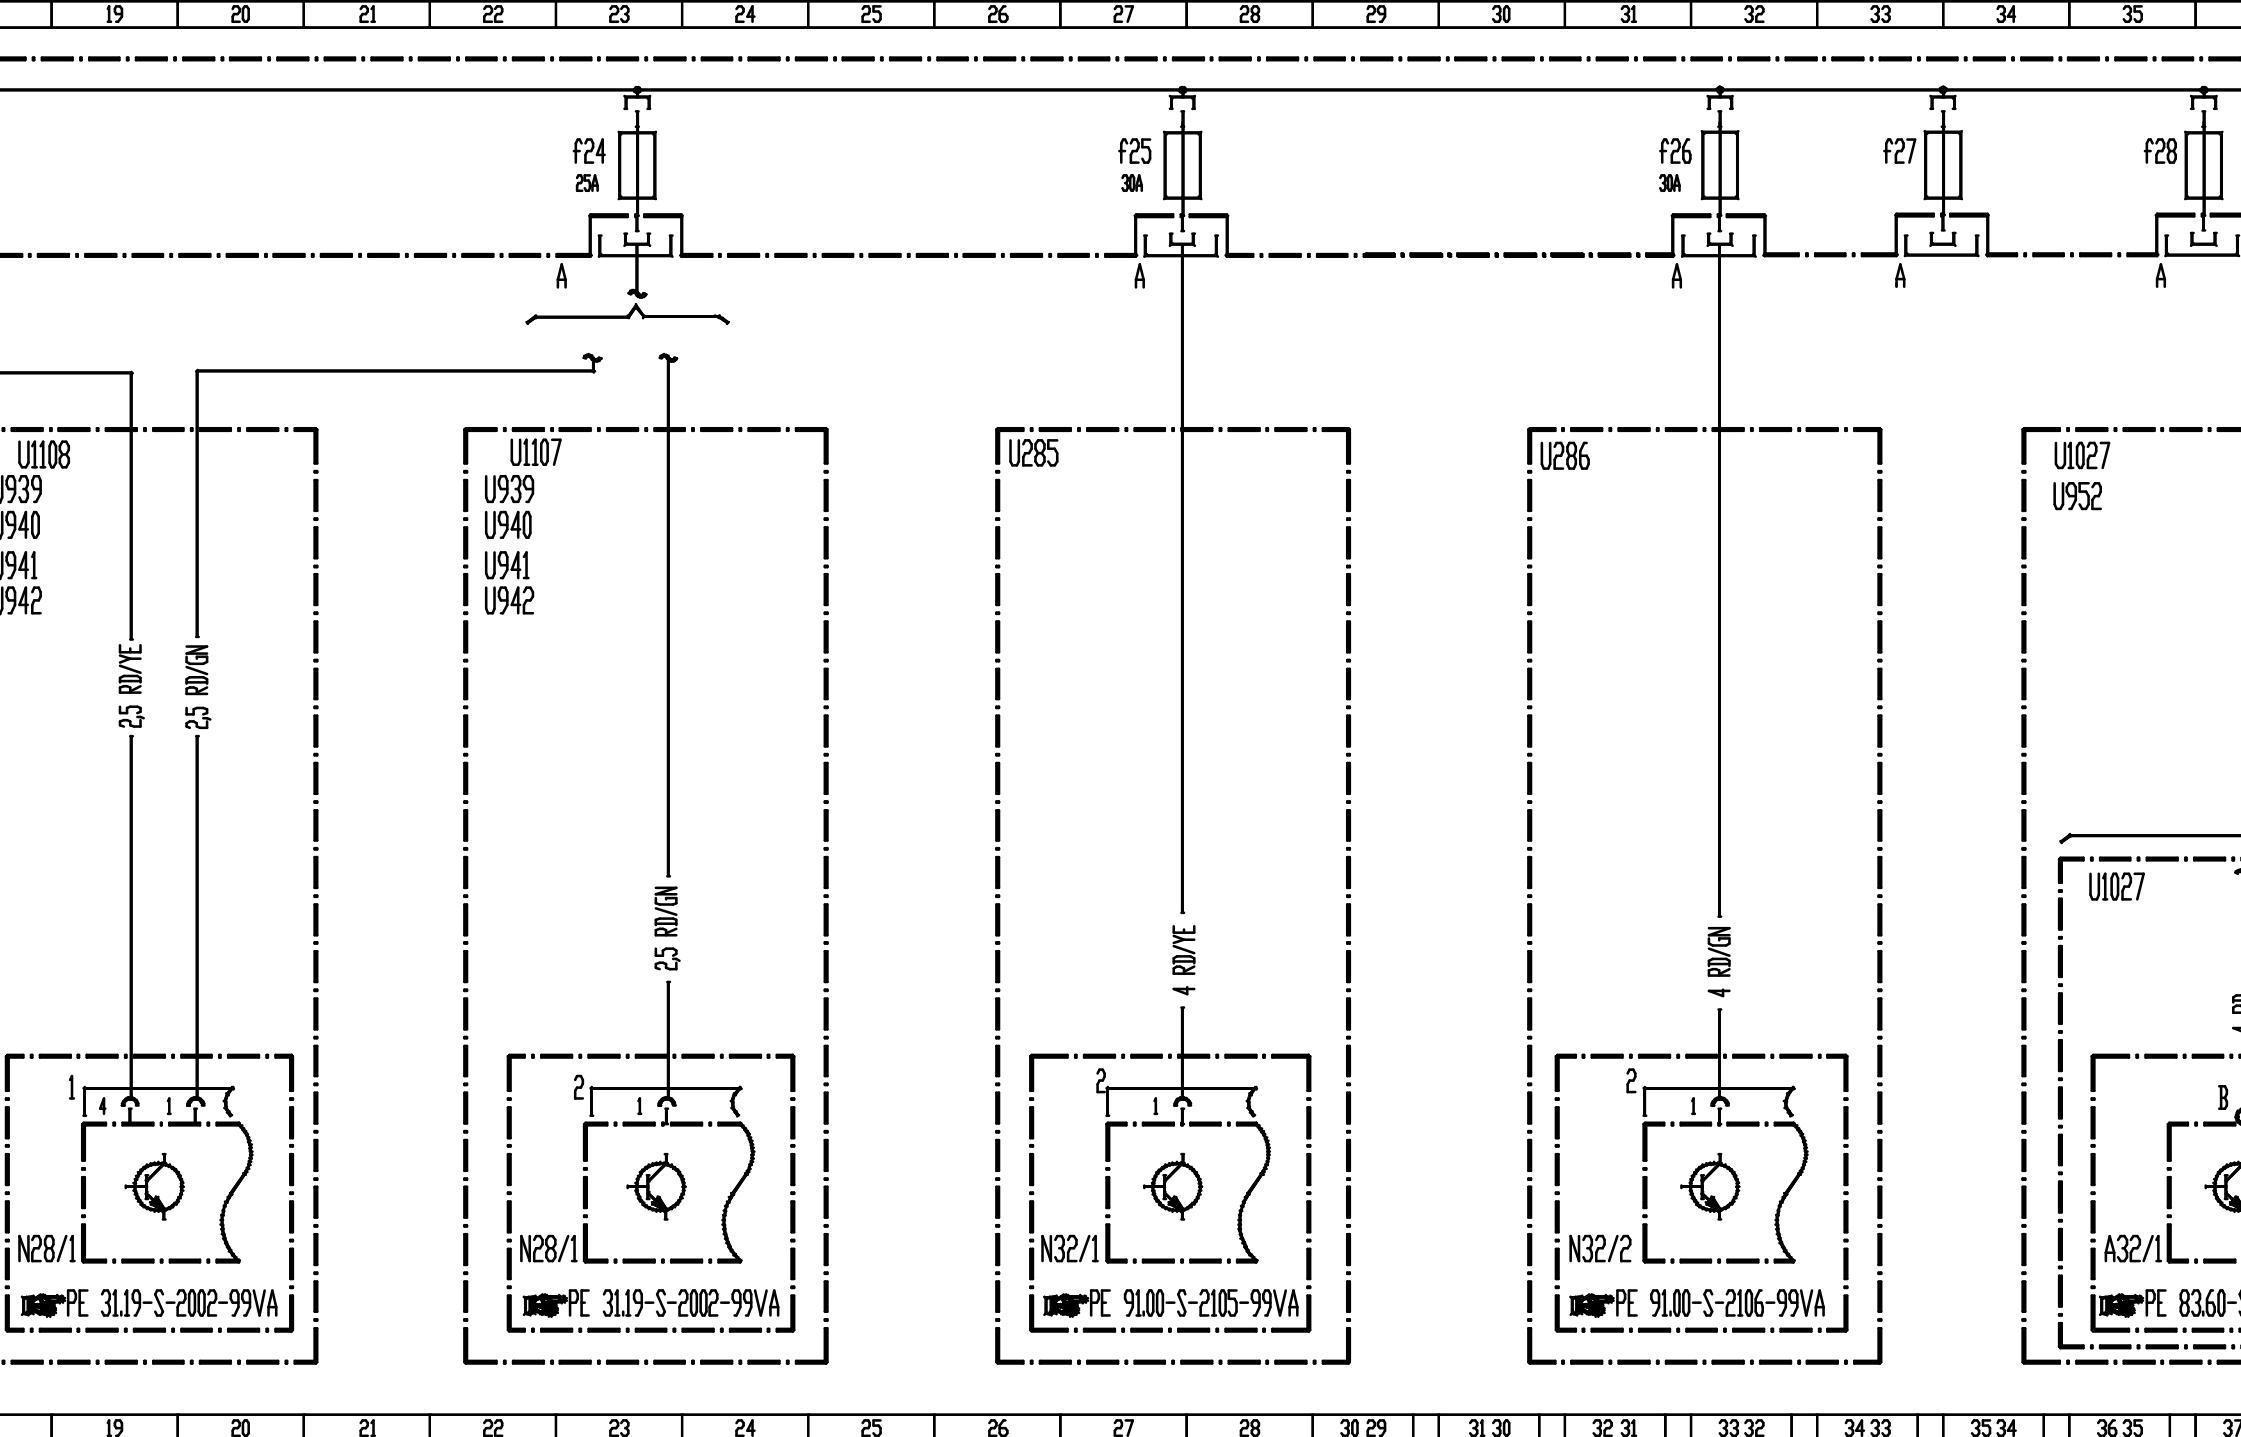


36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

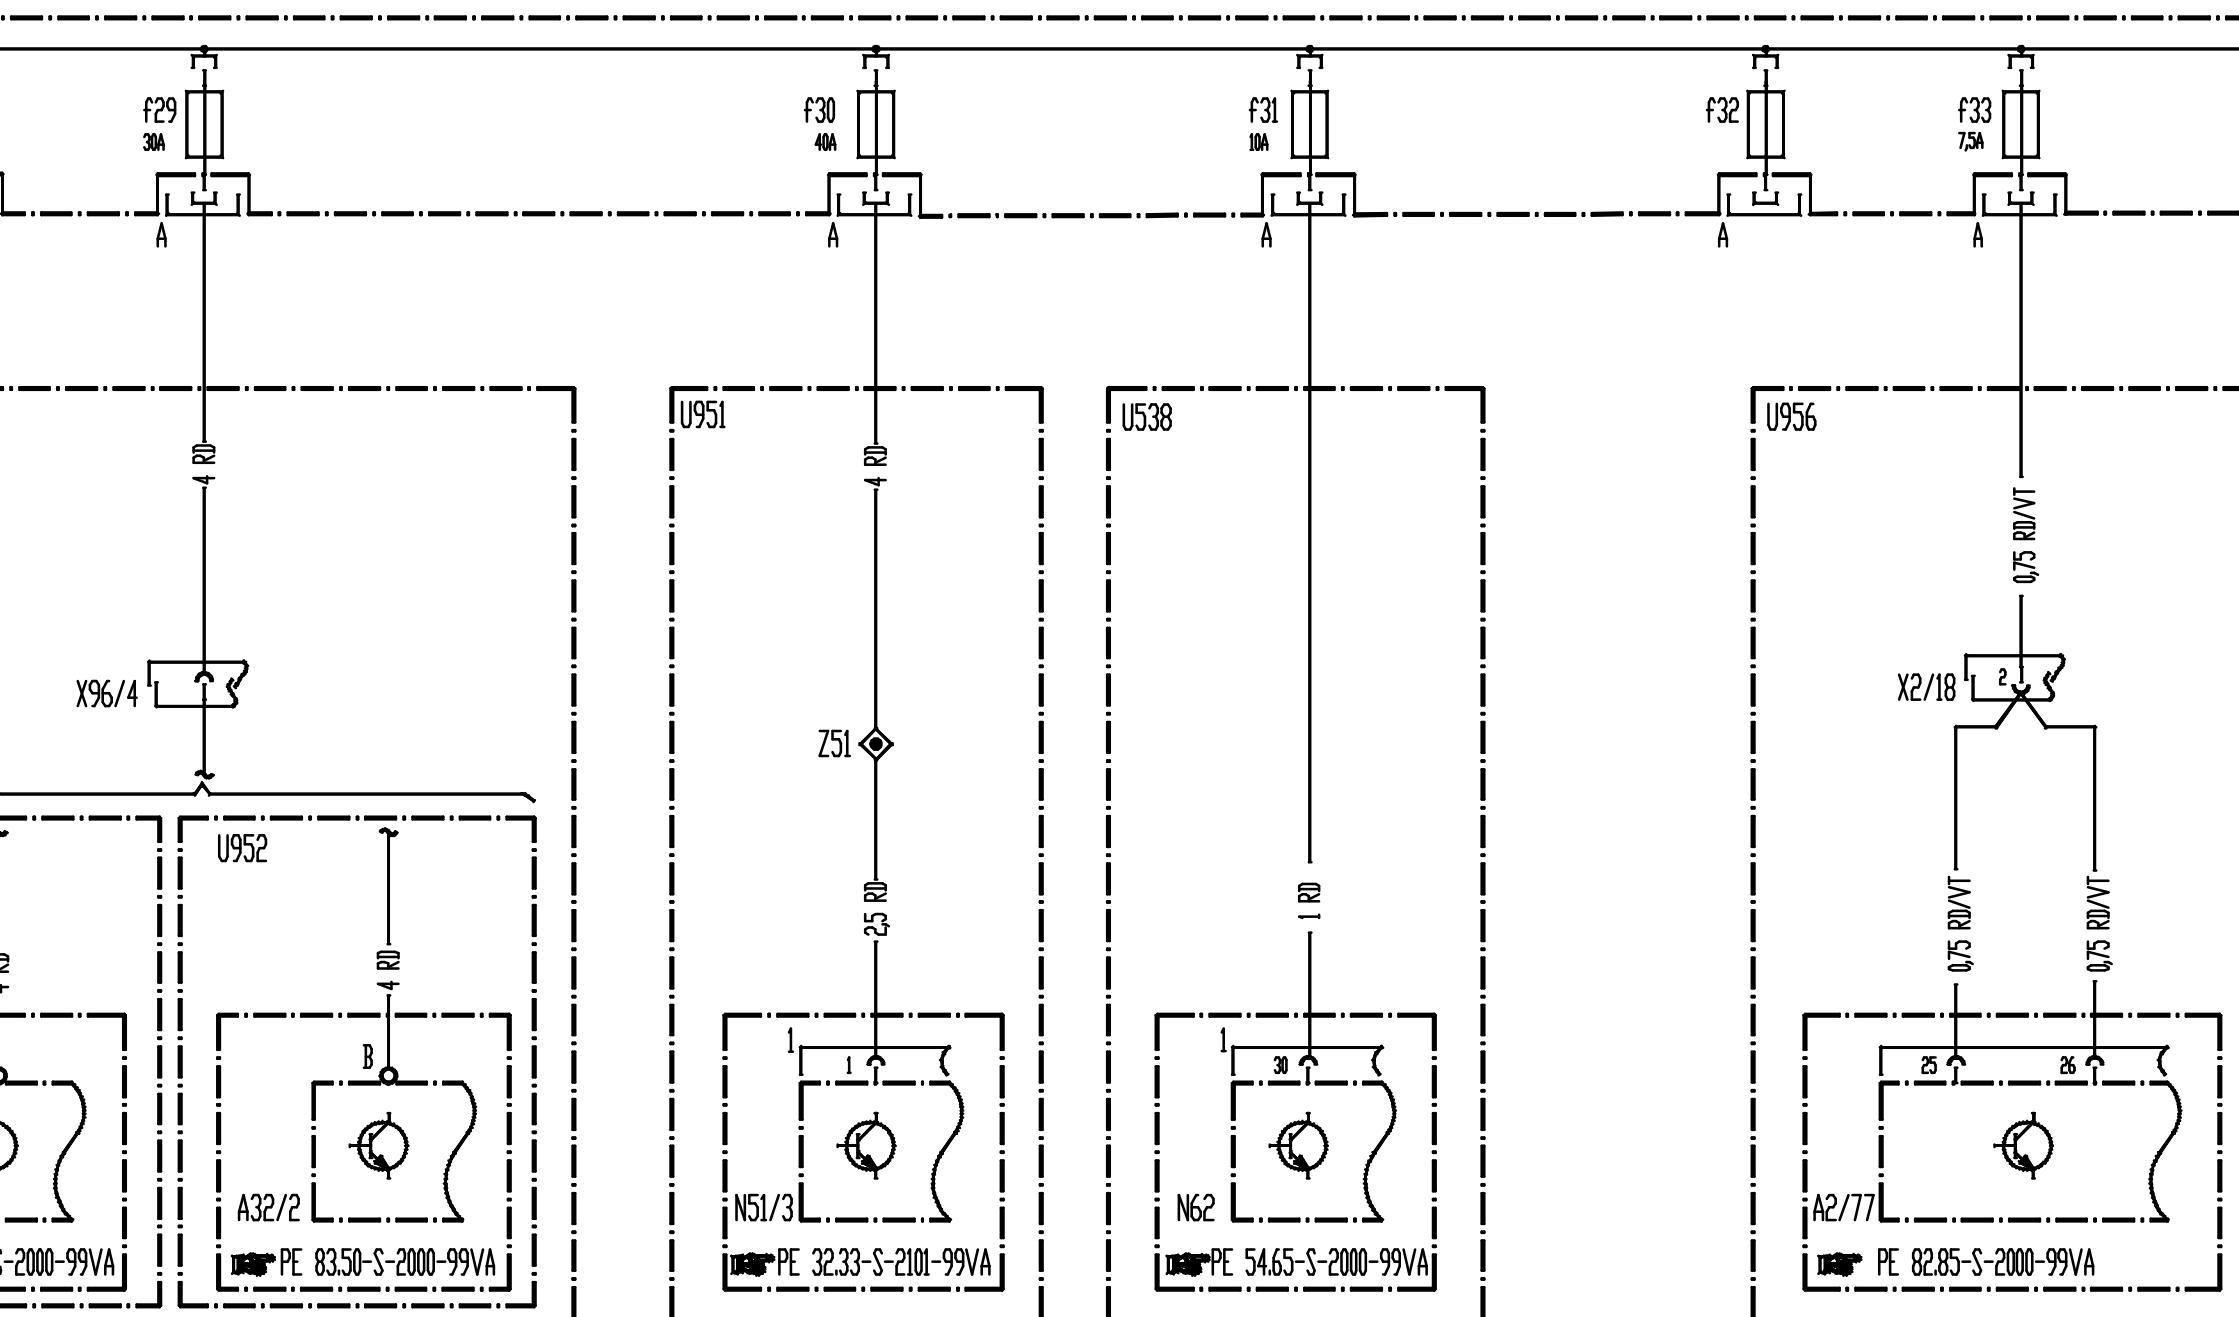


36 38 37 39 38 40 39 41 40 42 41 43 42 44 43 45 44 46 45 47 46 48 47 49 48 50 49 51 50 52 51 53 52 54 53

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

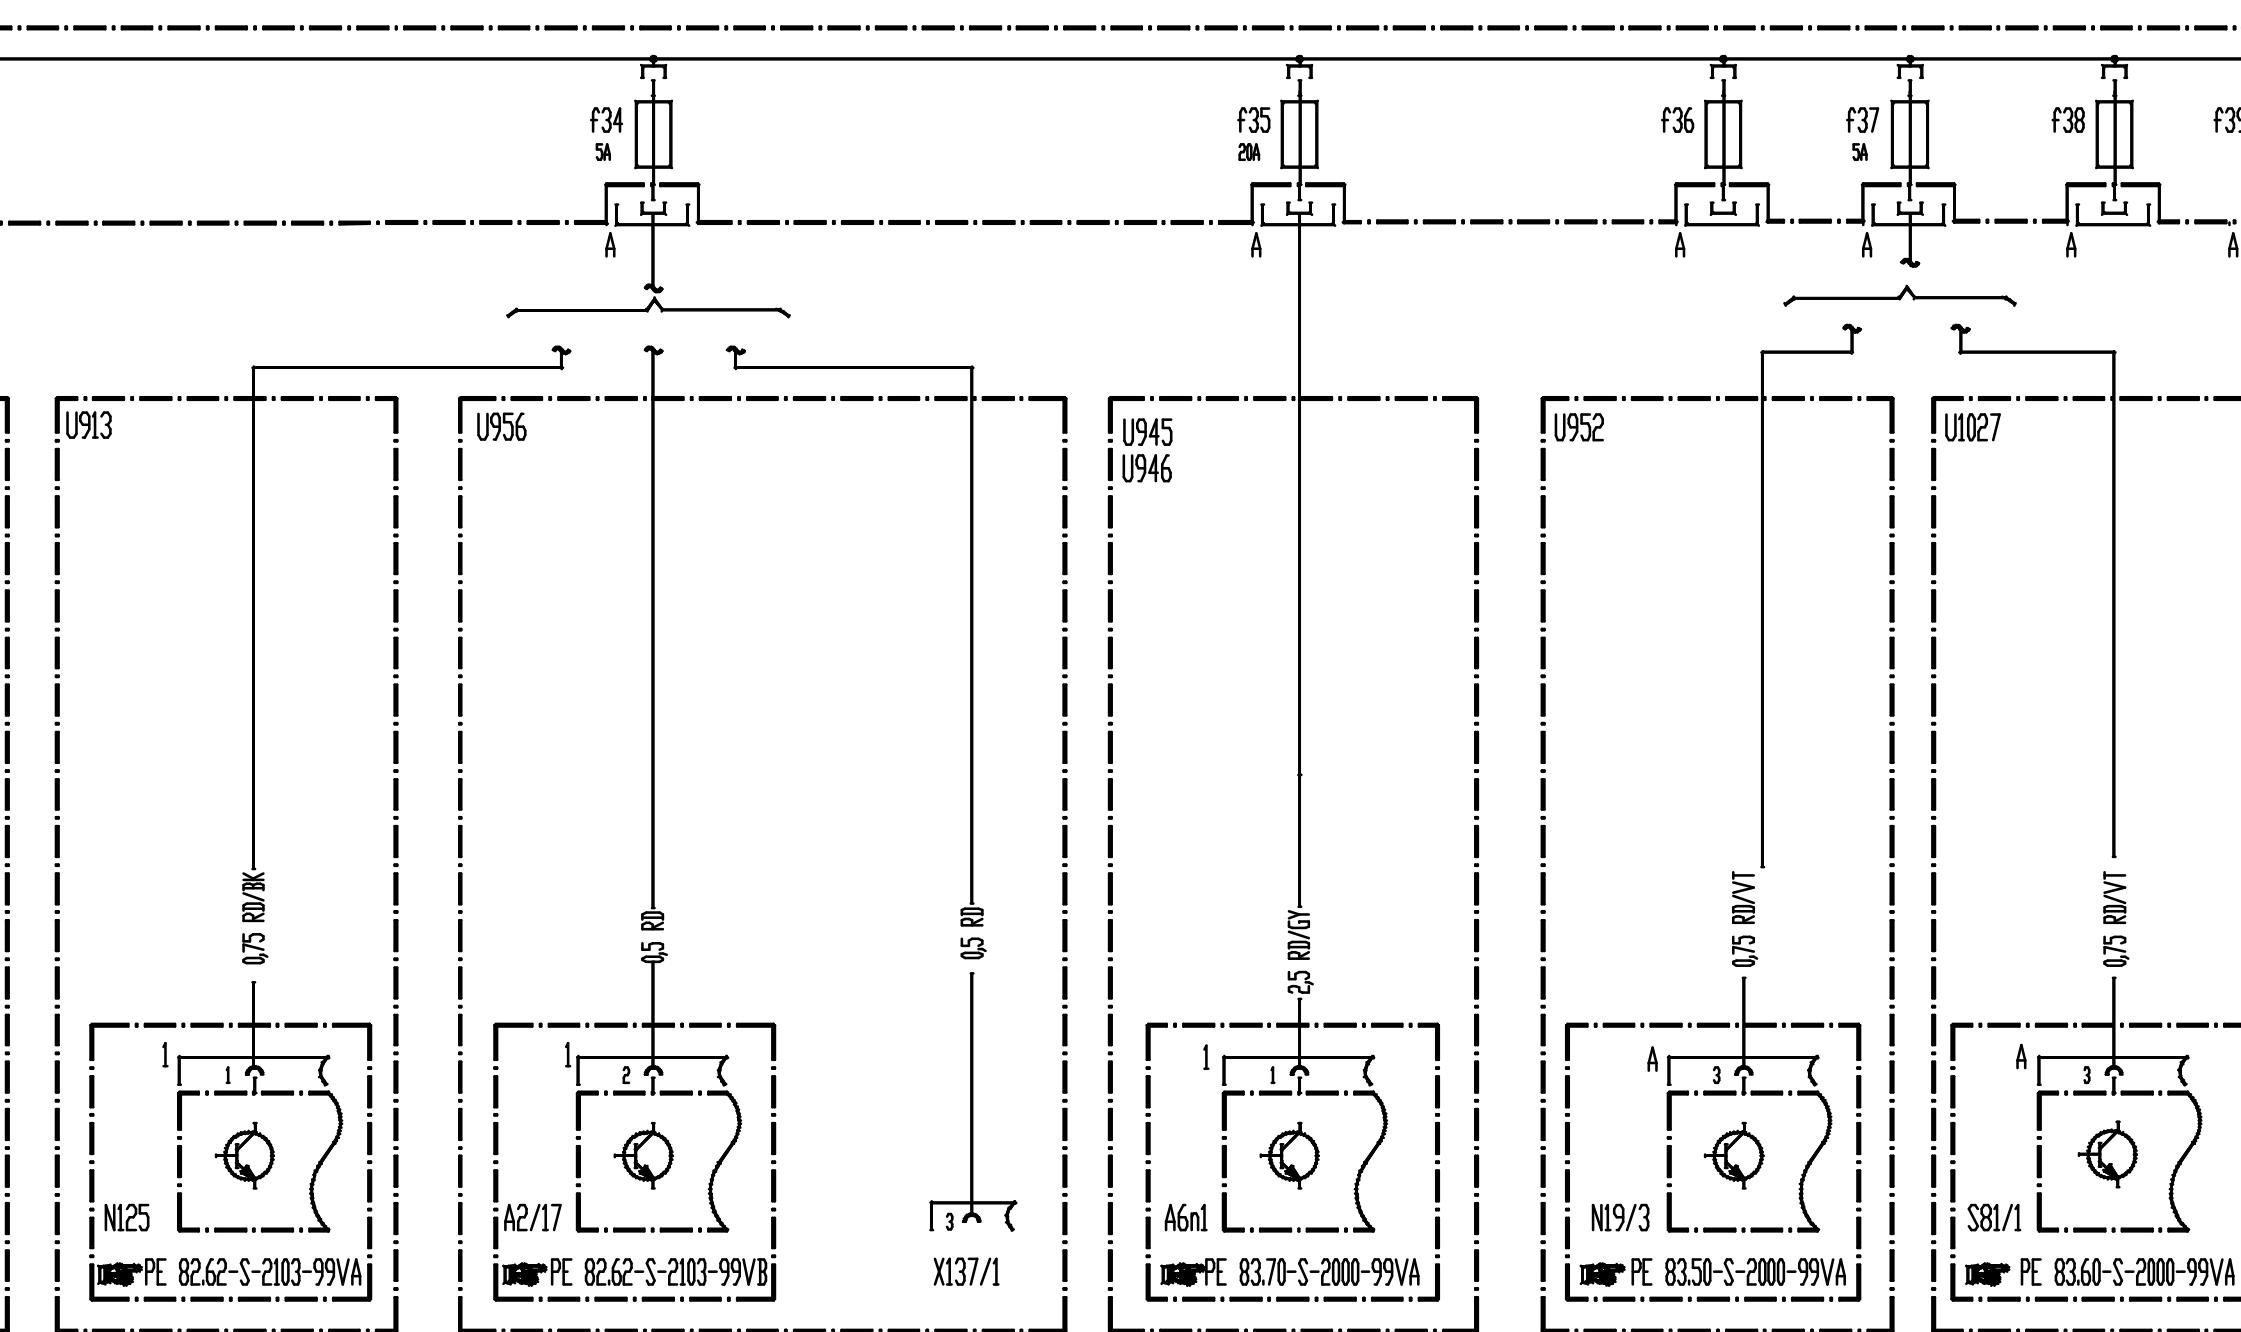

55 54 56 55 57 56 58 57 59 58 60 61 62 63 64 65 66 67 68 69 70 71

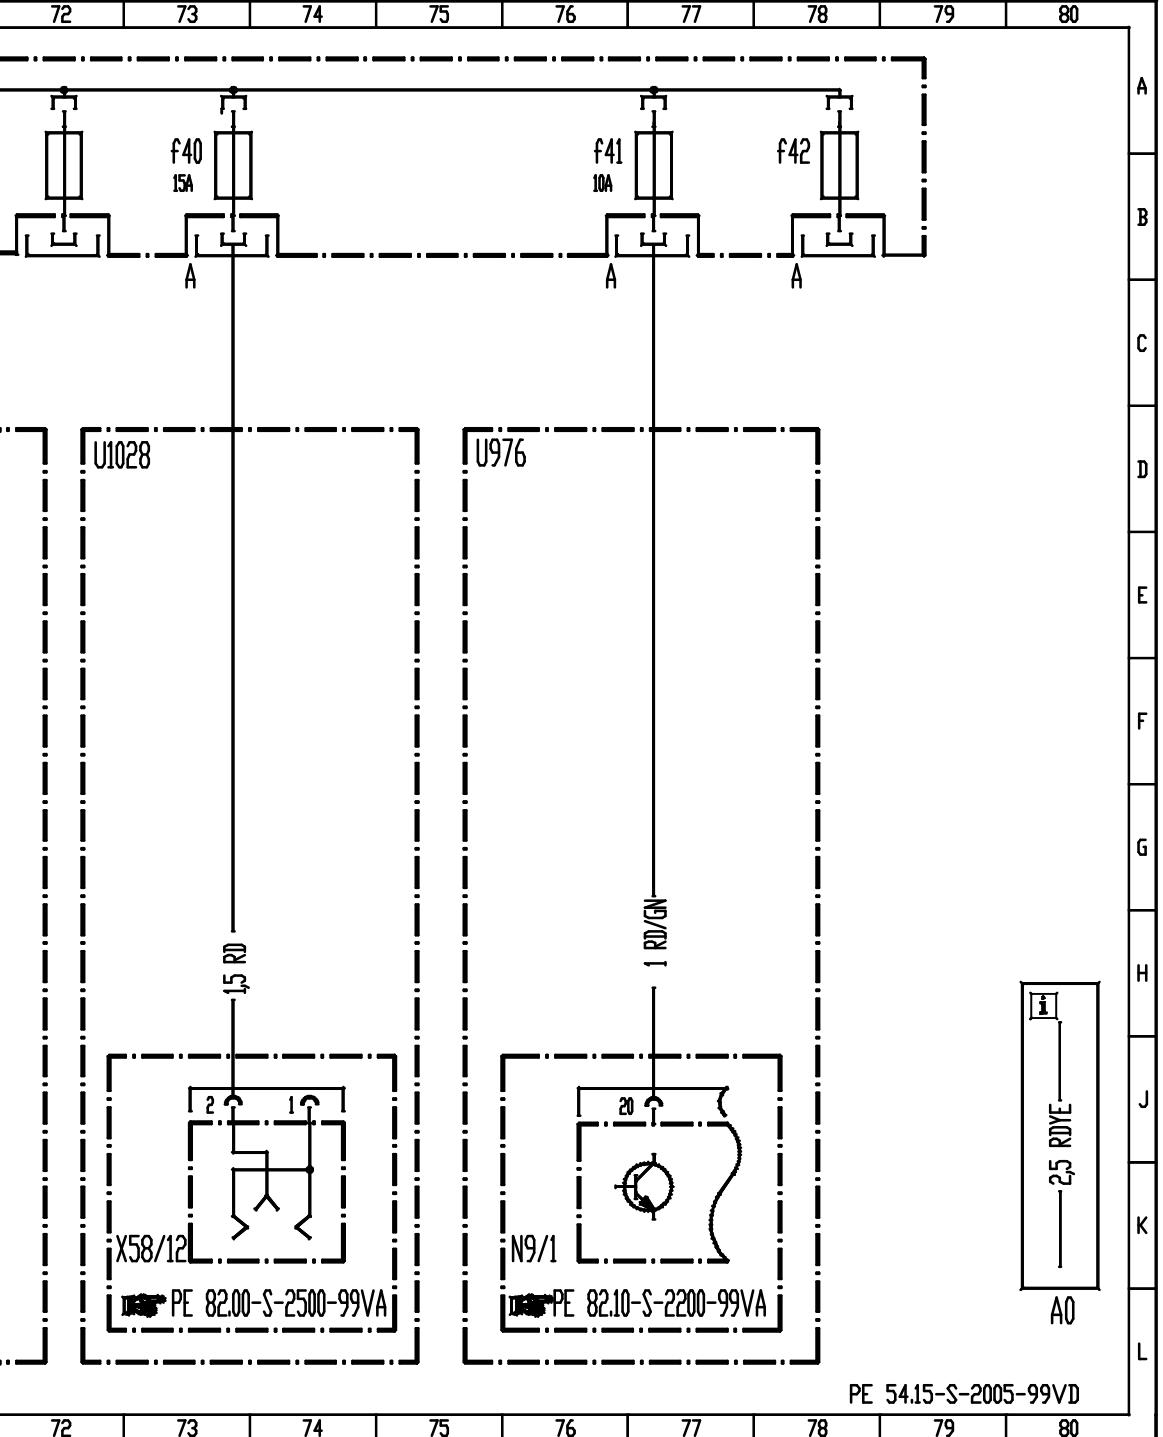

Fuse and relay board (SRB)

Chapter 7

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 1

| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2001-99VA | Wiring diagram for fuse and relay box | Sheet 1 | PE54.15-S-2001-99VA |
| PE54.15-S-2001-60VA | Legend of wiring diagram for fuse and relay box | Sheet 1 | PE54.15-S-2001-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|--|-------------------------|
| K40/9 | Fuse and relay block | 3C 22C 44C 66C |
| K40/9f1 | Front wiper fuse | 7D |
| K40/9f2 | Horn fuse | 5K |
| K40/9f3 | Stop lamp switch fuse | 57K |
| K40/9f4 | Heater fuse | 37K |
| K40/9f5 | Data link connector fuse, exterior lamp switch, instrument cluster | 36K |
| K40/9f6 | Engine components fuse | 9K |
| K40/9f7 | Rear wiper fuse | 56K |
| K40/9f8 | Engine components voltage supply fuse 1 | 8K |
| K40/9f9 | Engine components voltage supply fuse 2 | 8G |
| K40/9f10 | Engine components voltage supply fuse | 12G |
| K40/9f11 | Engine terminal 30Z fuse | 7K |
| K40/9f12 | Rear window heater fuse | 62D |
| K40/9f13 | Instrument cluster fuse, EIS [EZS] | 36K |
| K40/9f14 | Brake system fuse | 25K |
| K40/9f15 | Headlamp range adjustment fuse | 30F |
| K40/9f16 | Starter fuse | 18D |
| K40/9f17 | FP fuse | 29D |
| K40/9f18 | Cigar lighter fuse, glove compartment illumination | 34K |
| K40/9f19 | Radio fuse | 35K |
| K40/9f20 | Ignition coil M112 fuse | 45K |


| | | |
|----------|---------------------------------------|-----|
| K40/9f21 | Electronic selector lever module fuse | 46K |
| K40/9f22 | Fuse, tachograph | 47K |
| K40/9f23 | Airbag control unit fuse | 49K |
| K40/9f24 | Fuse | 45K |
| K40/9f25 | AAG fuse | 47K |
| K40/9f26 | Cutoff relay fuse (Westfalia) | 48K |
| K40/9f27 | Body manufacturer terminal 15 fuse | 49K |
| K40/9f28 | Terminal 87 fuse, ETC [EGS] | 52K |
| K40/9f29 | Fuse | 51K |
| K40/9f30 | Fuse | 50K |
| K40/9f31 | ATA [EDW] horn fuse | 4K |
| K40/9f32 | Portable CTEL fuse, VICS | 40K |
| K40/9f33 | Airbag control unit fuse, ACSR [AKSE] | 41K |
| K40/9f34 | Body manufacturer terminal 15 fuse | 42K |
| K40/9f35 | Standard overhead control panel fuse | 42K |
| K40/9f36 | Lumbar support adjustment fuse | 43K |
| K40/9f37 | Vanity mirror fuse | 53K |
| K40/9f38 | TV entertainment system fuse | 53K |
| K40/9f39 | Fuse | 54K |
| K40/9f40 | Engine fuse (diesel control unit) | 10K |
| K40/9f41 | Engine fuse (diesel control unit) | 11K |
| K40/9k1 | Horn relay | 4C |
| K40/9k2 | Wiper On and Off relay | 8C |
| K40/9k3 | Wiper level 2 relay | 11C |
| K40/9k4 | Circuit 87 engine relay | 15C |
| K40/9k5 | Starter relay | 17C |
| K40/9k6 | Fuel pump relay | 24C |
| K40/9k7 | Circuit 15R relay | 33C |
| K40/9k8 | Circuit 15 relay | 36C |
| K40/9k9 | Heated rear window relay | 58C |

| | | |
|----------|---------------------------|-------------------------|
| K40/9k10 | Terminal 15R relief relay | 49C |
| K40/9k11 | Circuit 15 relief relay | 54C |
| M1 | Starter | 14L |
| N10 | SAM control unit | 3B 22B 45B 66B |

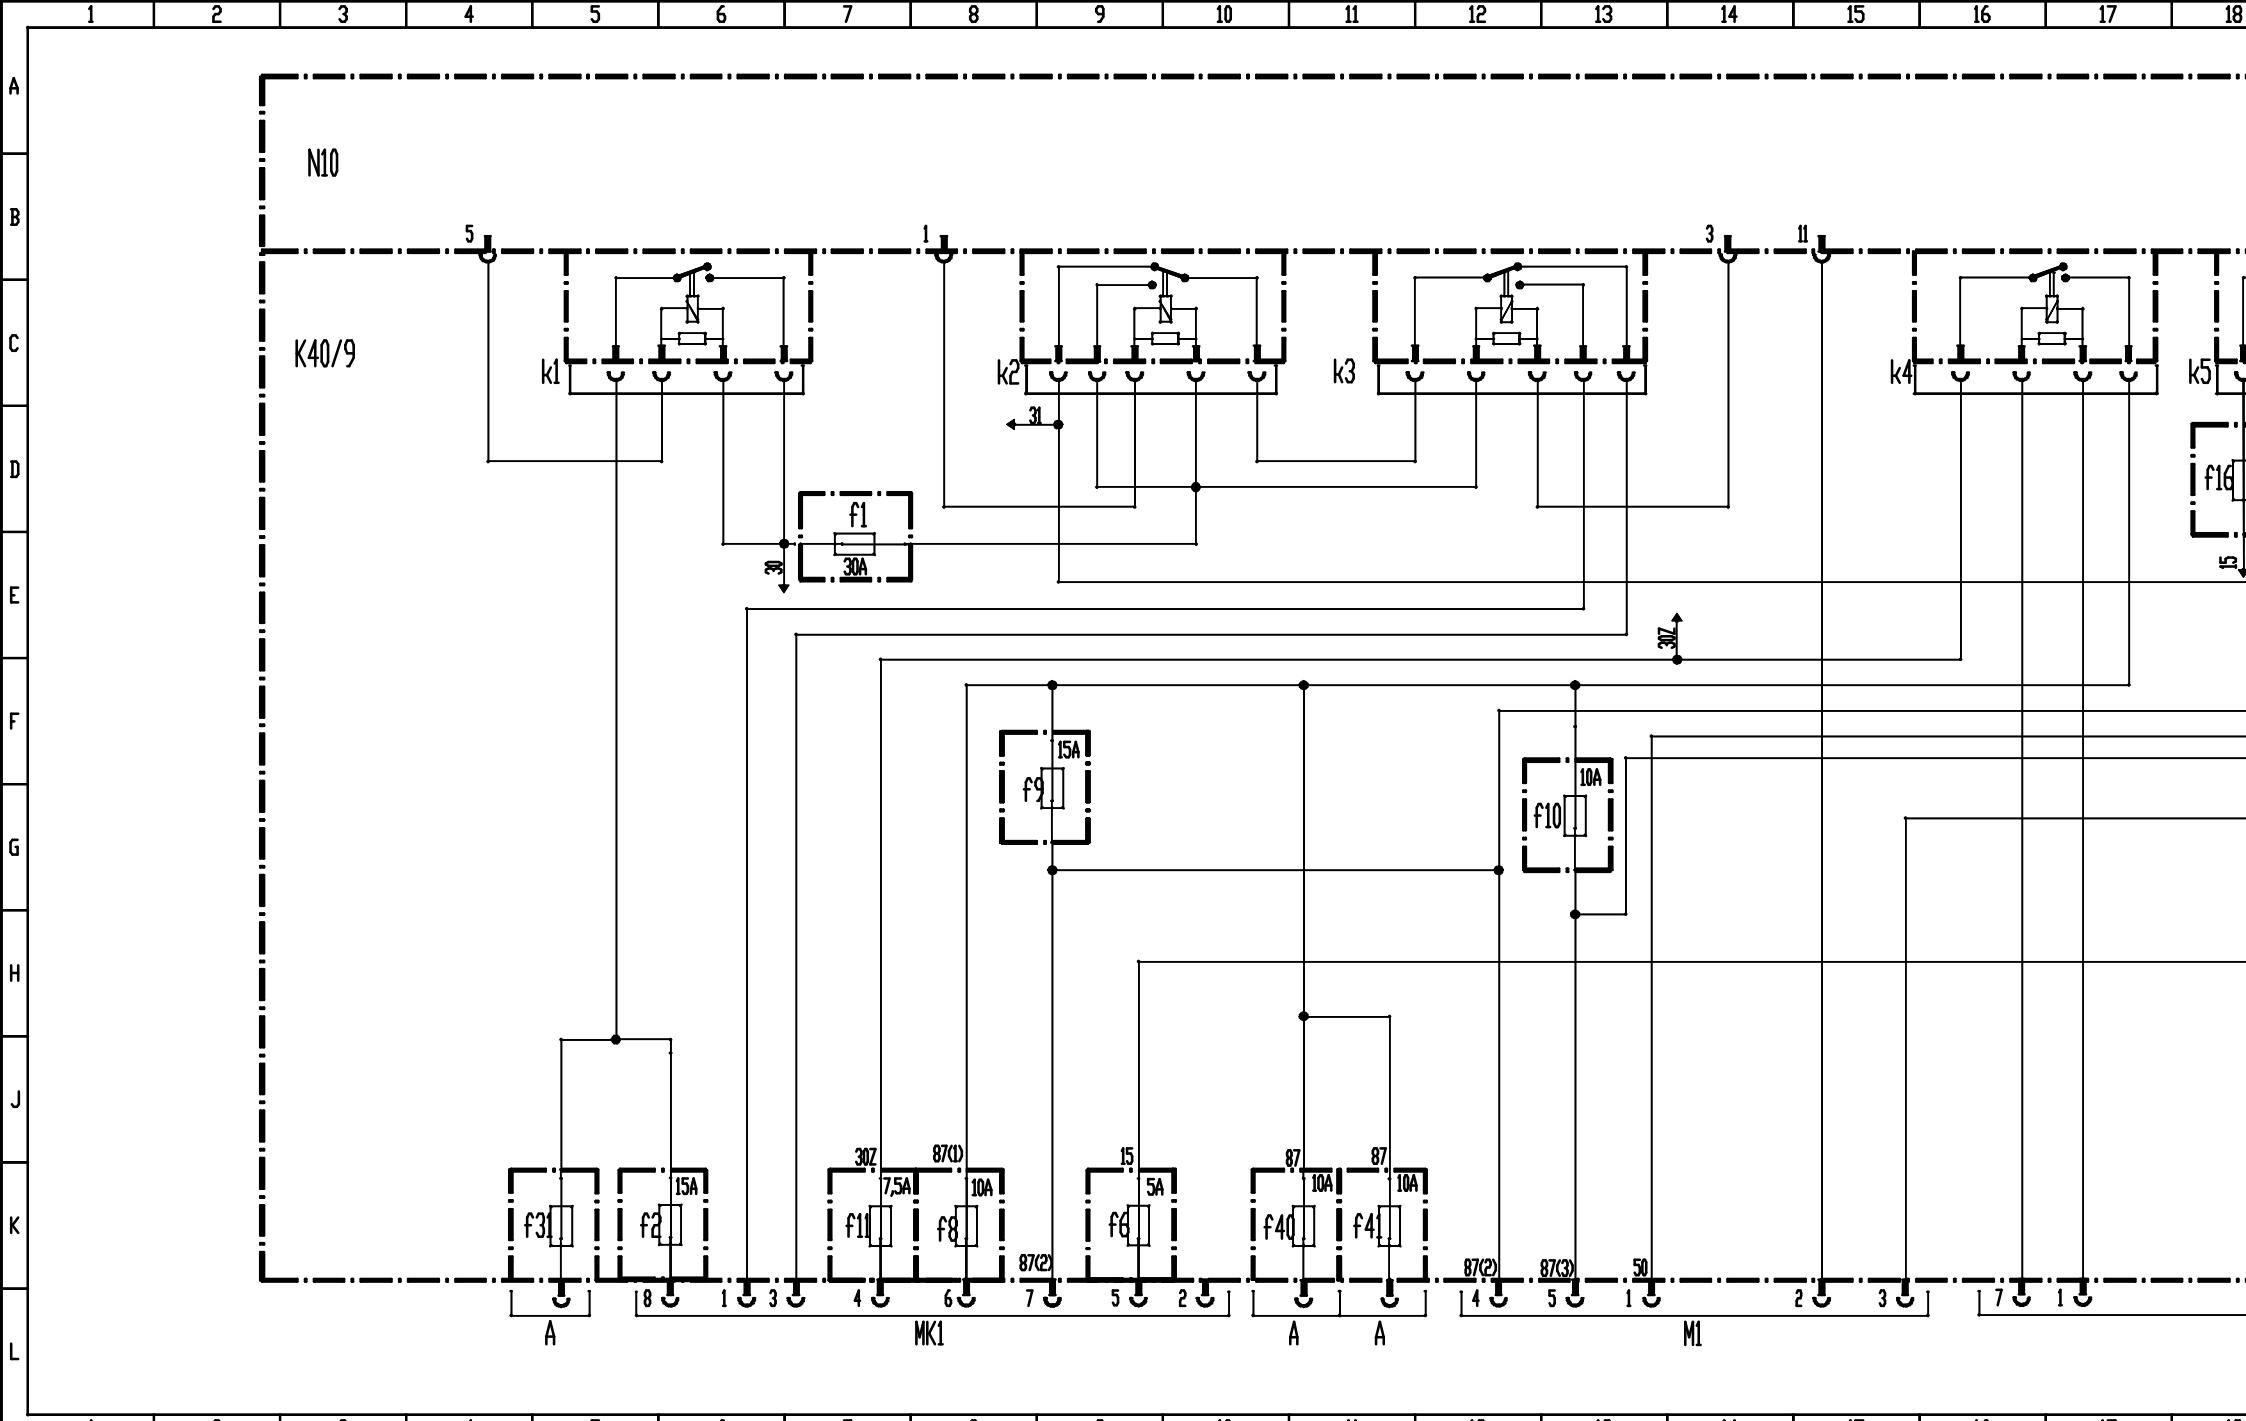


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35


N10

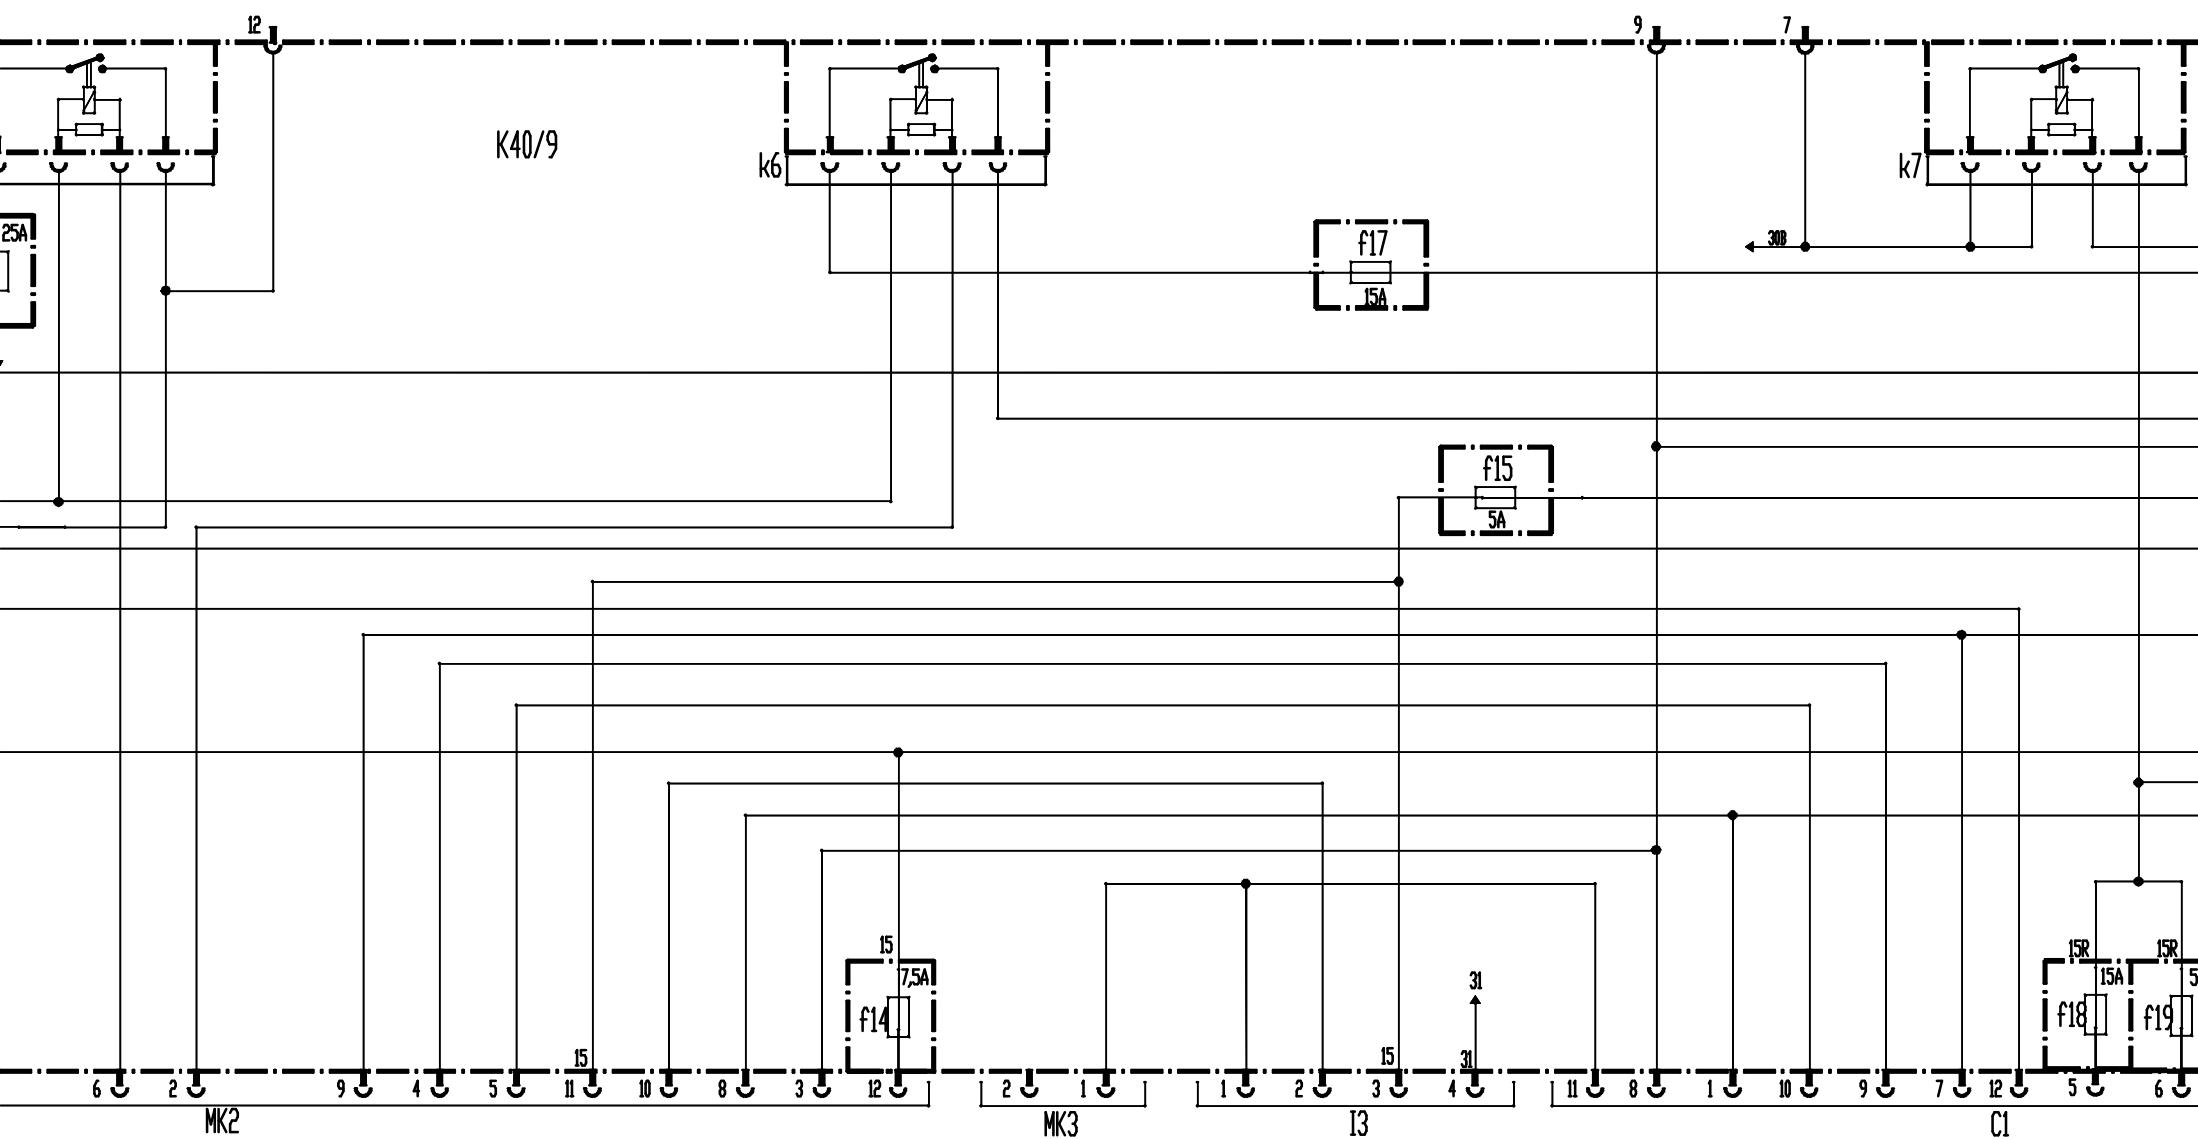

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

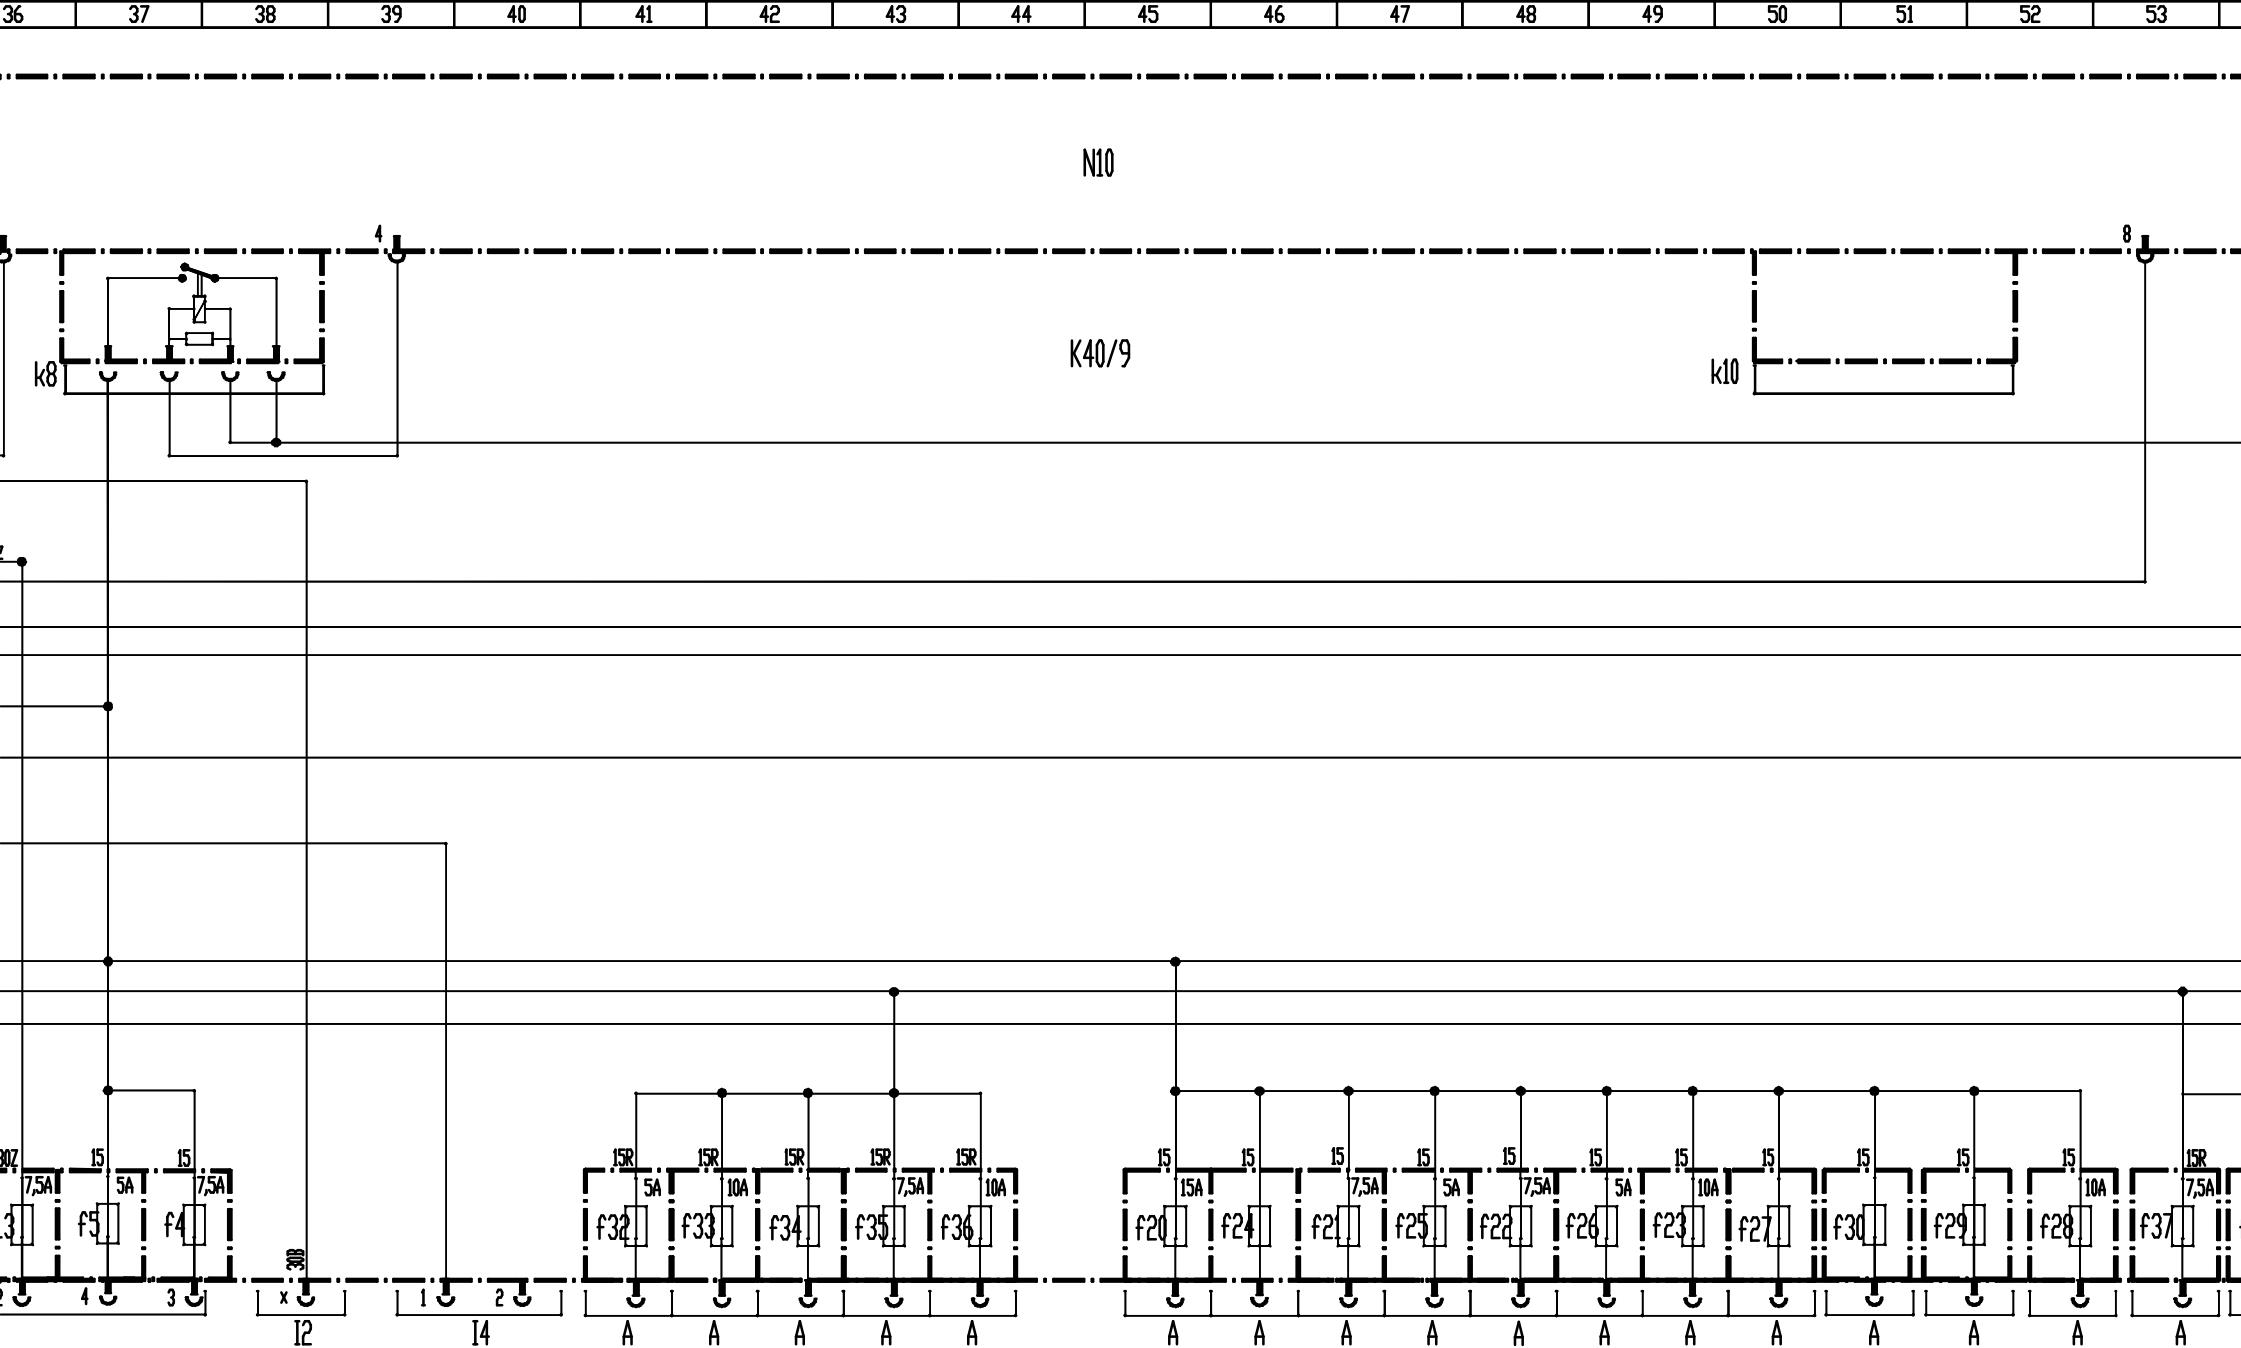

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

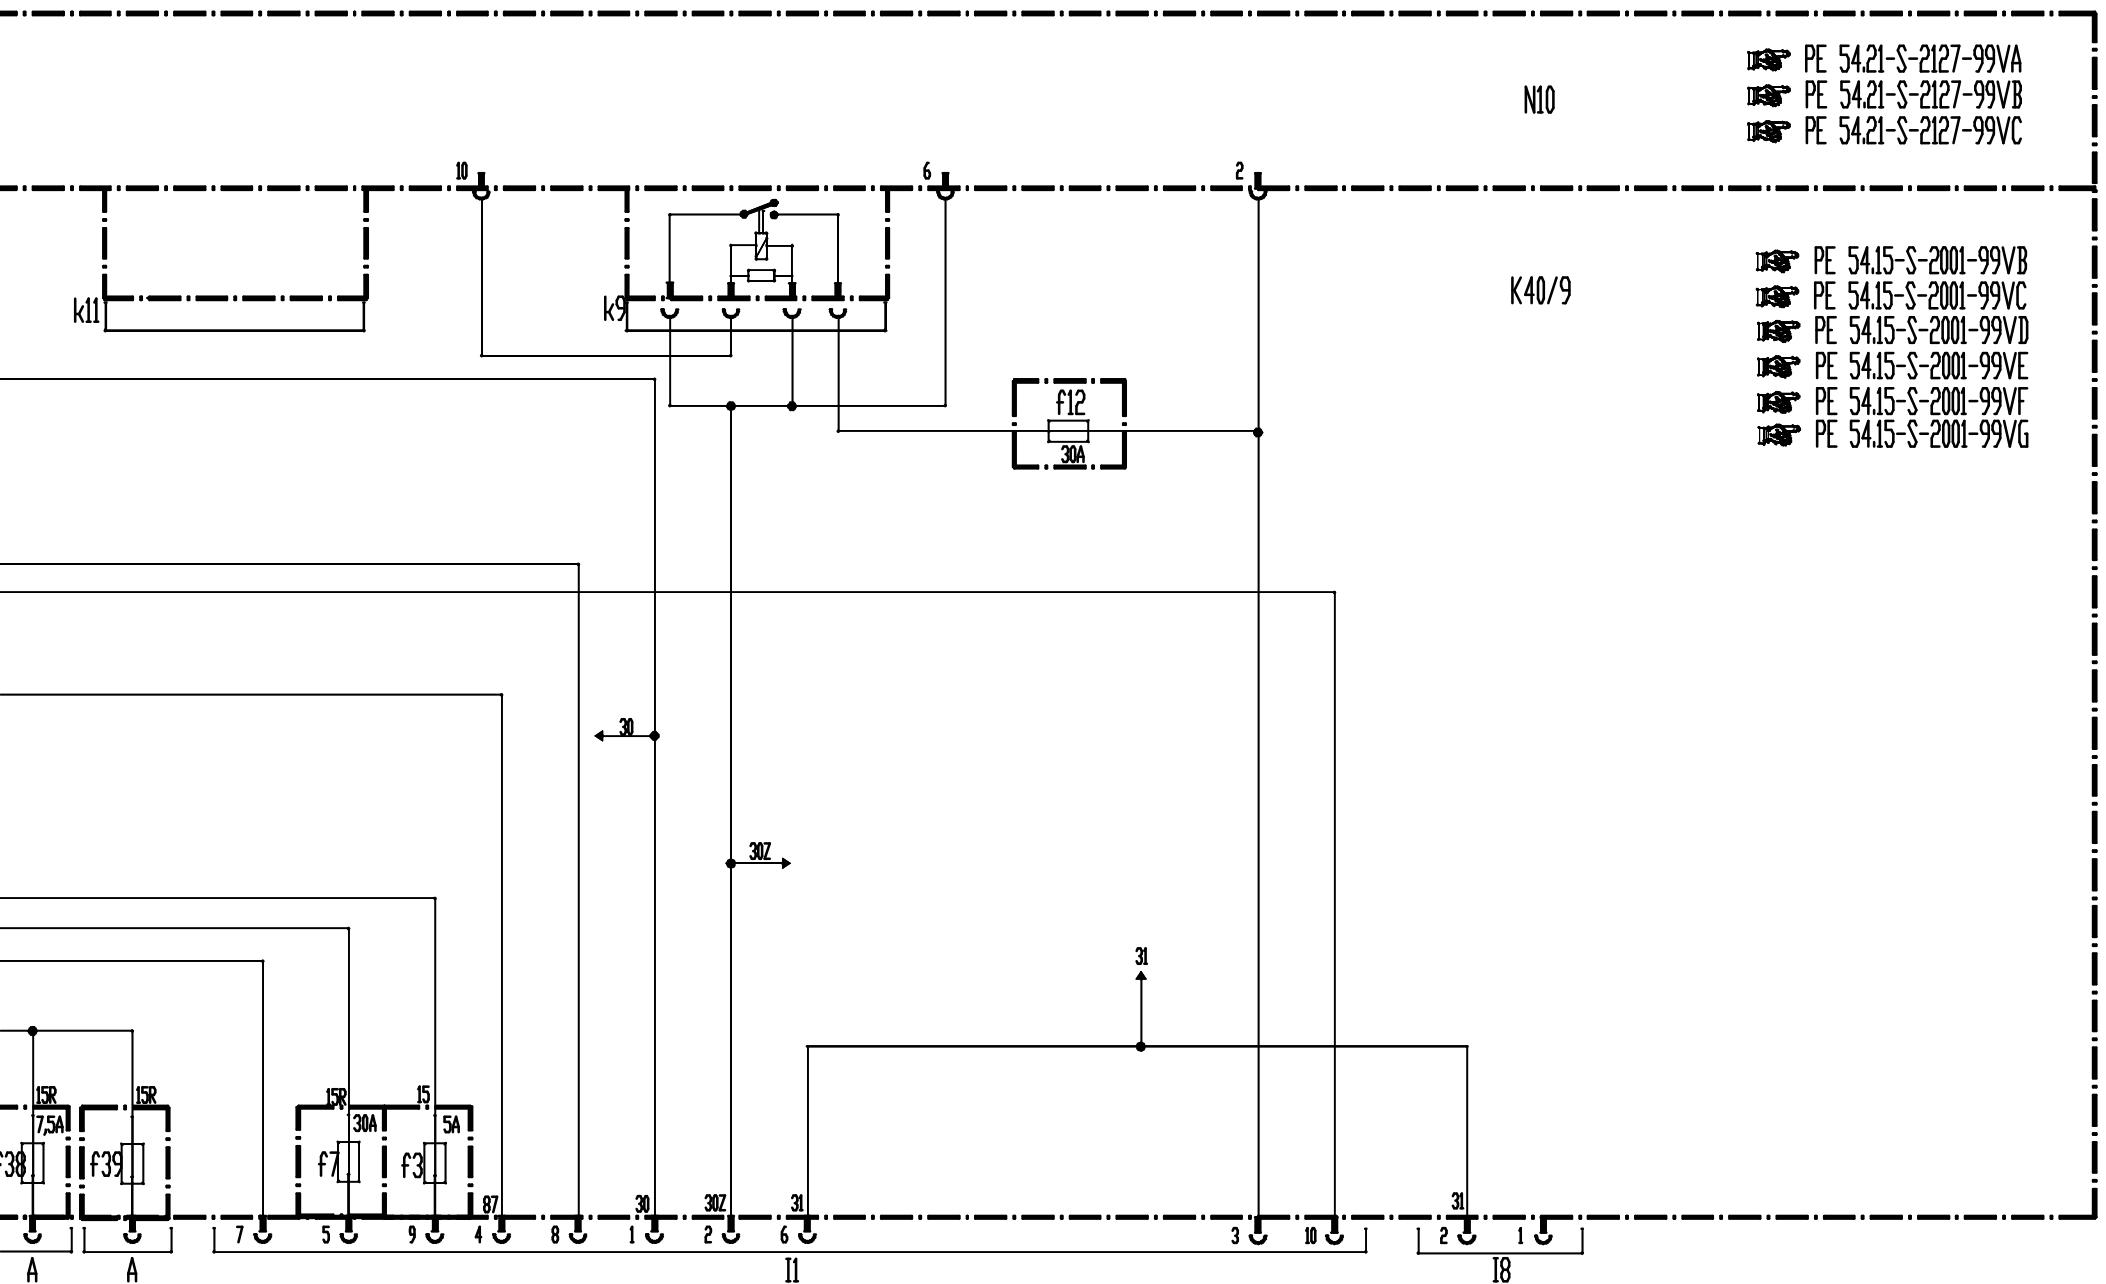

PE 54.15-S-2001-9

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 2


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2001-99VC | Wiring diagram for fuse and relay box | Sheet 2 | PE54.15-S-2001-99VC |
| PE54.15-S-2001-60VC | Legend of wiring diagram for fuse and relay box | Sheet 2 | PE54.15-S-2001-60VC |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|---|--|
| PE54.15-S-2001-60VC | Legend of wiring diagram for fuse and relay box | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 2 | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|----------|---------------------------------------|--|
| A56 | Modular tachograph | 27K |
| B2/7 | Hot film mass air flow sensor | 14K |
| B76 | Fuel filter water level sensor | 8K 12K |
| B85 | O2 sensor, upstream from TWC | 17L 20L |
| K40/9 | Fuse and relay block | 4A 11A 18A 25A 32A 39A 46A 53A 60A |
| K40/9f20 | Ignition coil M112 fuse | 13B |
| K40/9f21 | Electronic selector lever module fuse | 24B |
| K40/9f22 | Fuse, tachograph | 28B |
| K40/9f23 | Airbag control unit fuse | 34B |
| K40/9f24 | Fuse | 37B |
| K40/9f25 | AAG fuse | 42B |
| K40/9f26 | Cutoff relay fuse (Westfalia) | 47B |
| K40/9f27 | Body manufacturer terminal 15 fuse | 49B |
| K40/9f28 | Terminal 87 fuse, ETC [EGS] | 51B |
| K40/9f29 | Fuse | 52B |
| K40/9f30 | Fuse | 54B |
| K40/9f31 | ATA [EDW] horn fuse | 56B |

| | | |
|--------|--|------------|
| K57 | Battery cutoff relay | 47K |
| N2/2 | SRS control unit | 31K |
| N2/10 | SRS control unit | 34K |
| N2/11 | ARCADE airbag control unit | 37K |
| N15/3 | EGS control unit | 50K |
| N15/5 | Electronic selector lever module control unit | 23K |
| N28/1 | Trailer connection unit [AAG] control unit | 40K 43K |
| U32 | Valid for left-hand drive vehicles | 17F |
| U33 | Valid for right-hand drive vehicles | 20F |
| U1031 | Valid for additional heavy-duty battery | 47D |
| U1033 | Valid for engine OM 646 with fuel filter with water separator and engine version Euro 3 (diesel) | 8D |
| U1107 | Valid up to 08/2005 | 30D 40D |
| U1108 | Valid as of 09/2005 | 37D 43D |
| U150 | Valid for engine M 112 | 4D |
| U939 | Valid for socket for rear-mounted bicycle carrier repeater lamps | 40D 43D |
| U940 | Valid for electrical system for trailer socket | 40E 43D |
| U941 | Valid for fixed trailer hitch | 40E 43E |
| U942 | Valid for removable trailer hitch | 40E 43E |
| U943 | Valid with Window-Thoraxbag for driver and front passenger | 34E |
| U944 | Valid without window thoraxbag for driver and front passenger | 30E |
| U960 | Valid for engine OM 642 | 11D |
| U961 | Valid for automatic transmission | 23D 50D |
| U968 | Valid for 1 day/2 driver tachograph | 27D |
| U994 | Valid for fuel filter with water separator | 12F |
| X18/66 | O2 sensor connector | 20H |

| | | |
|--------|--|-----|
| X25/14 | Connector for O2-sensor/exhaust gas temperature sensor | 19E |
| Z3/29 | Circuit 15 connector sleeve (fused) | 5G |
| Z3/64 | Circuit 15 connector sleeve | 15E |





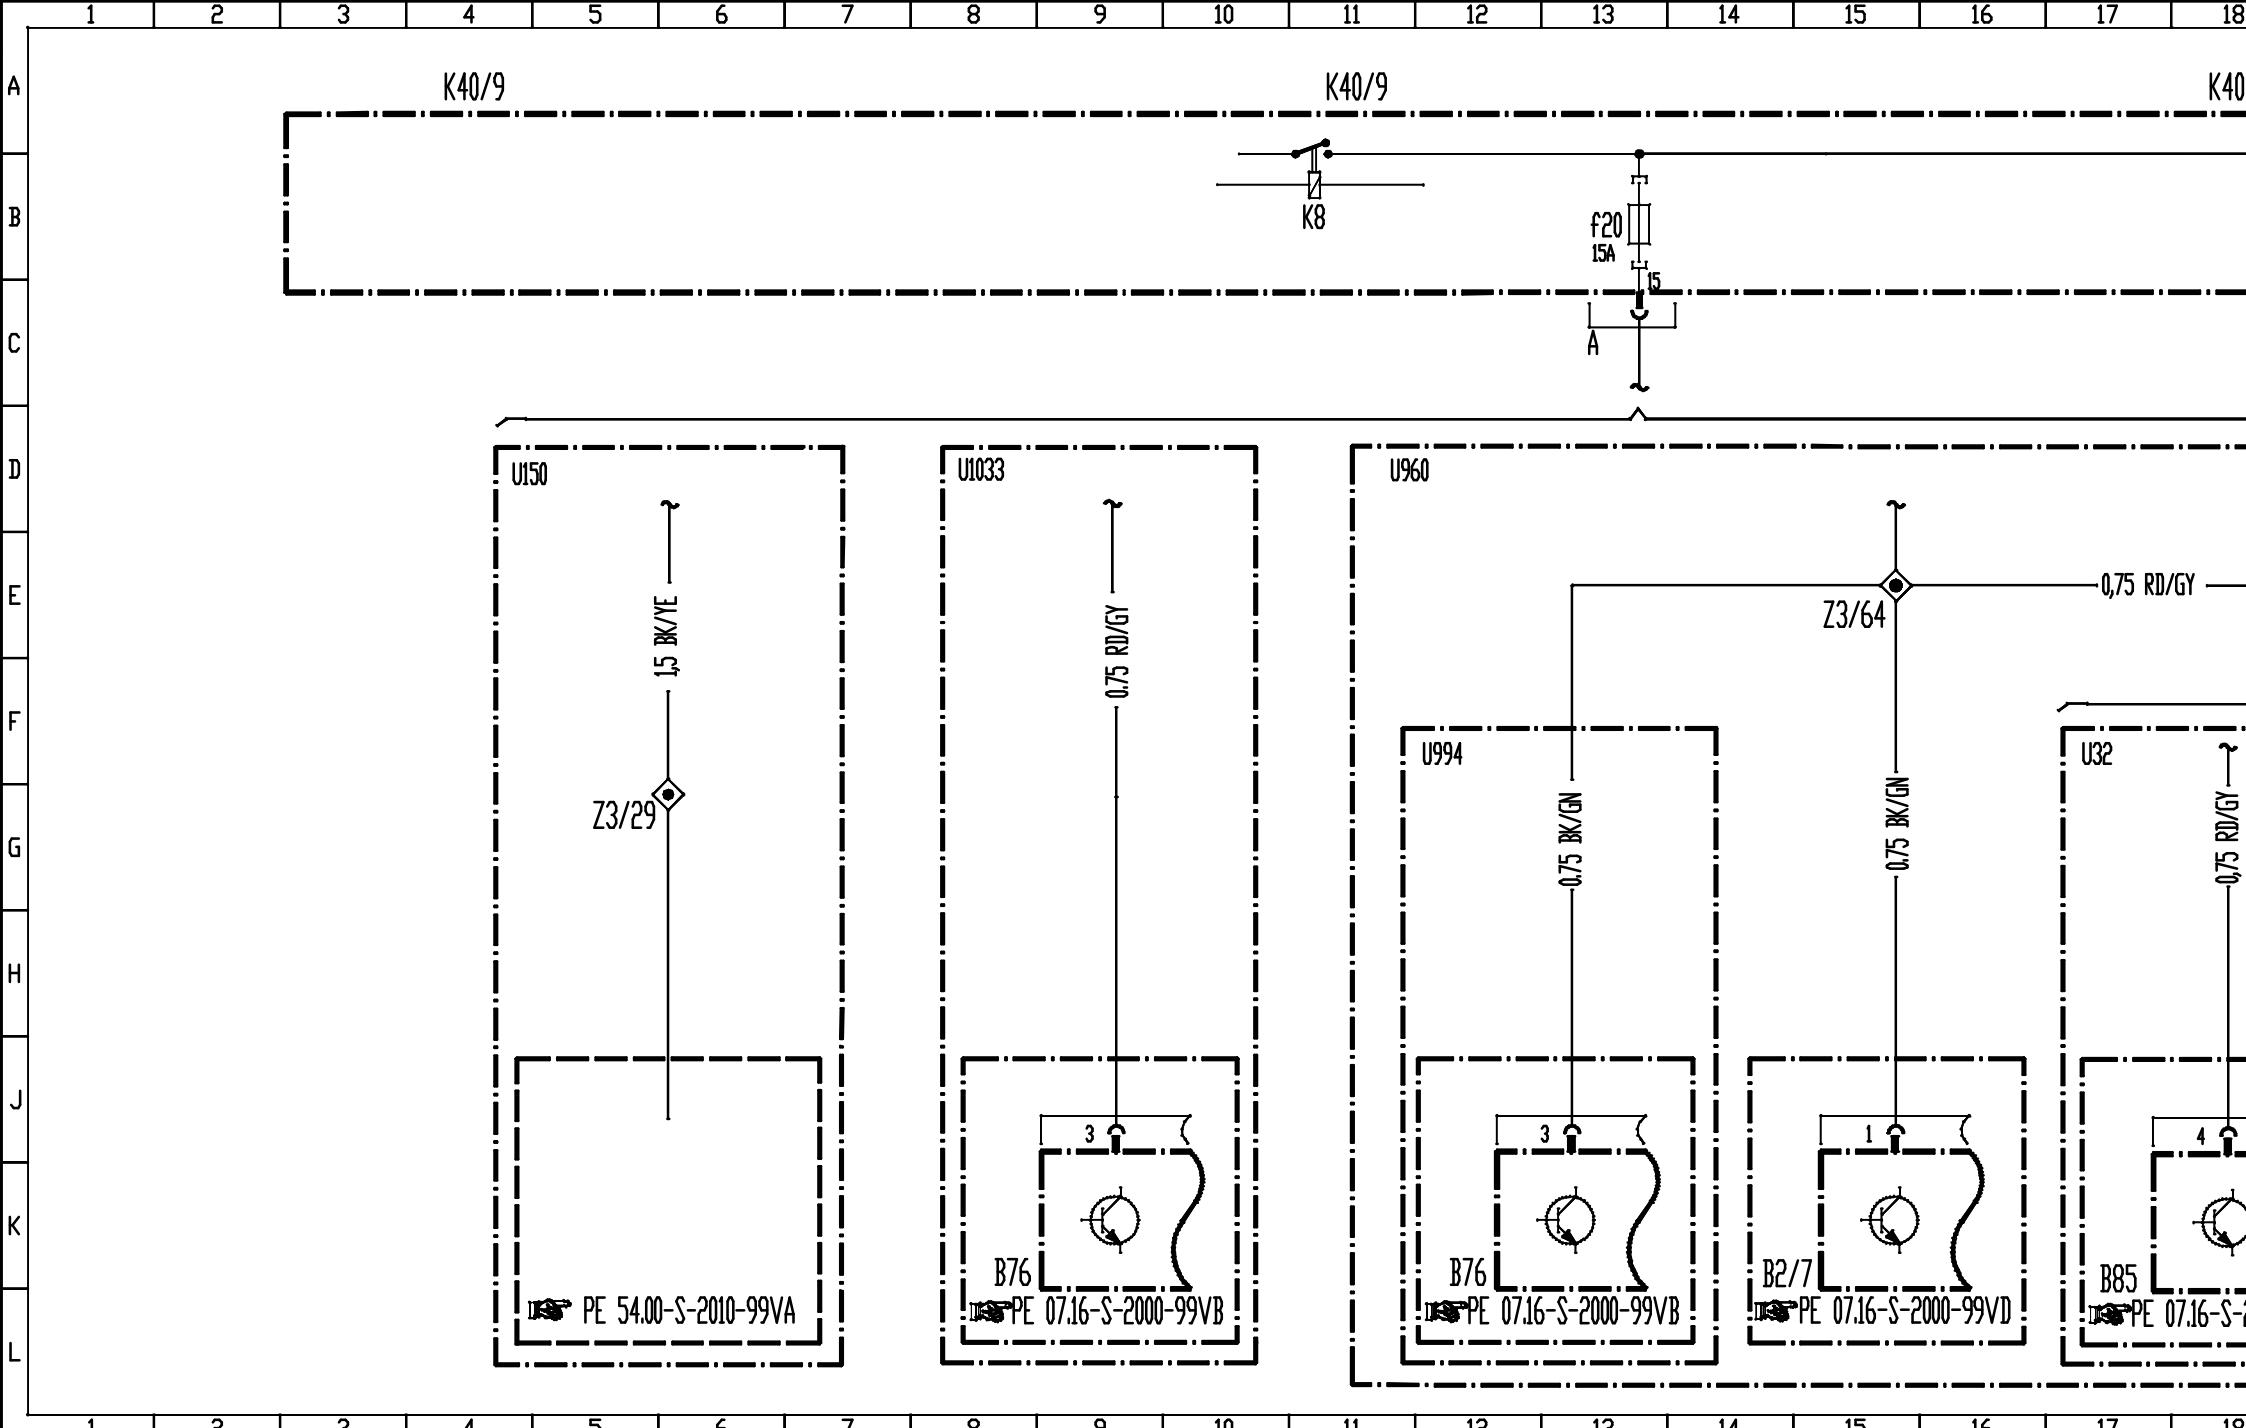


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

/9

K40/9

K40/9

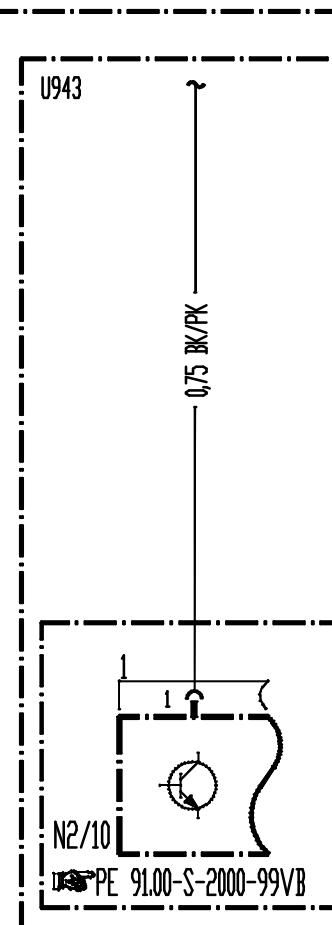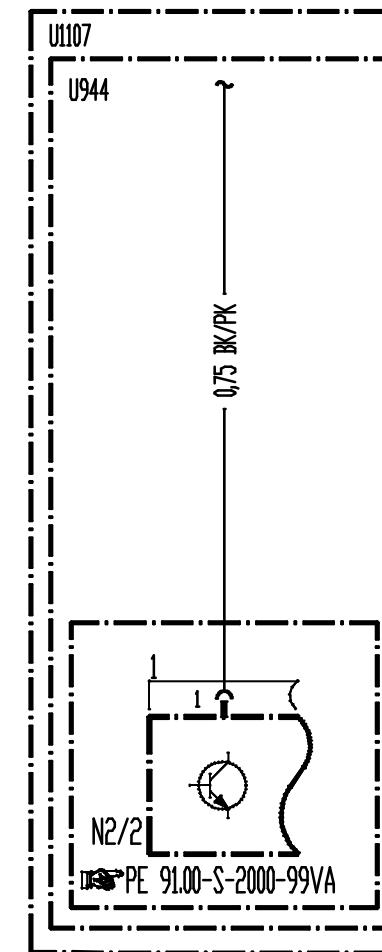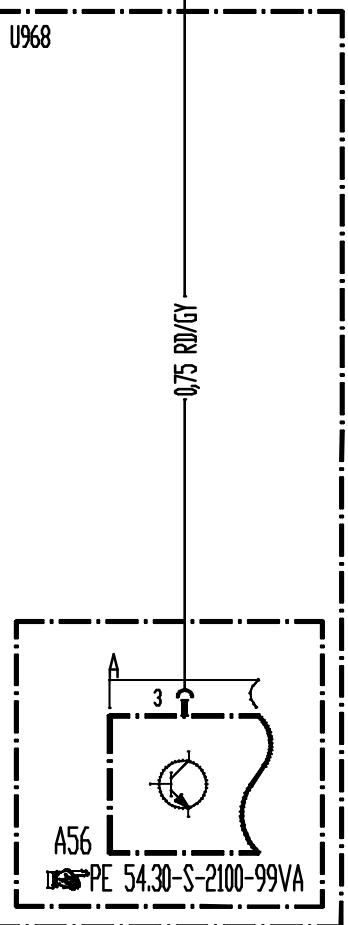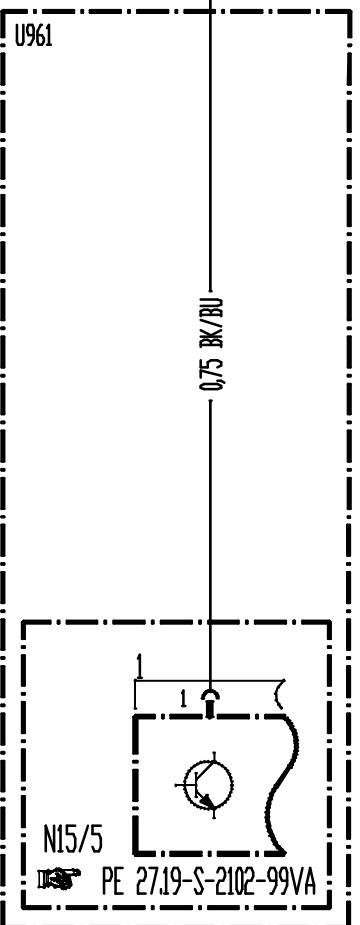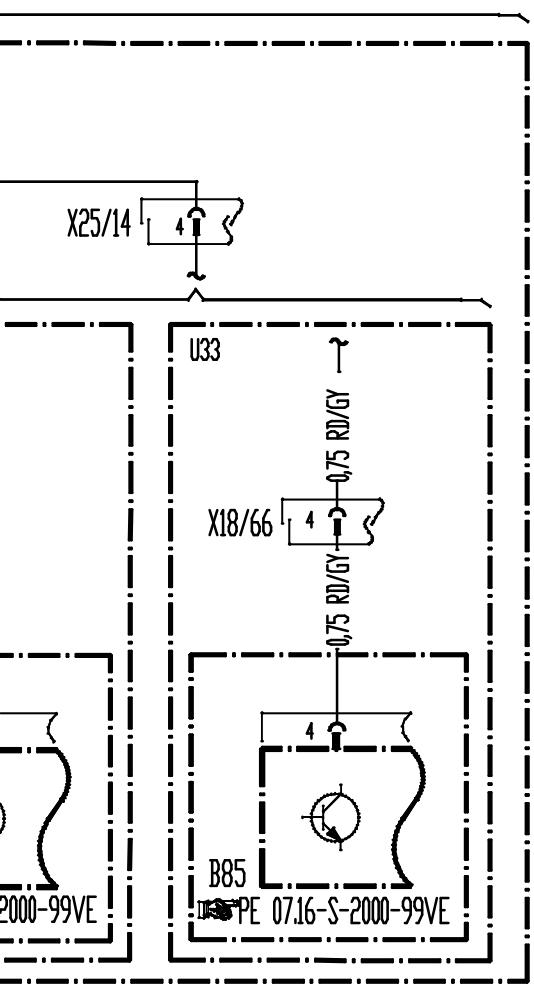


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53


K40/9

K40/9

K40/9

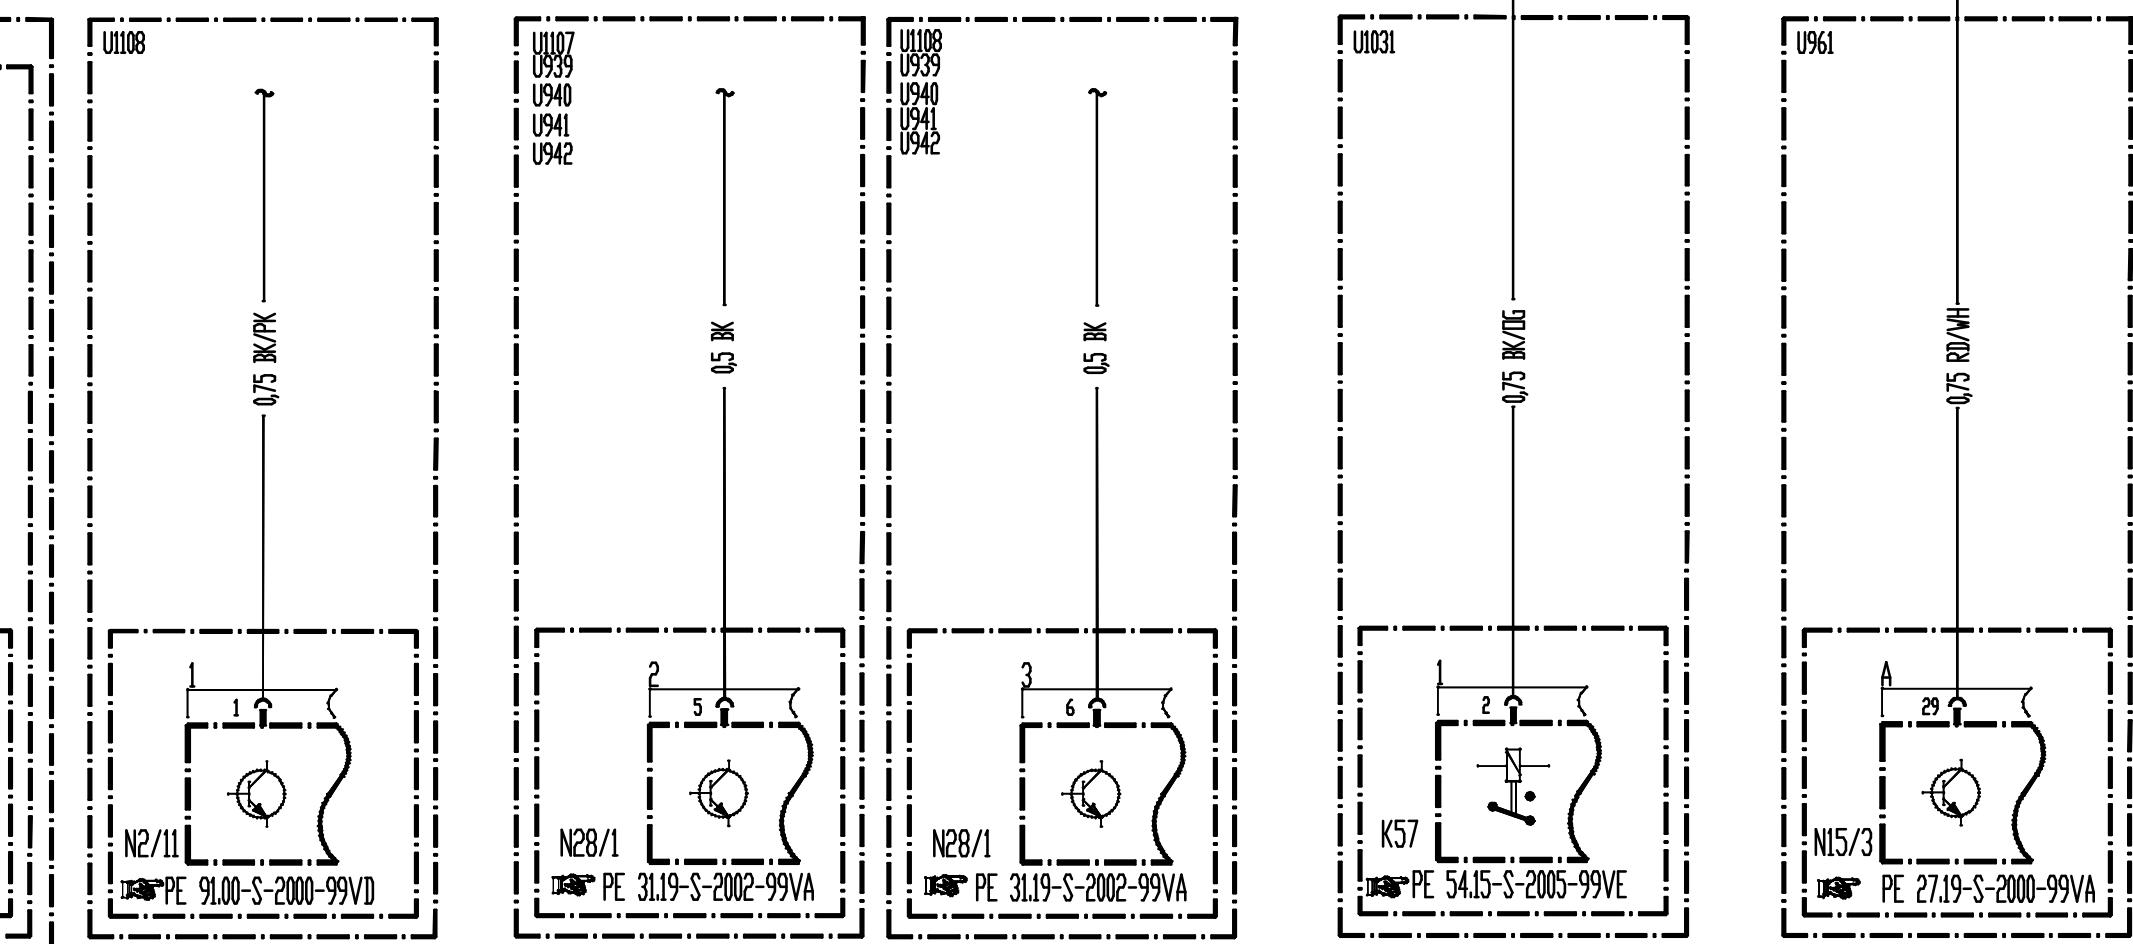

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

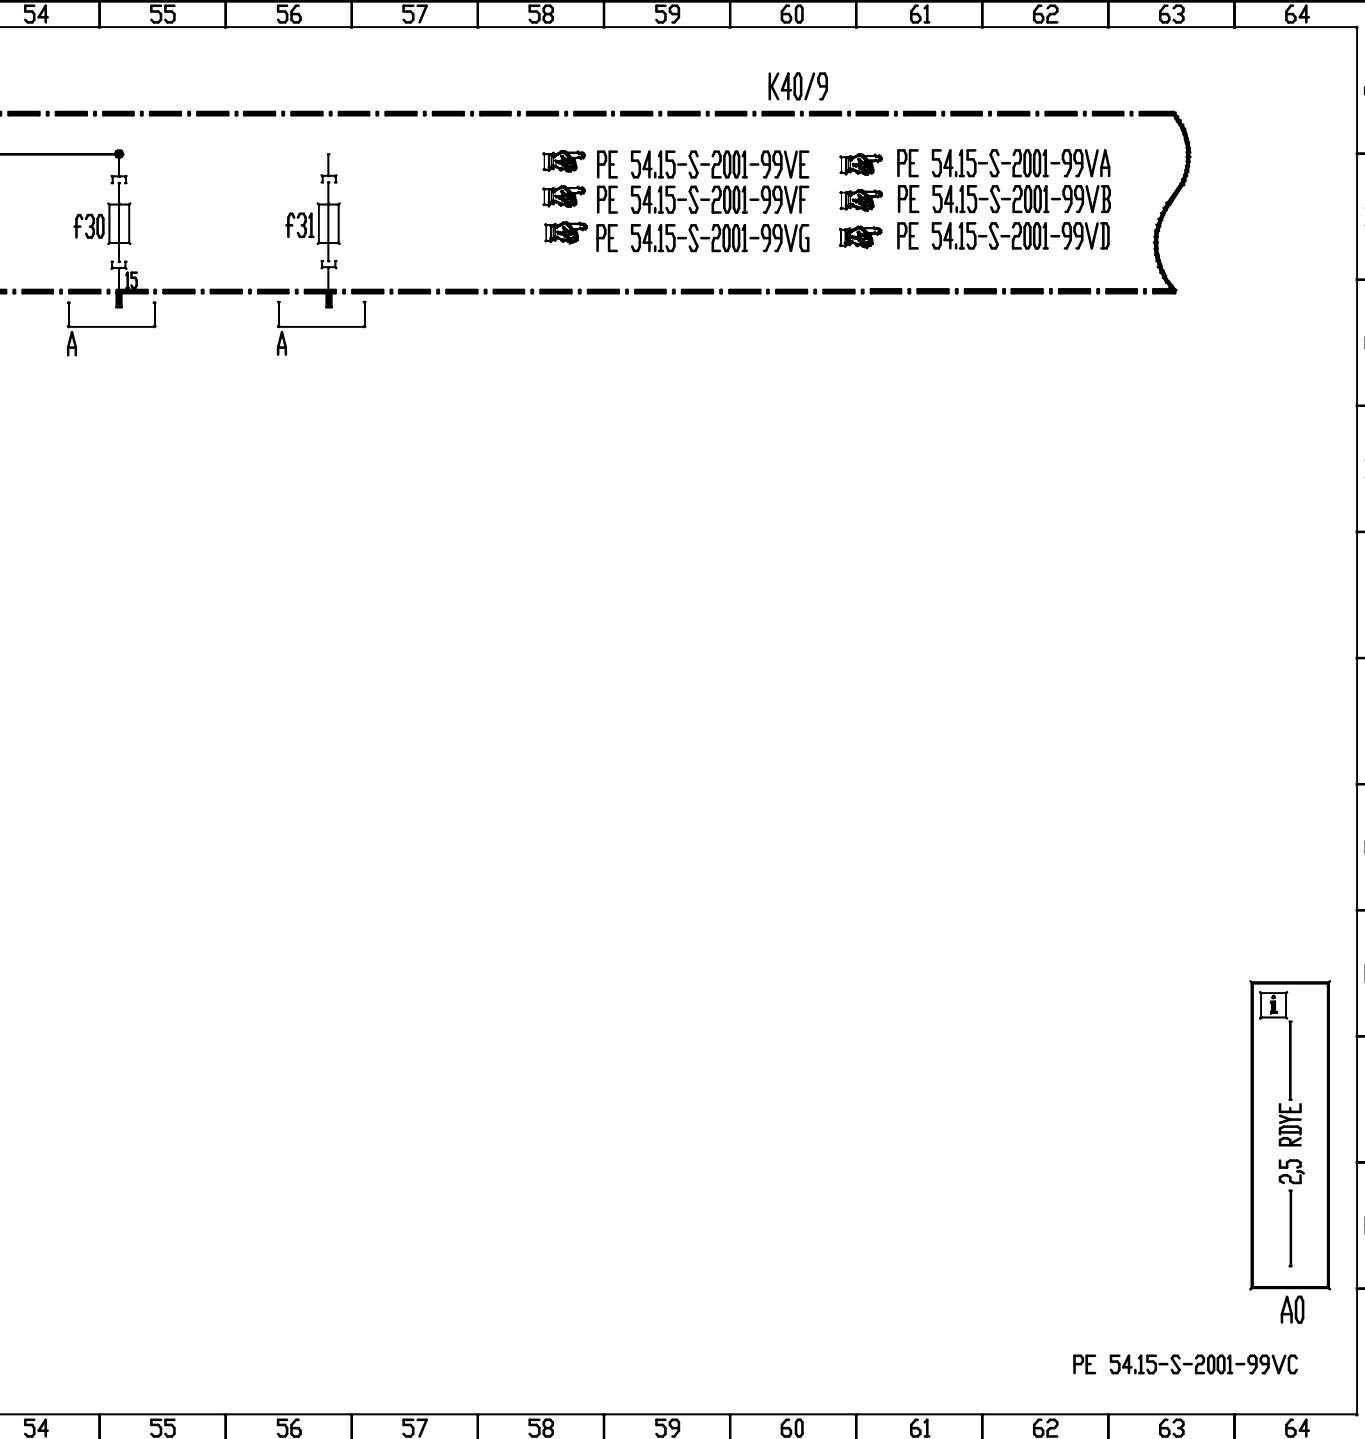

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 3

| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2001-99VD | Wiring diagram for fuse and relay box | Sheet 3 | PE54.15-S-2001-99VD |
| PE54.15-S-2001-60VD | Legend of wiring diagram for fuse and relay box | Sheet 3 | PE54.15-S-2001-60VD |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|---|--|
| B48 | Front passenger seat occupied and child seat recognition sensor | 18K |
| E14/6 | Illumination, left front vanity mirror | 45K |
| E14/7 | Illumination, right front vanity mirror | 48L |
| K40/9 | Fuse and relay block | 4A 11A 18A 25A 32A 39A 46A 53A 60A 67A 74A |
| K40/9f32 | Portable CTEL fuse, VICS | 4B |
| K40/9f33 | Airbag control unit fuse, ACSR [AKSE] | 12B |
| K40/9f34 | Body manufacturer terminal 15 fuse | 17B |
| K40/9f35 | Standard overhead control panel fuse | 22B |
| K40/9f36 | Lumbar support adjustment fuse | 26B |
| K40/9f37 | Vanity mirror fuse | 48B |
| K40/9f38 | TV entertainment system fuse | 52B |
| K40/9f39 | Fuse | 54B |
| K40/9f40 | Engine fuse (diesel control unit) | 57B |
| K40/9f41 | Engine fuse (diesel control unit) | 64B |
| M28/11 | Lumbar support adjustment motor, right | 35K |
| M28/12 | Lumbar support adjustment motor, left | 26K |
| N2/2 | SRS control unit | 9K |

| | | |
|--------|---|------------|
| N2/10 | SRS control unit | 12K |
| N2/11 | ARCADE airbag control unit | 15K |
| N3/9 | CDI control unit | 55K 62K |
| N3/20 | CDI control unit | 58K 65K |
| N66/4 | Rear conversation unit control unit | 51K |
| N70 | Overhead control panel control unit | 22L |
| N123 | Hands-free system control unit | 2K |
| S109s3 | Lumbar support adjustment switch, left front | 26G 35G |
| U15 | Valid for screen in rear and DVD player | 51D |
| U16 | Valid for screen in rear, DVD player and TV tuner | 51D |
| U32 | Valid for left-hand drive vehicles | 30F 40F |
| U33 | Valid for right-hand drive vehicles | 32F 41F |
| U51 | Valid for telephone preinstallation | 2D |
| U1023 | Valid for front passenger airbag and comfort front passenger seat or revolving comfort front passenger seat or front passenger seat with electric adjustment | 18D |
| U1024 | Valid for DBE with 2 reading spotlights or garage door opener without glass tilting/sliding roof in driver/passenger compartment, glass tilting/sliding roof in passenger compartment, light/rain sensor, EDW II or EDW I | 22D |
| U1029 | Valid for lumbar support for driver seat | 26D |
| U1030 | Valid for lumbar support for passenger seat | 35D |
| U1032 | Valid for driver/passenger sun visor with illuminated mirror | 44D |
| U740 | Valid for engine OM 646 | 55D 62D |
| U943 | Valid with Window-Thoraxbag for driver and front passenger | 12D |
| U944 | Valid without window thoraxbag for driver and front passenger | 9E |
| U956 | Valid for auto pilot system for Japan, large display | 5D |
| U960 | Valid for engine OM 642 | 58D 65D |

| | | |
|--------|--|------------|
| W43/1 | Ground (left interior compartment firewall) | 31L 40L |
| W43/2 | Ground (right interior compartment firewall) | 32L 42L |
| X28/18 | Seat occupied recognition with ACSR [AKSE] connector | 18G |
| X55/1 | Left lumbar support adjustment connector | 26E |
| X55/2 | Right lumbar support adjustment connector | 35E |
| X55/3 | Left seat adjustment connector | 26H |
| X55/4 | Right seat adjustment connector | 35H |
| X137/1 | VICS+ETC voltage supply separation point | 5K |





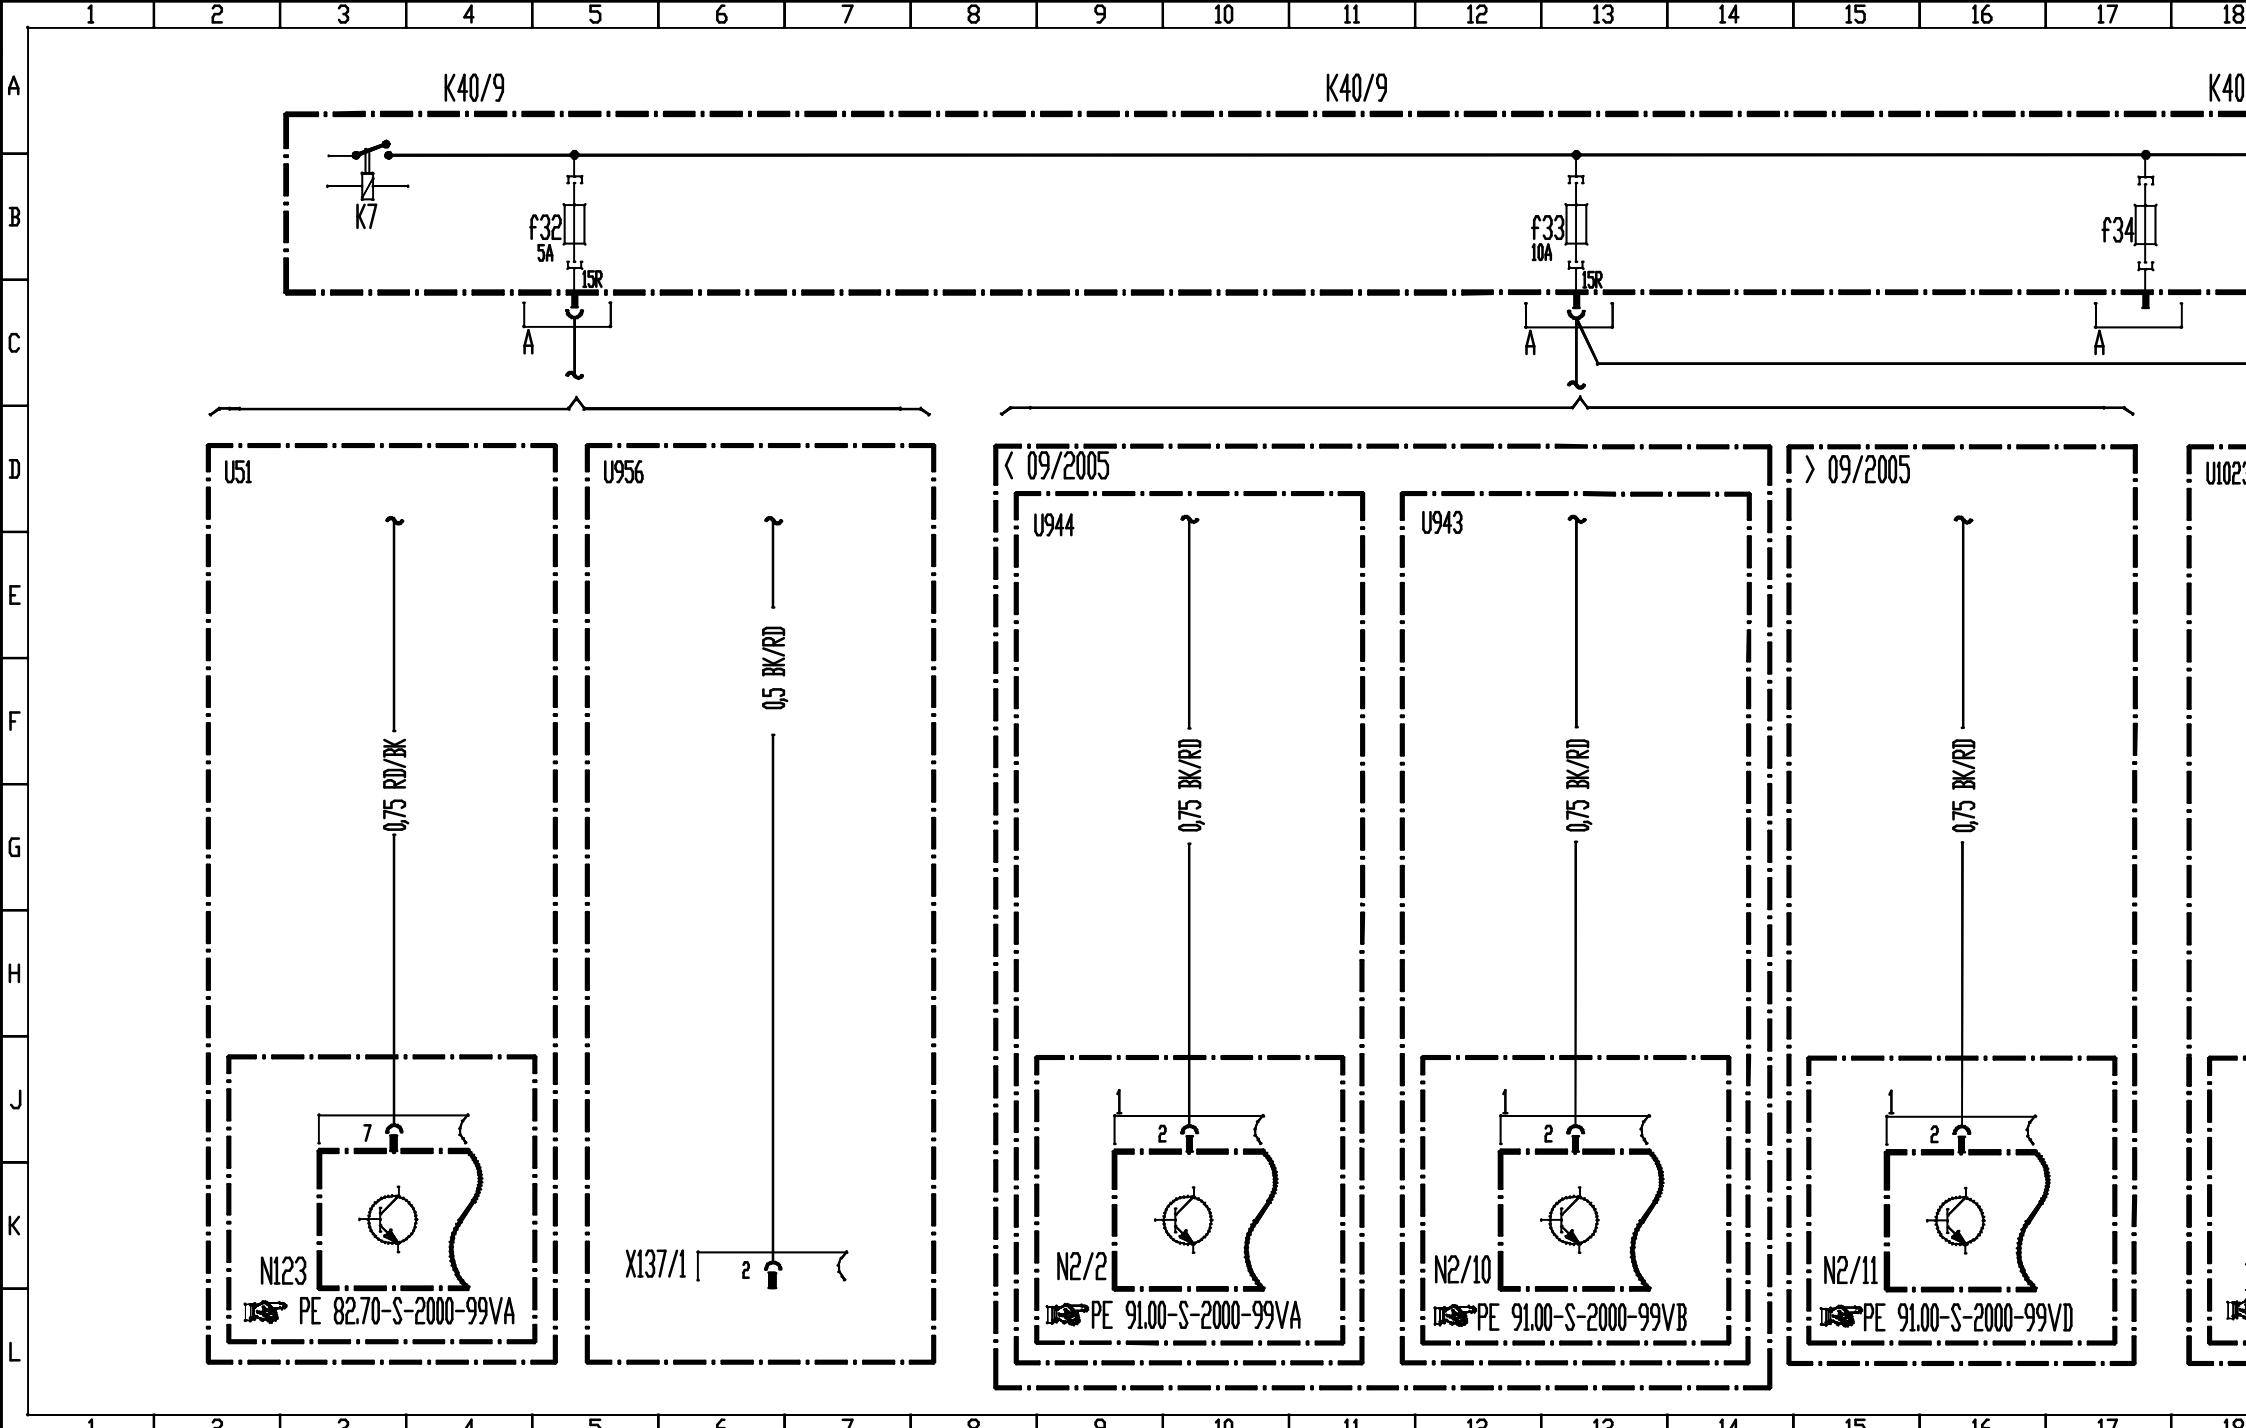


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

/9

K40/9

K40/9

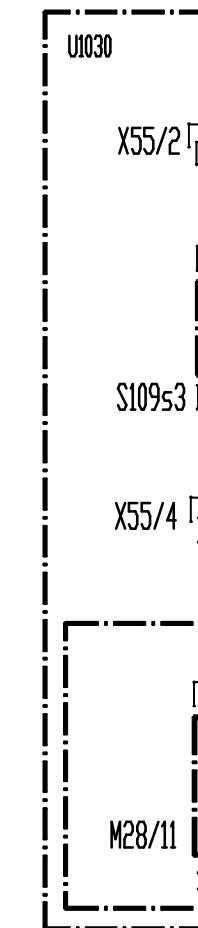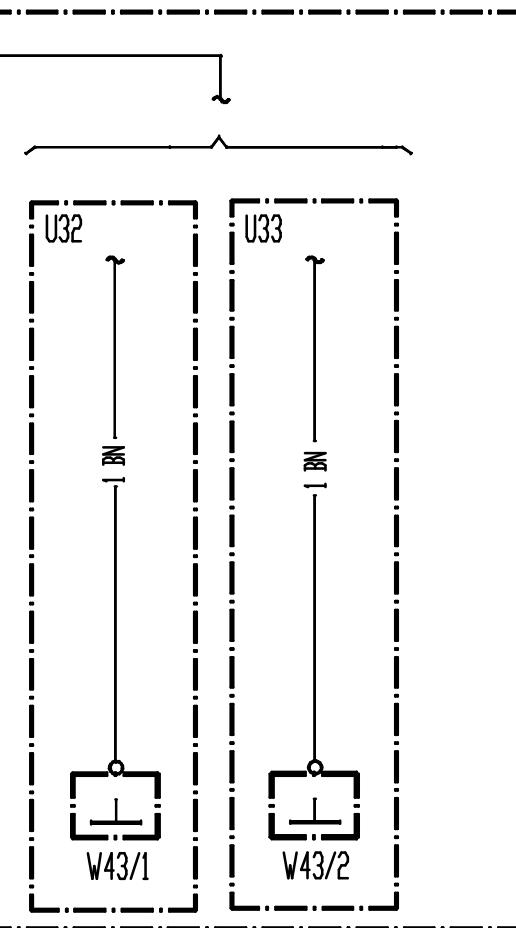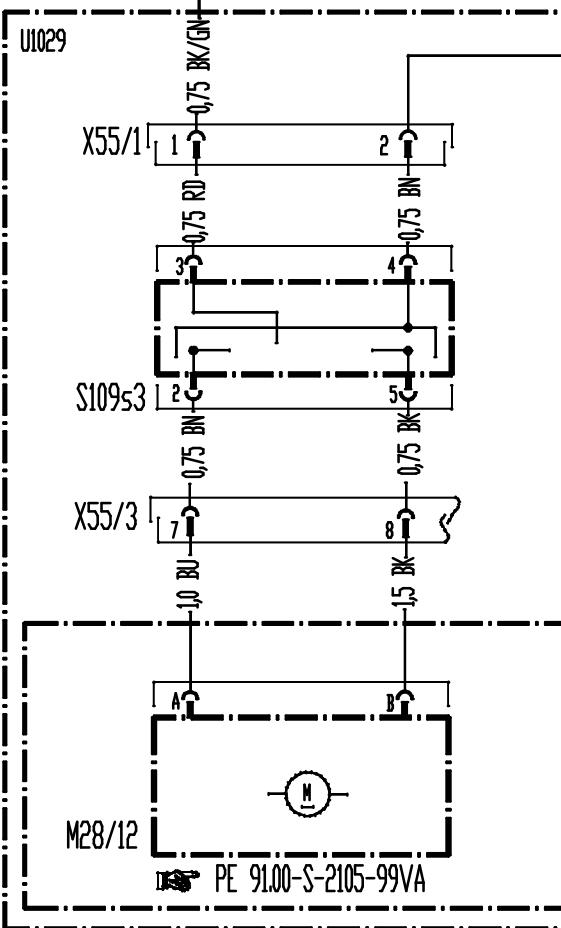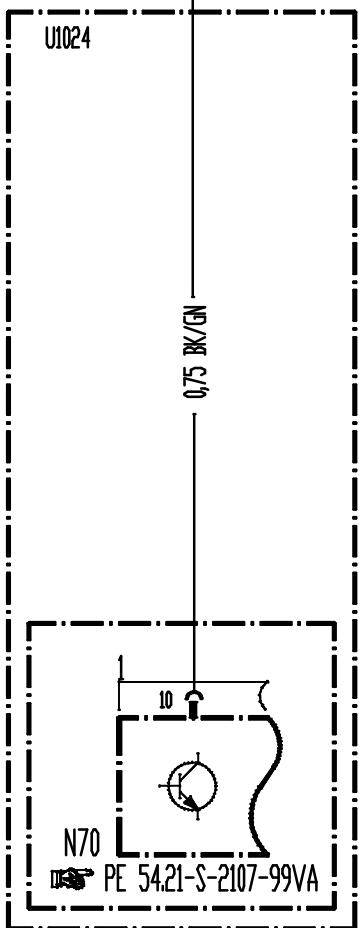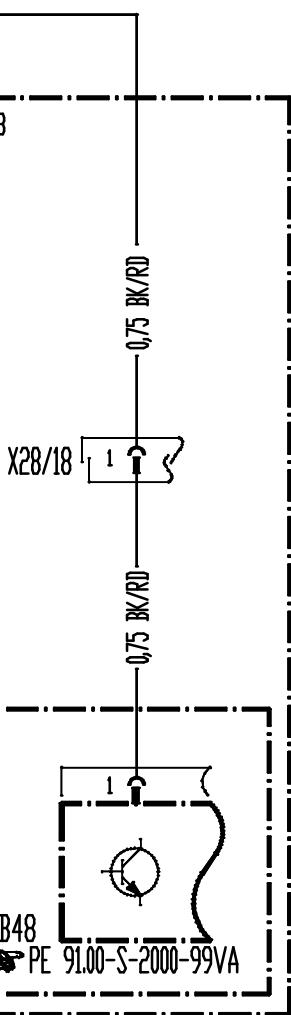



19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

K40/9

K40/9

K40/9

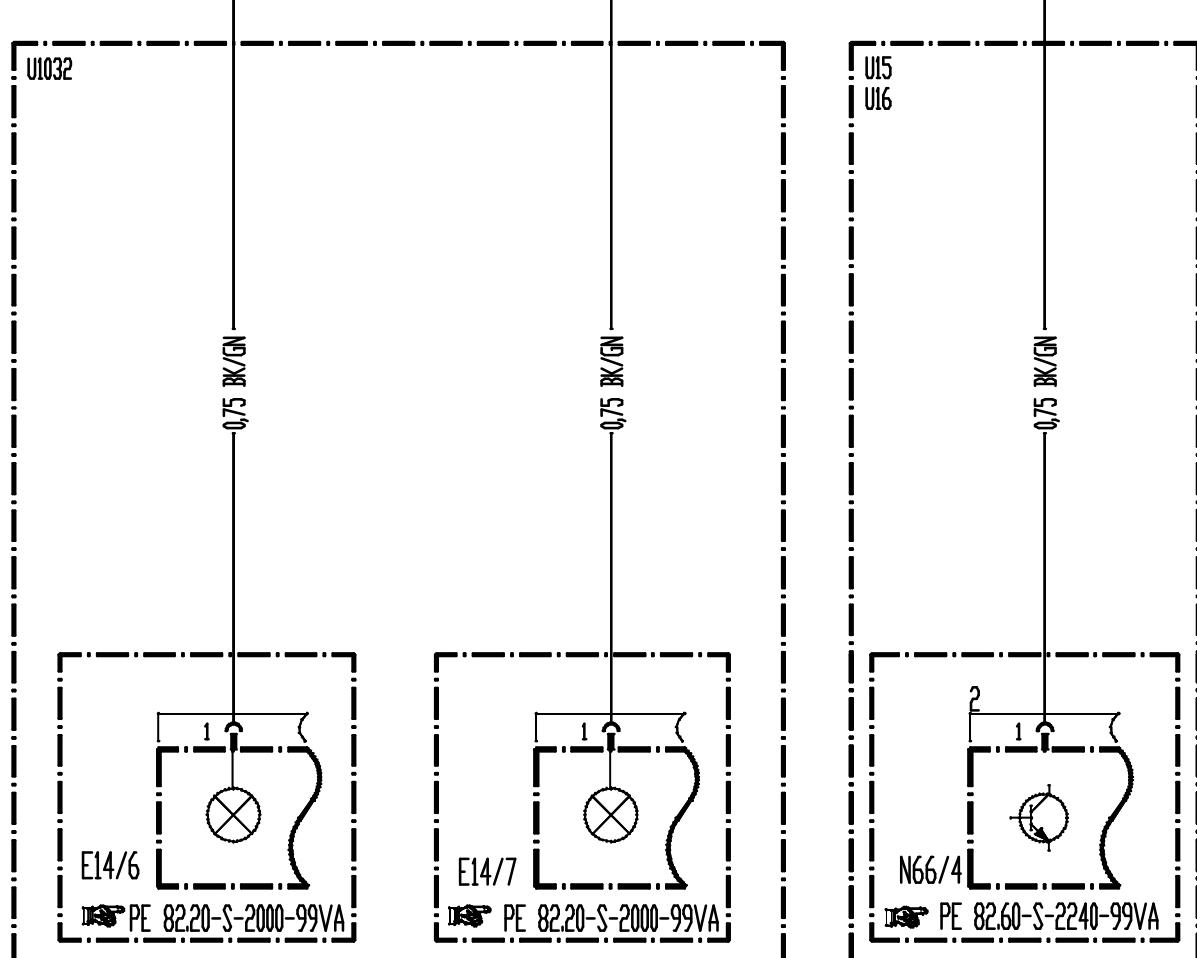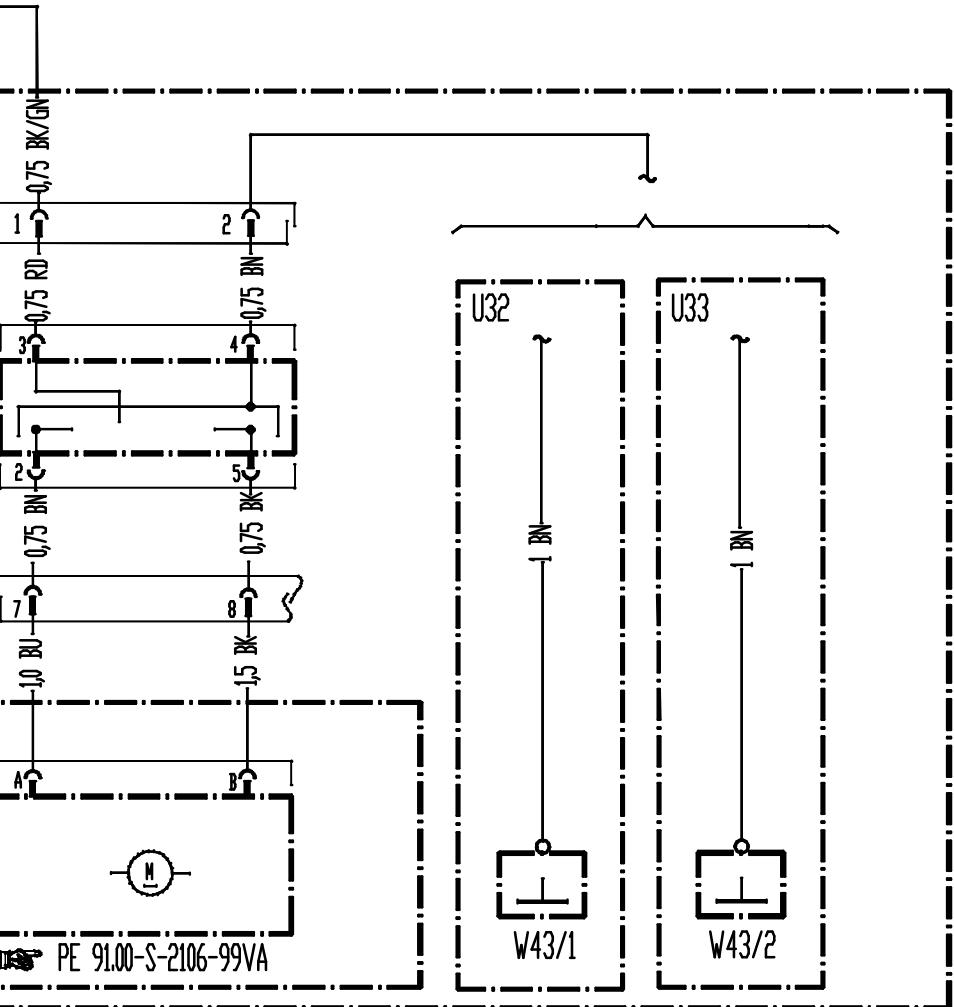


36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

K40/9

K40/9

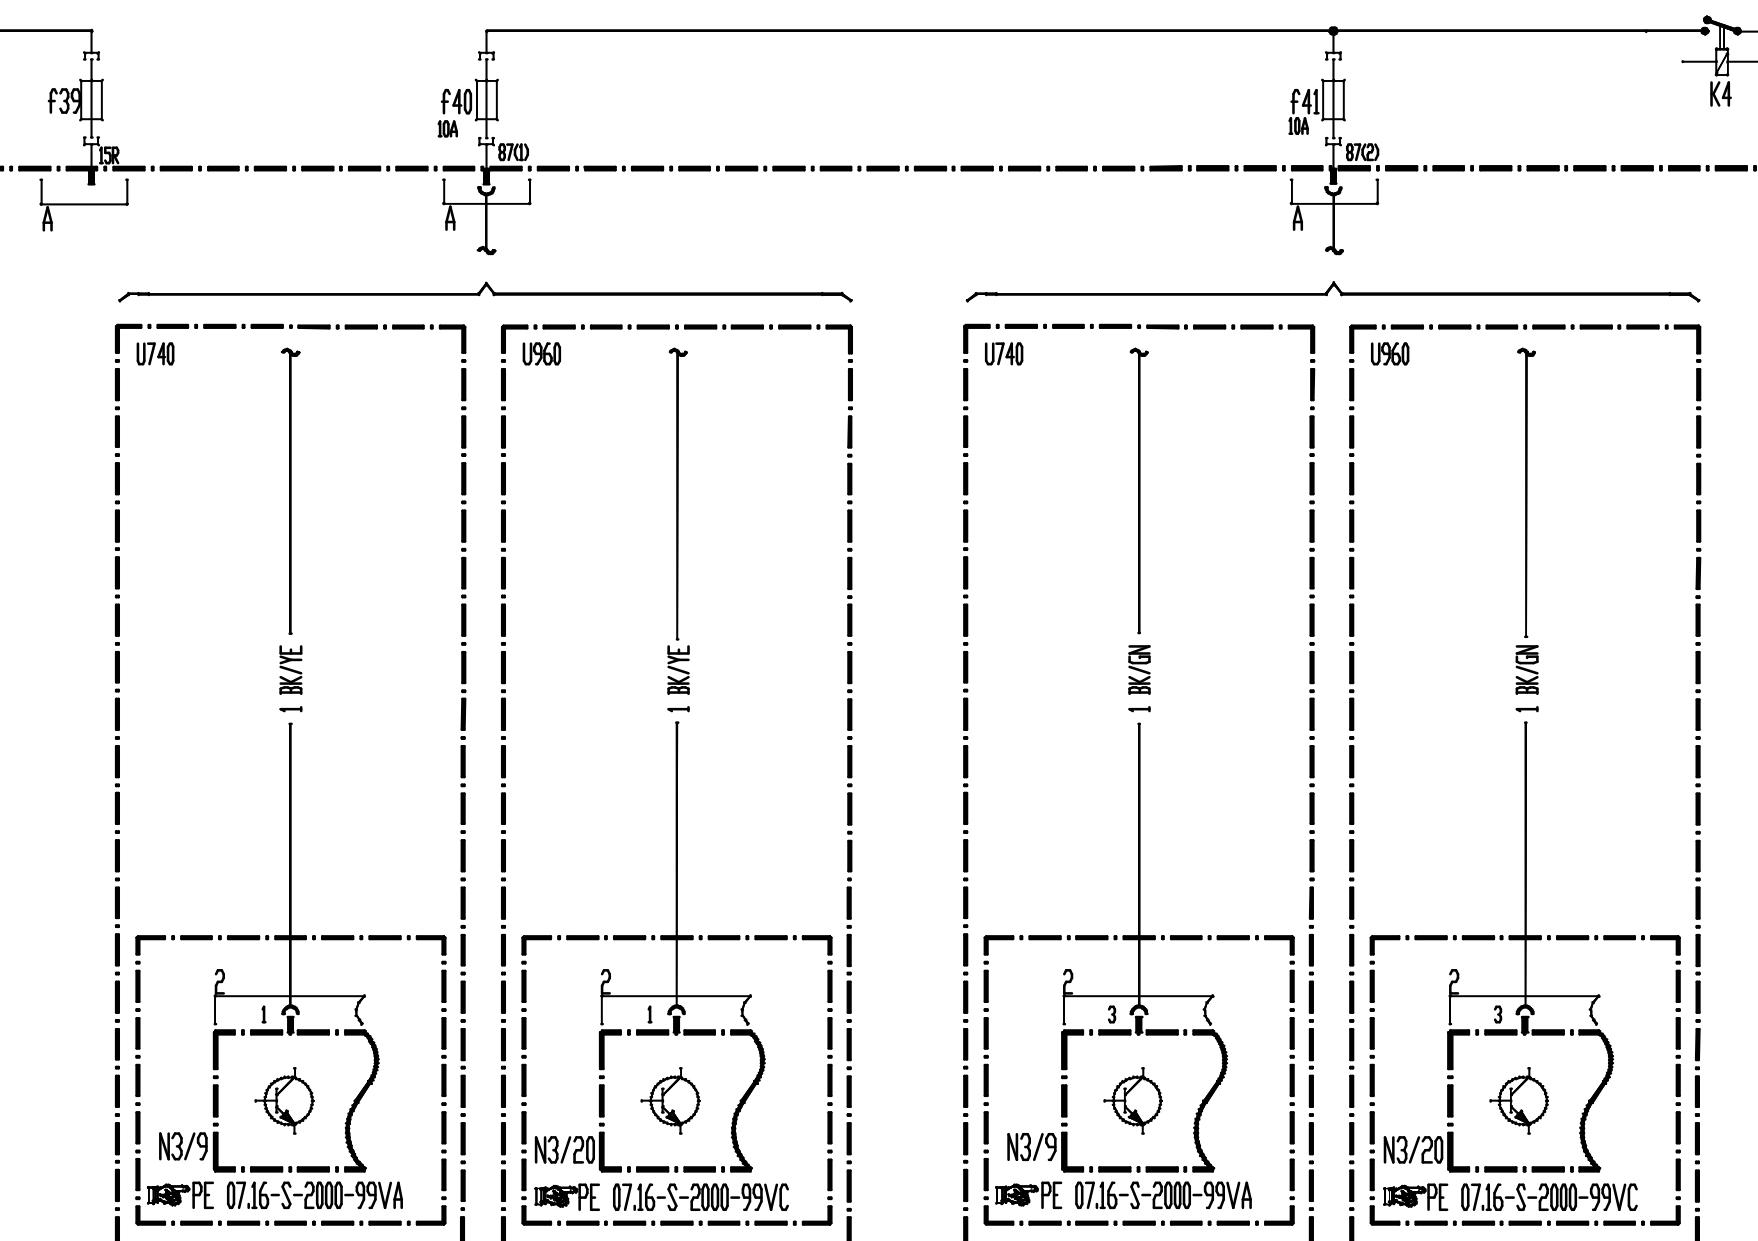

PE 54.15-S-2001-9
PE 54.15-S-2001-9
PE 54.15-S-2001-9

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 4


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2001-99VE | Wiring diagram for fuse and relay box | | PE54.15-S-2001-99VE |
| PE54.15-S-2001-60VE | Legend of wiring diagram for fuse and relay box | | PE54.15-S-2001-60VE |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|--|---------------------------------------|
| F1 | 1-pin prefuse box | 36G 40G |
| K40/9 | Fuse and relay block | 4A 12A 19A 26A 33A 40A |
| K40/9f7 | Rear wiper fuse | 19B |
| K40/9f12 | Rear window heater fuse | 17B |
| M6/10 | Wiper motor, left rear-end door | 24K |
| M6/11 | Wiper motor, right rear-end door | 21K |
| M6/12 | Wiper motor, tailgate | 15K |
| N28/1 | Trailer connection unit [AAG] control unit | 6K 9K |
| R1 | Heated rear window | 12K |
| R1/2 | Heated rear window, right | 18K |
| S9/1 | Stop lamp switch | 1K |
| U32 | Valid for left-hand drive vehicles | 32D |
| U33 | Valid for right-hand drive vehicles | 33D |
| U1045 | Valid up to 02/2004 | 35D |
| U1046 | Valid as of 03/2004 | 39D |
| U924 | Valid for tailgate | 12E |
| U925 | Valid for 180° 2-wing rear-end door | 18E |
| U926 | Valid for 270° 2-wing rear-end door | 18E |

| | | |
|--------|--|------------|
| U939 | Valid for socket for rear-mounted bicycle carrier repeater lamps | 5D 8D |
| U940 | Valid for electrical system for trailer socket | 5D 8D |
| U941 | Valid for fixed trailer hitch | 5E 8E |
| U942 | Valid for removable trailer hitch | 5E 8E |
| U985 | Valid for tailgate/hinged rear door window with wipe/wash system | 12D |
| W43/1 | Ground (left interior compartment firewall) | 34L |
| W43/2 | Ground (right interior compartment firewall) | 32L |
| X8/21 | Tailgate connector | 12G 18G |
| X8/23 | Left rear-end door connector | 24G |
| X20 | Shift lock switch connector | 6E 9G |
| X52 | Trailer hitch connector | 6G |
| Z66/1 | Additional fuse box feed connector sleeve | 36H 40H |
| Z120/1 | Rear-end door wiper motor terminal 15 connector sleeve | 21F |

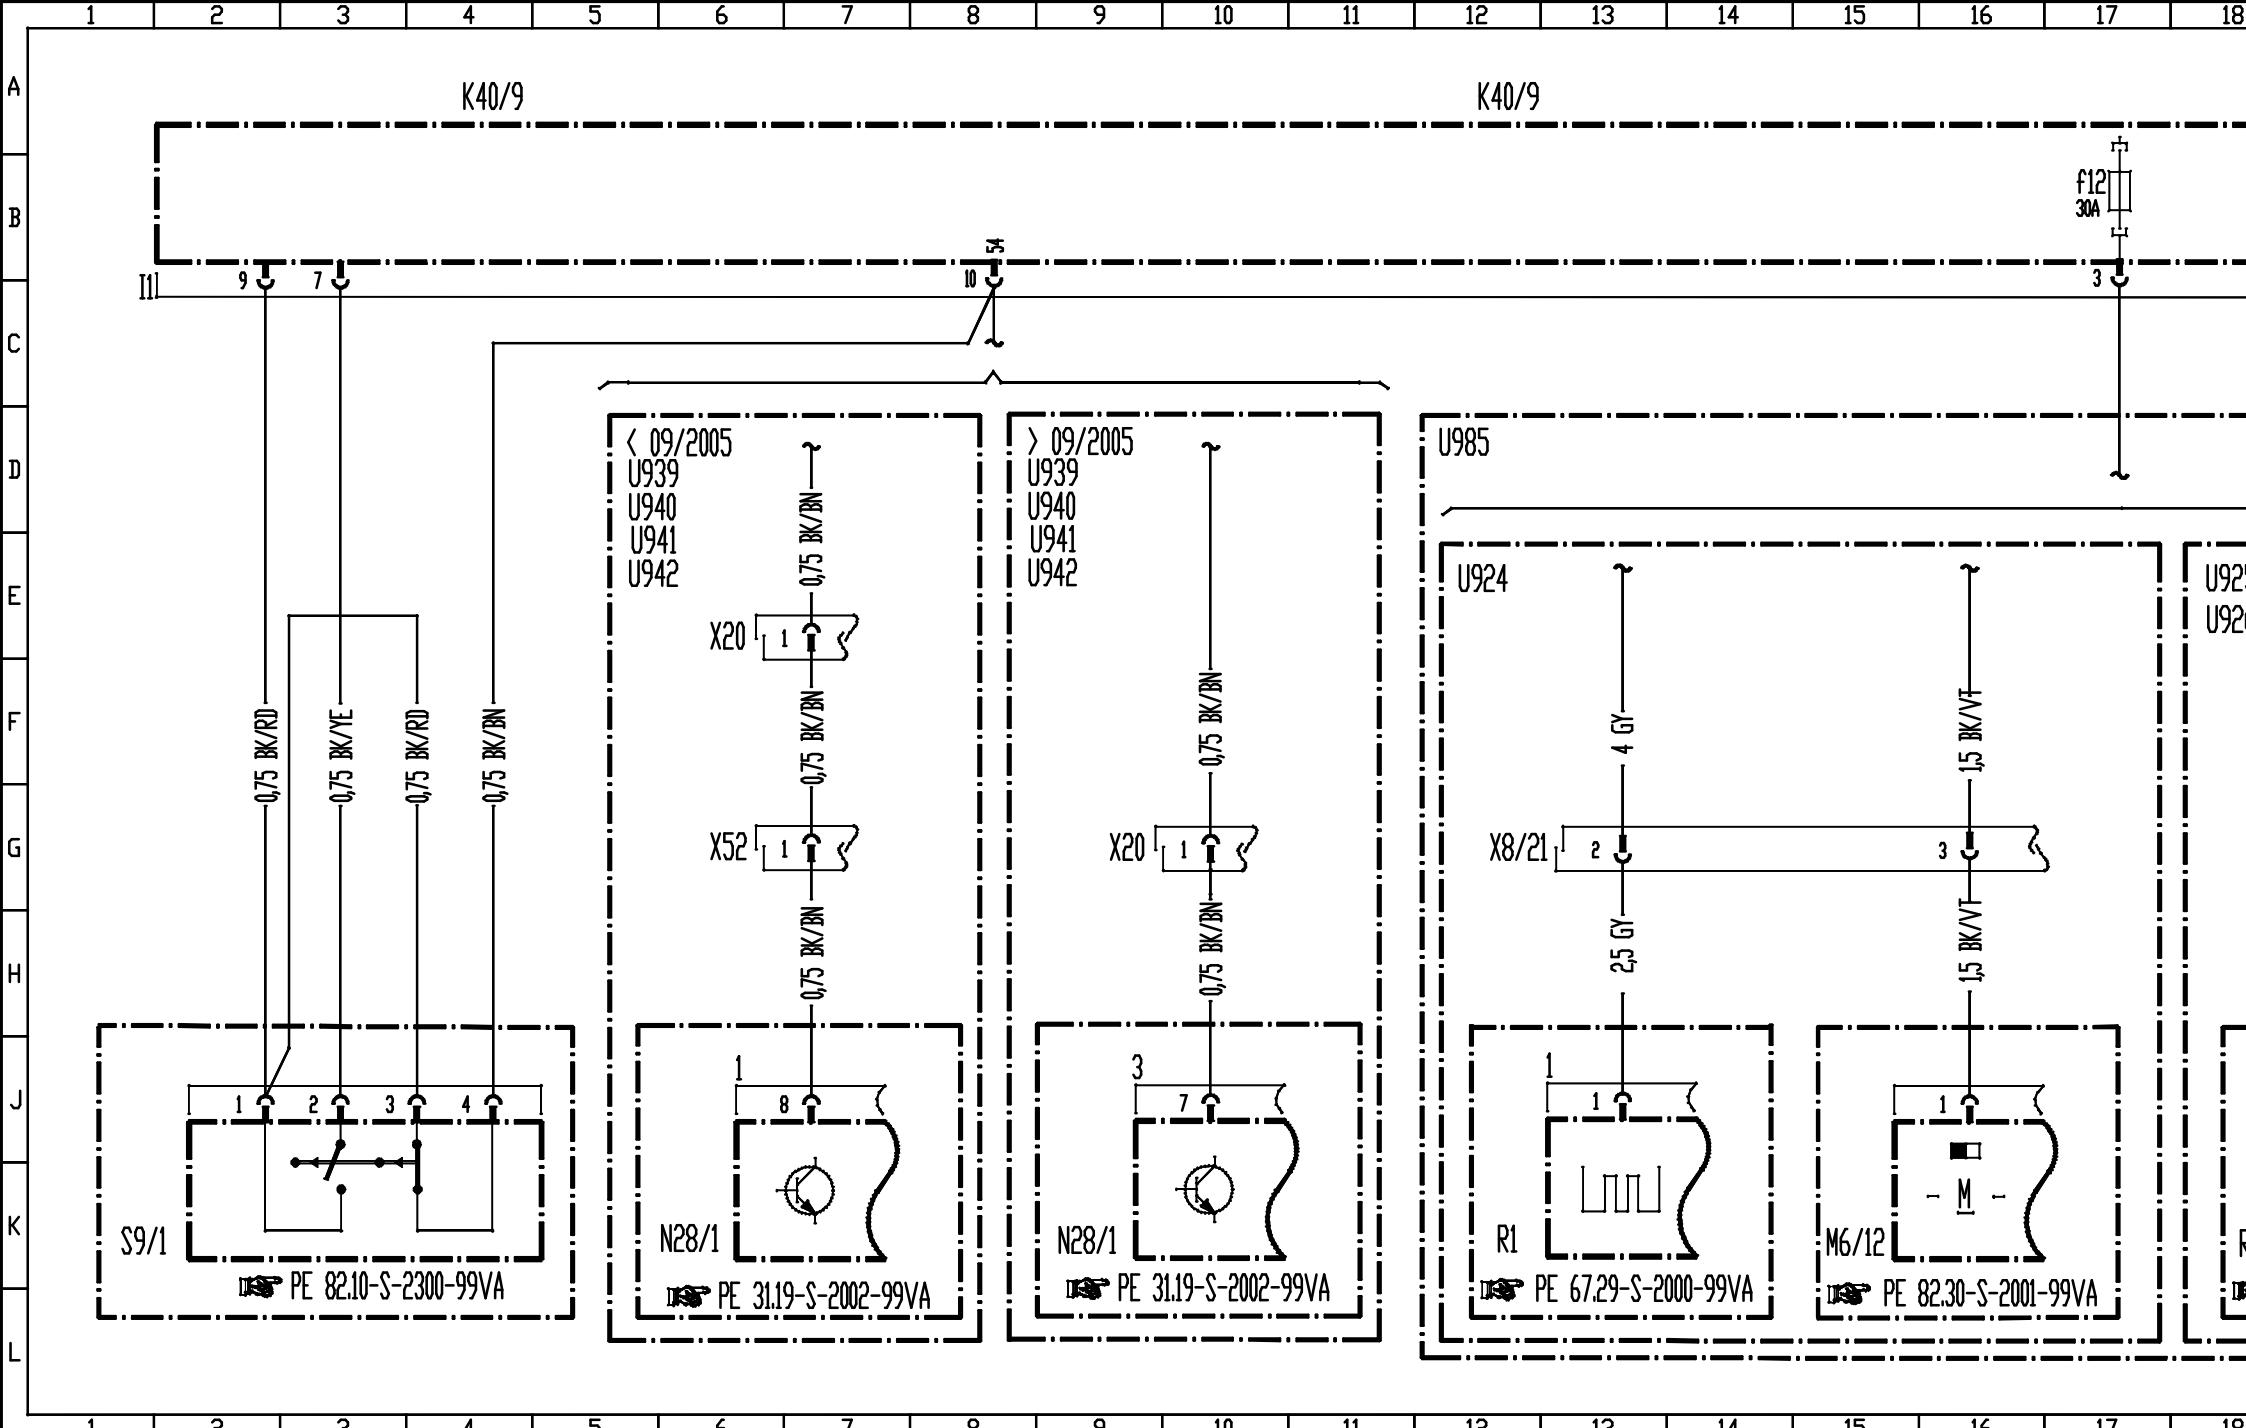

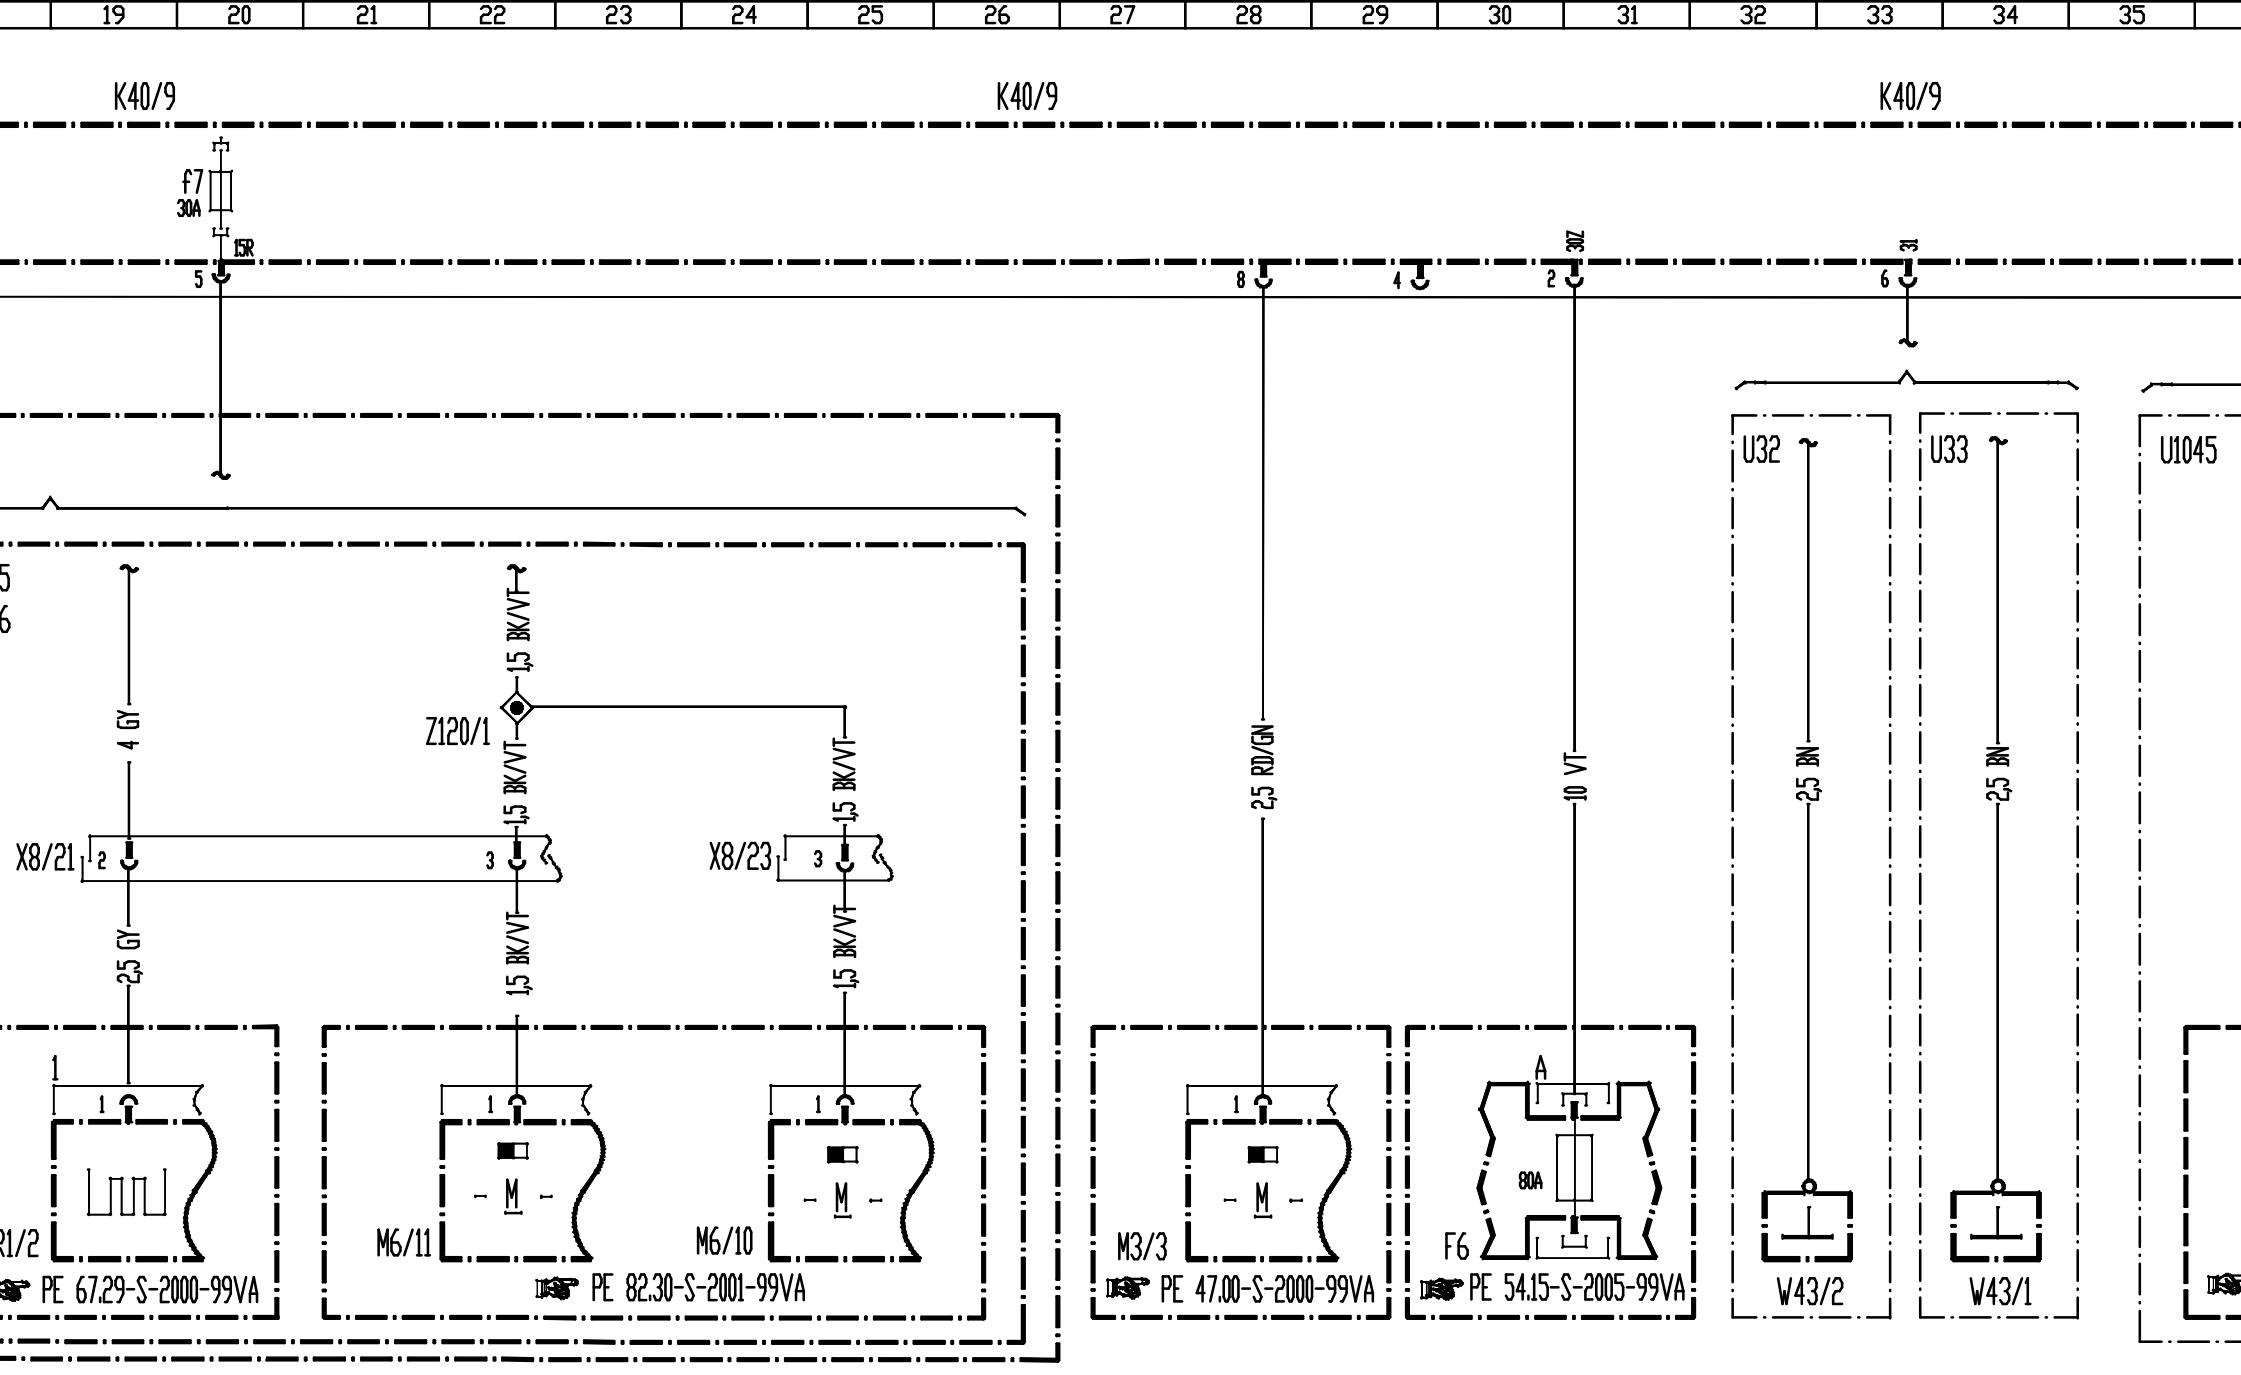

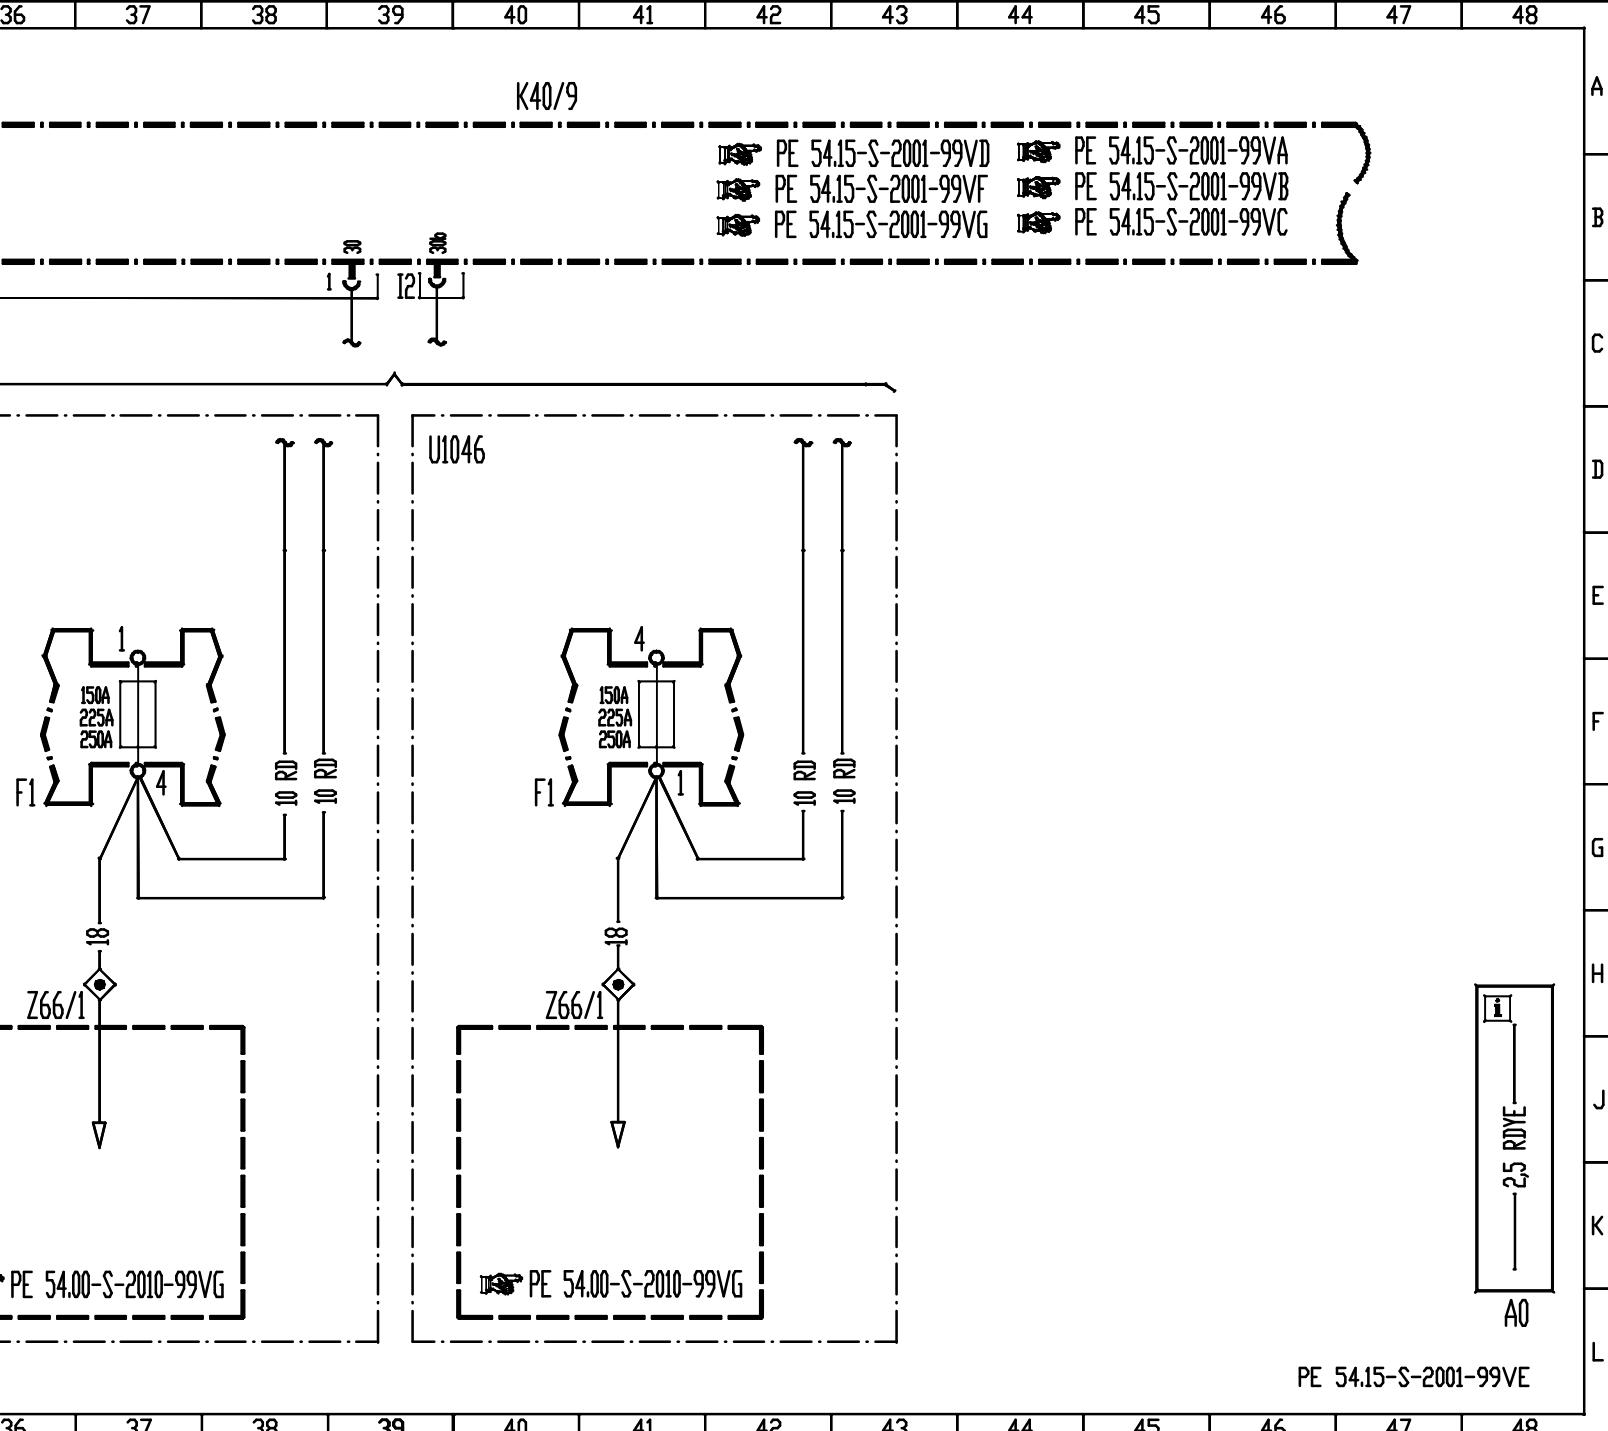


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 5

| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.15-S-2001-99VF | Wiring diagram for fuse and relay box | | PE54.15-S-2001-99VF |
| PE54.15-S-2001-60VF | Legend of wiring diagram for fuse and relay box | | PE54.15-S-2001-60VF |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|--|-------------------------|
| A1 | Instrument cluster | 10L 32L |
| A2 | Radio / Sound 10 / Sound 40 / Audio 10 | 18K 20K |
| E13/1 | Glove compartment light | 28L |
| K40/9 | Fuse and relay block | 4A 12A 20A 31A |
| K40/9f4 | Heater fuse | 15B |
| K40/9f5 | Data link connector fuse, exterior lamp switch, instrument cluster | 10B |
| K40/9f13 | Instrument cluster fuse, EIS [EZS] | 34B |
| K40/9f15 | Headlamp range adjustment fuse | 39B |
| K40/9f18 | Cigar lighter fuse, glove compartment illumination | 25B |
| K40/9f19 | Radio fuse | 21B |
| N15/5 | Electronic selector lever module control unit | 2L |
| N33/5 | Hot air stationary heater control unit | 41L |
| N73 | EIS [EZS] control unit | 36L |
| R3 | Front cigar lighter (with illumination) | 26L |
| S1 | Exterior lamp switch | 12L 38L |
| S98 | Air conditioning operating module | 15L 30L |
| U10 | Valid for Sound 40 Pro radio | 20D |
| U55 | Not valid for air conditioning | 15D |
| U1002 | Valid for PTC element | 30D |


| | | |
|-------|--|----------|
| U1025 | Valid for warm air auxiliary heater with timer and temperature control | 6D |
| U1044 | Valid for FUN equipment line with warm air auxiliary heater with timer and temperature control | 41D |
| U507 | Valid for Electronic Stability Program (ESP) | 5D |
| U909 | Valid for radio preinstallation | 23D |
| U910 | Valid for Sound 10 radio with cassette drive | 17D |
| U961 | Valid for automatic transmission | 2D 5D |
| W12 | Ground (cockpit and center console) | 29L |
| X11 | Data link connector | 5L |
| Z3/11 | Terminal 15 connector sleeve | 10G |

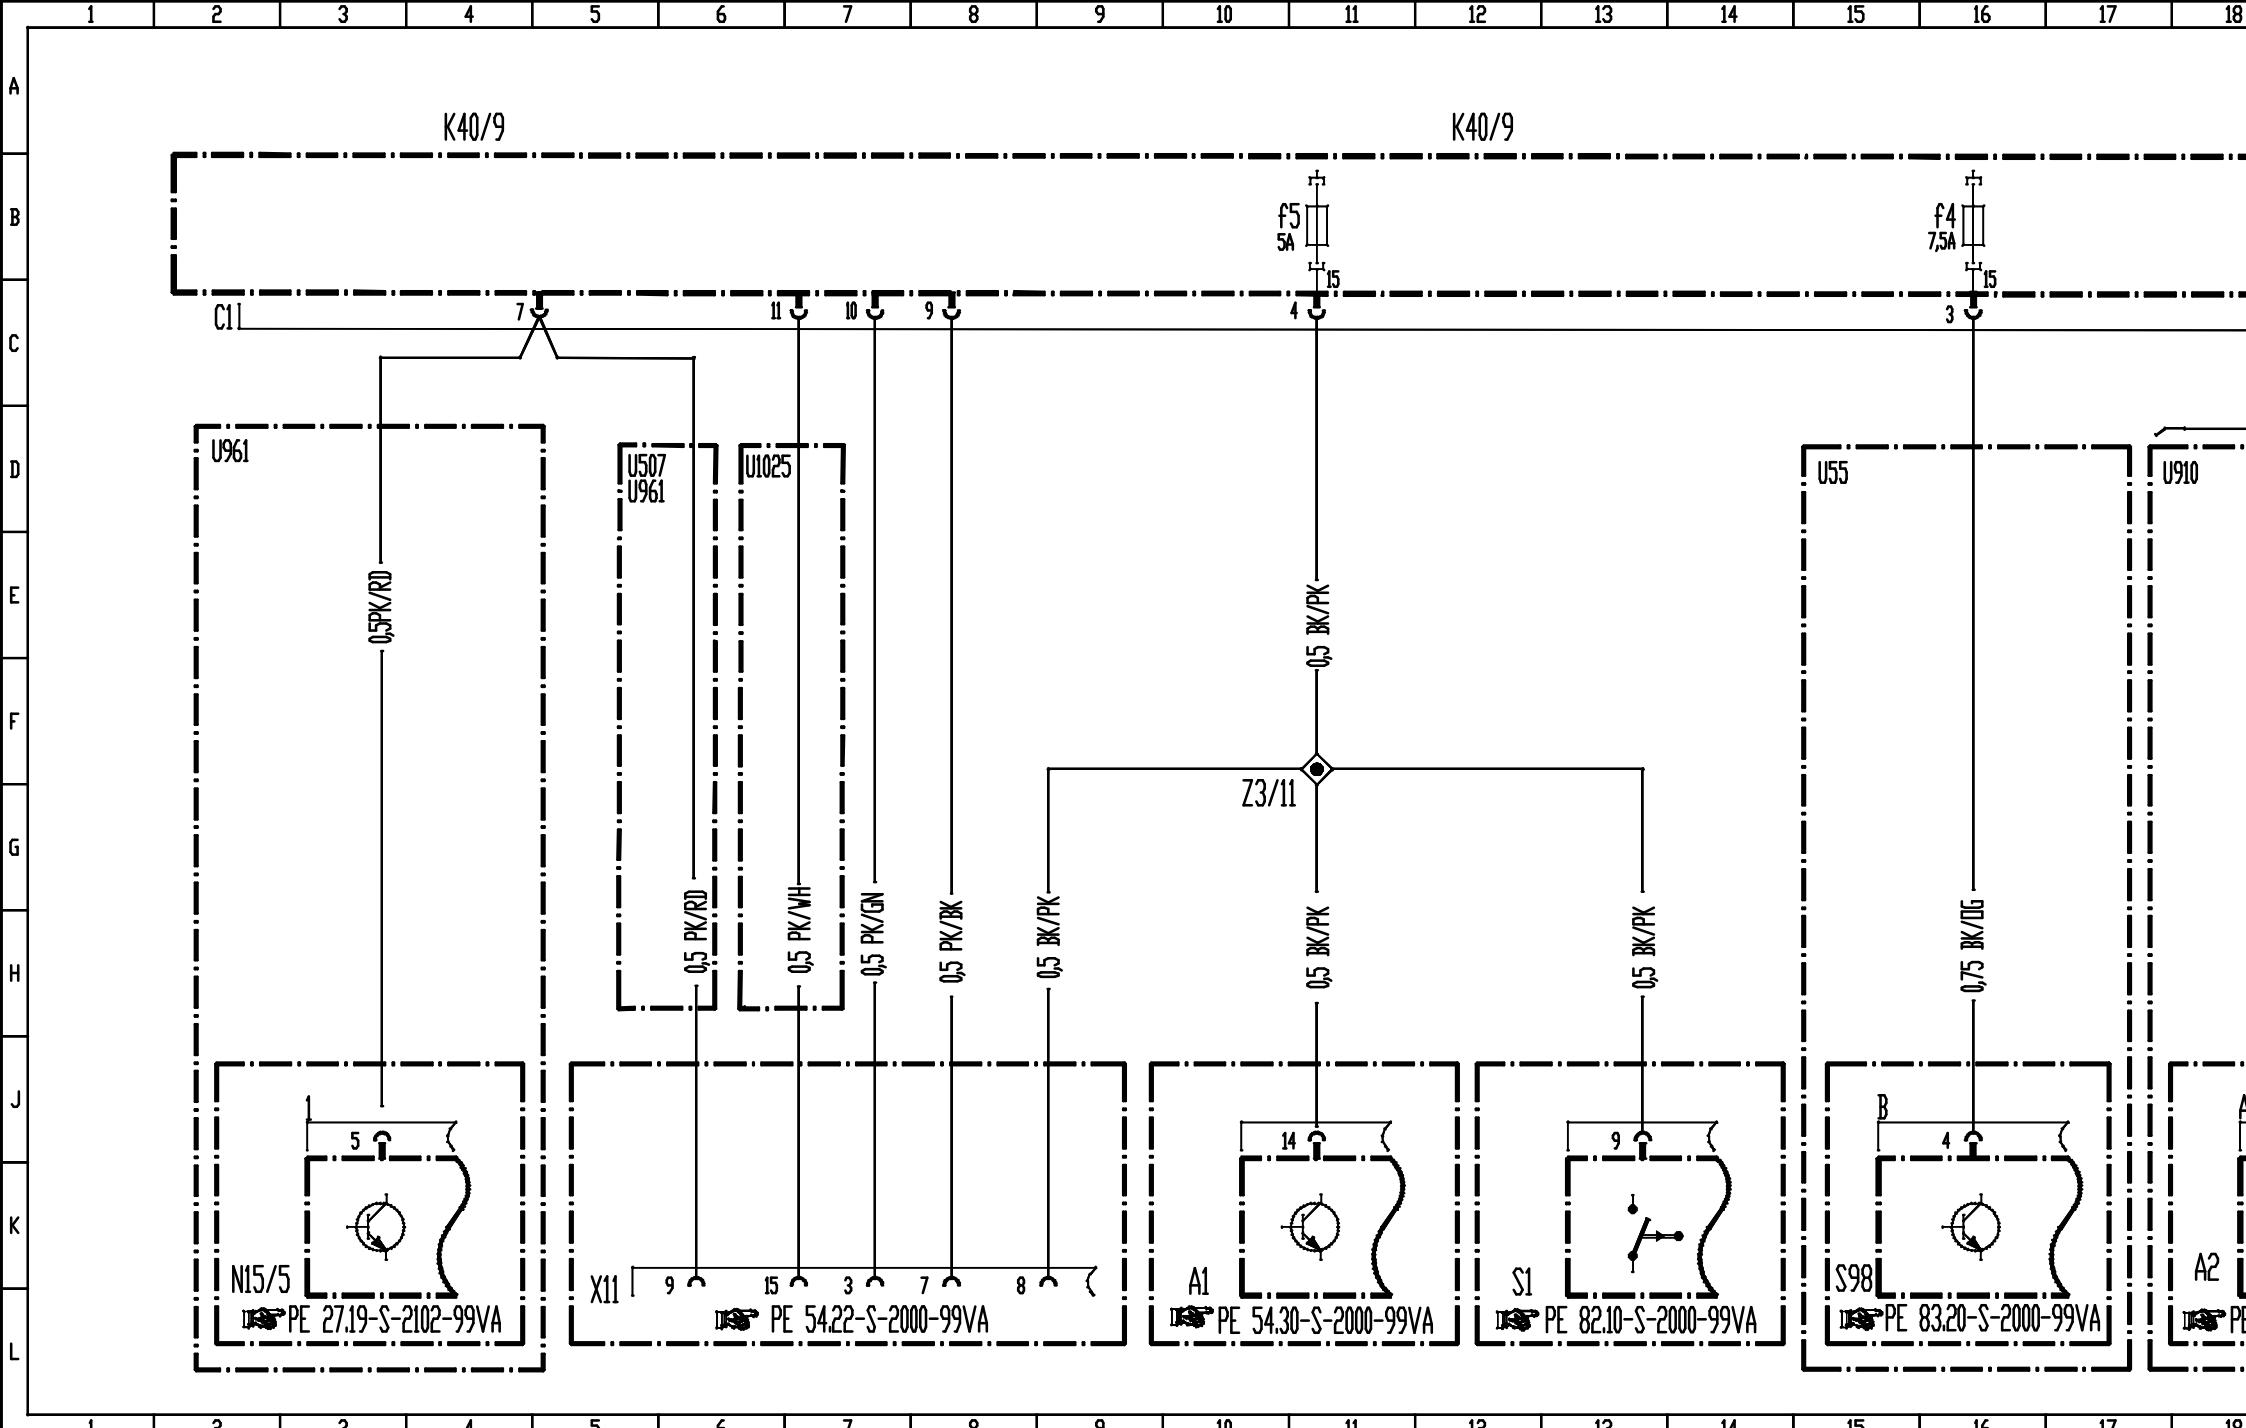


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

K40/9

K40/9

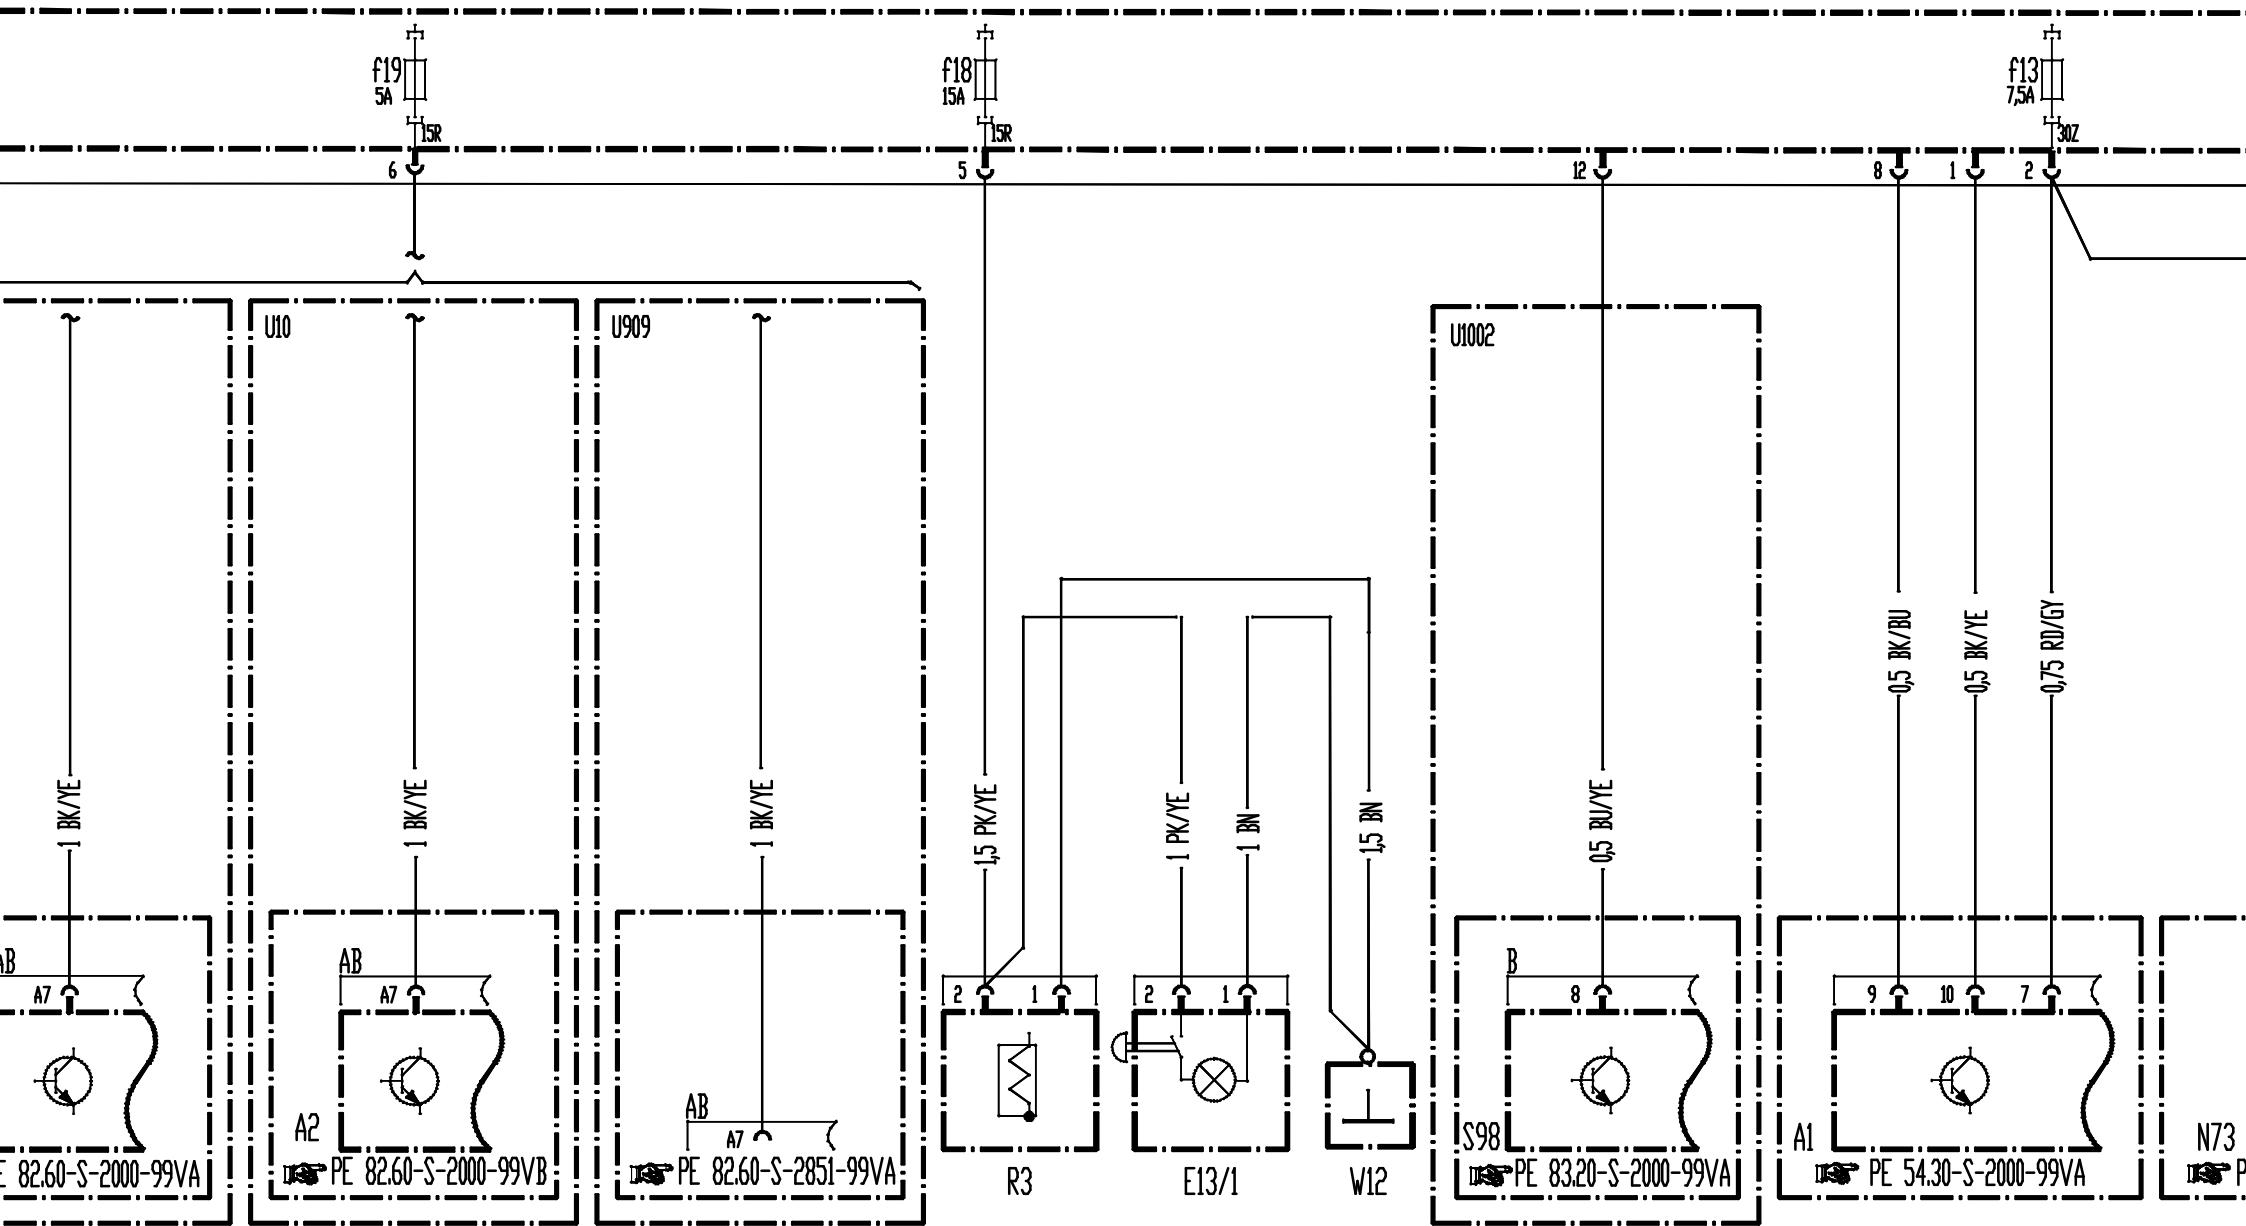

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

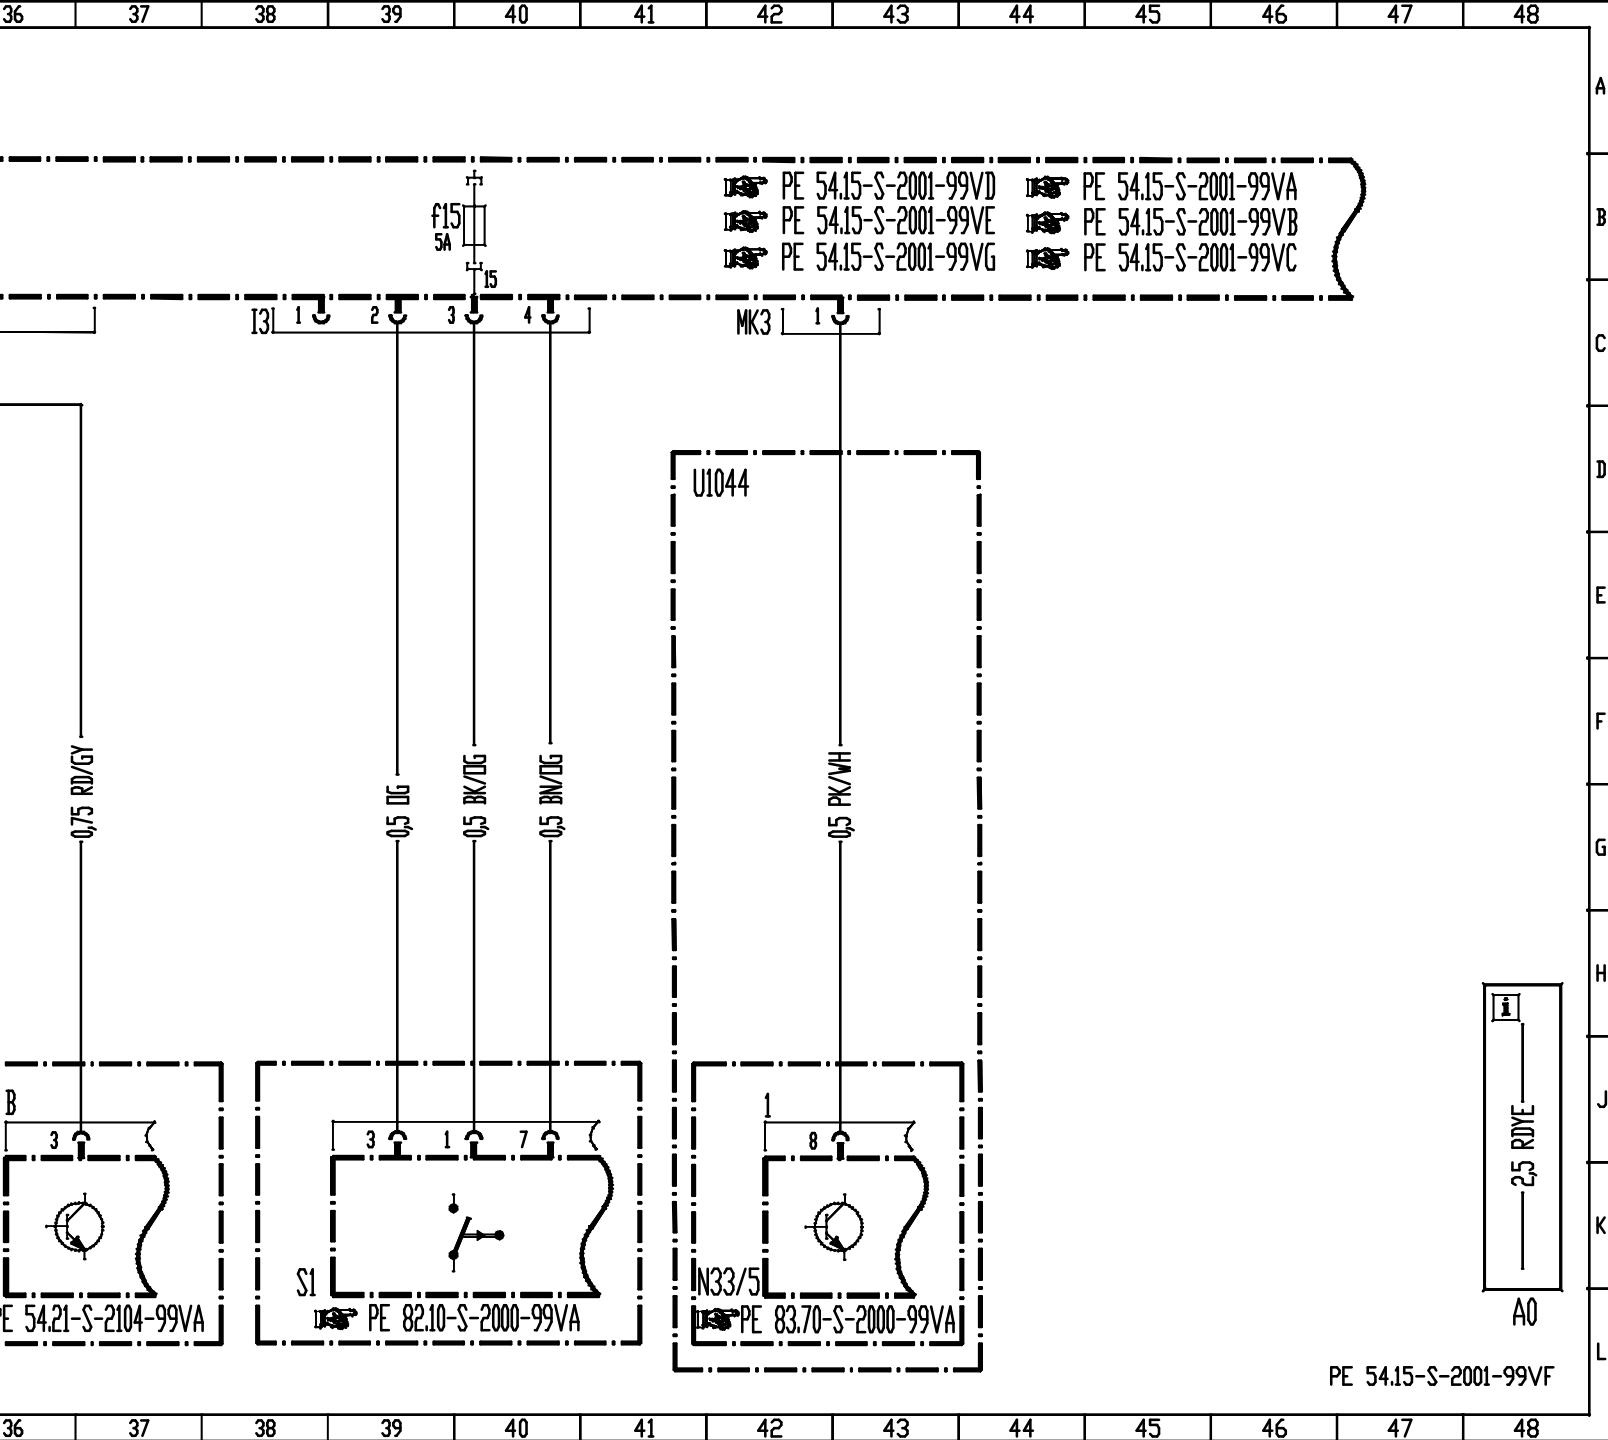

Signal acquisition and actuation module (SAM)

Chapter 8

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 1

| | | | |
|---------------------|---|------------------------|---------------------|
| PE54.21-S-2127-99VA | Wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 1 | PE54.21-S-2127-99VA |
| PE54.21-S-2127-60VA | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 1 | PE54.21-S-2127-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|---|--|
| PE54.21-S-2127-60VA | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 1 | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|-------|---|--|
| E3 | Taillamp, left | 26K 33K 52K 59K 65K 72K |
| E4 | Taillamp, right | 39K 46K 55K 62K 68K 75K |
| K40/9 | Fuse and relay block | 77A |
| M3/3 | Fuel pump with fuel level sensor | 22K |
| M21/6 | Left electrically adjustable and heated outside mirror | 29K |
| M21/7 | Right electrically adjustable and heated outside mirror | 42K |
| N9/1 | Additional turn signal module control unit | 35K 48K |
| N10 | SAM control unit | 12A 20A 28A 35A 43A 51A 59A 67A |
| N73 | EIS [EZS] control unit | 9K |
| S1 | Exterior lamp switch | 3K |
| S16/2 | Backup lamp switch | 12L |

| | | |
|-------|--|-------------------|
| U32 | Valid for left-hand drive vehicles | 58E 72E |
| U33 | Valid for right-hand drive vehicles | 61E 75E |
| U1081 | Valid for 6-speed manual transmission, NSG 250 | 12D |
| U1082 | Valid for 6-speed manual transmission, NSG 370 | 12D |
| U904 | Valid for qualification as passenger car | 28D 42D |
| U927 | Valid without backup warning system | 49G |
| U928 | Valid for headlamp cleaning system | 3C |
| U964 | Valid without electrically adjustable and heated outside rearview mirror | 29F 42F |
| U976 | Valid for additional turn signal lamps on rear of roof | 32D 46D 65D |
| U977 | Valid for additional turn signal lamps on rear of roof | 25D 39D 52D |
| W12 | Ground (cockpit and center console) | 14L |
| X52/5 | Left taillamp connector | 33G 65G 72G |
| X52/6 | Right taillamp connector | 46G 68G 75G |
| X57/3 | Left outside mirror turn signal lamp connector | 29G |
| X57/4 | Right outside mirror turn signal lamp connector | 42G |
| Z30/1 | Left turn signal indicator connector sleeve | 29E |
| Z30/2 | Right turn signal indicator connector sleeve | 43E |
| Z81 | Tml. 58d connector sleeve, interior | 19G |
| Z81/5 | Cockpit terminal 58d connector sleeve | 16G |



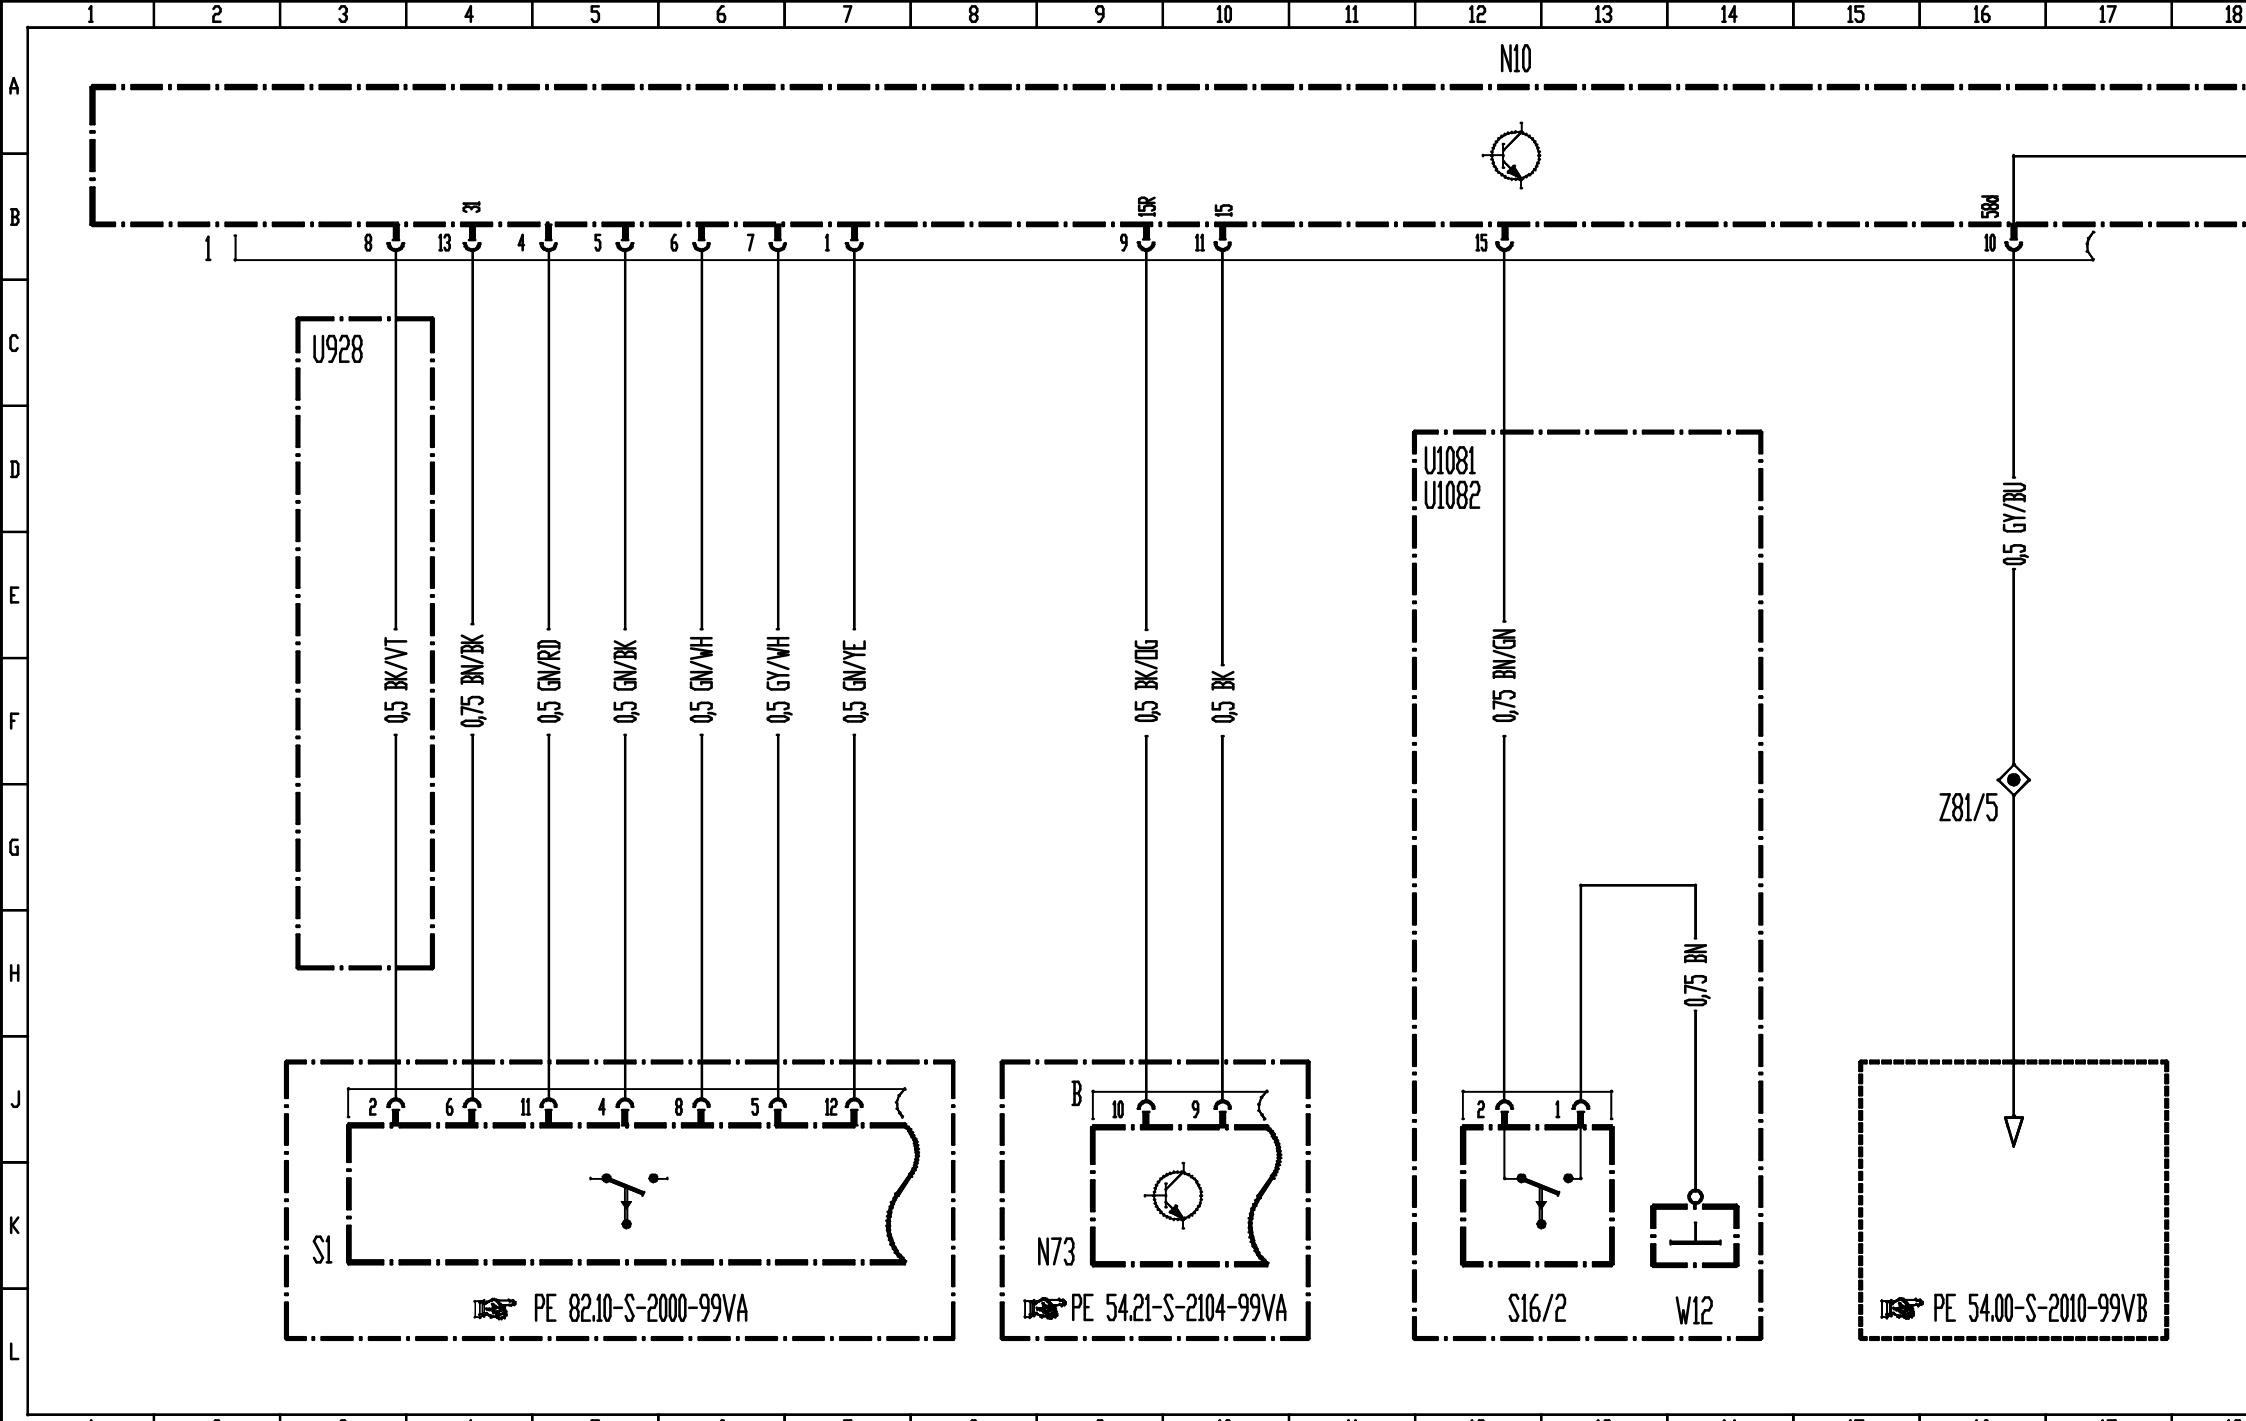


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

N10

N10

N10

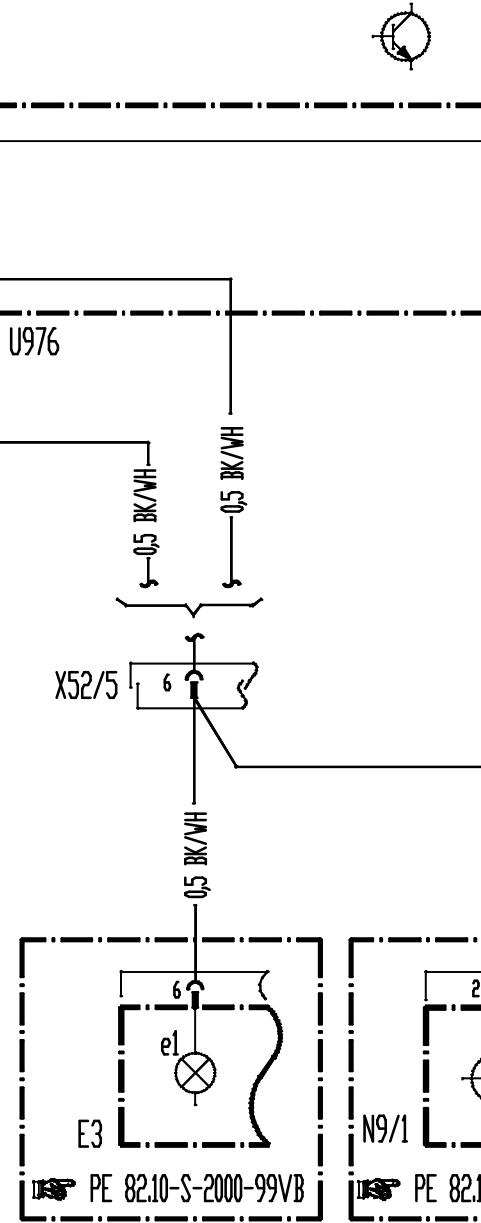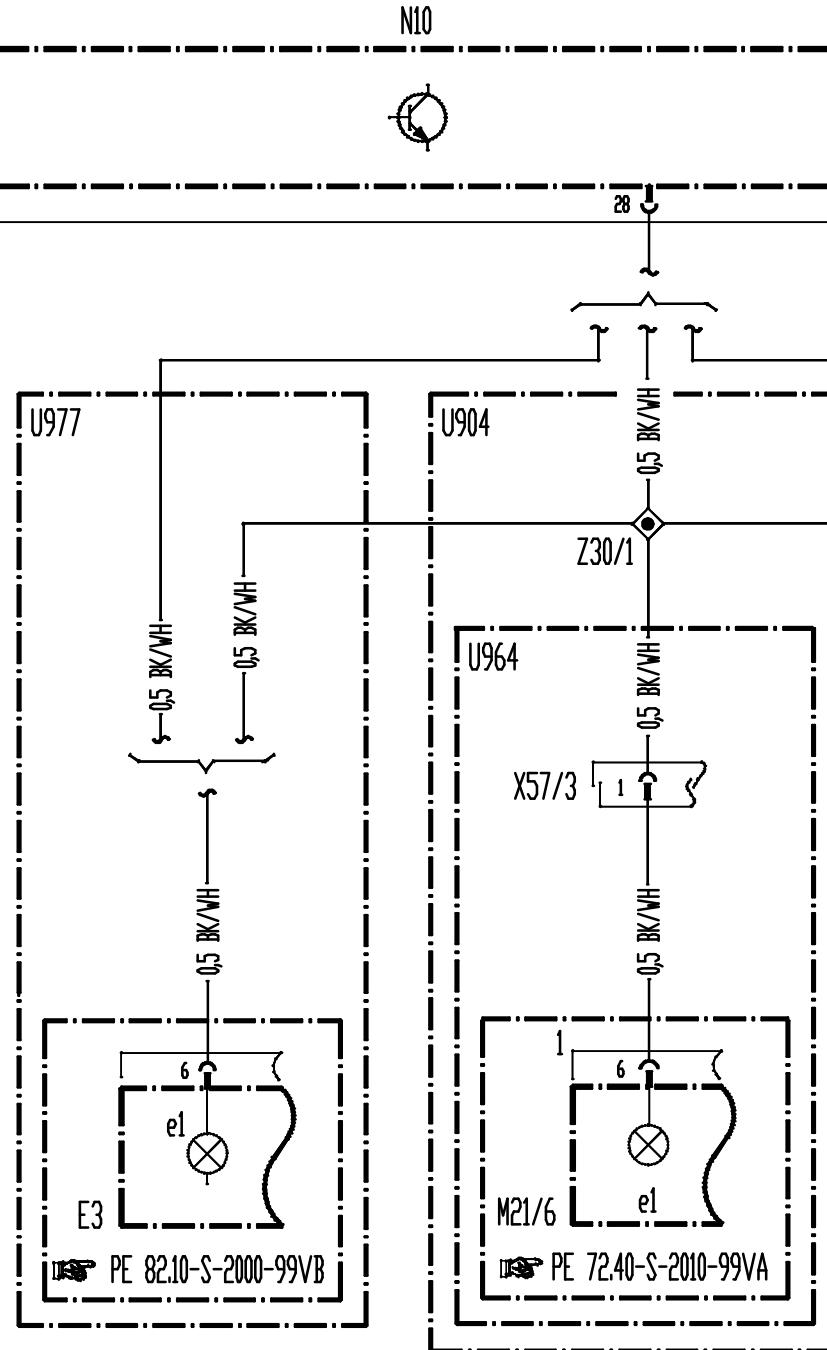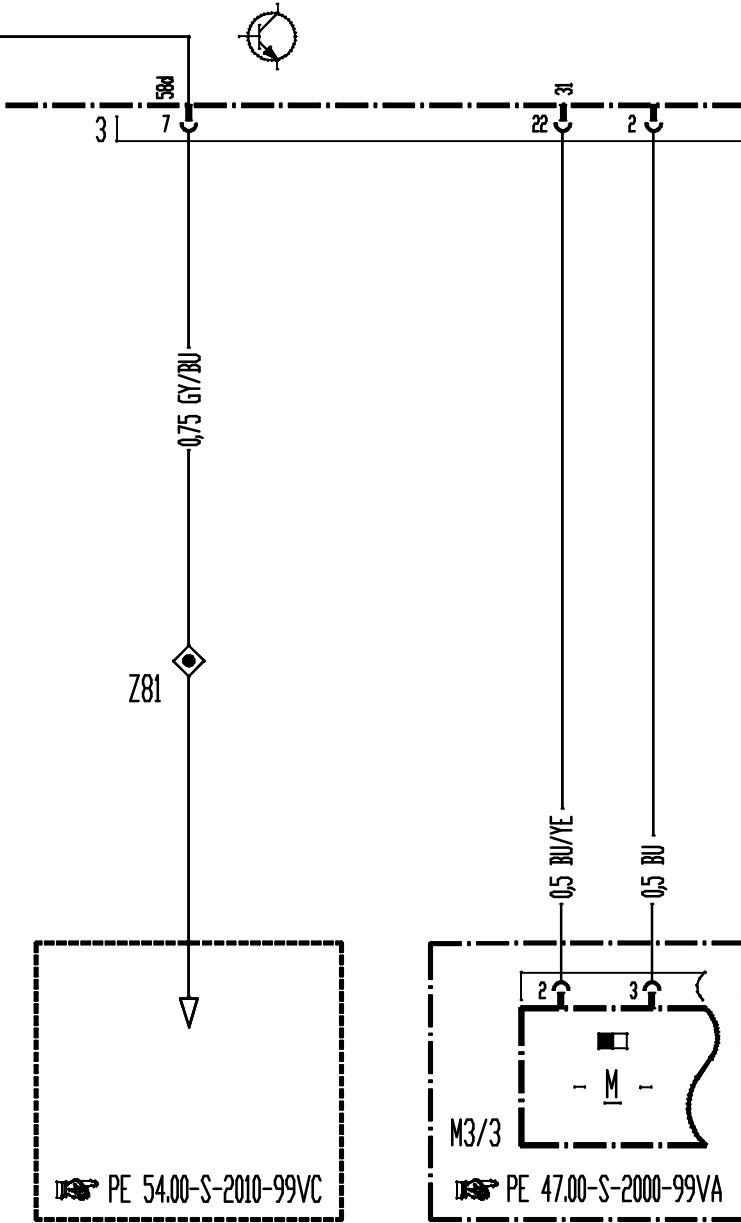


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N10

N10

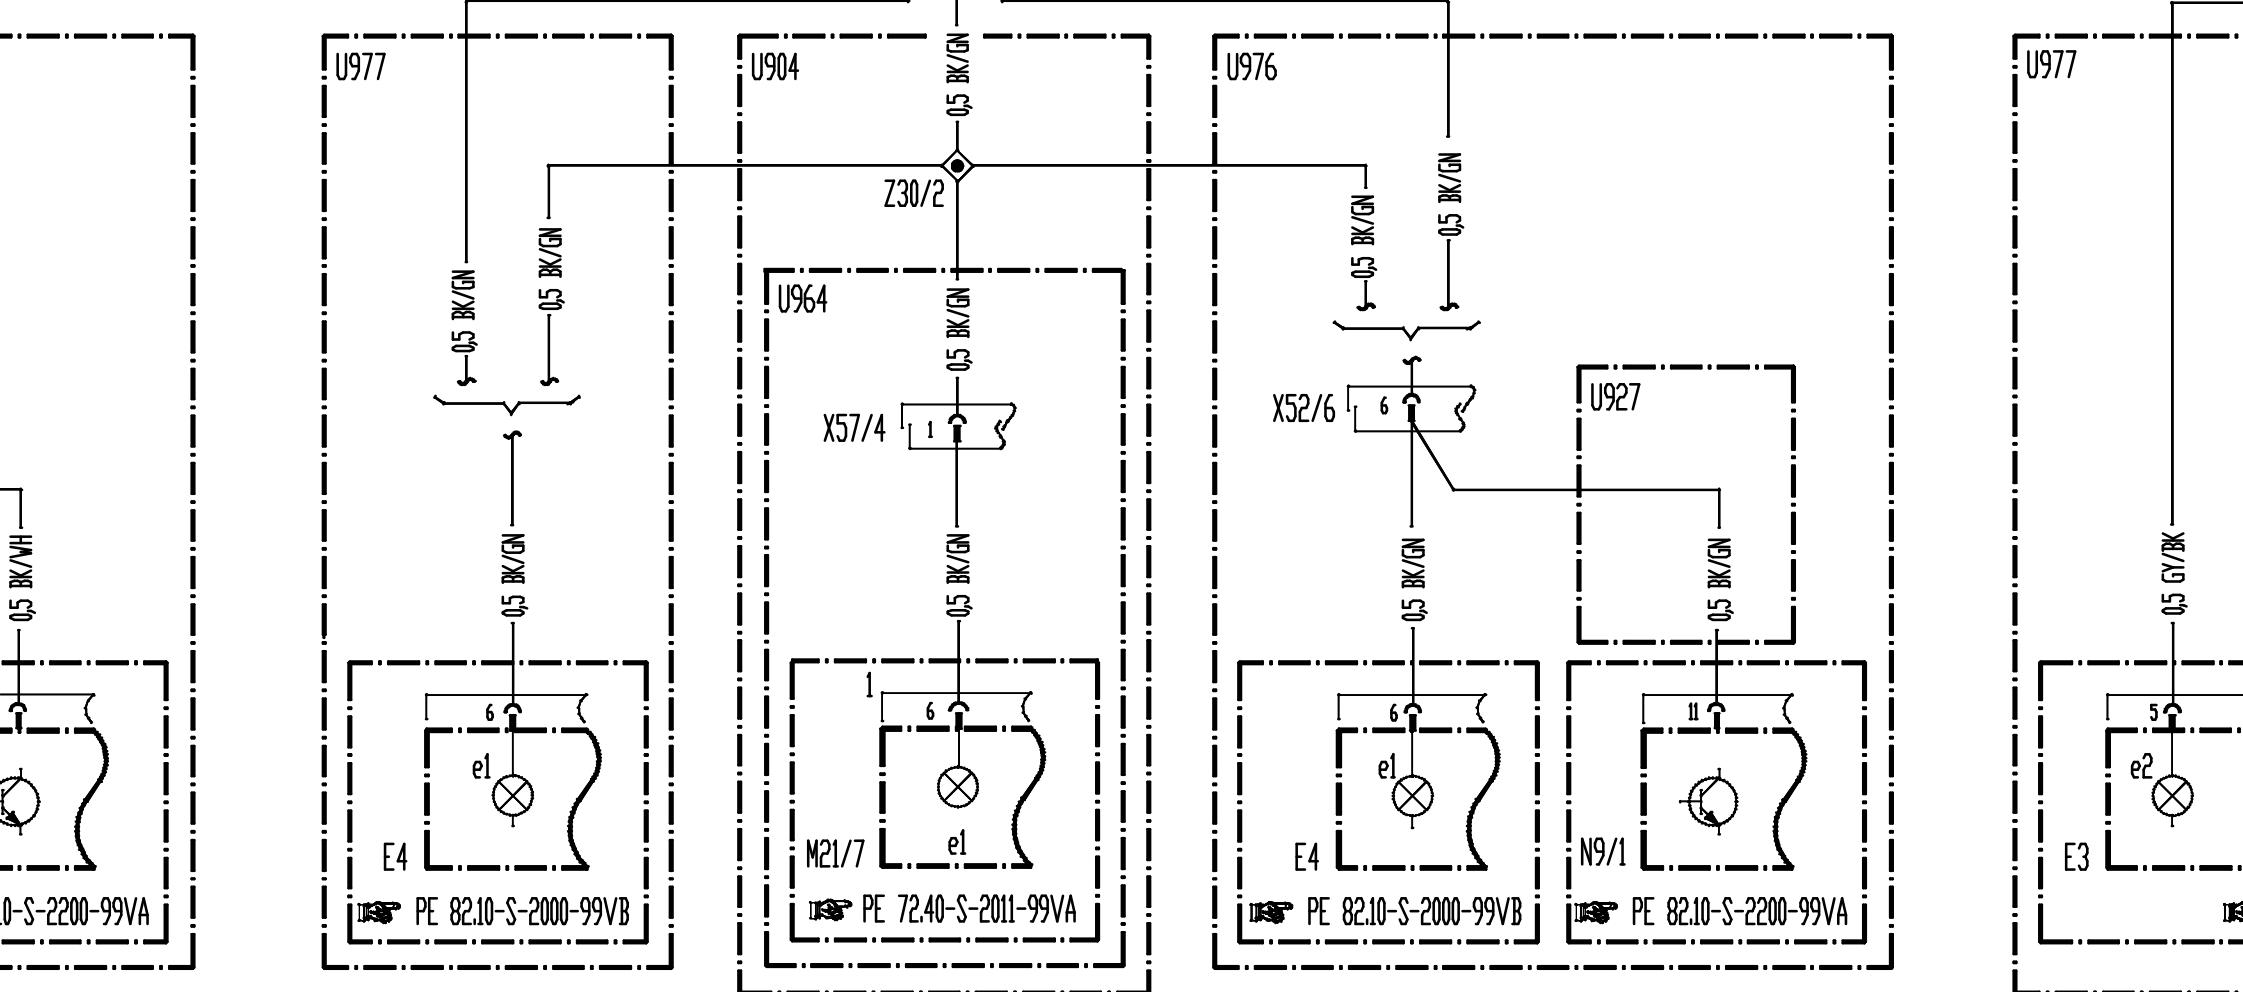


54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71


N10

N10



8 12 9 13 14

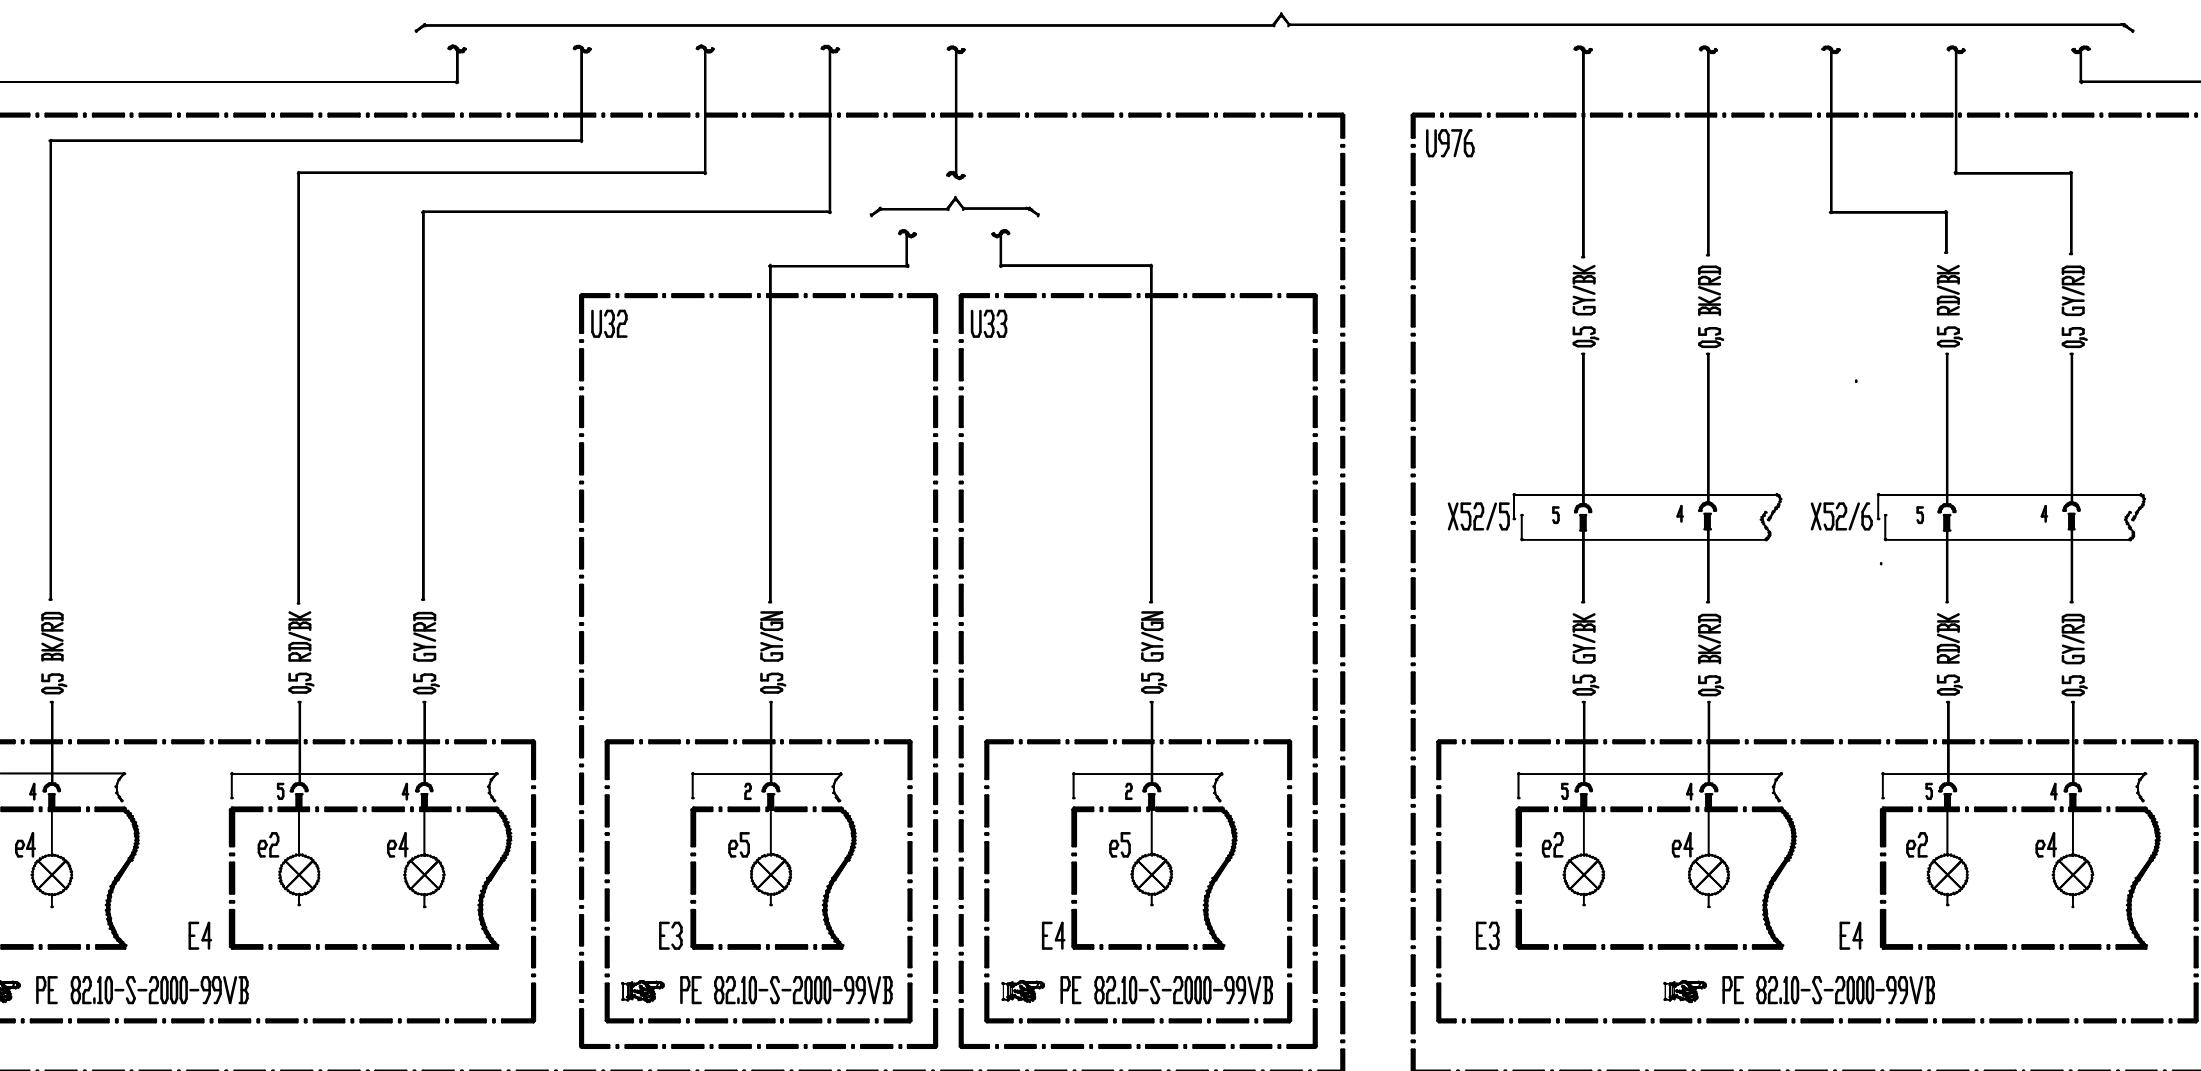

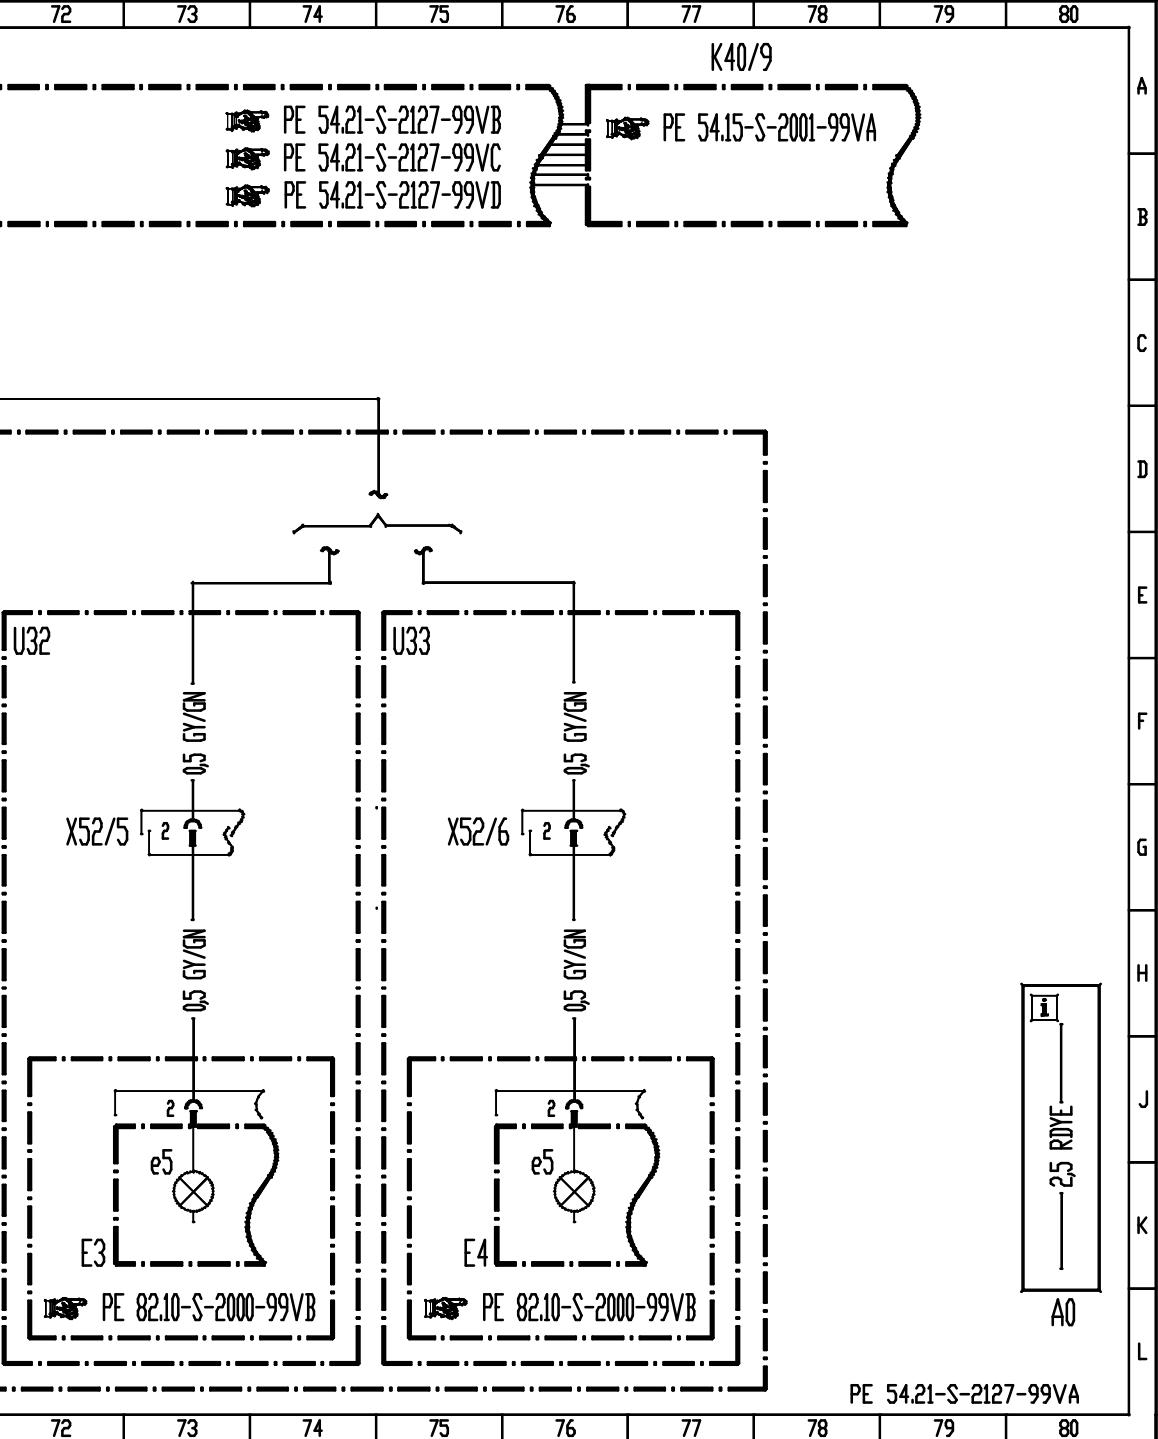

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 2


| | | | |
|---------------------|---|------------------------|---------------------|
| PE54.21-S-2127-99VB | Wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 2 | PE54.21-S-2127-99VB |
| PE54.21-S-2127-60VB | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 2 | PE54.21-S-2127-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|---|---|--|
| PE54.21-S-2127-60VB | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 2 | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|--------|--|-------------|
| A2 | Radio / Sound 10 / Sound 40 / Audio 10 | 64K |
| E3 | Taillamp, left | 55K 60K |
| E4 | Taillamp, right | 53K 58K |
| E19/1 | License plate lamp, left | 15K |
| E19/2 | License plate lamp, right | 17K |
| E19/3 | Left rear-end door license plate lamp | 10K |
| E19/4 | Right rear-end door license plate lamp | 12K |
| E21/1 | Hinged rear door center high-mounted stop lamp | 3K |
| E21/2 | Tailgate center high-mounted stop lamp | 6K |
| H3/4 | Backup warning horn | 71L |
| K57 | Battery cutoff relay | 39K |
| M6/10 | Wiper motor, left rear-end door | 28K |
| M6/11 | Wiper motor, right rear-end door | 31K |
| M6/12 | Wiper motor, tailgate | 25K |
| M14/7 | Actuator, CL [ZV] tailgate | 49K |
| M14/9 | Actuator, right CL [ZV] sliding door | 74K |
| M14/12 | Actuator, right CL [ZV] rear-end door | 43K |

| | | |
|-------|---|---|
| N10 | SAM control unit | 3A 11A 18A 26A 34A 42A 50A 56A |
| N66/4 | Rear conversation unit control unit | 67K |
| S10/3 | Brake pad contact sensor, left rear | 34K |
| S10/4 | Brake pad contact sensor, right rear | 36K |
| S12 | Parking brake indicator switch | 21L |
| S49/7 | Rotary tumbler switch, left rear-end door | 45K |
| U10 | Valid for Sound 40 Pro radio | 63D 63F |
| U15 | Valid for screen in rear and DVD player | 63D 66F |
| U16 | Valid for screen in rear, DVD player and TV tuner | 63D 66F |
| U25 | Valid for backup warning system | 63E 69F |
| U32 | Valid for left-hand drive vehicles | 22G |
| U33 | Valid for right-hand drive vehicles | 23G |
| U1031 | Valid for additional heavy-duty battery | 39D |
| U1097 | Valid up to vehicle ident end no. 094908 | 10F 16F |
| U1098 | Valid as of vehicle ident end no. 094909 | 12E 18E |
| U924 | Valid for tailgate | 5D 15D 25D 48D |
| U925 | Valid for 180° 2-wing rear-end door | 2D 9D 28D 43D |

| | | |
|--------|---|-------------------------|
| U926 | Valid for 270° 2-wing rear-end door | 2D 9D 28E 43D |
| U976 | Valid for additional turn signal lamps on rear of roof | 57D |
| U977 | Valid for additional turn signal lamps on rear of roof | 52D |
| U985 | Window in tailgate/hinged rear door with wipe/wash system | 25D |
| W29/9 | Ground (right D-pillar) | 72L |
| W43/1 | Ground (left interior compartment firewall) | 22L |
| W43/2 | Ground (right interior compartment firewall) | 23L |
| X8/20 | Right rear-end door connector | 6F 16E 43F 49F |
| X8/21 | Tailgate connector | 26F 31F |
| X8/22 | Left rear-end door connector | 10E 45F |
| X8/23 | Left rear-end door connector | 29F |
| X8/38 | Actuation cutoff relay separation point | 39E |
| X18/62 | Tailgate license plate lamp connector | 18F |
| X18/63 | Rear-end door license plate lamp connector | 12F |
| X20/1 | Center high-mounted stop lamp connector, tailgate | 6G |
| X20/11 | Center high-mounted stop lamp connector, rear-end door | 3F |
| X28/31 | Backup alarm connector | 67C |
| X28/32 | Backup alarm connector | 70G |
| X52/5 | Left taillamp connector | 60G |
| X52/6 | Right taillamp connector | 58G |
| X100/5 | Right sliding door contact plate 1 separation point | 74D |
| X100/6 | Right sliding door contact pin 1 separation point | 74E |
| Z38 | Backup lamp connector sleeve | 68E |
| Z75/1 | License plate lamp connector sleeve | 17H |
| Z75/3 | License plate lamp connector sleeve | 11H |

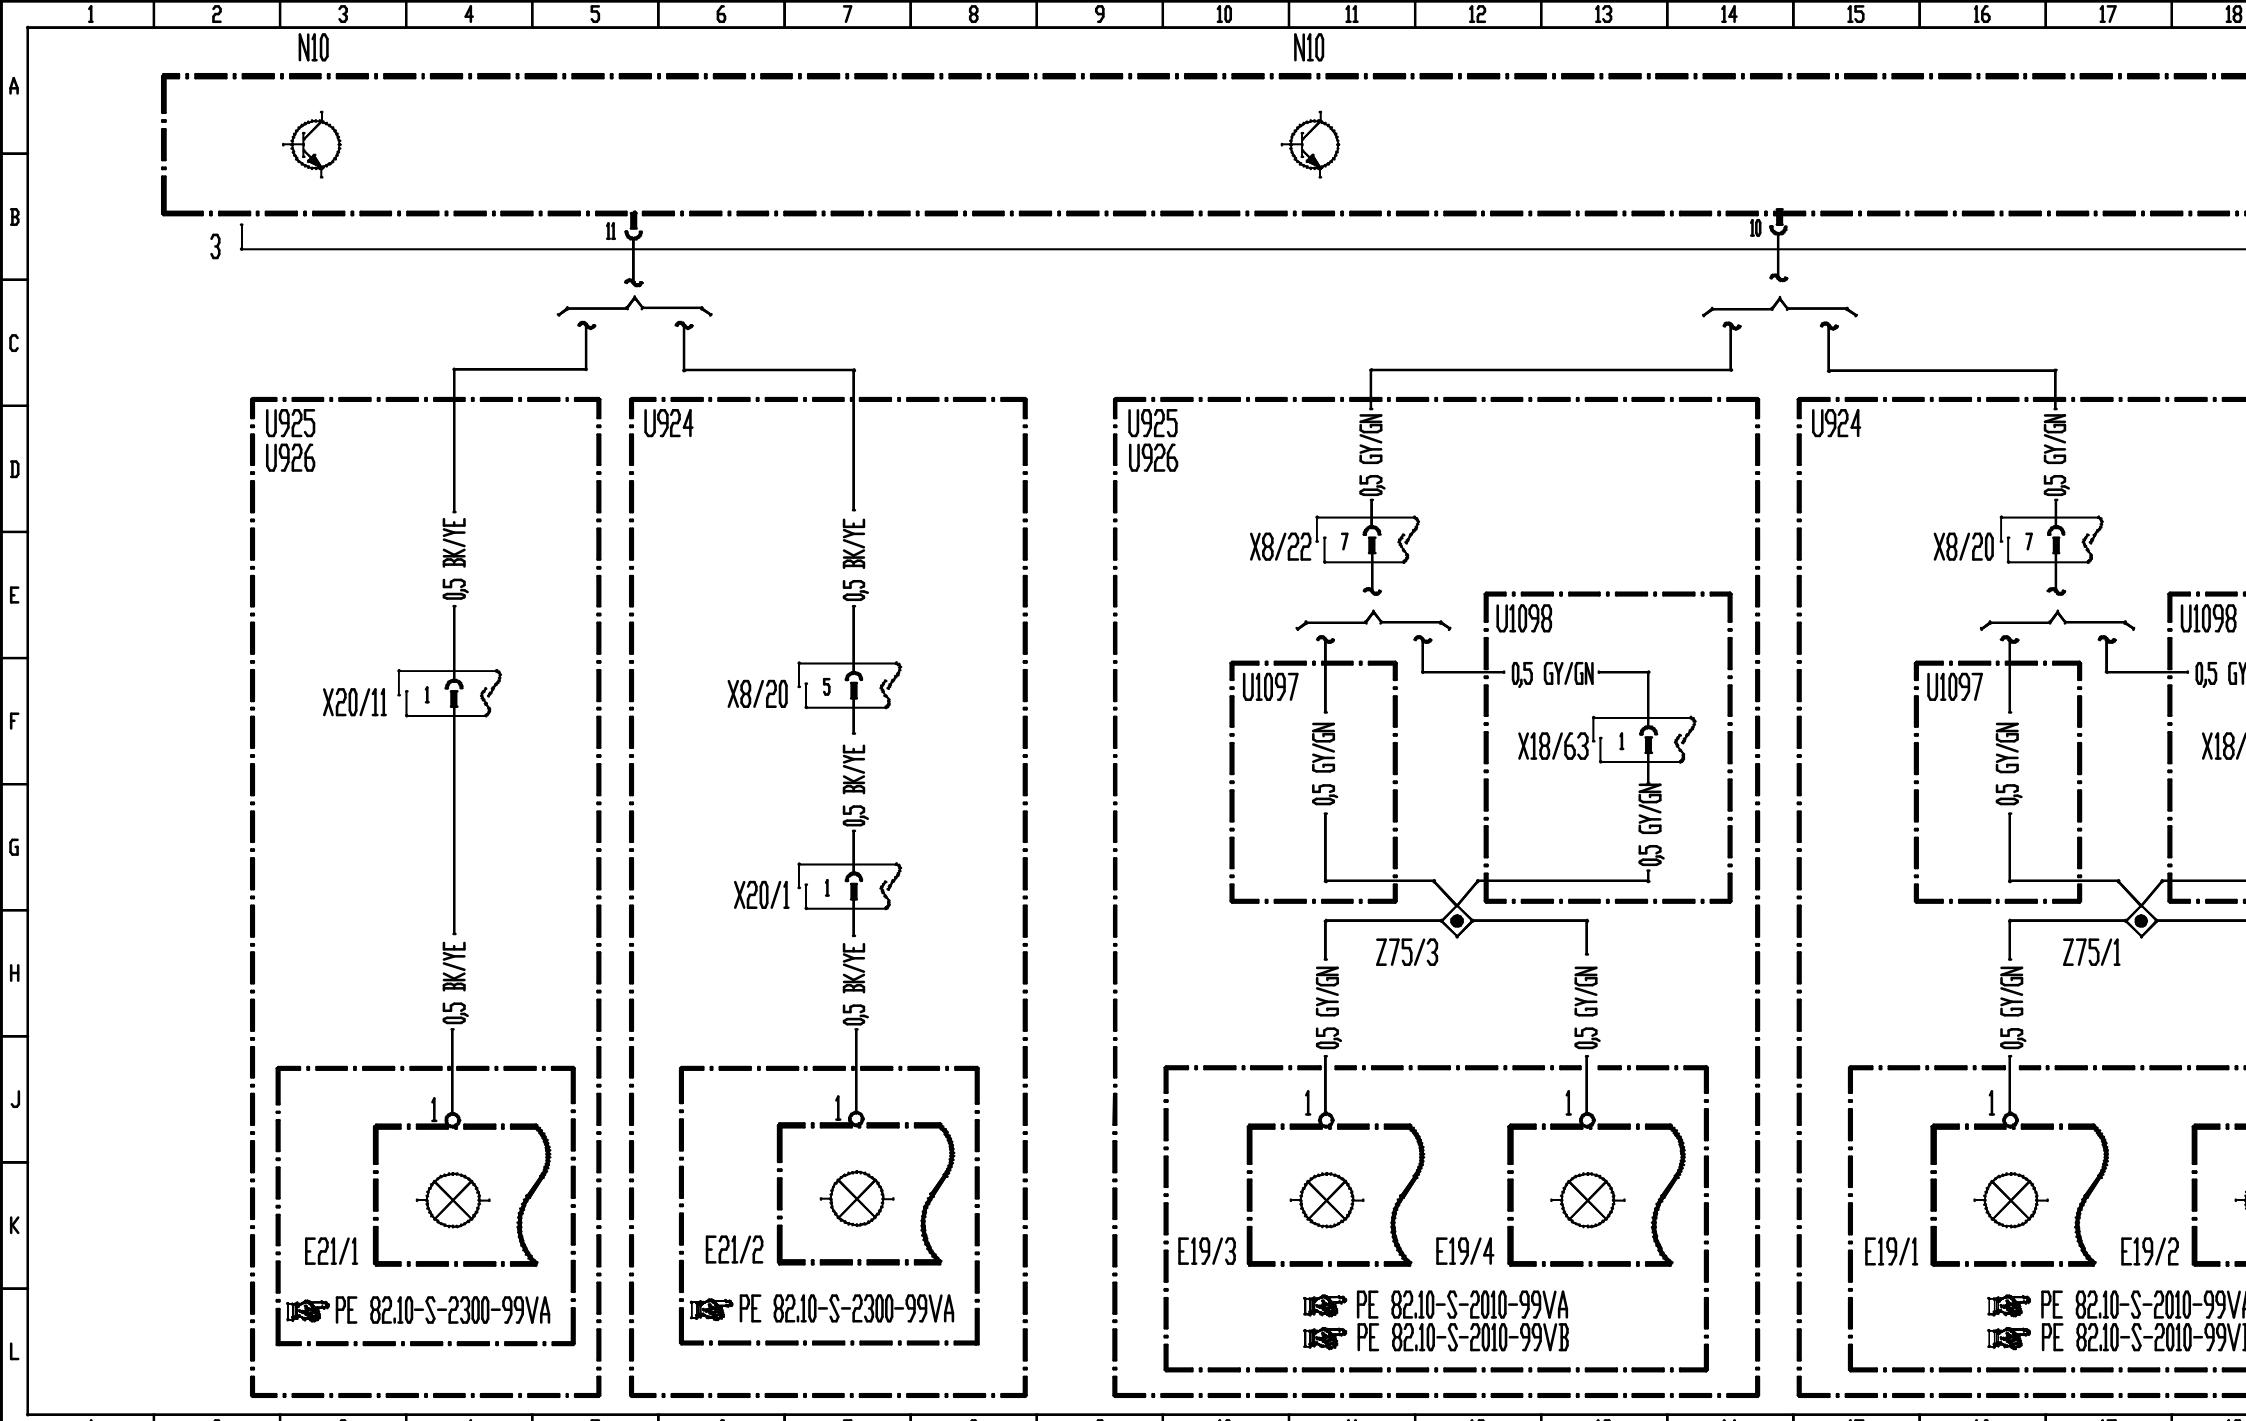


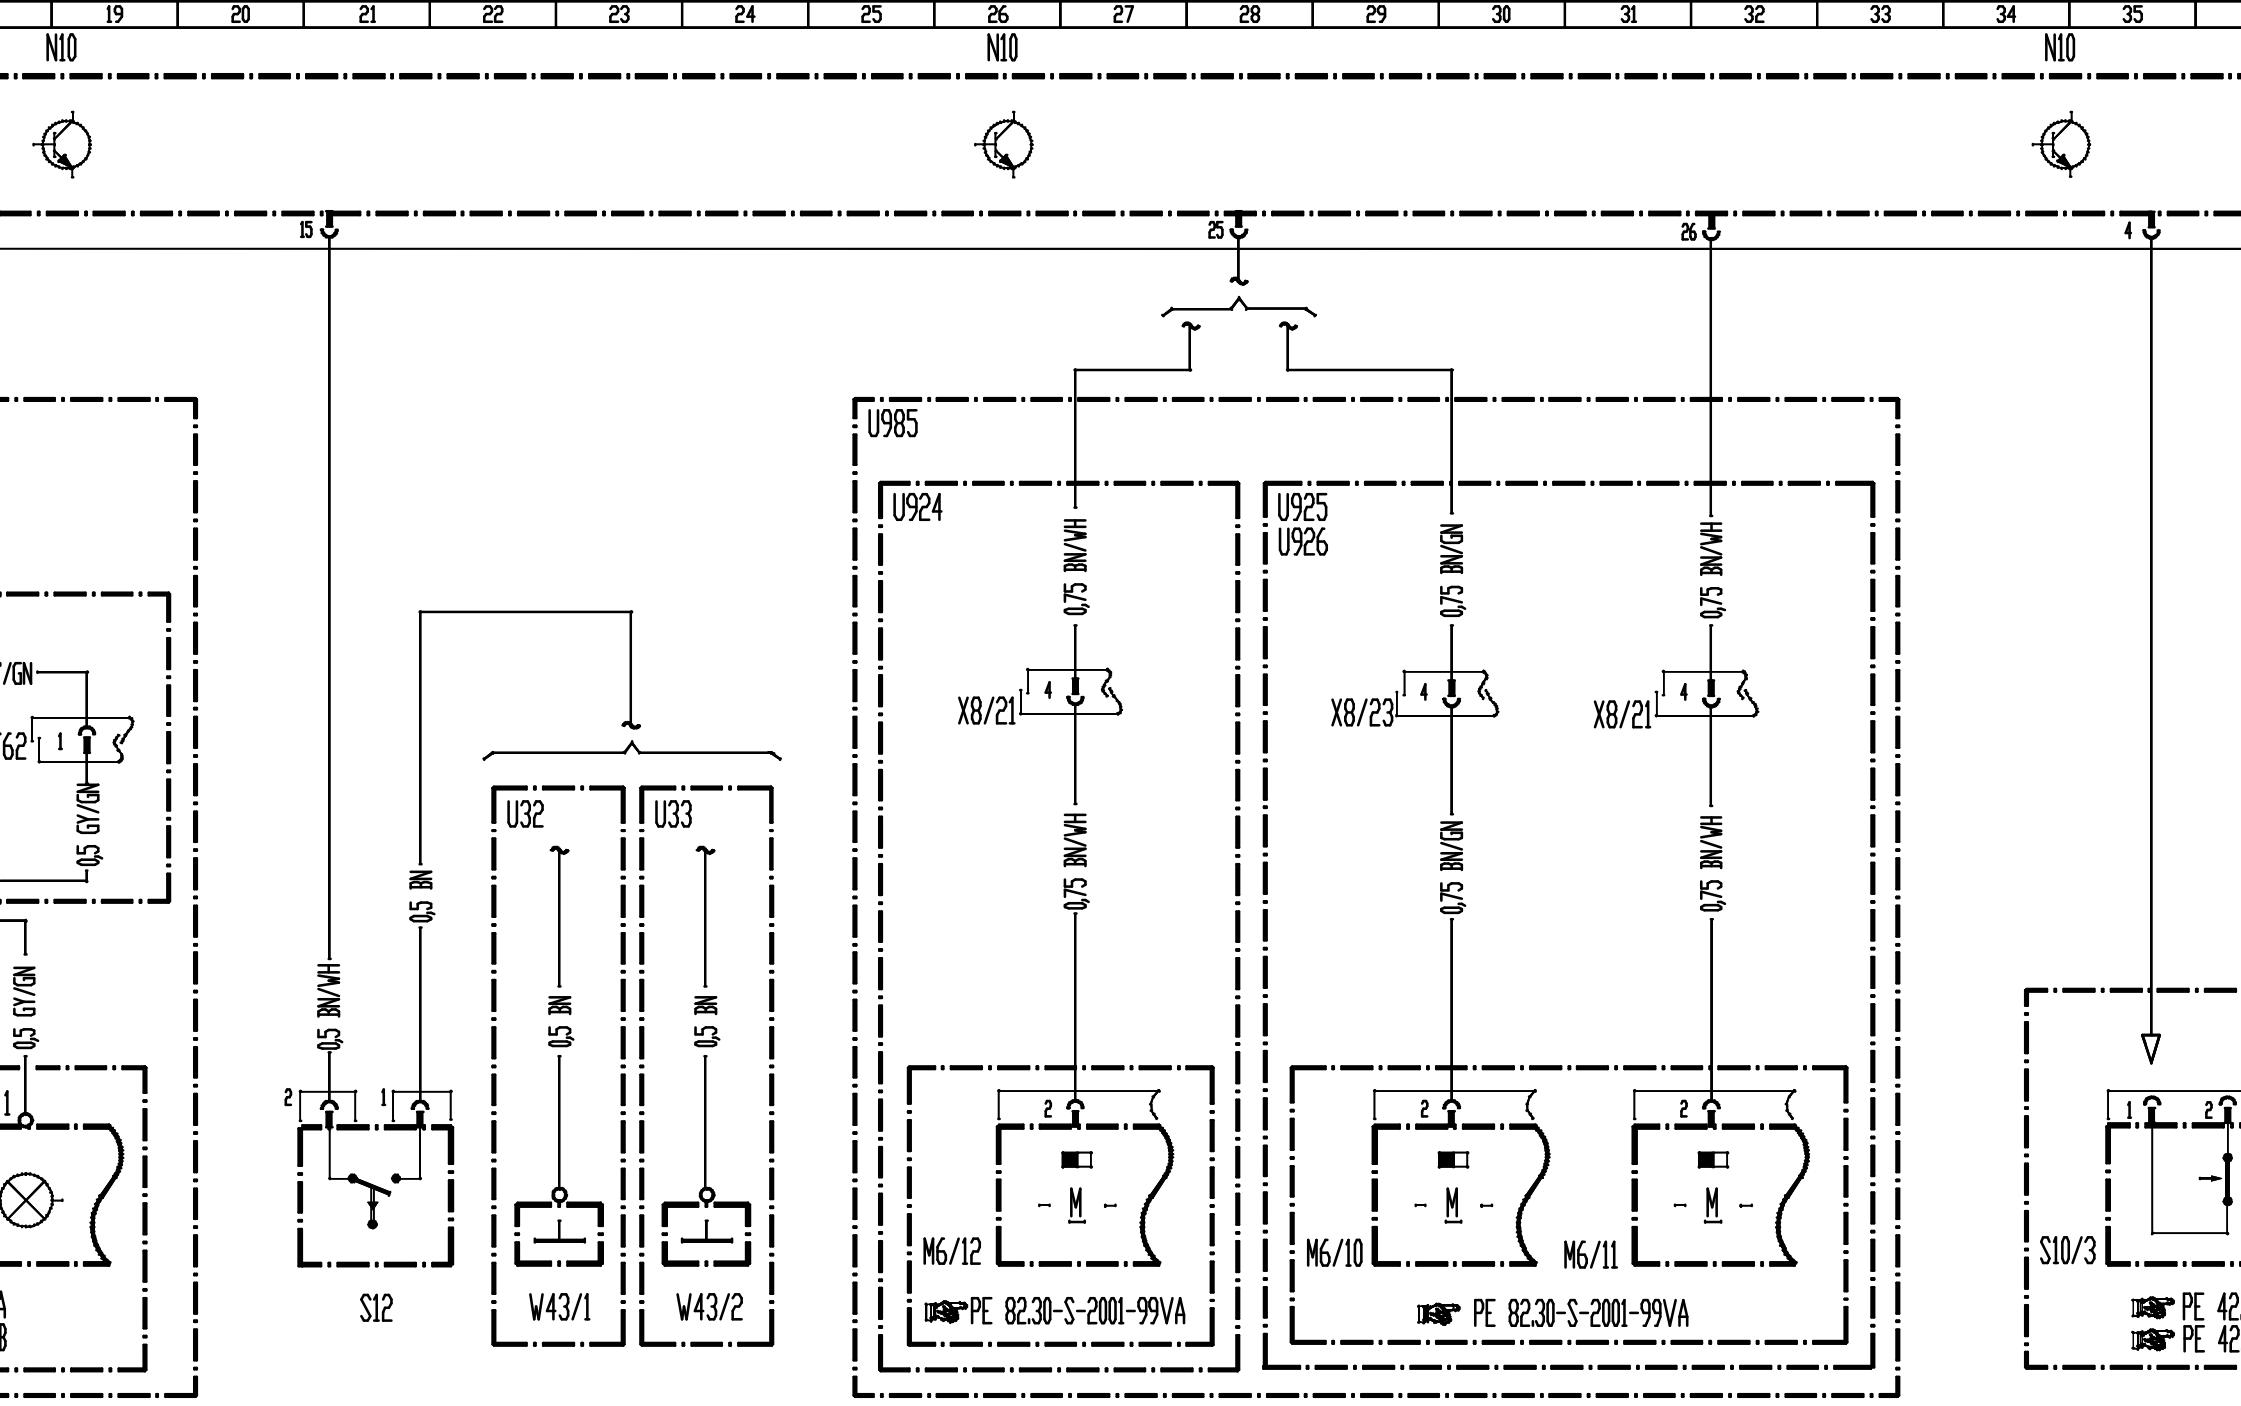

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53


N10


N10

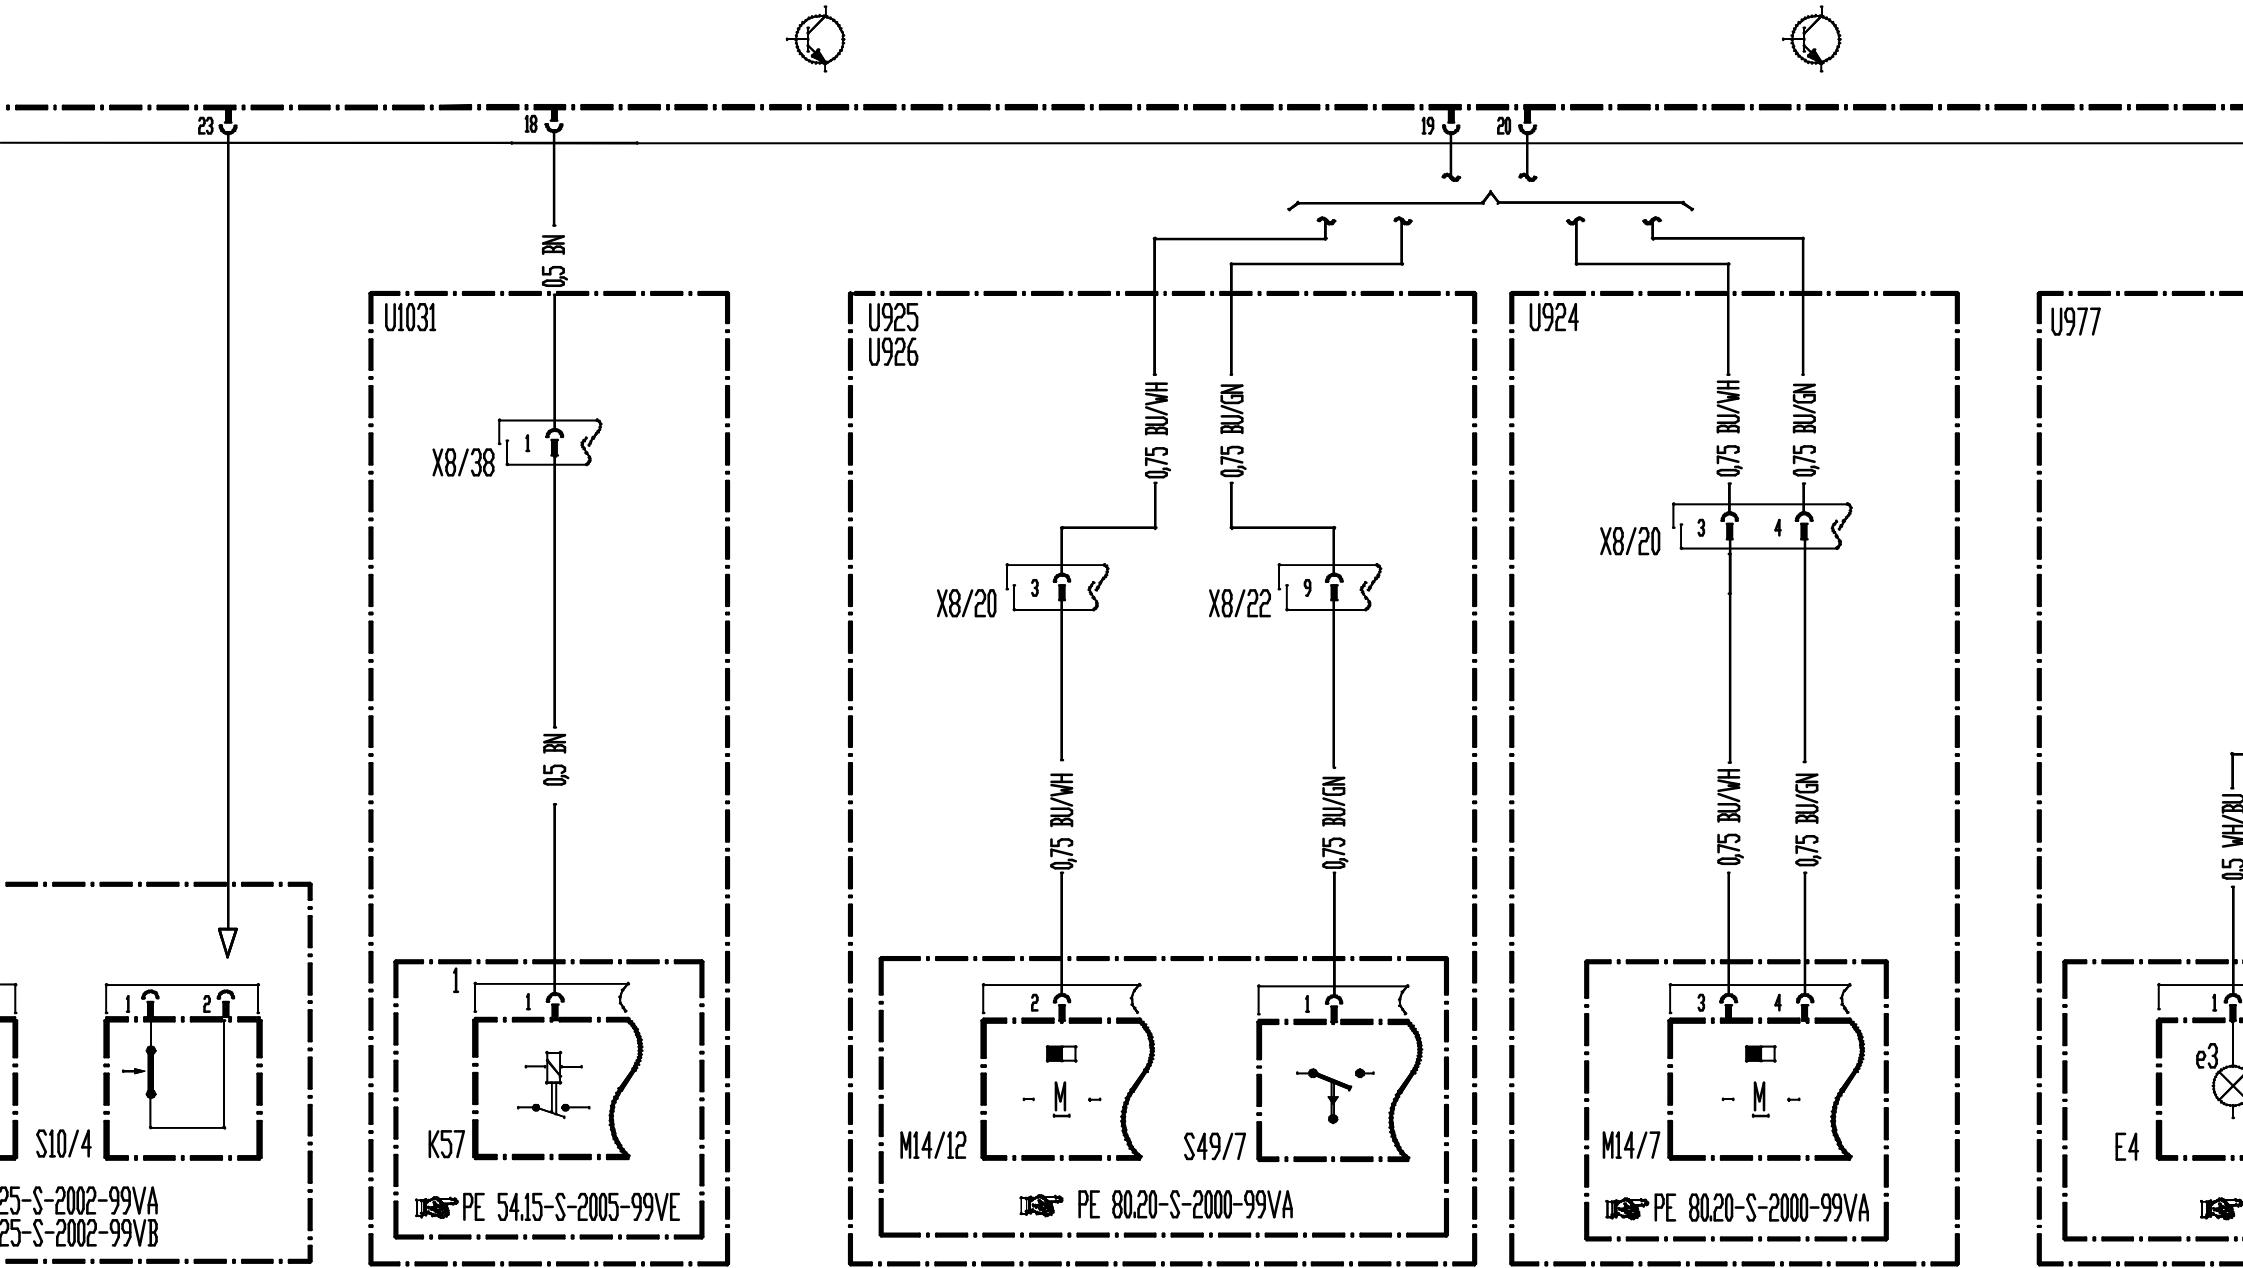

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

N10

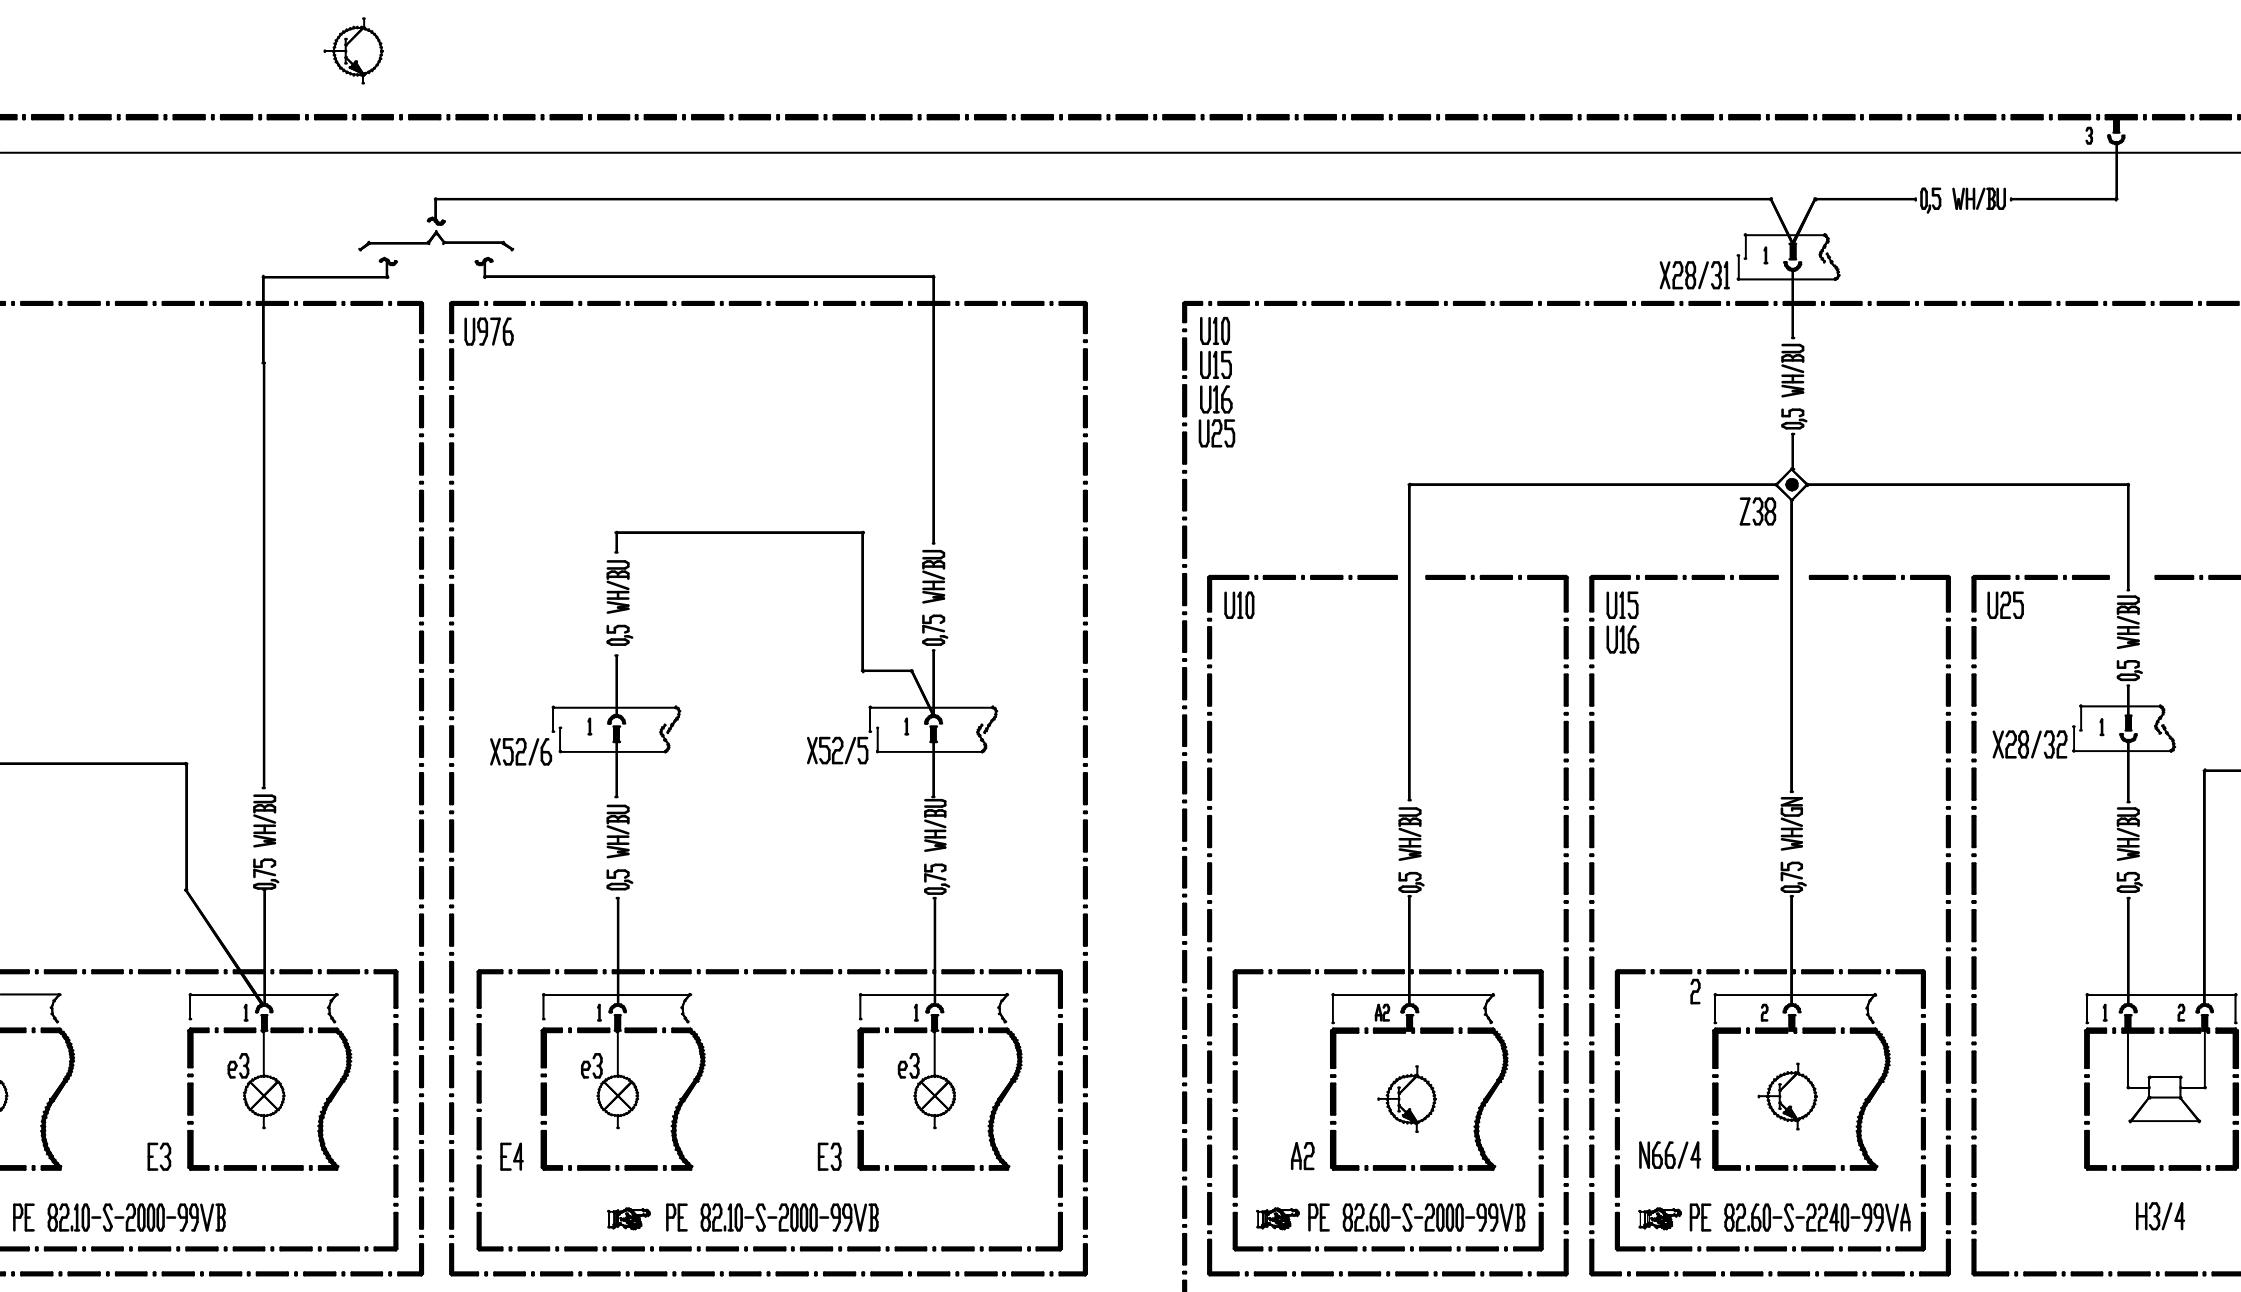

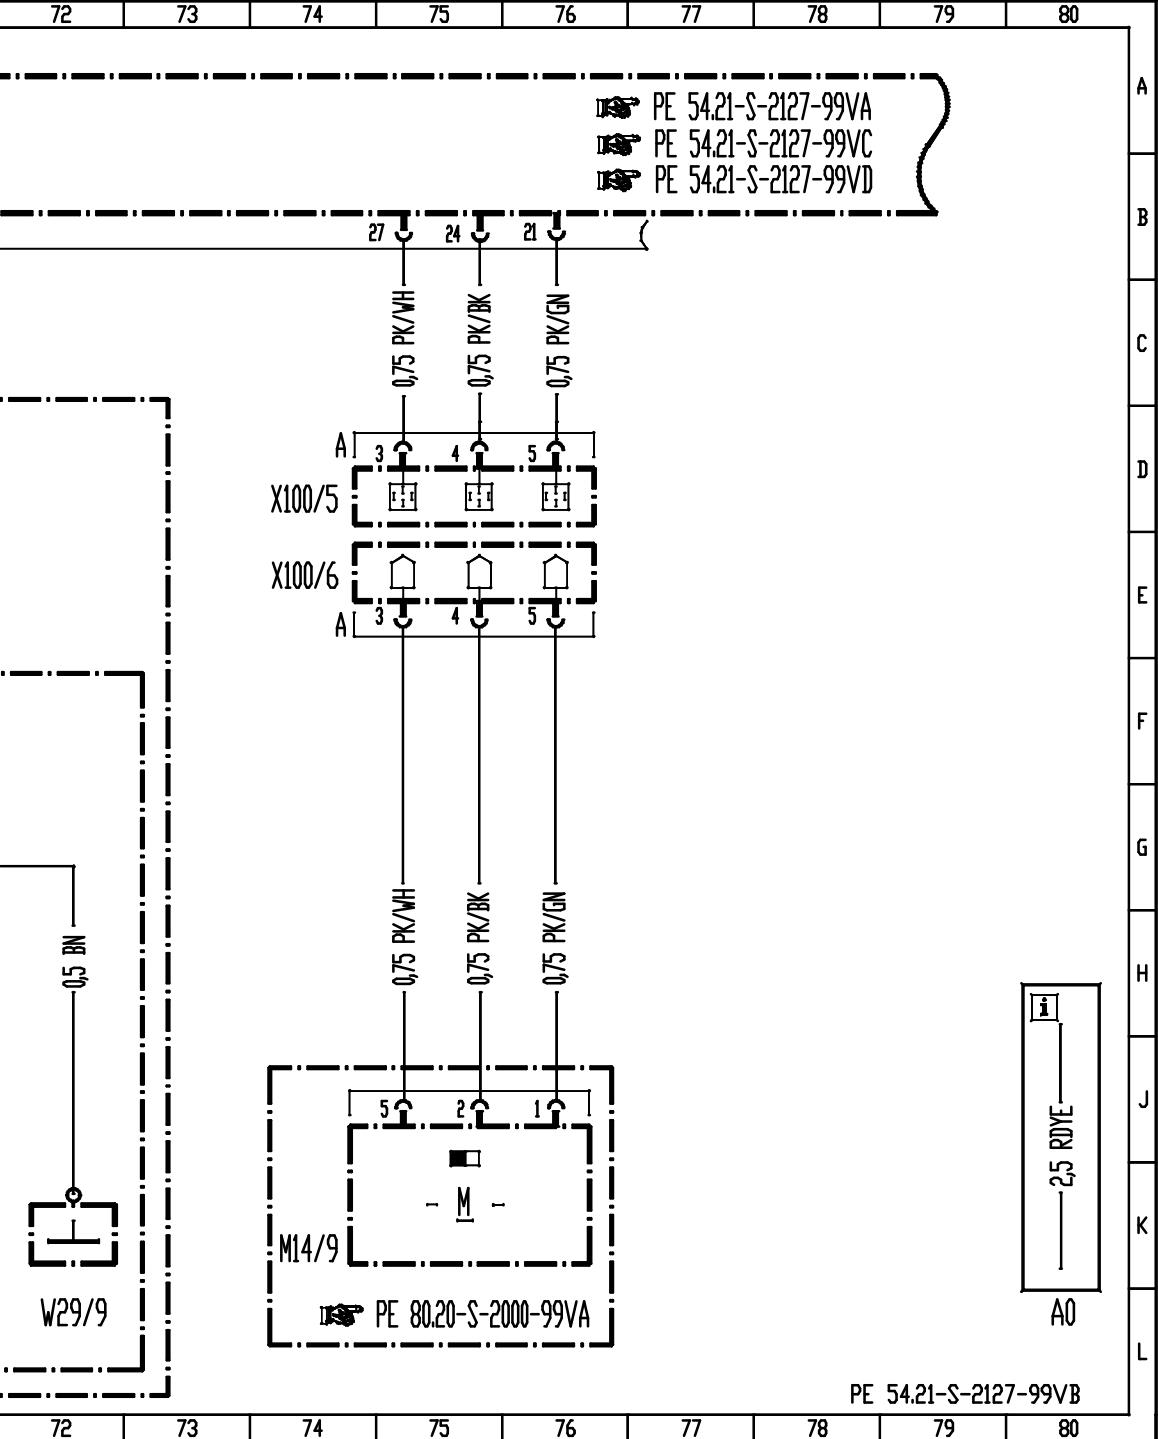


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 3

| | | | |
|---------------------|---|------------------------|---------------------|
| PE54.21-S-2127-99VC | Wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 3 | PE54.21-S-2127-99VC |
| PE54.21-S-2127-60VC | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | Sheet 3 | PE54.21-S-2127-60VC |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|--|---|
| E1 | Lamp unit, left front | 22L |
| E2 | Lamp unit, right front | 25L |
| M5/1 | Windshield washer fluid pump | 28L |
| M5/3 | Rear window washer fluid pump | 32L |
| M14/7 | Actuator, CL [ZV] tailgate | 39L 57L |
| M14/8 | Actuator, CL [ZV] left sliding door | 2L 49L |
| M14/9 | Actuator, right CL [ZV] sliding door | 35L 54L |
| M14/12 | Actuator, right CL [ZV] rear-end door | 42L 61L |
| M21/8 | Vent window motor, left | 19L |
| M21/9 | Vent window motor, right | 17L |
| N9/1 | Additional turn signal module control unit | 5L |
| N10 | SAM control unit | 7A 16A 23A 32A 40A 48A 56A 64A 70A 76A |
| S10/1 | Brake pad contact sensor, left front | 69L 74L |
| S10/2 | Brake pad contact sensor, right front | 70L 76L |

| | | |
|---------|--|------------|
| S21/13 | Left vent window button | 11L |
| S21/14 | Right vent window button | 14L |
| S49/6 | Rotary tumbler switch, right rear-end door | 46L 64L |
| U1034 | Valid for vehicles with ESP/ABS | 68A |
| U1035 | Valid for vehicles without ESP/ABS | 73A |
| U1083 | Valid for electric pop-out window in rear of passenger compartment | 11D |
| U924 | Valid for tailgate | 39G 57G |
| U925 | Valid for 180° 2-wing rear-end door | 42G 61G |
| U926 | Valid for 270° 2-wing rear-end door | 42G 61G |
| U930 | Valid for left load compartment sliding door | 1D 49D |
| U931 | Valid for all except left load compartment sliding door | 35D |
| U976 | Valid for additional turn signal lamps on rear of roof | 5D |
| U985 | Window in tailgate/hinged rear door with wipe/wash system | 31D |
| X8/20 | Right rear-end door connector | 40F 59F |
| X43/10 | CL [ZV] motor connector, rear-end door | 54E |
| X100/5 | Right sliding door contact plate 1 separation point | 35F 54G |
| X100/6 | Right sliding door contact pin 1 separation point | 35F 54G |
| X100/9 | Left sliding door contact plate 1 separation point | 2F 49F |
| X100/10 | Left sliding door contact pin 1 separation point | 1F 49F |
| Z81 | Tml. 58d connector sleeve, interior | 9H |
| Z82/3 | CL [ZV] rear-end door connector sleeve | 43H 62H |

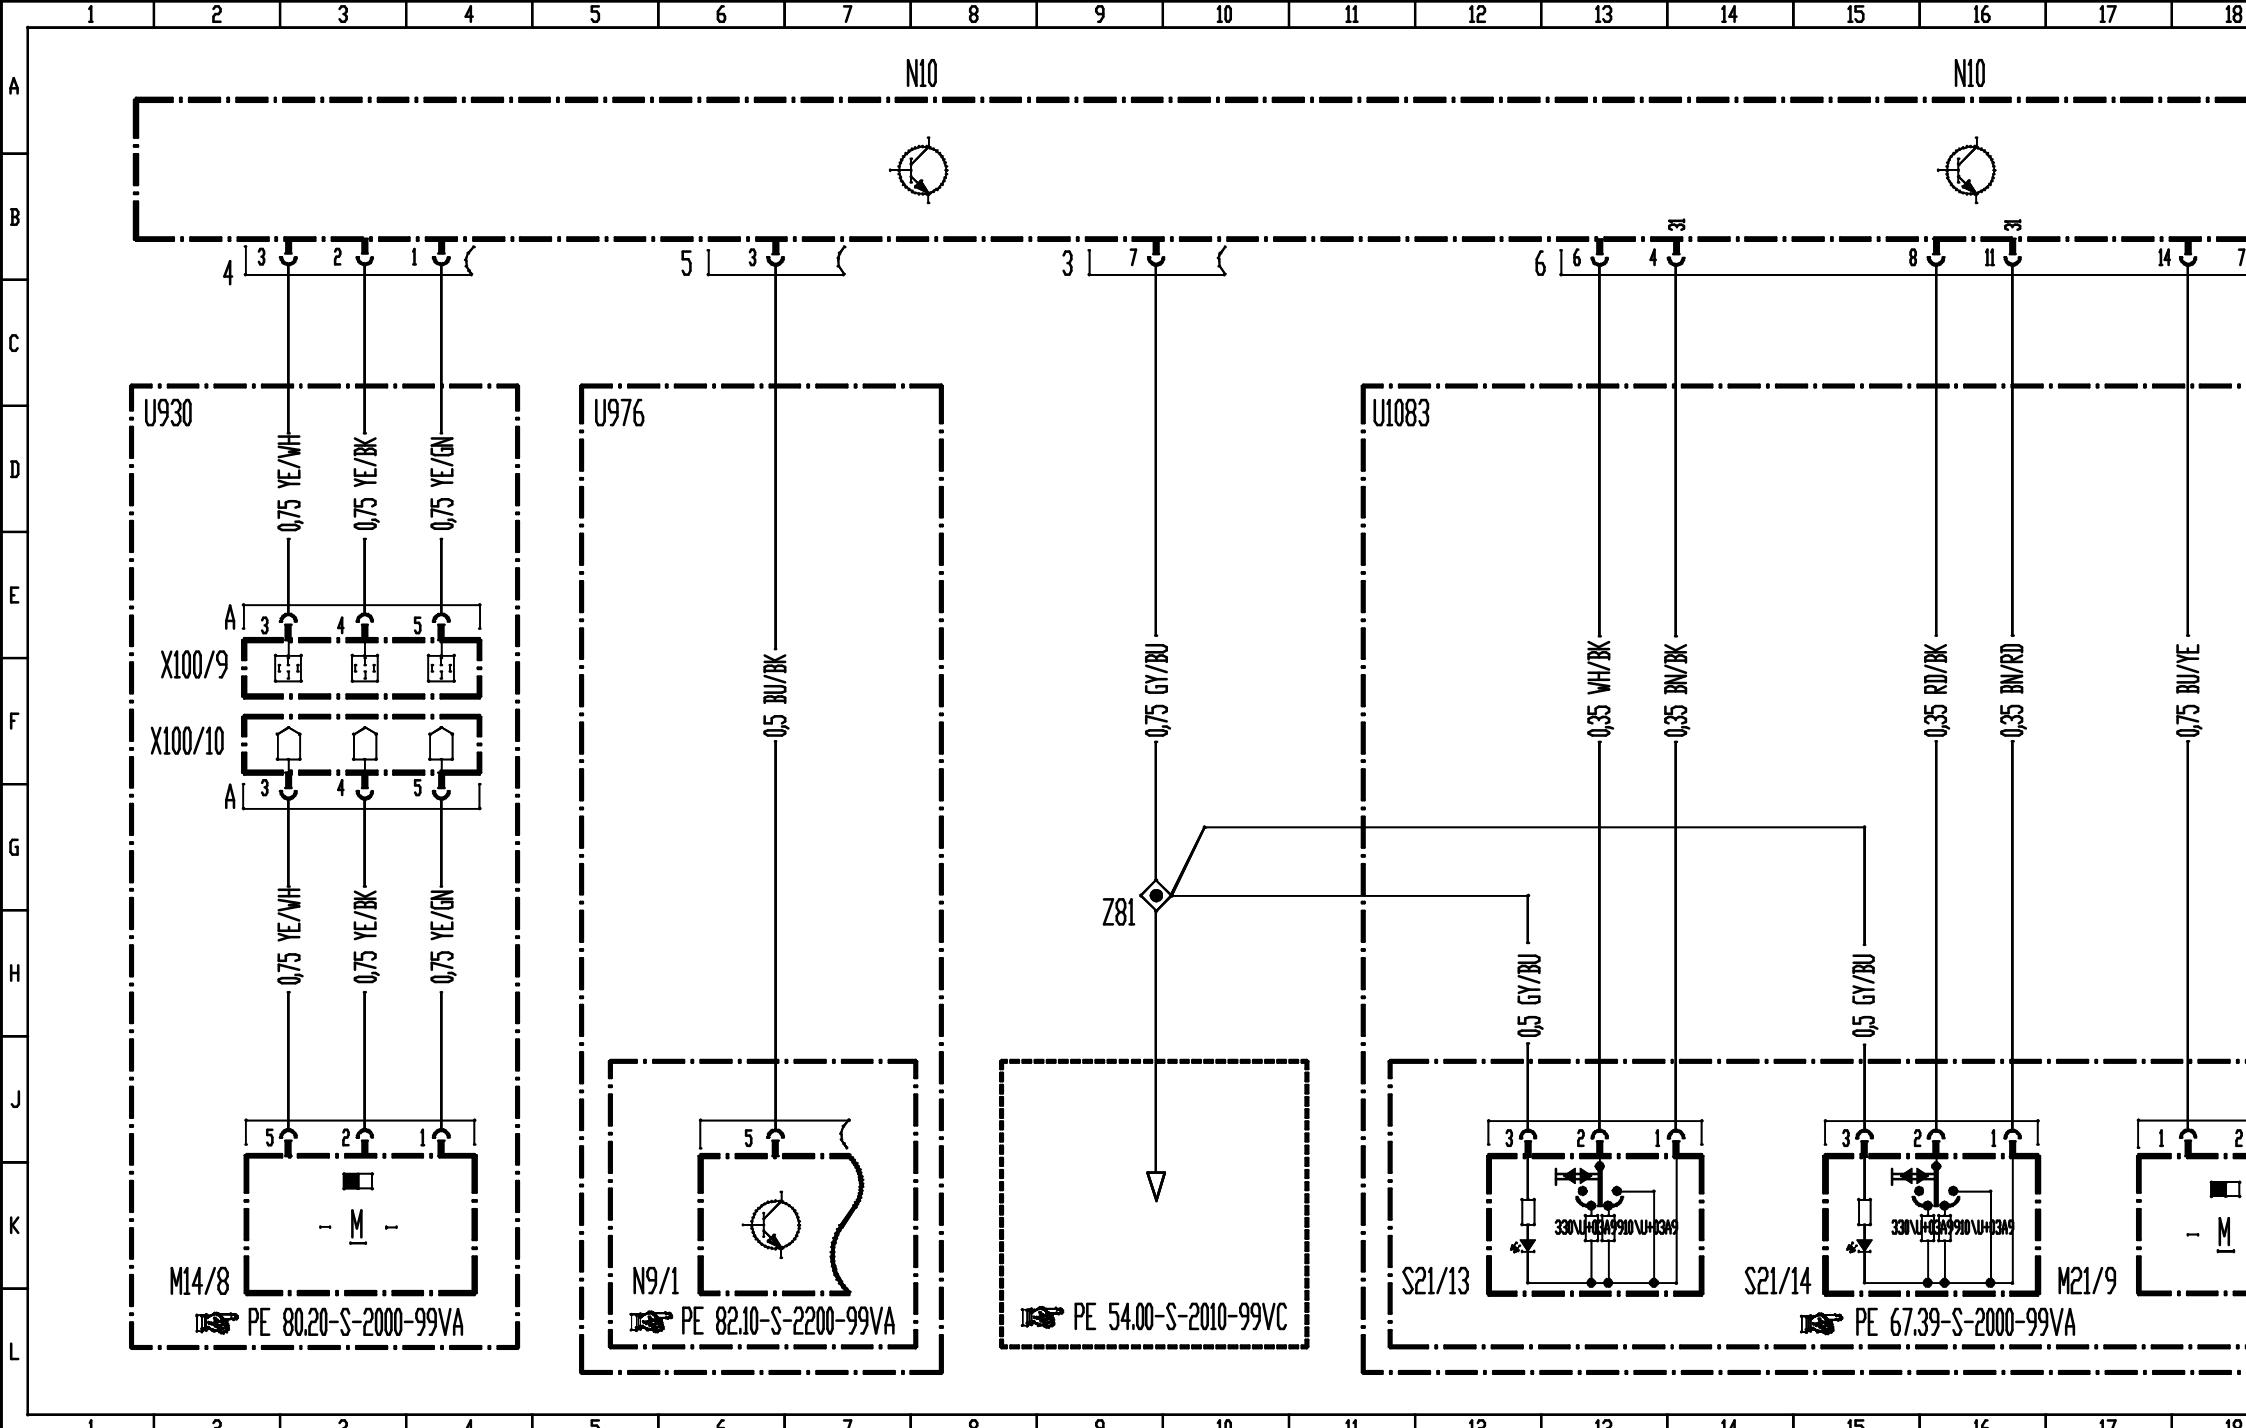


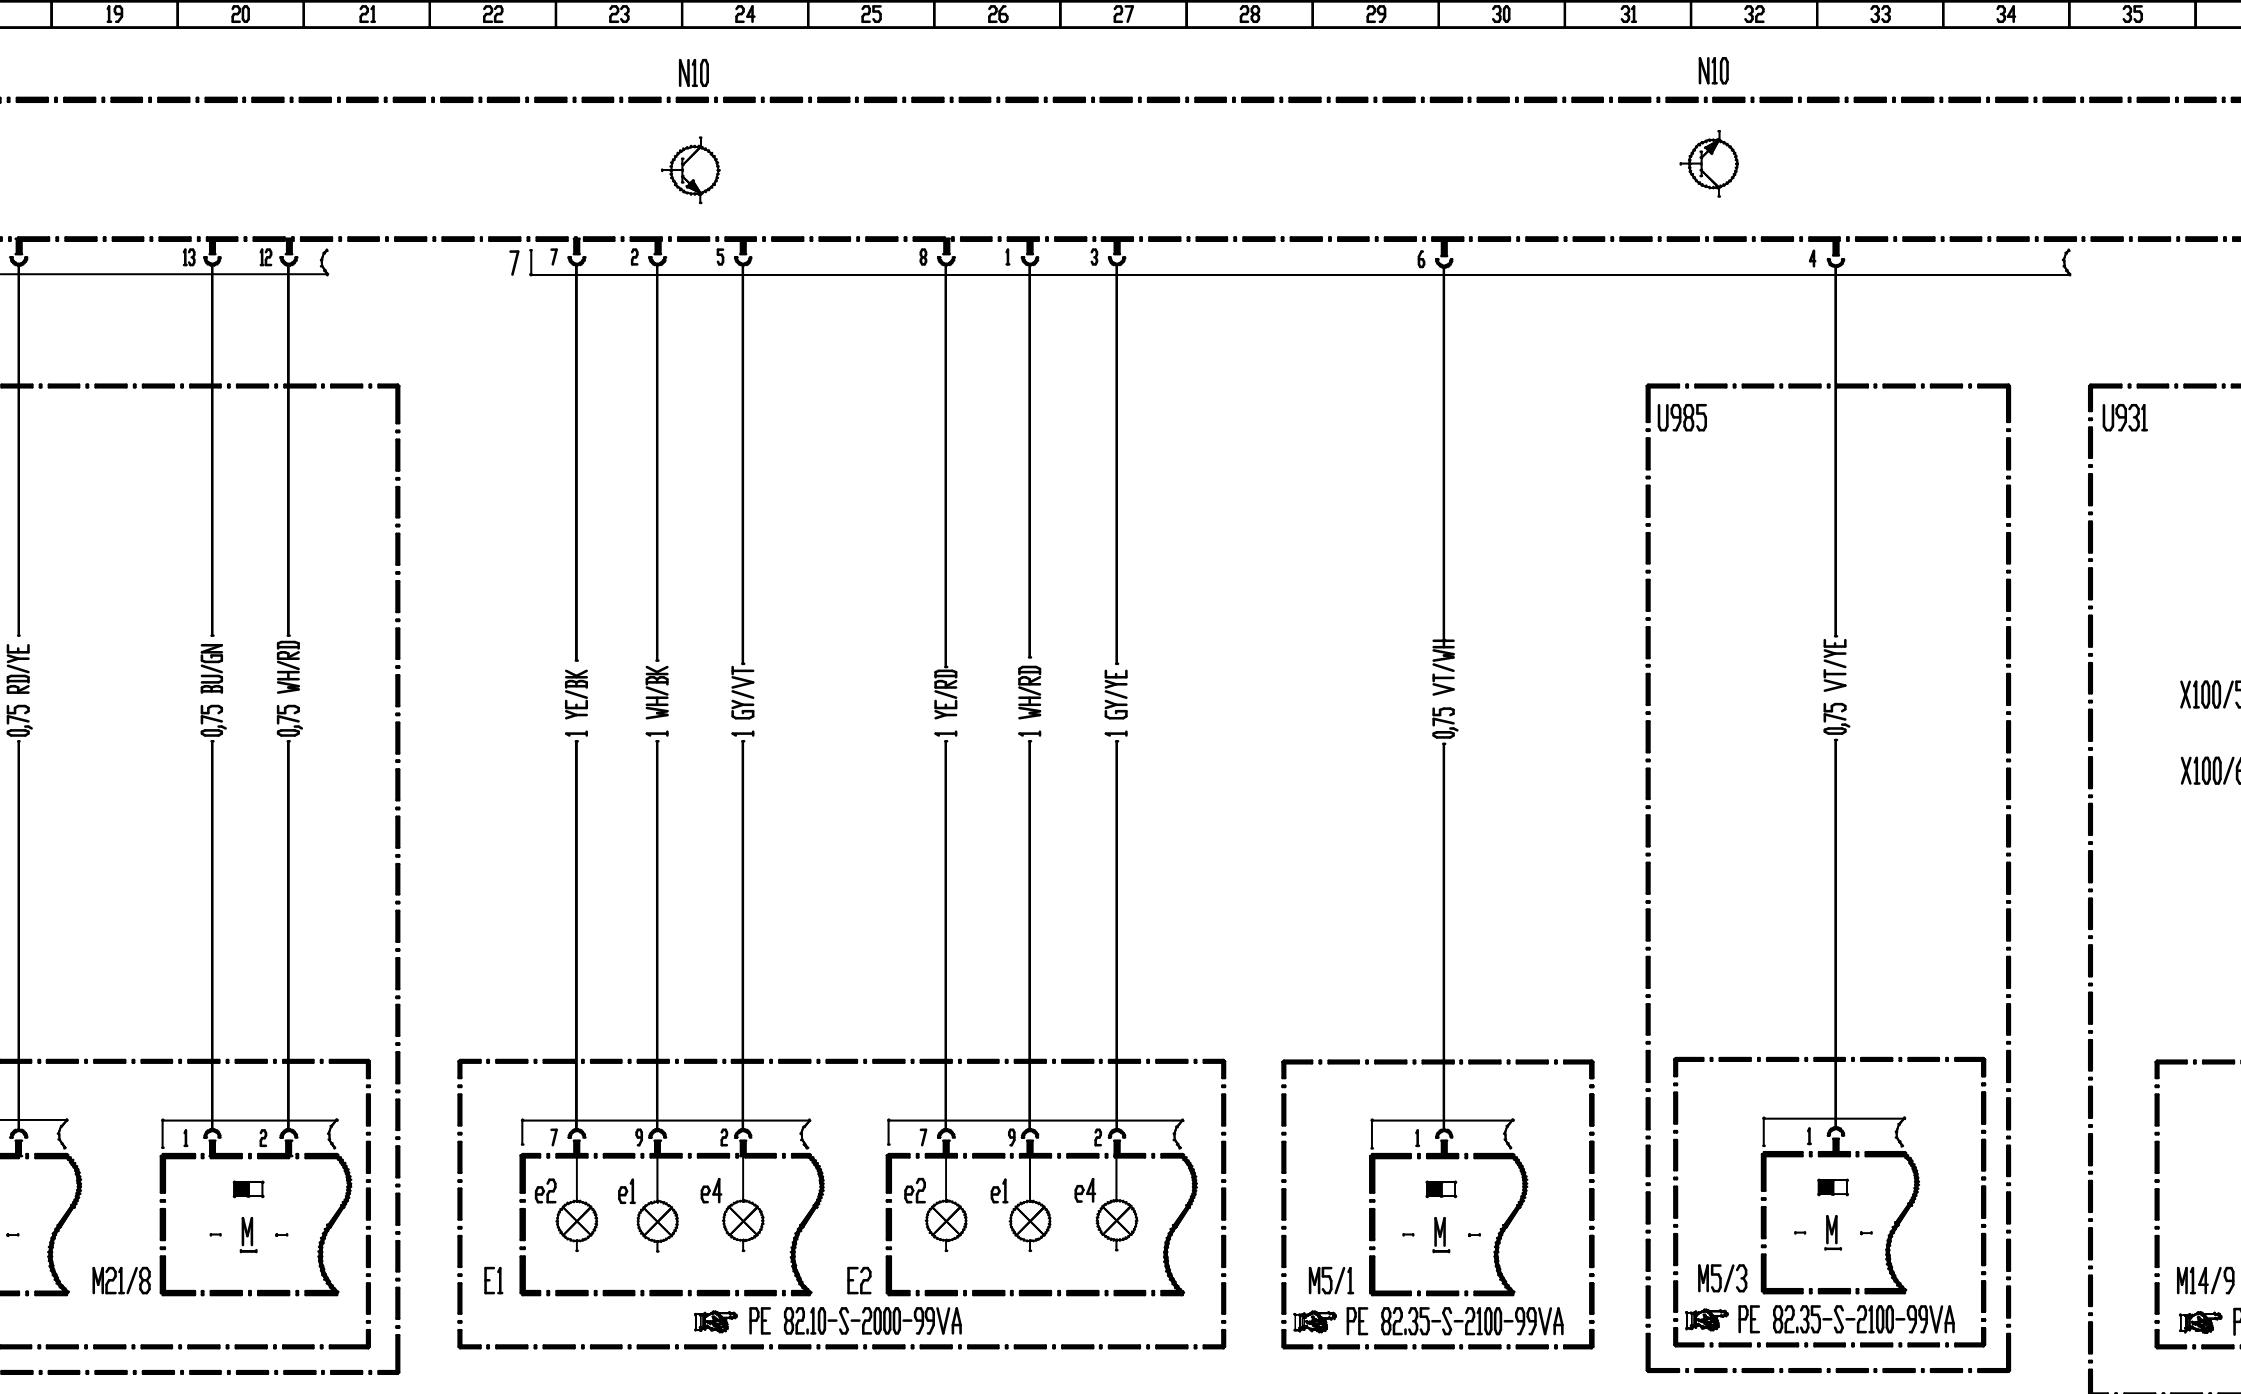



36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N10

N10

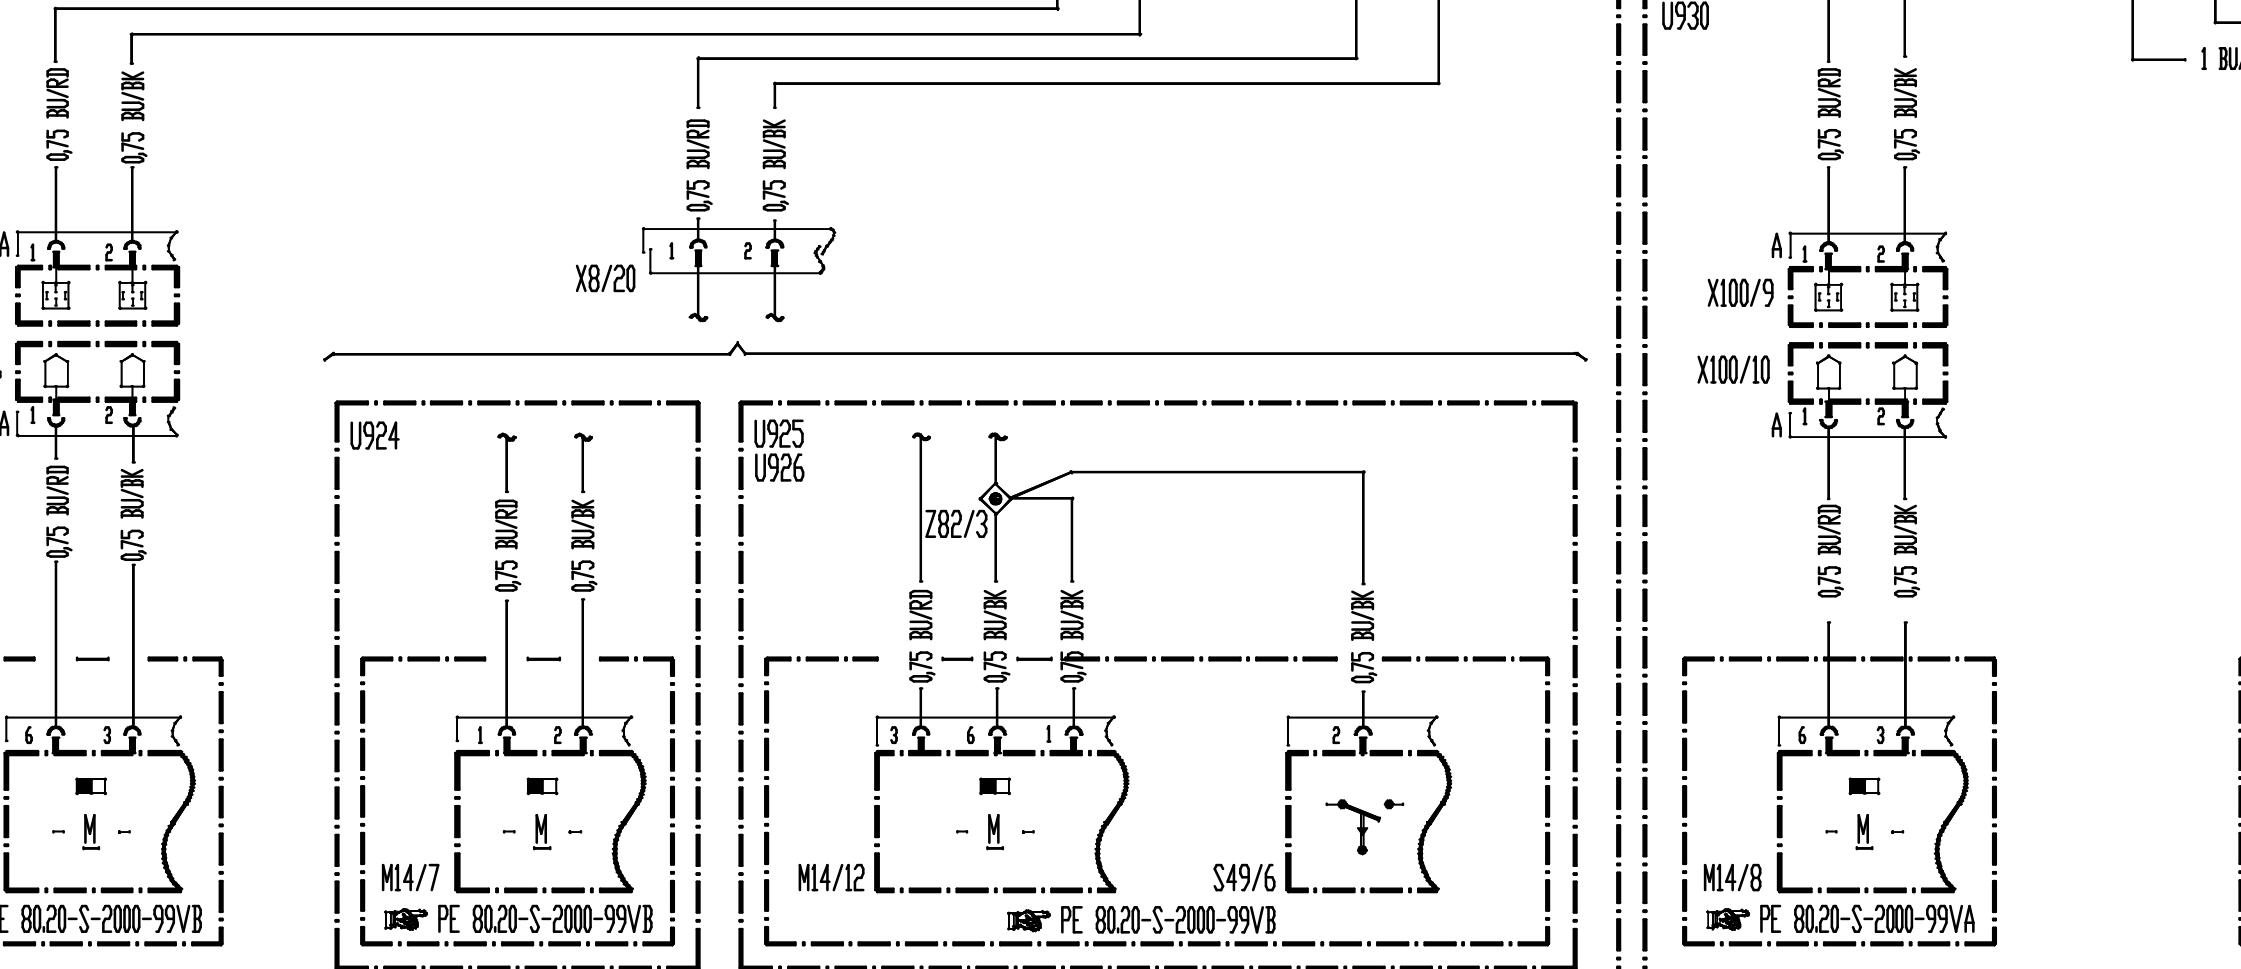

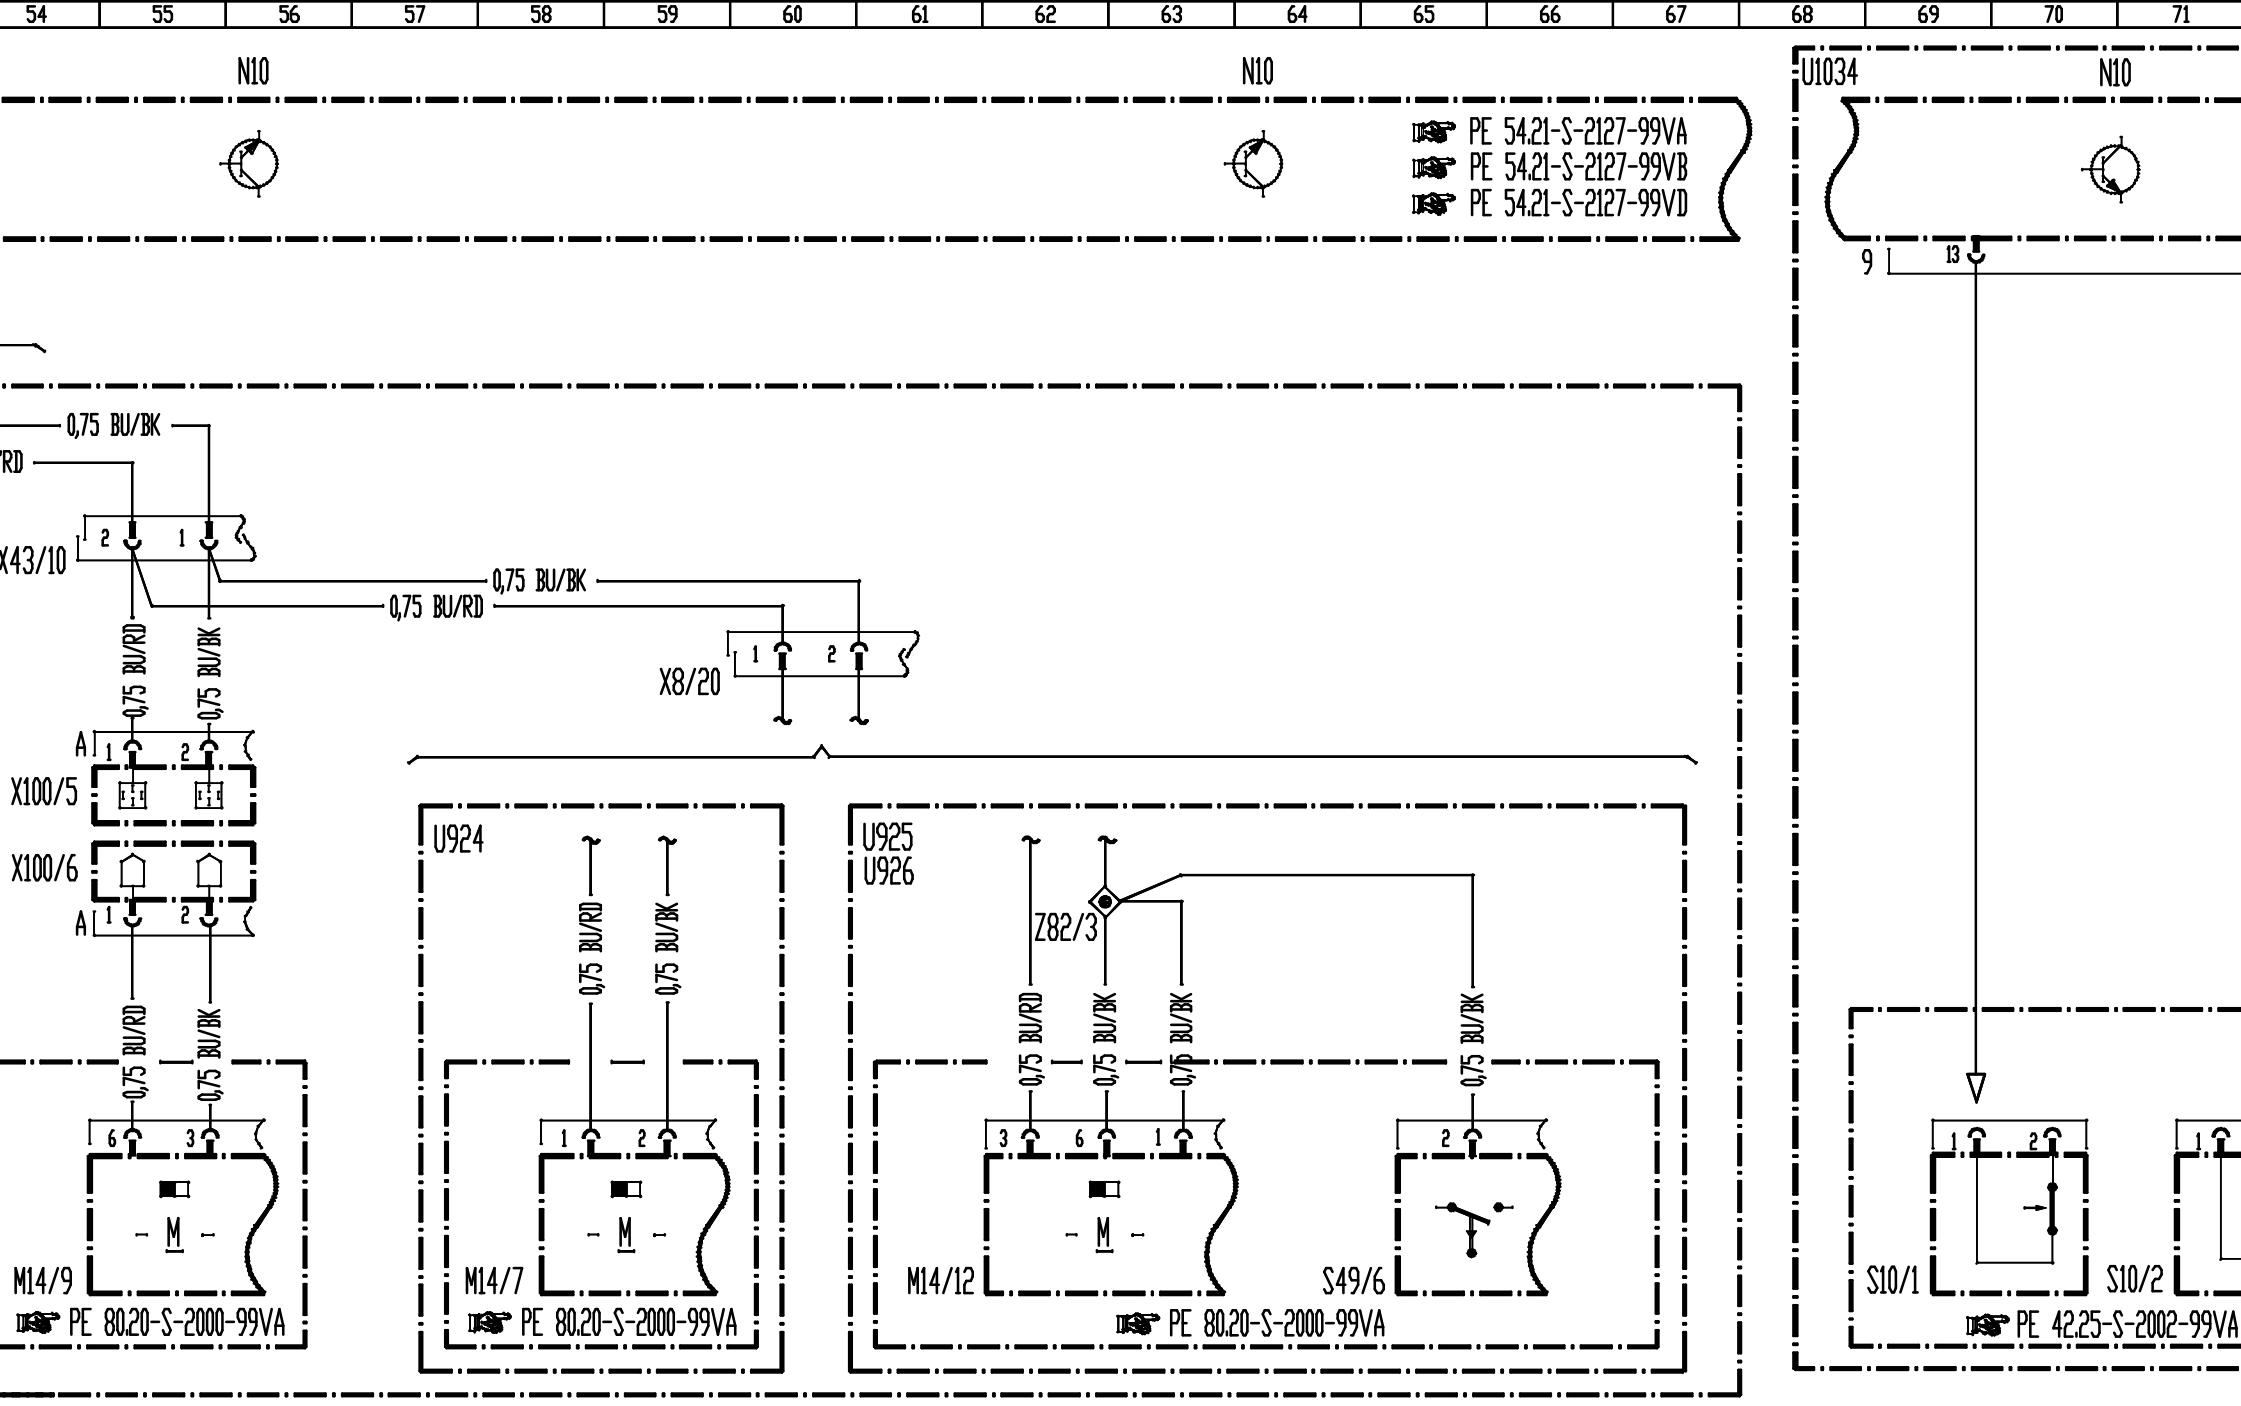

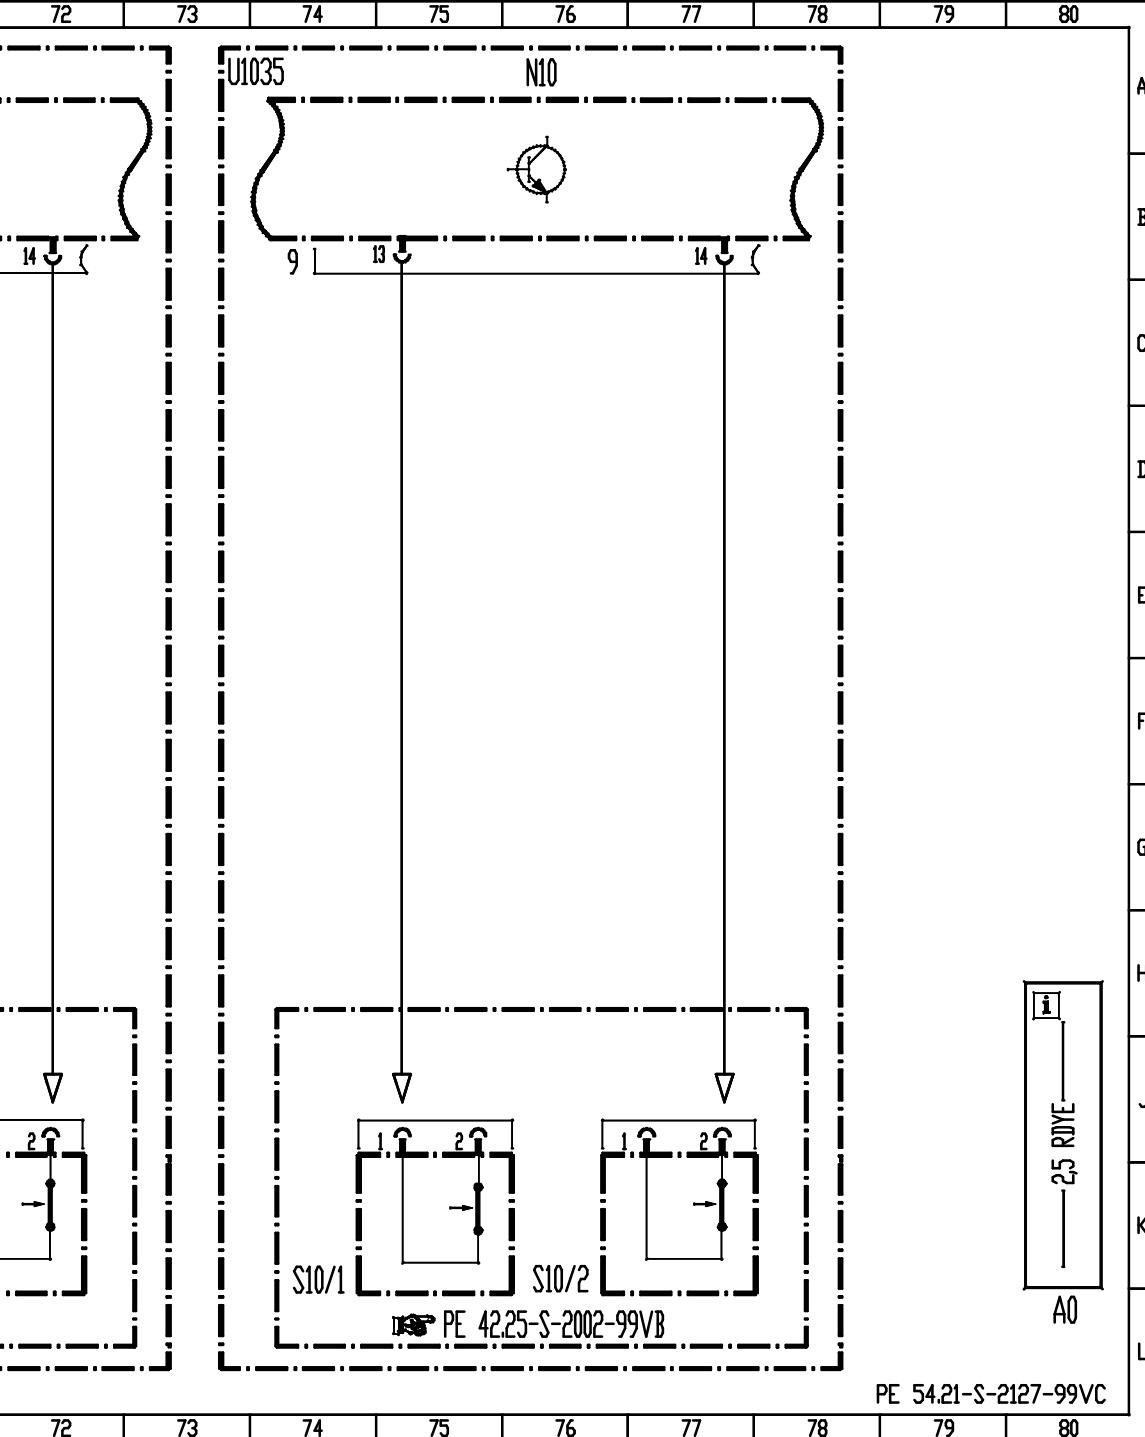

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 4


| | | | |
|---------------------|---|------------------------|---------------------|
| PE54.21-S-2127-99VD | Wiring diagram for signal acquisition and actuation module (SAM) control unit | | PE54.21-S-2127-99VD |
| PE54.21-S-2127-60VD | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | | PE54.21-S-2127-60VD |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|---|---|--|
| PE54.21-S-2127-60VD | Legend of wiring diagram for signal acquisition and actuation module (SAM) control unit | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 Sheet 4 | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|--------|--|--|
| B14 | Outside temperature display temperature sensor | 4L |
| E1 | Lamp unit, left front | 11K |
| E2 | Lamp unit, right front | 14K |
| E15 | Dome lamp with reading lamp, front | 59L |
| E15/29 | Load compartment lamp 1, right | 70K |
| E15/30 | Load compartment lamp 2, left | 73K |
| E18/1 | Trunk lamp | 67K |
| E22/1 | Additional turn signal lamp, left | 32K 36K |
| E22/2 | Additional turn signal lamp, right | 25K 28K |
| F34 | Fuse block, 22-pin | 61G |
| F34f33 | Data link connector fuse | 62G |
| K2 | Headlamp cleaning system relay | 40K |
| M6/1 | Windshield wiper motor | 7K |
| N10 | SAM control unit | 4A 11A 19A 27A 35A 43A 51A 59A 67A |
| N70 | Overhead control panel control unit | 49K 54K |
| S11 | Brake fluid indicator switch | 20L |

| | | |
|-------|---|-------------------|
| S41 | Fill level switch, coolant | 18L |
| S42 | Fill level switch, window washer fluid | 6L |
| U32 | Valid for left-hand drive vehicles | 21G 25D 32D |
| U33 | Valid for right-hand drive vehicles | 22G 28D 35D |
| U37 | Valid for ATA [EDW] I | 49E |
| U38 | Valid for ATA [EDW] II | 49E |
| U1003 | Valid for additional interior lamp in passenger compartment | 67D |
| U1004 | Valid for interior lamp in rear | 67E |
| U1005 | Valid without additional interior lamp in passenger compartment | 71C |
| U1006 | Valid without interior lamp in rear | 70G 71D |
| U1007 | Valid for additional interior lamp in load compartment without interior lamp in rear | 73G |
| U1009 | Valid for light/rain sensor | 49E |
| U1011 | Valid without glass tilting/sliding roof in passenger compartment | 57D |
| U1012 | Valid without glass tilting/sliding roof in driver/passenger compartment | 57D |
| U1013 | Valid without anti-theft alarm system with interior protection (EDW II) | 57E |
| U1018 | Valid without EDW I | 57E |
| U1019 | Valid without light/rain sensor | 57E |
| U1024 | Valid for DBE with 2 reading spotlights or garage door opener without glass tilting/sliding roof in driver/passenger compartment, glass tilting/sliding roof in passenger compartment, light/rain sensor, EDW II or EDW I | 54D |
| U1099 | Valid as of 09/2005 for vehicles with outside rearview mirror without turn signal lamp | 25C |
| U1100 | Valid up to 08/2005: Valid for panel van (Vito)/ Valid for MPV (Vito) and luxury multipurpose vehicle (Viano), both with outside rearview mirrors without turn signal lamp | 25C |
| U928 | Valid for headlamp cleaning system | 40D |
| U949 | Valid for glass tilting/sliding roof in passenger compartment | 49D |
| U954 | Valid for glass tilting/sliding roof in driver/passenger compartment | 49D |
| U978 | Valid for FUN equipment line | 66H |
| U980 | Valid for "Marco Polo" camper | 66H |

| | | |
|--------|--|------------|
| U982 | Valid for MPV | 66G |
| U983 | Valid for TREND equipment line | 66H |
| U984 | Valid for AMBIENTE equipment line | 66H |
| U987 | Valid without DBE with 2 reading spotlights | 57F |
| W2 | Ground (right front lamp unit) | 22L |
| W9 | Ground (left front lamp unit) | 21L |
| W38 | Ground (roof) | 57L |
| X18/2 | Load compartment lamp connector | 70F |
| X18/29 | Connector 1, left engine compartment or right engine compartment | 33F |
| X18/30 | Connector 2, left engine compartment or right engine compartment | 29F |
| X30/24 | Interior CAN bus connector | 43K |
| | | 43K |
| | | 43K |
| | | 46K |
| | | 46K |
| | | 46K |
| X30/25 | Interior CAN bus connector | 43K 46K |
| X30/26 | Interior CAN bus connector | 43K |
| | | 43K |
| | | 43K |
| | | 46K |
| | | 46K |
| | | 46K |
| Z4/1 | Ceiling illumination terminal 30 connector sleeve | 62E |
| Z54/5 | SAM ceiling illumination connector sleeve | 67D |
| Z66/1 | Additional fuse box feed connector sleeve | 62J |

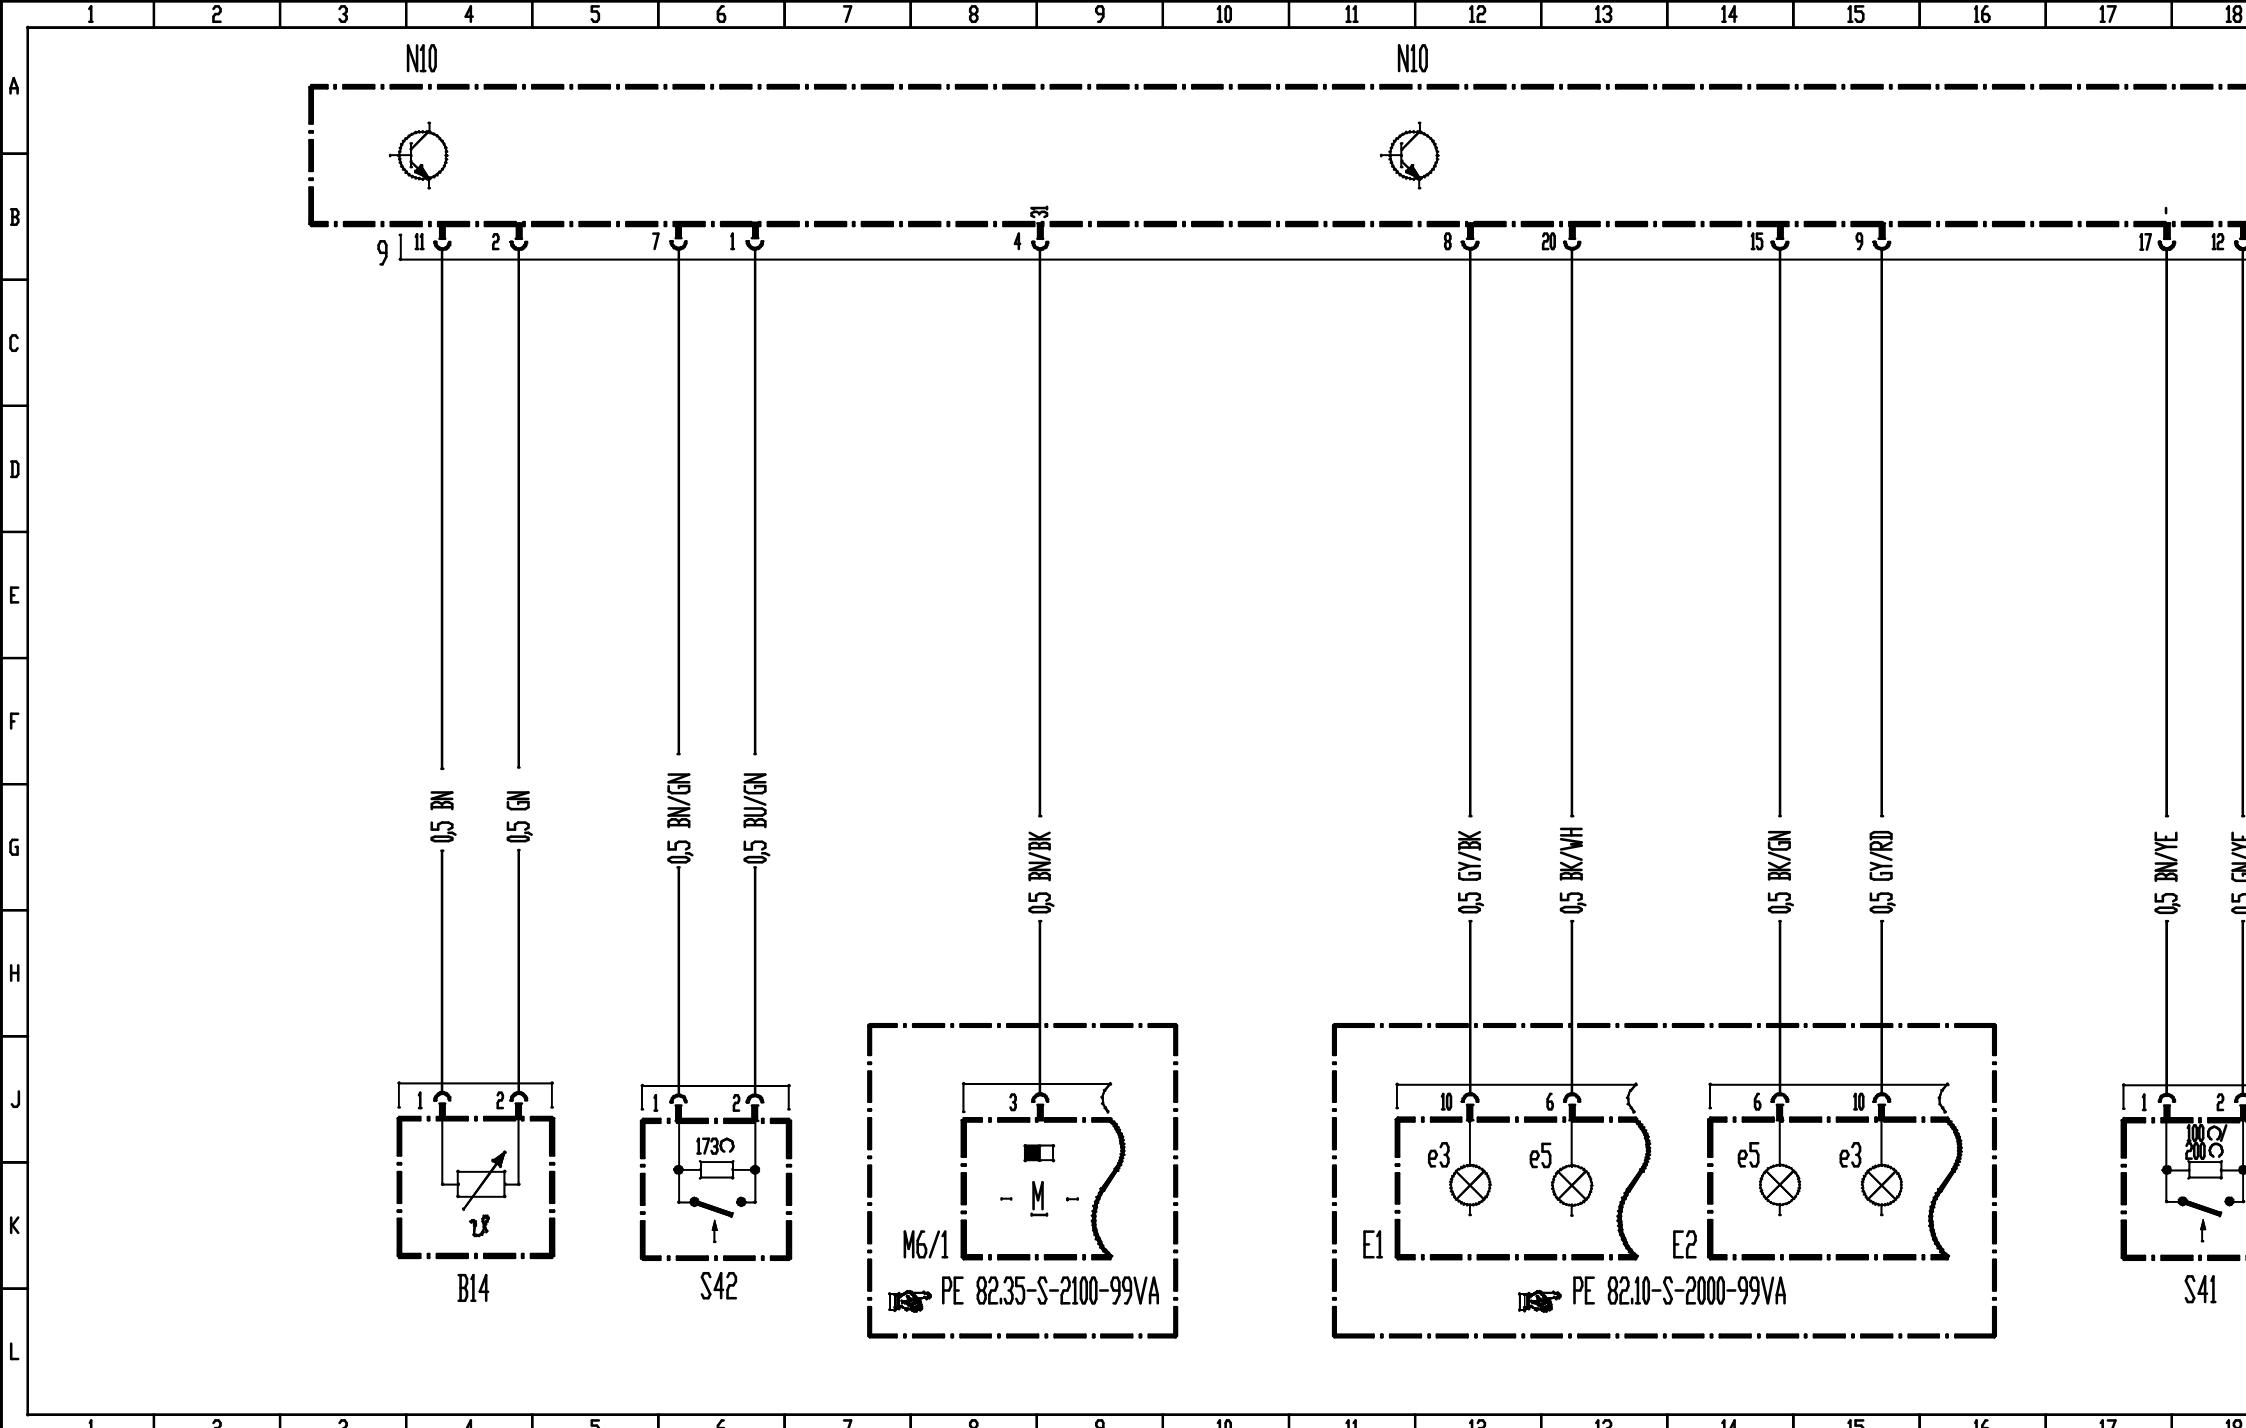


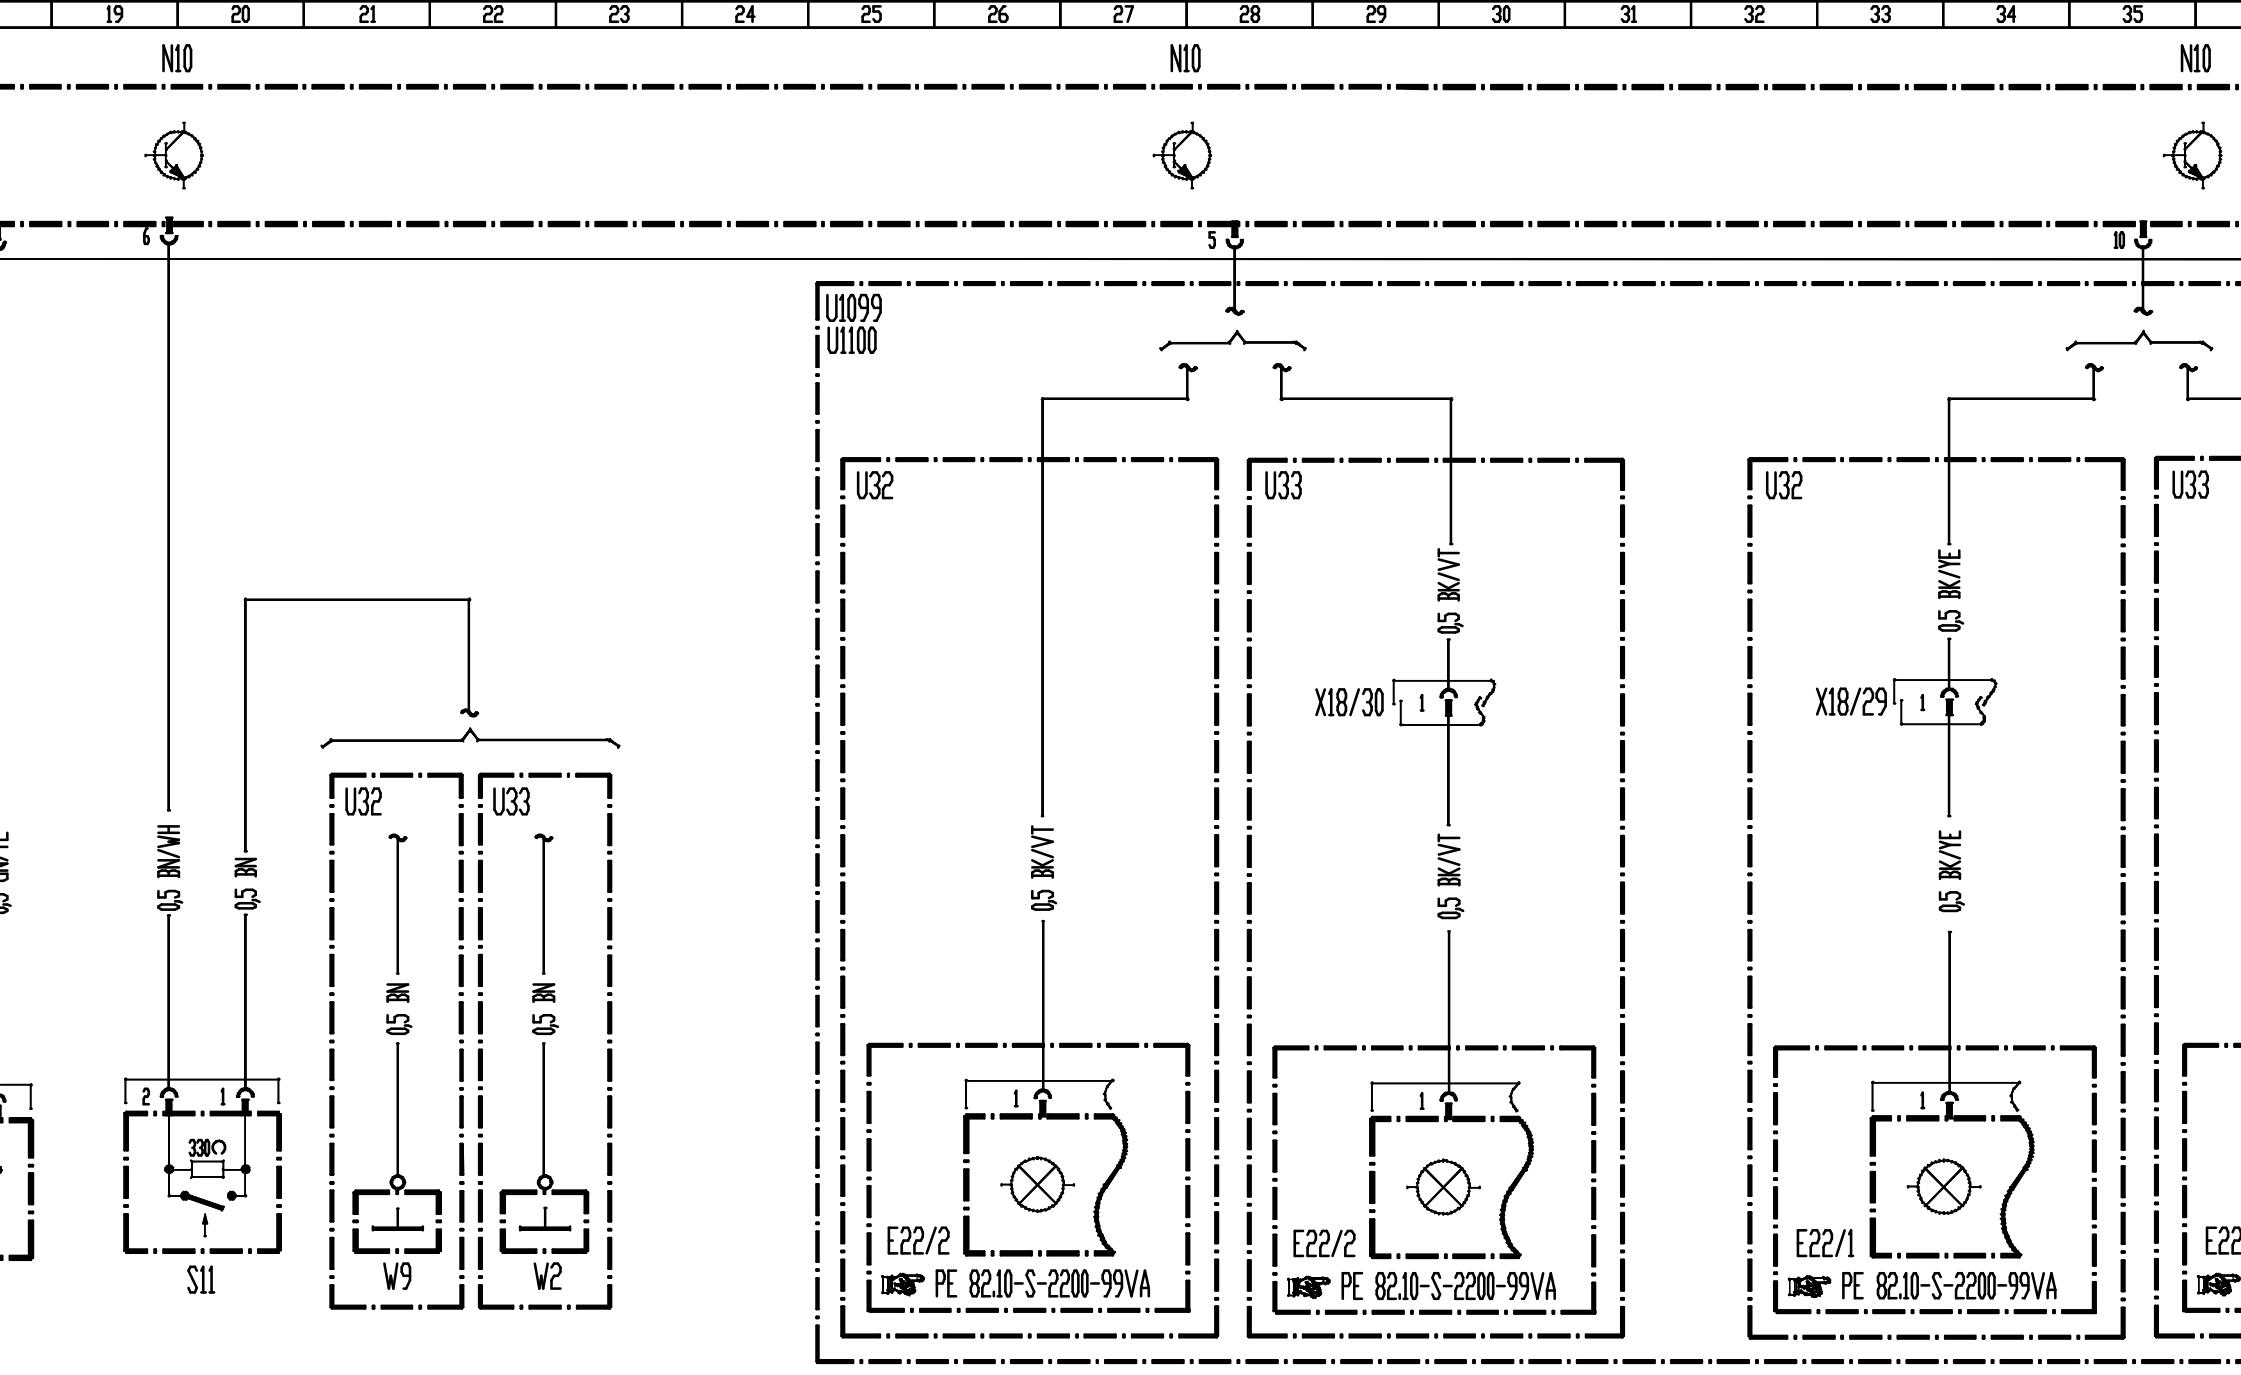



36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N10

N10

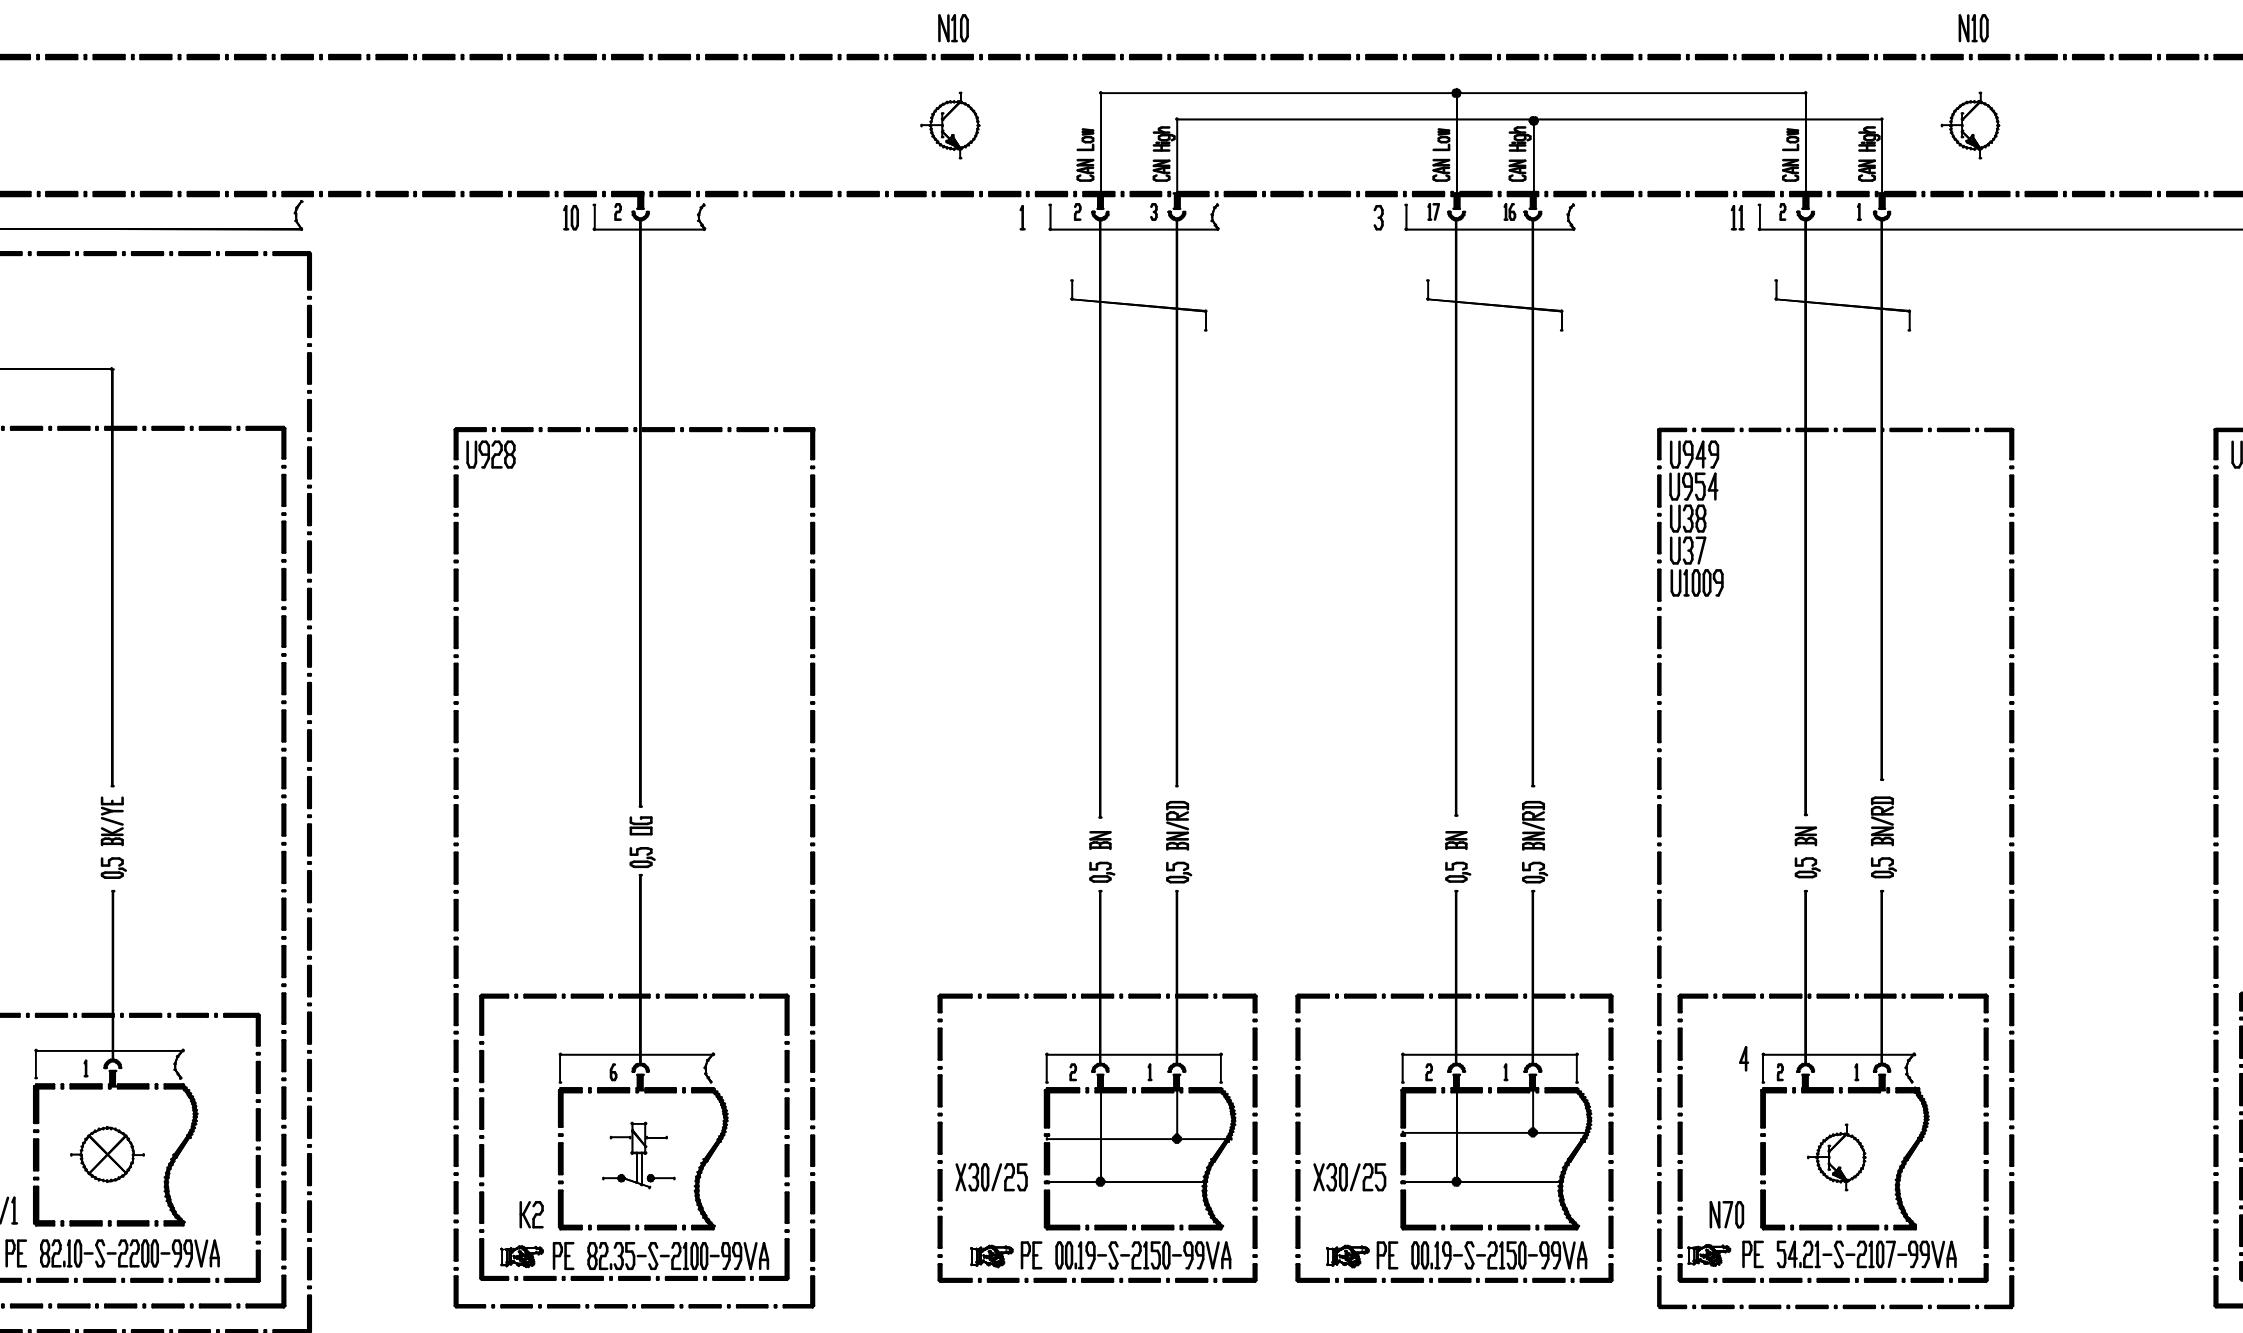

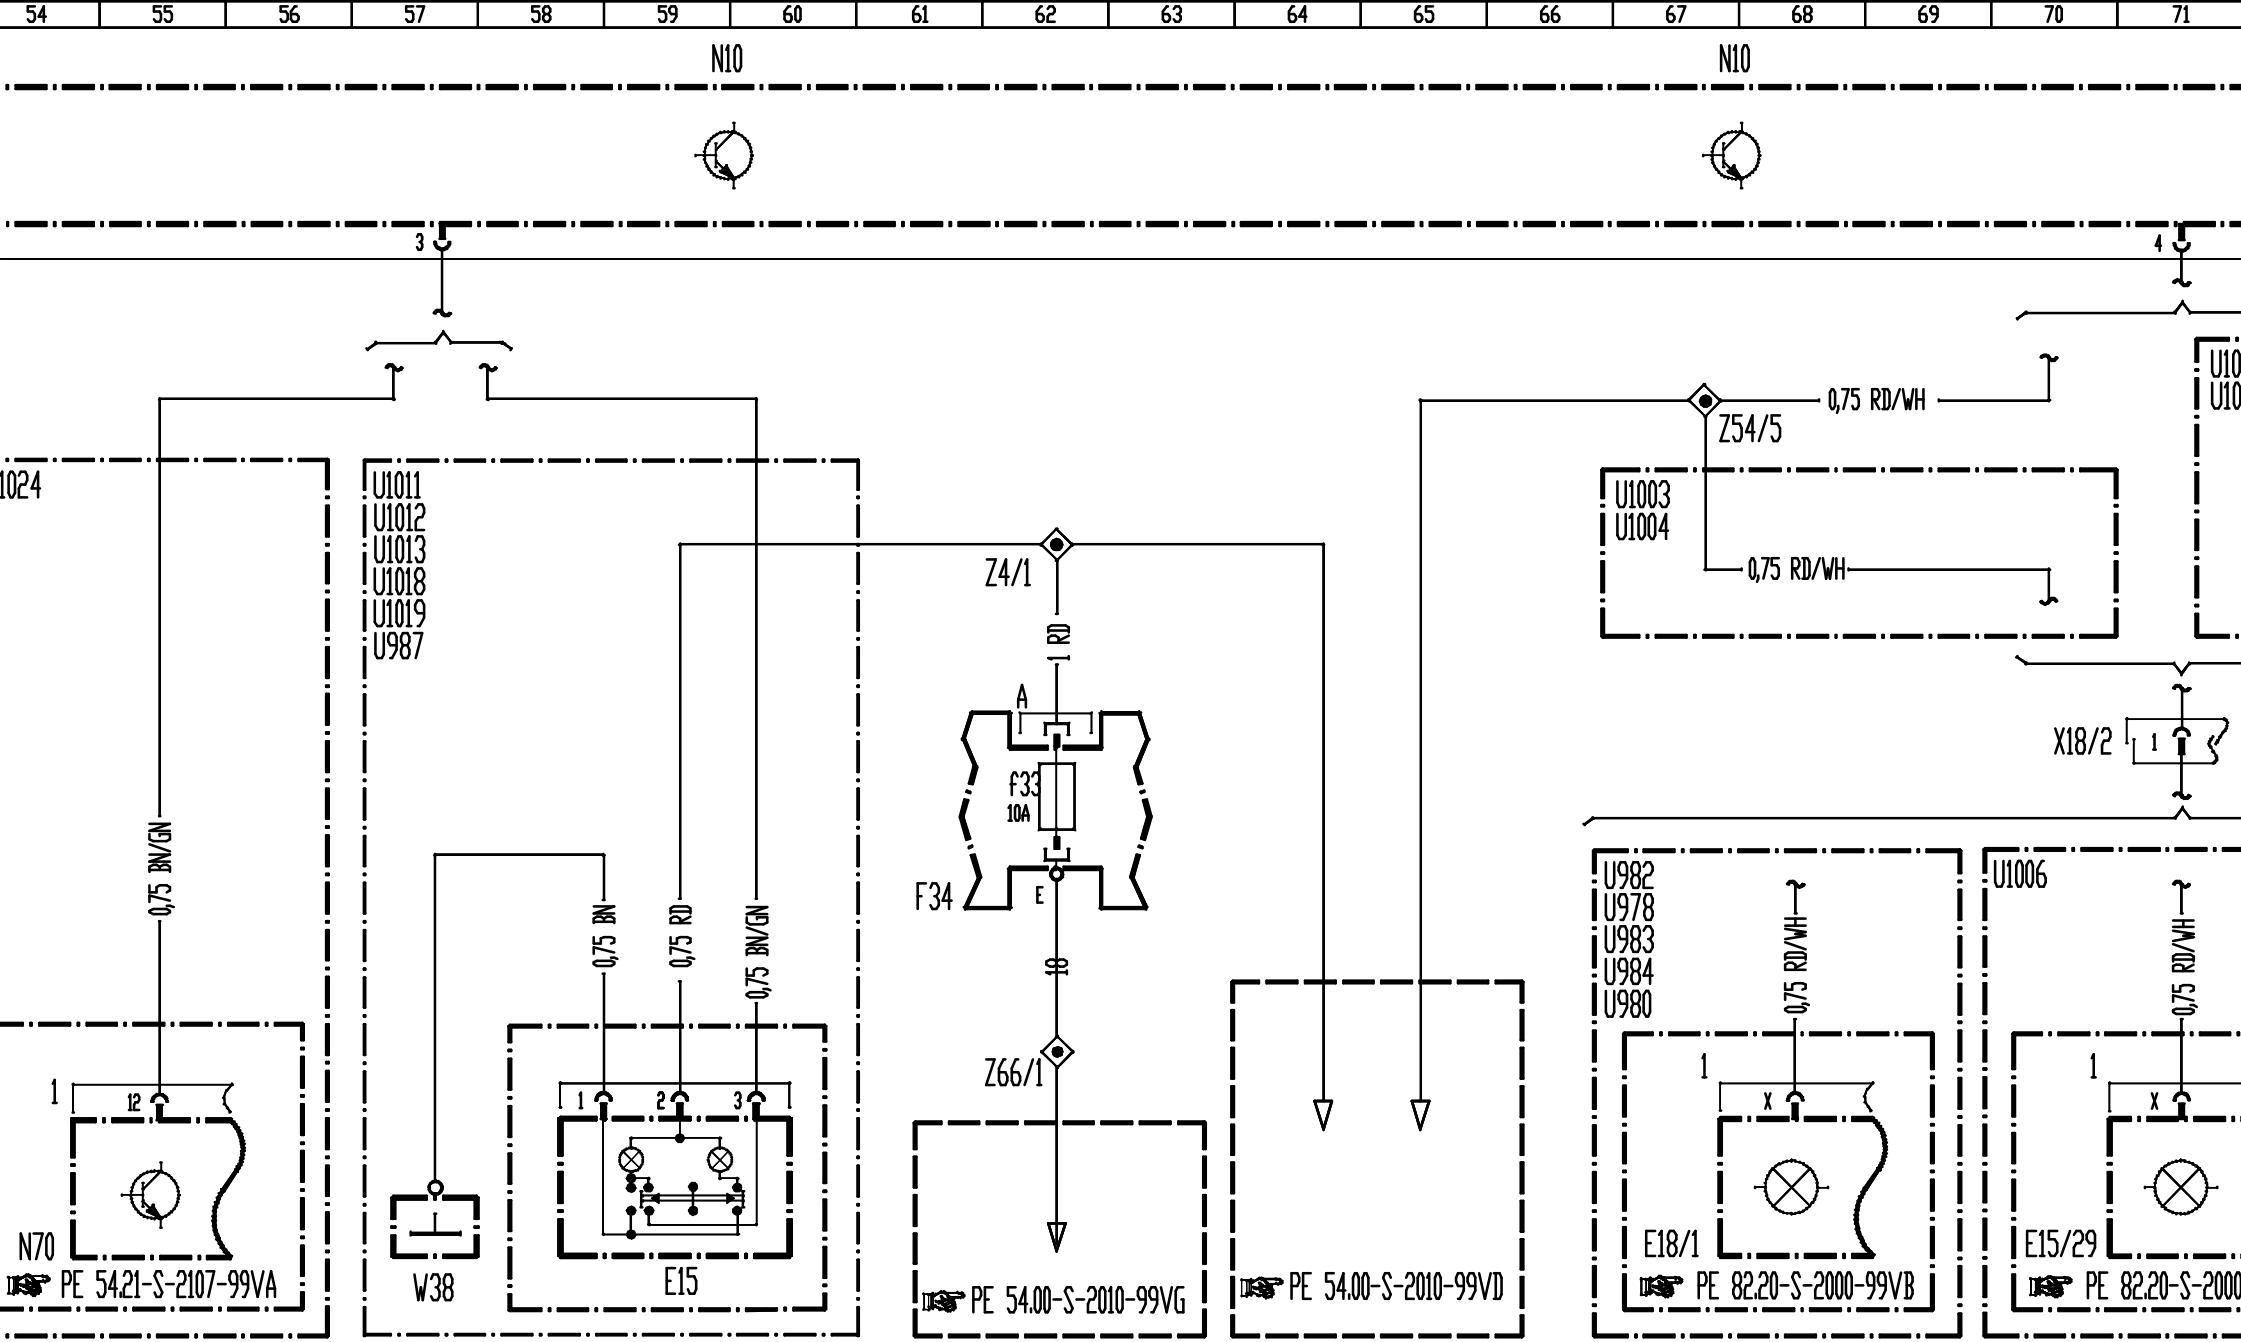

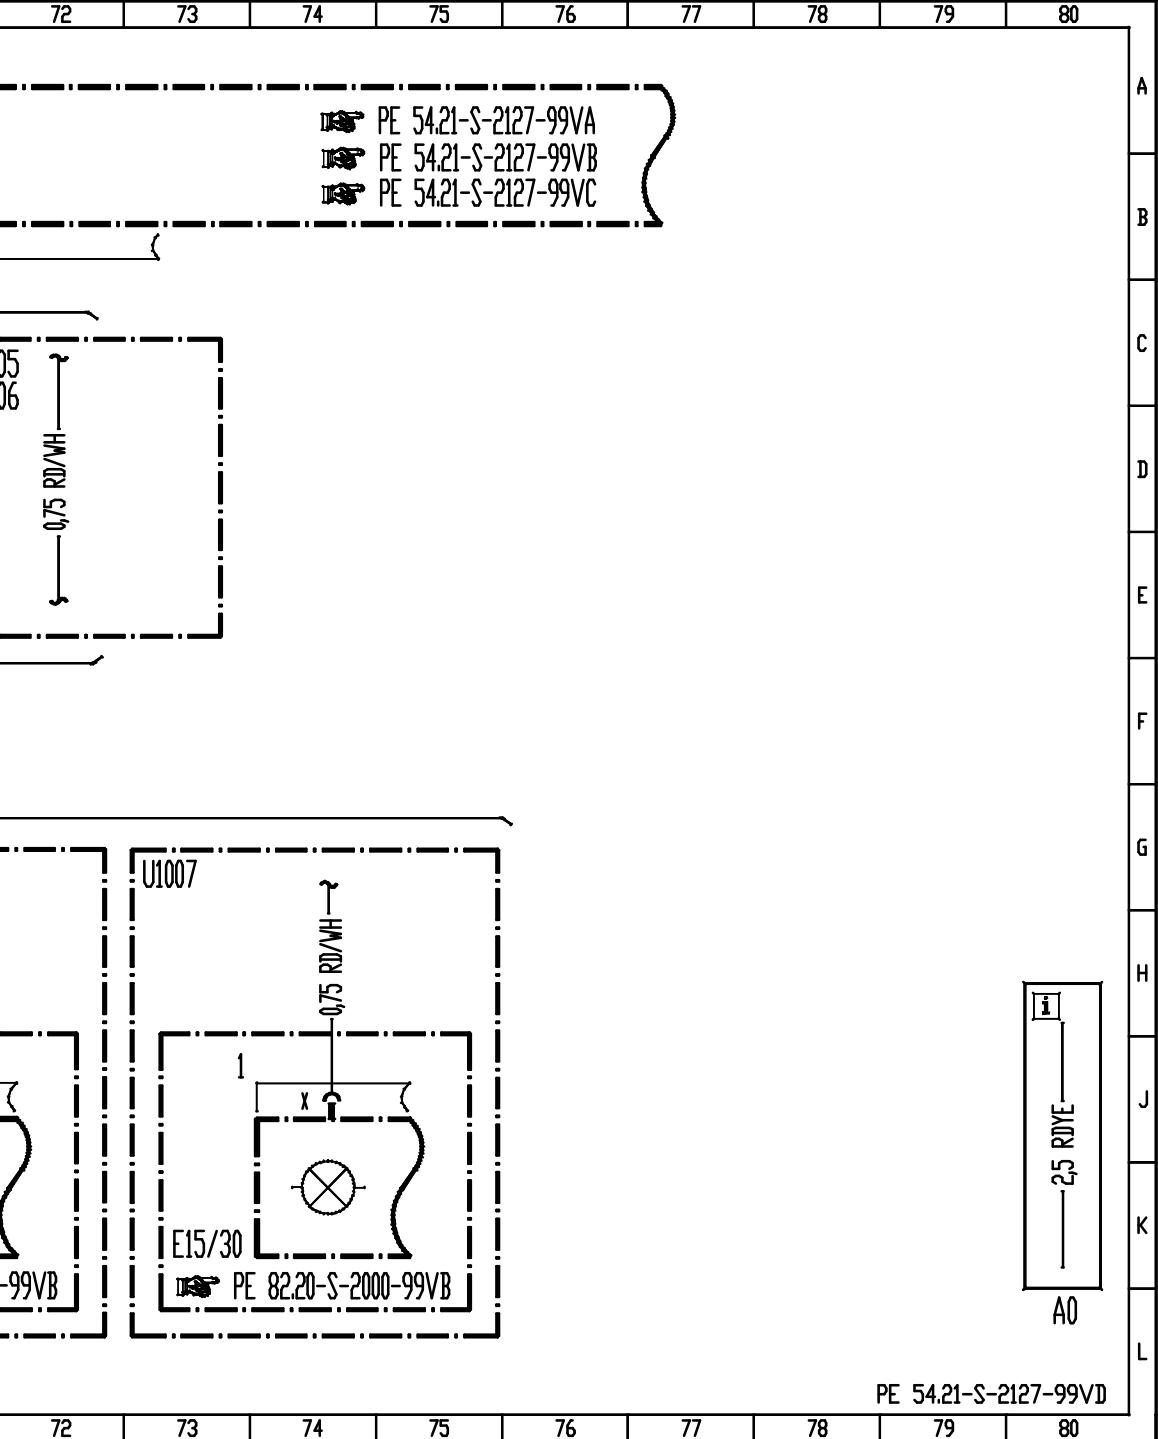

Exterior lights

Chapter 9


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 except CODE (L84) Additional turn signal lamps on rear of roof


| | | | |
|---------------------|--|------------------------|---------------------|
| PE82.10-S-2000-99VA | Wiring diagram of exterior lights | | PE82.10-S-2000-99VA |
| PE82.10-S-2000-60VA | Legend for wiring diagram of exterior lights | | PE82.10-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|--|---|--|
| PE82.10-S-2000-60VA | Legend for wiring diagram of exterior lights | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 except CODE (L84) Additional turn signal lamps on rear of roof | |
|---------------------|--|---|--|



| Code | Designation | Coordinates |
|----------|--|------------------|
| E1 | Lamp unit, left front | 27A 34A |
| E1e1 | High beam, left | 47B |
| E1e2 | Low beam, left | 48B |
| E1e3 | Standing and parking lamp, left | 32B 44B |
| E1e4 | Front fog lamp, left | 34B 46B |
| E1e5 | Turn signal lamp, left | 32B 45B |
| E2 | Lamp unit, right front | 41A 47A |
| F34 | Fuse block, 22-pin | 4H |
| F34f21 | Exterior lamp switch fuse | 4G |
| K40/9 | Fuse and relay block | 18L |
| K40/9f5 | Data link connector fuse, exterior lamp switch, instrument cluster | 19K |
| K40/9f15 | Headlamp range adjustment fuse | 22K 26K |
| N10 | SAM control unit | 7L 31L 44L |
| S1 | Exterior lamp switch | 7A 20A |
| U928 | Valid for headlamp cleaning system | 7C |
| U988 | Valid without lowerable/raisable rear air suspension | 21C 39C |

| | | |
|--------|---|------------|
| W2 | Ground (right front lamp unit) | 43L 50L |
| W9 | Ground (left front lamp unit) | 30L 37L |
| Z3/11 | Terminal 15 connector sleeve | 19G |
| Z36/6 | HRA [LWR] power supply connector sleeve | 26F 40G |
| Z36/12 | HRA [LWR] control bus connector sleeve | 25F 39G |
| Z66/1 | Additional fuse box feed connector sleeve | 4J |

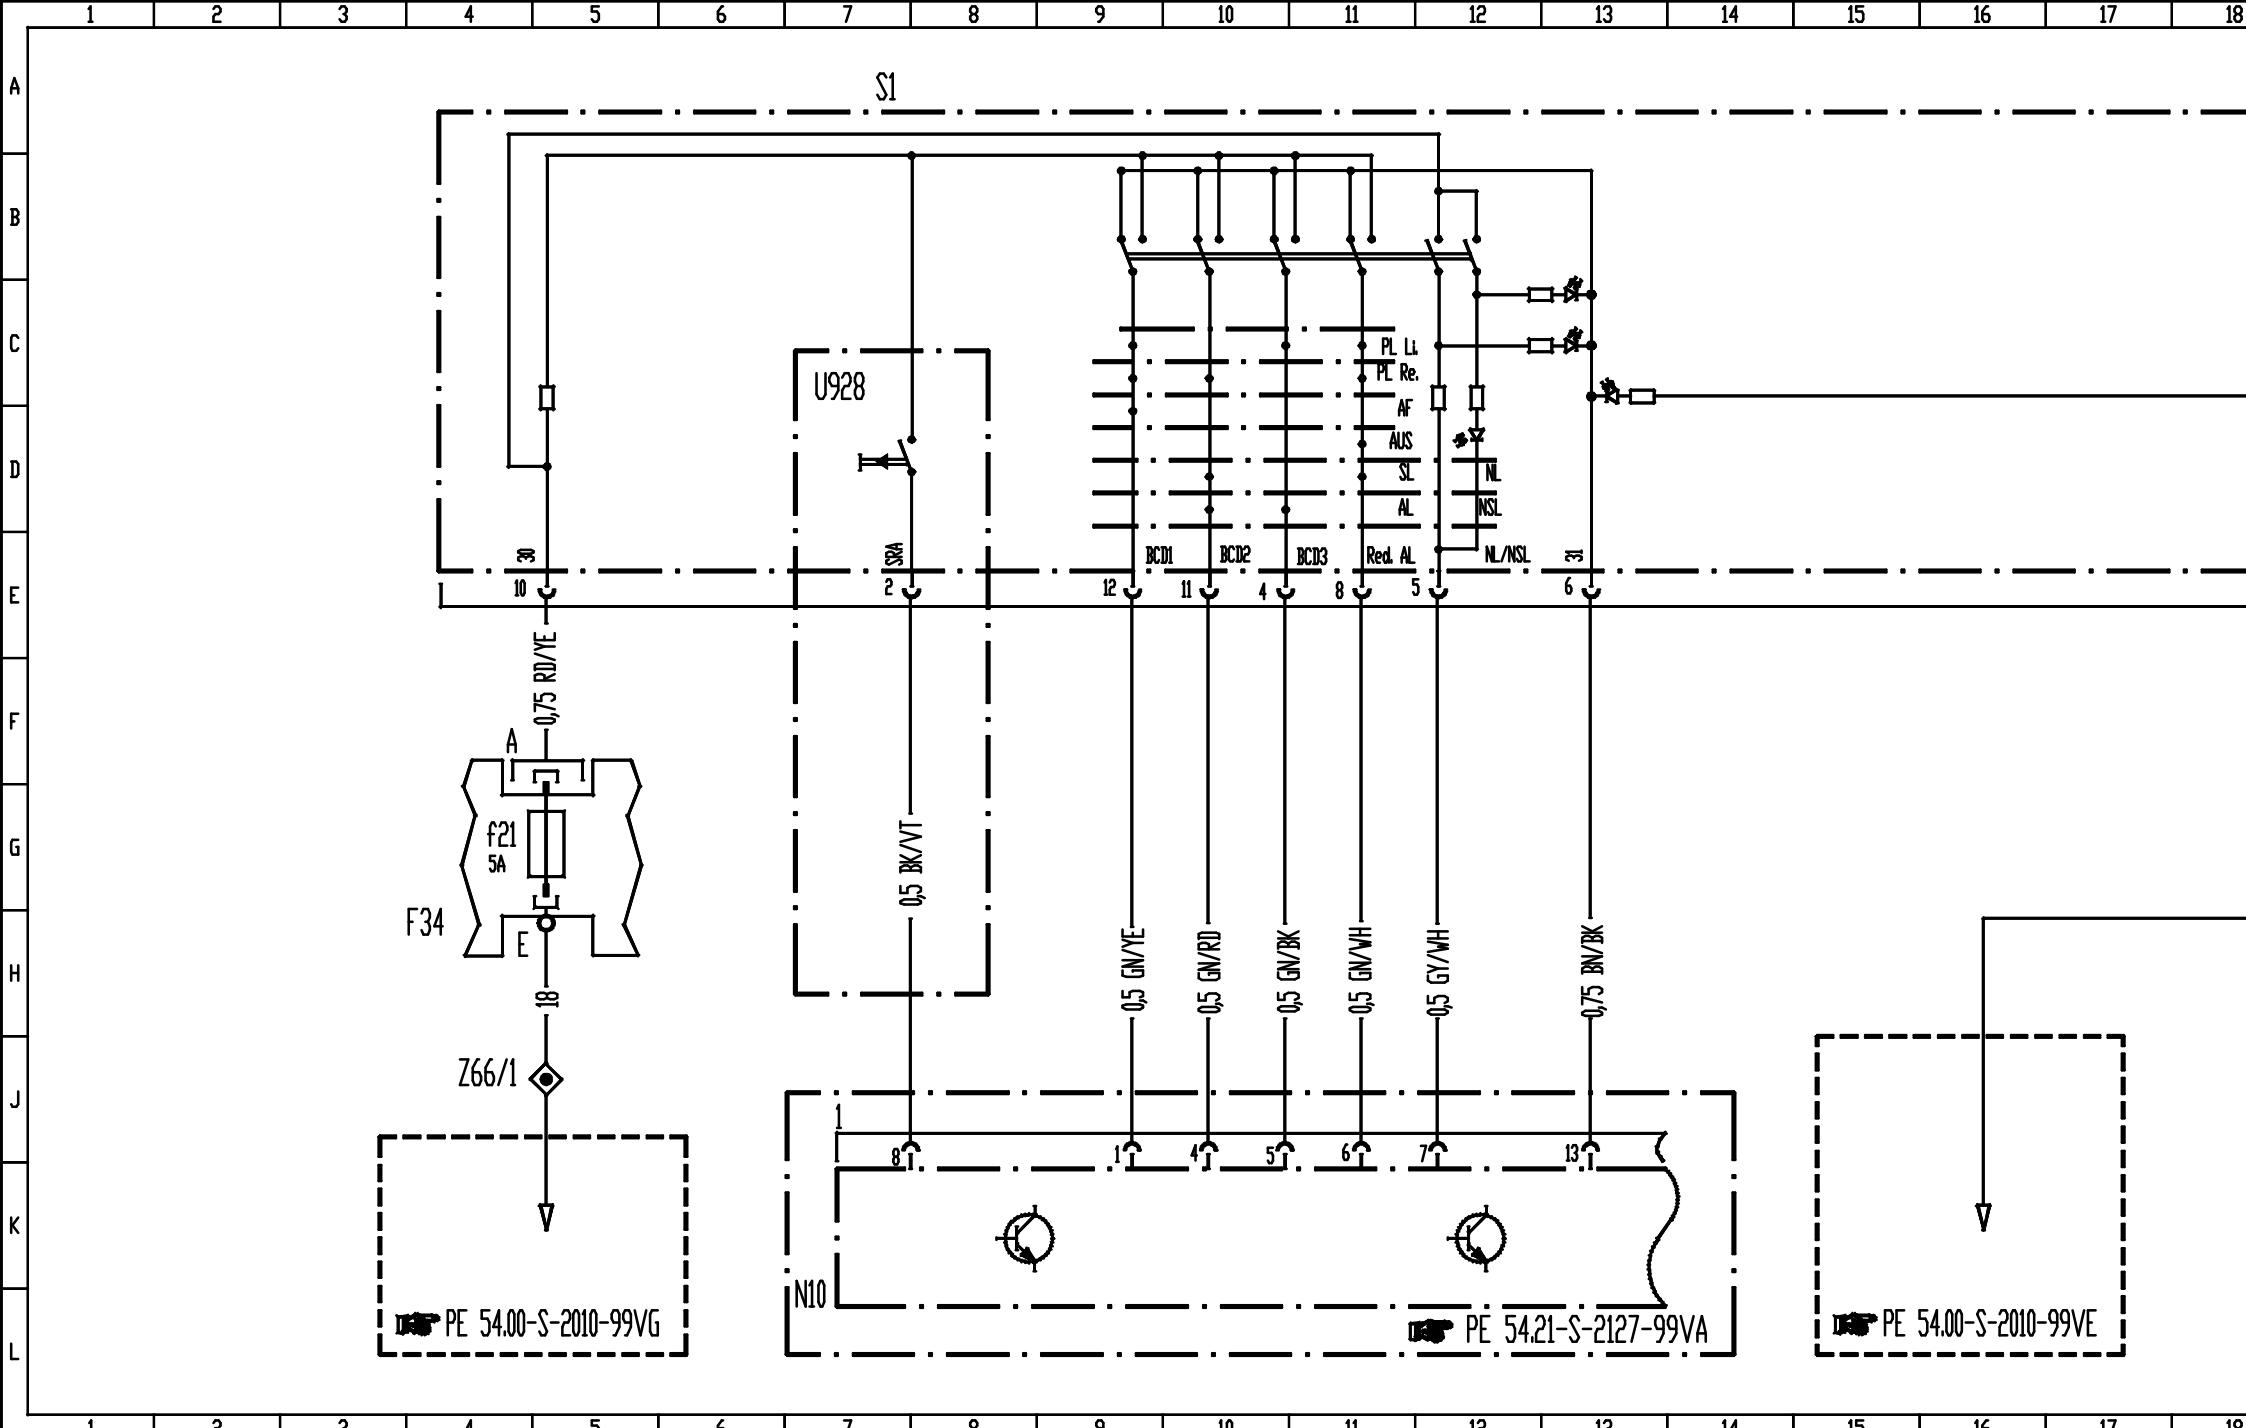

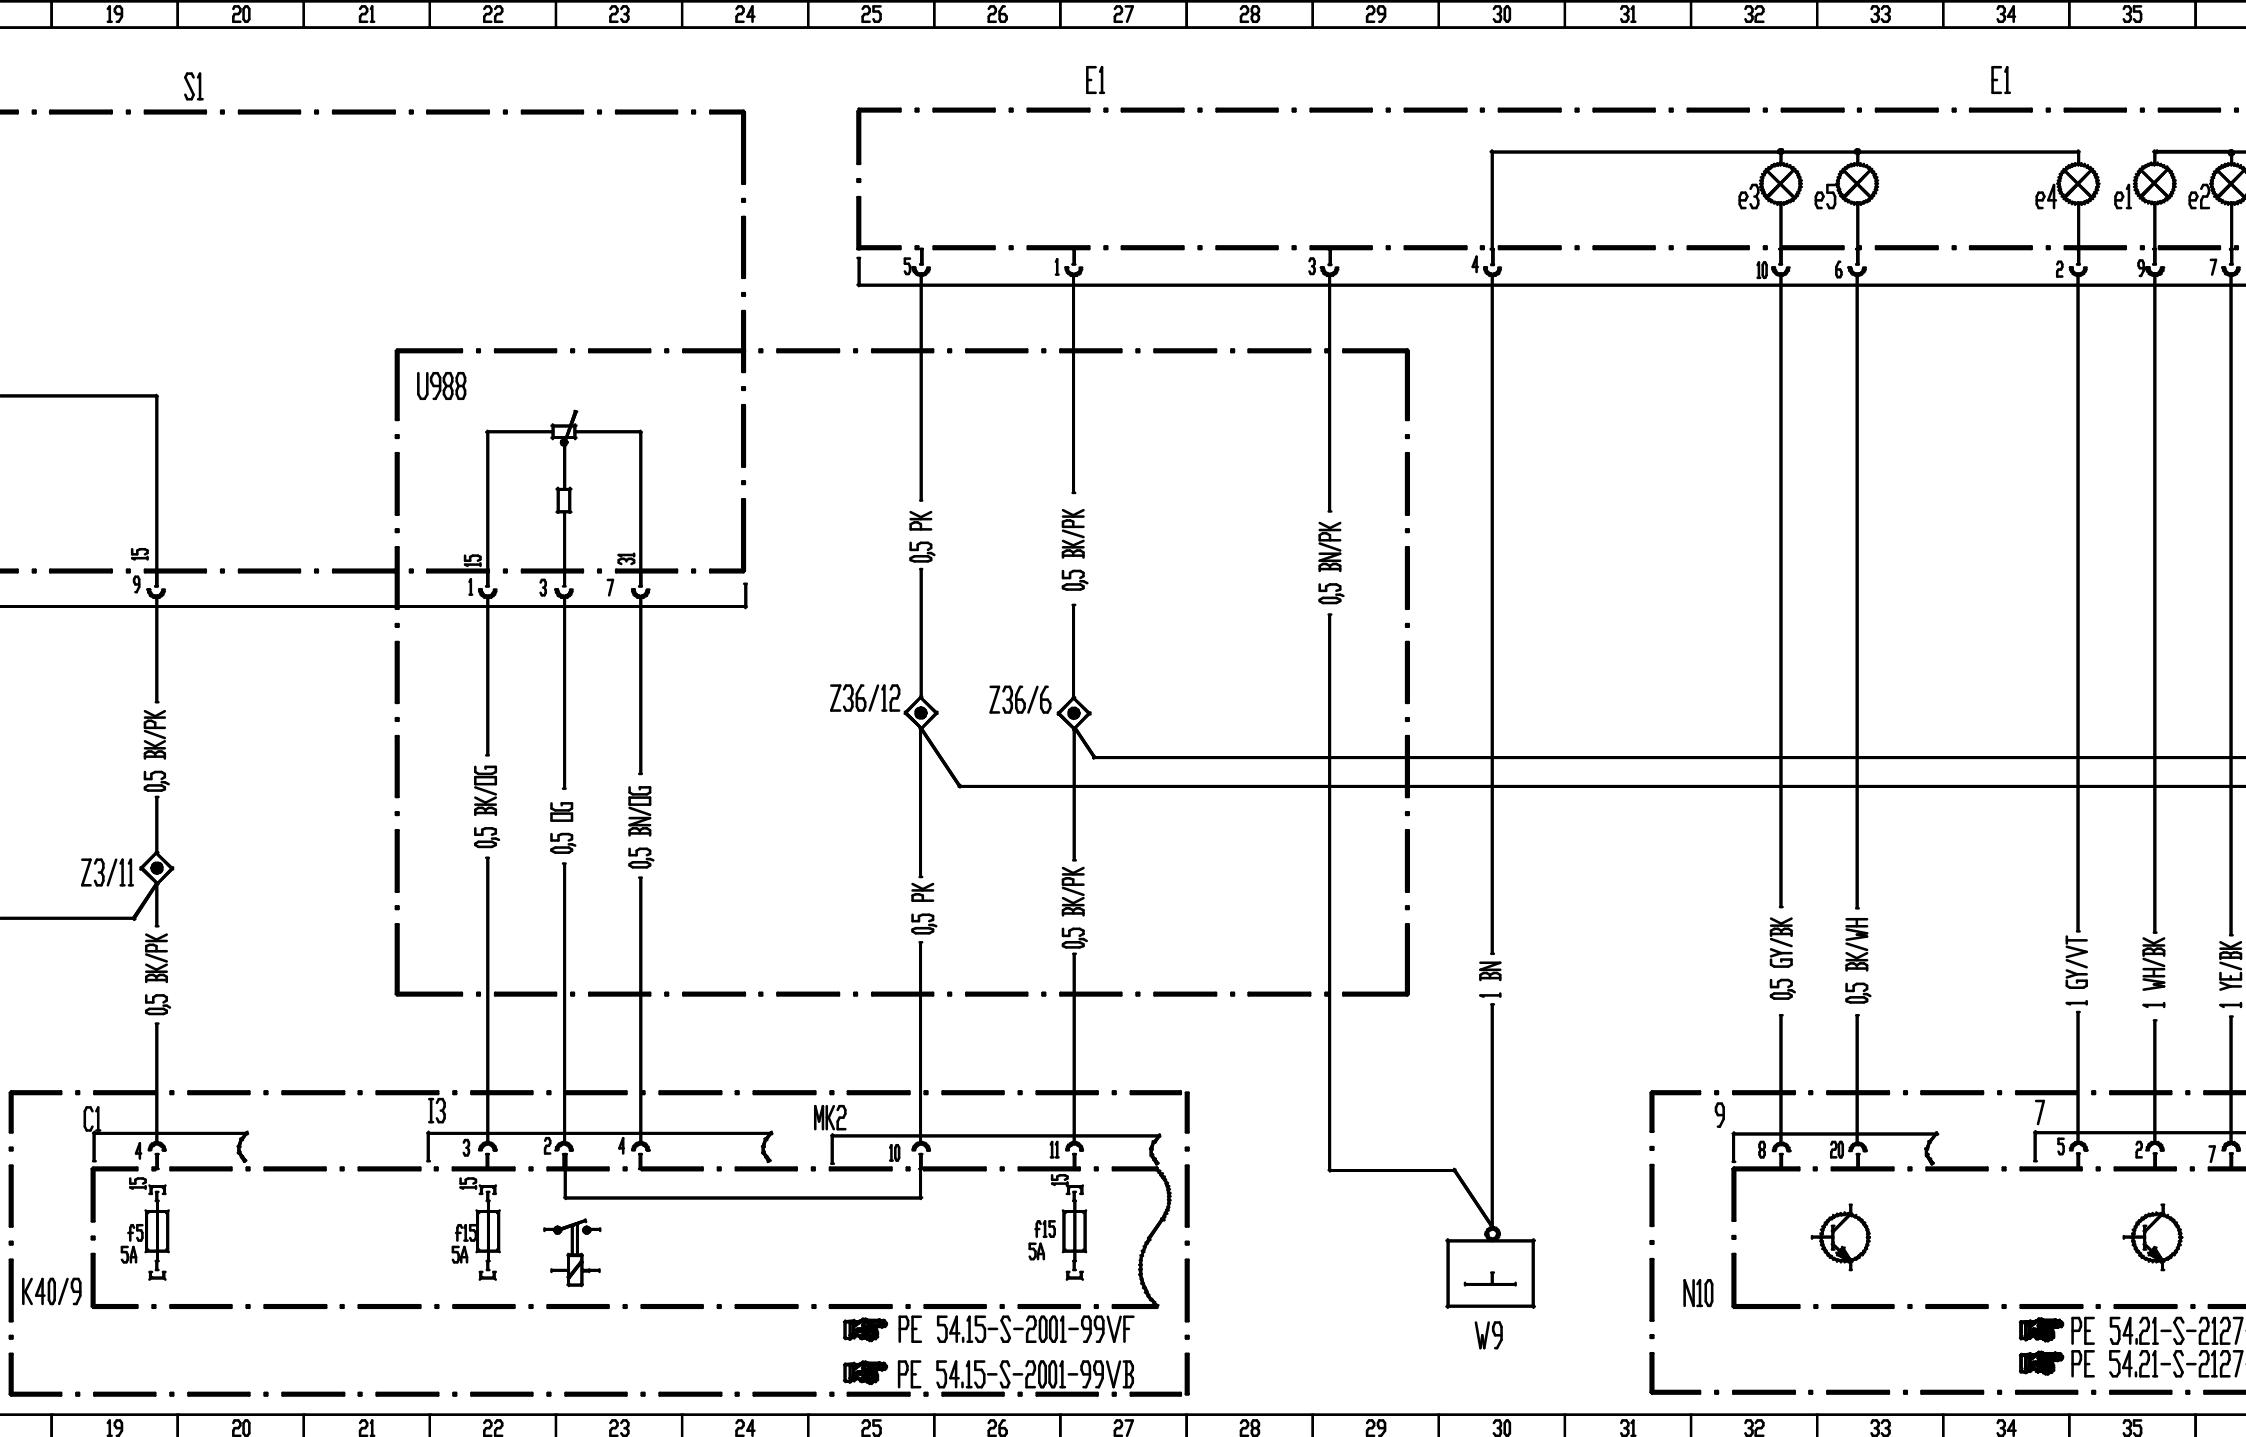

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

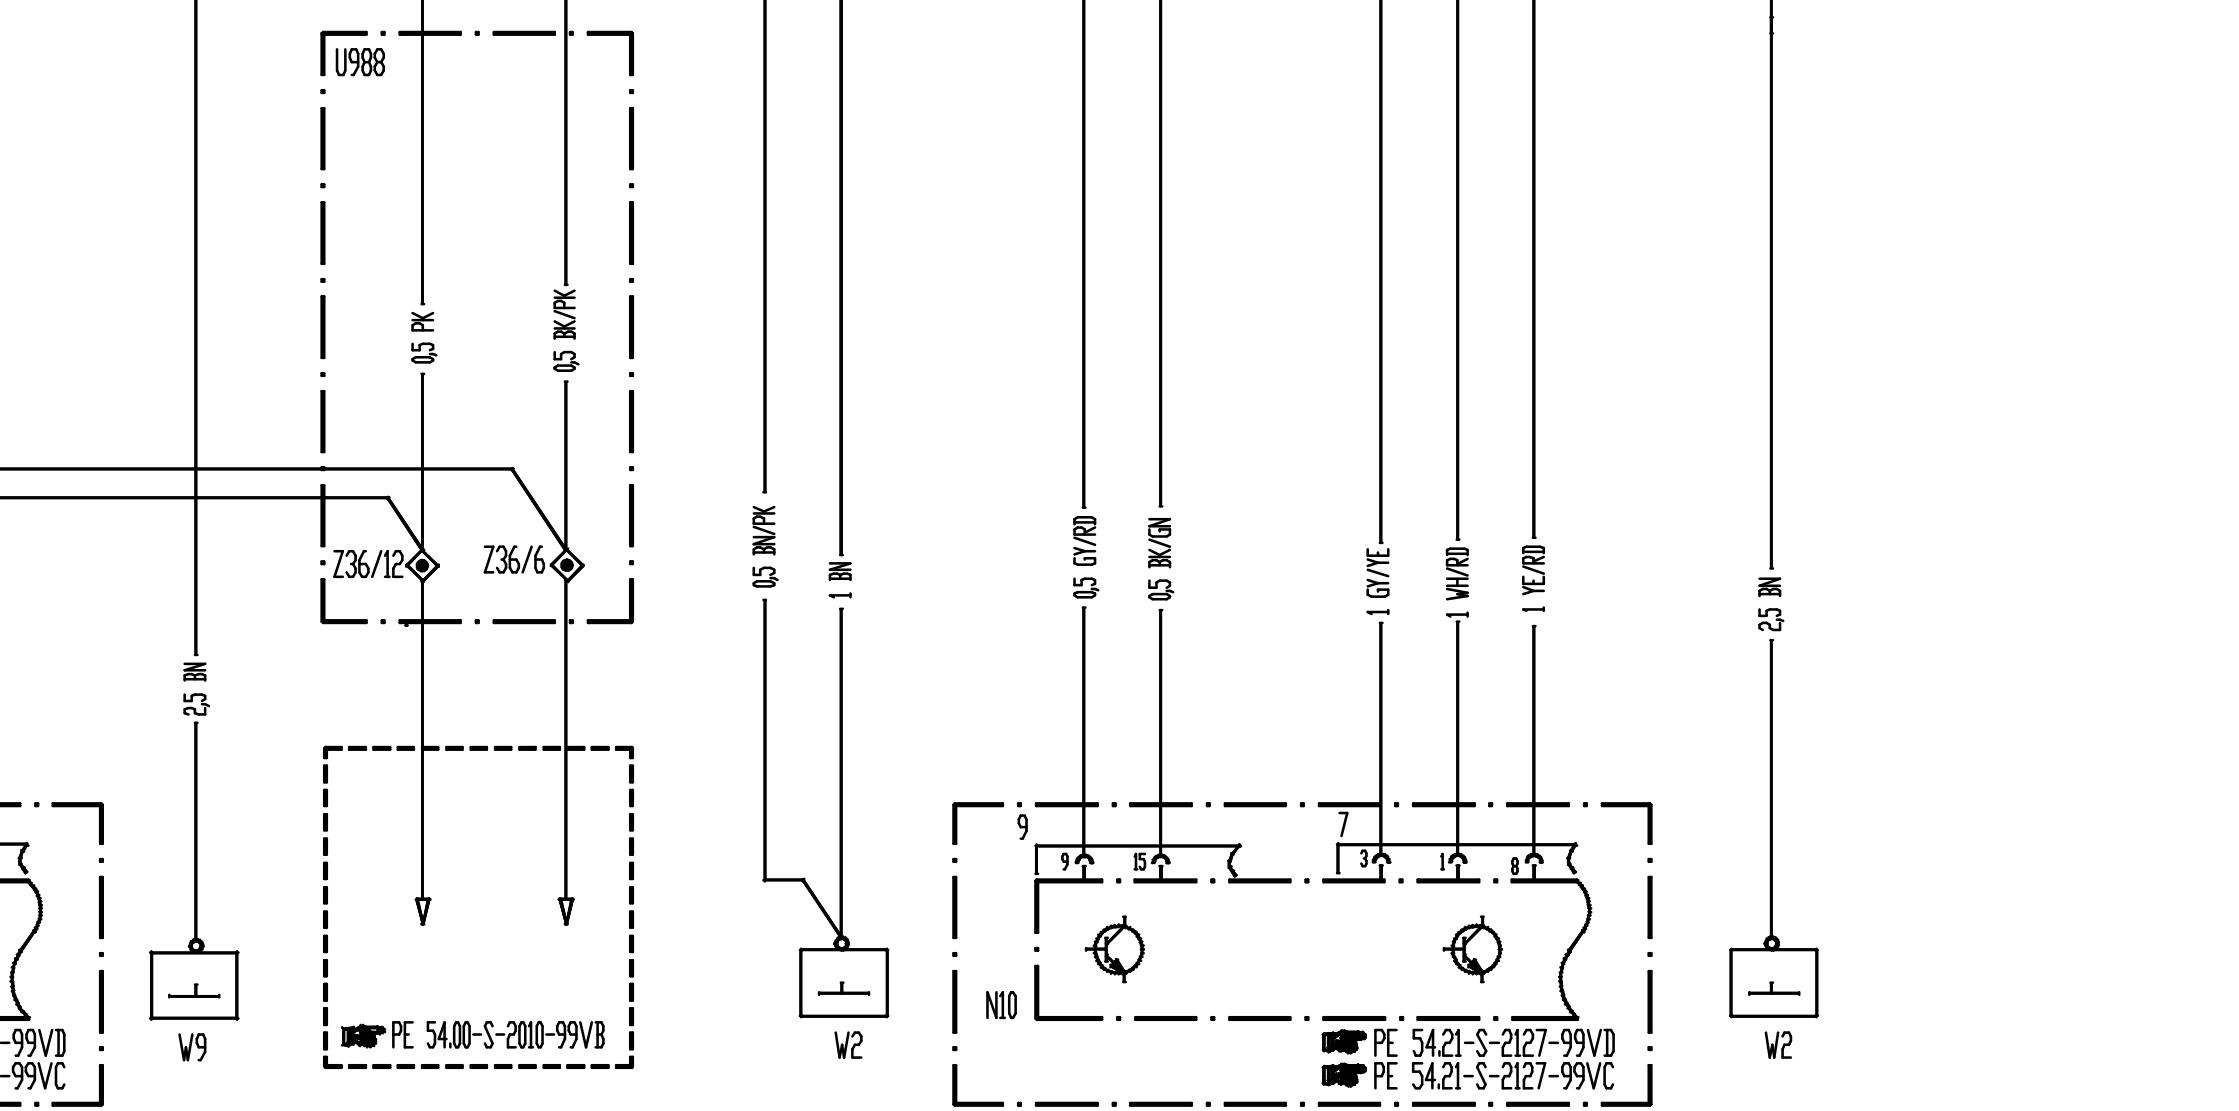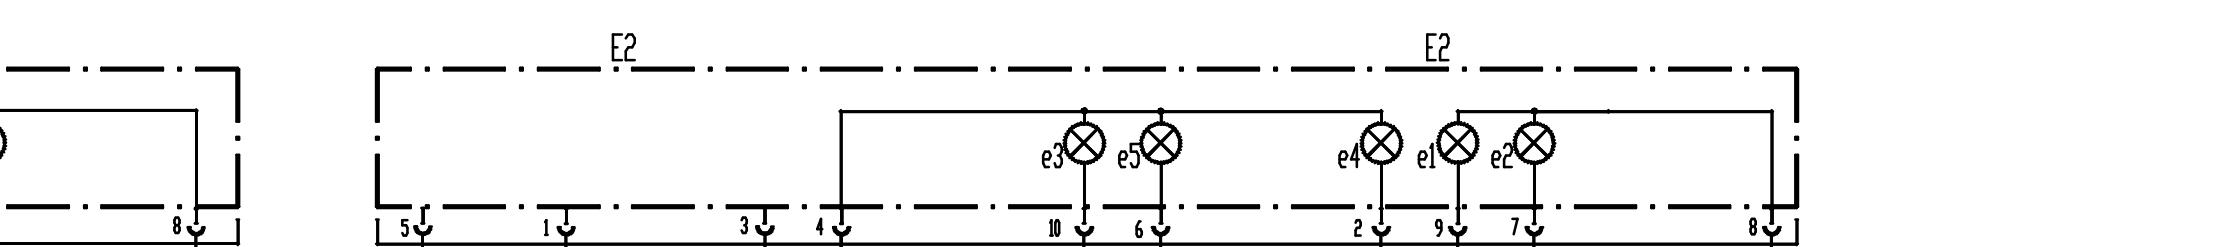


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with CODE (L84) Additional turn signal lamps on rear of roof


| | | | |
|---------------------|--|------------------------|---------------------|
| PE82.10-S-2000-99VB | Wiring diagram of exterior lights | | PE82.10-S-2000-99VB |
| PE82.10-S-2000-60VB | Legend for wiring diagram of exterior lights | | PE82.10-S-2000-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|---|--|
| PE82.10-S-2000-60VB | Legend for wiring diagram of exterior lights | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with CODE (L84) Additional turn signal lamps on rear of roof | |
|---------------------|--|---|--|


| Code | Designation | Coordinates |
|------|-----------------------------------|--------------------------|
| E3 | Taillamp, left | 5A 12A 35A 42A |
| E3e1 | Turn signal lamp, left | 6B 35B |
| E3e2 | Tail lamp and parking lamp, left | 4B 32B |
| E3e3 | Backup lamp, left | 12B 41B |
| E3e4 | Stop lamp, left | 5B 33B |
| E3e5 | Rear fog lamp, left | 16B 45B |
| E4 | Taillamp, right | 20A 23A 49A 55A |
| E4e1 | Turn signal lamp, right | 23B 53B |
| E4e2 | Tail lamp and parking lamp, right | 20B 50B |
| E4e3 | Backup lamp, right | 19B 49B |
| E4e4 | Stop lamp, right | 21B 51B |
| E4e5 | Rear fog lamp, right | 18B 48B |

| | | |
|--------|--|---------------------------------------|
| N10 | SAM control unit | 3K 14K 17K 32L 43L 46L |
| U10 | Valid for Sound 40 Pro radio | 11G 40H |
| U15 | Valid for screen in rear and DVD player | 11F 40H |
| U16 | Valid for screen in rear, DVD player and TV tuner | 11G 40H |
| U25 | Valid for backup warning system | 11G 40J |
| U32 | Valid for left-hand drive vehicles | 15C 45C |
| U33 | Valid for right-hand drive vehicles | 18C 48C |
| U904 | Valid for qualification as passenger car | 7D 23D 35F 53F |
| U976 | Valid for additional turn signal lamps on rear of roof | 29A |
| U977 | Valid without additional turn signal lamps on rear of roof | 1A |
| W29/8 | Ground (left D-pillar) | 2L 31L |
| W29/9 | Ground (right D-pillar) | 27L 58L |
| X28/31 | Backup alarm connector | 11F 40G |
| X52/5 | Left taillamp connector | 30E |
| X52/6 | Right taillamp connector | 47E |
| Z30/1 | Left turn signal indicator connector sleeve | 7F 35G |
| Z30/2 | Right turn signal indicator connector sleeve | 23F 53G |

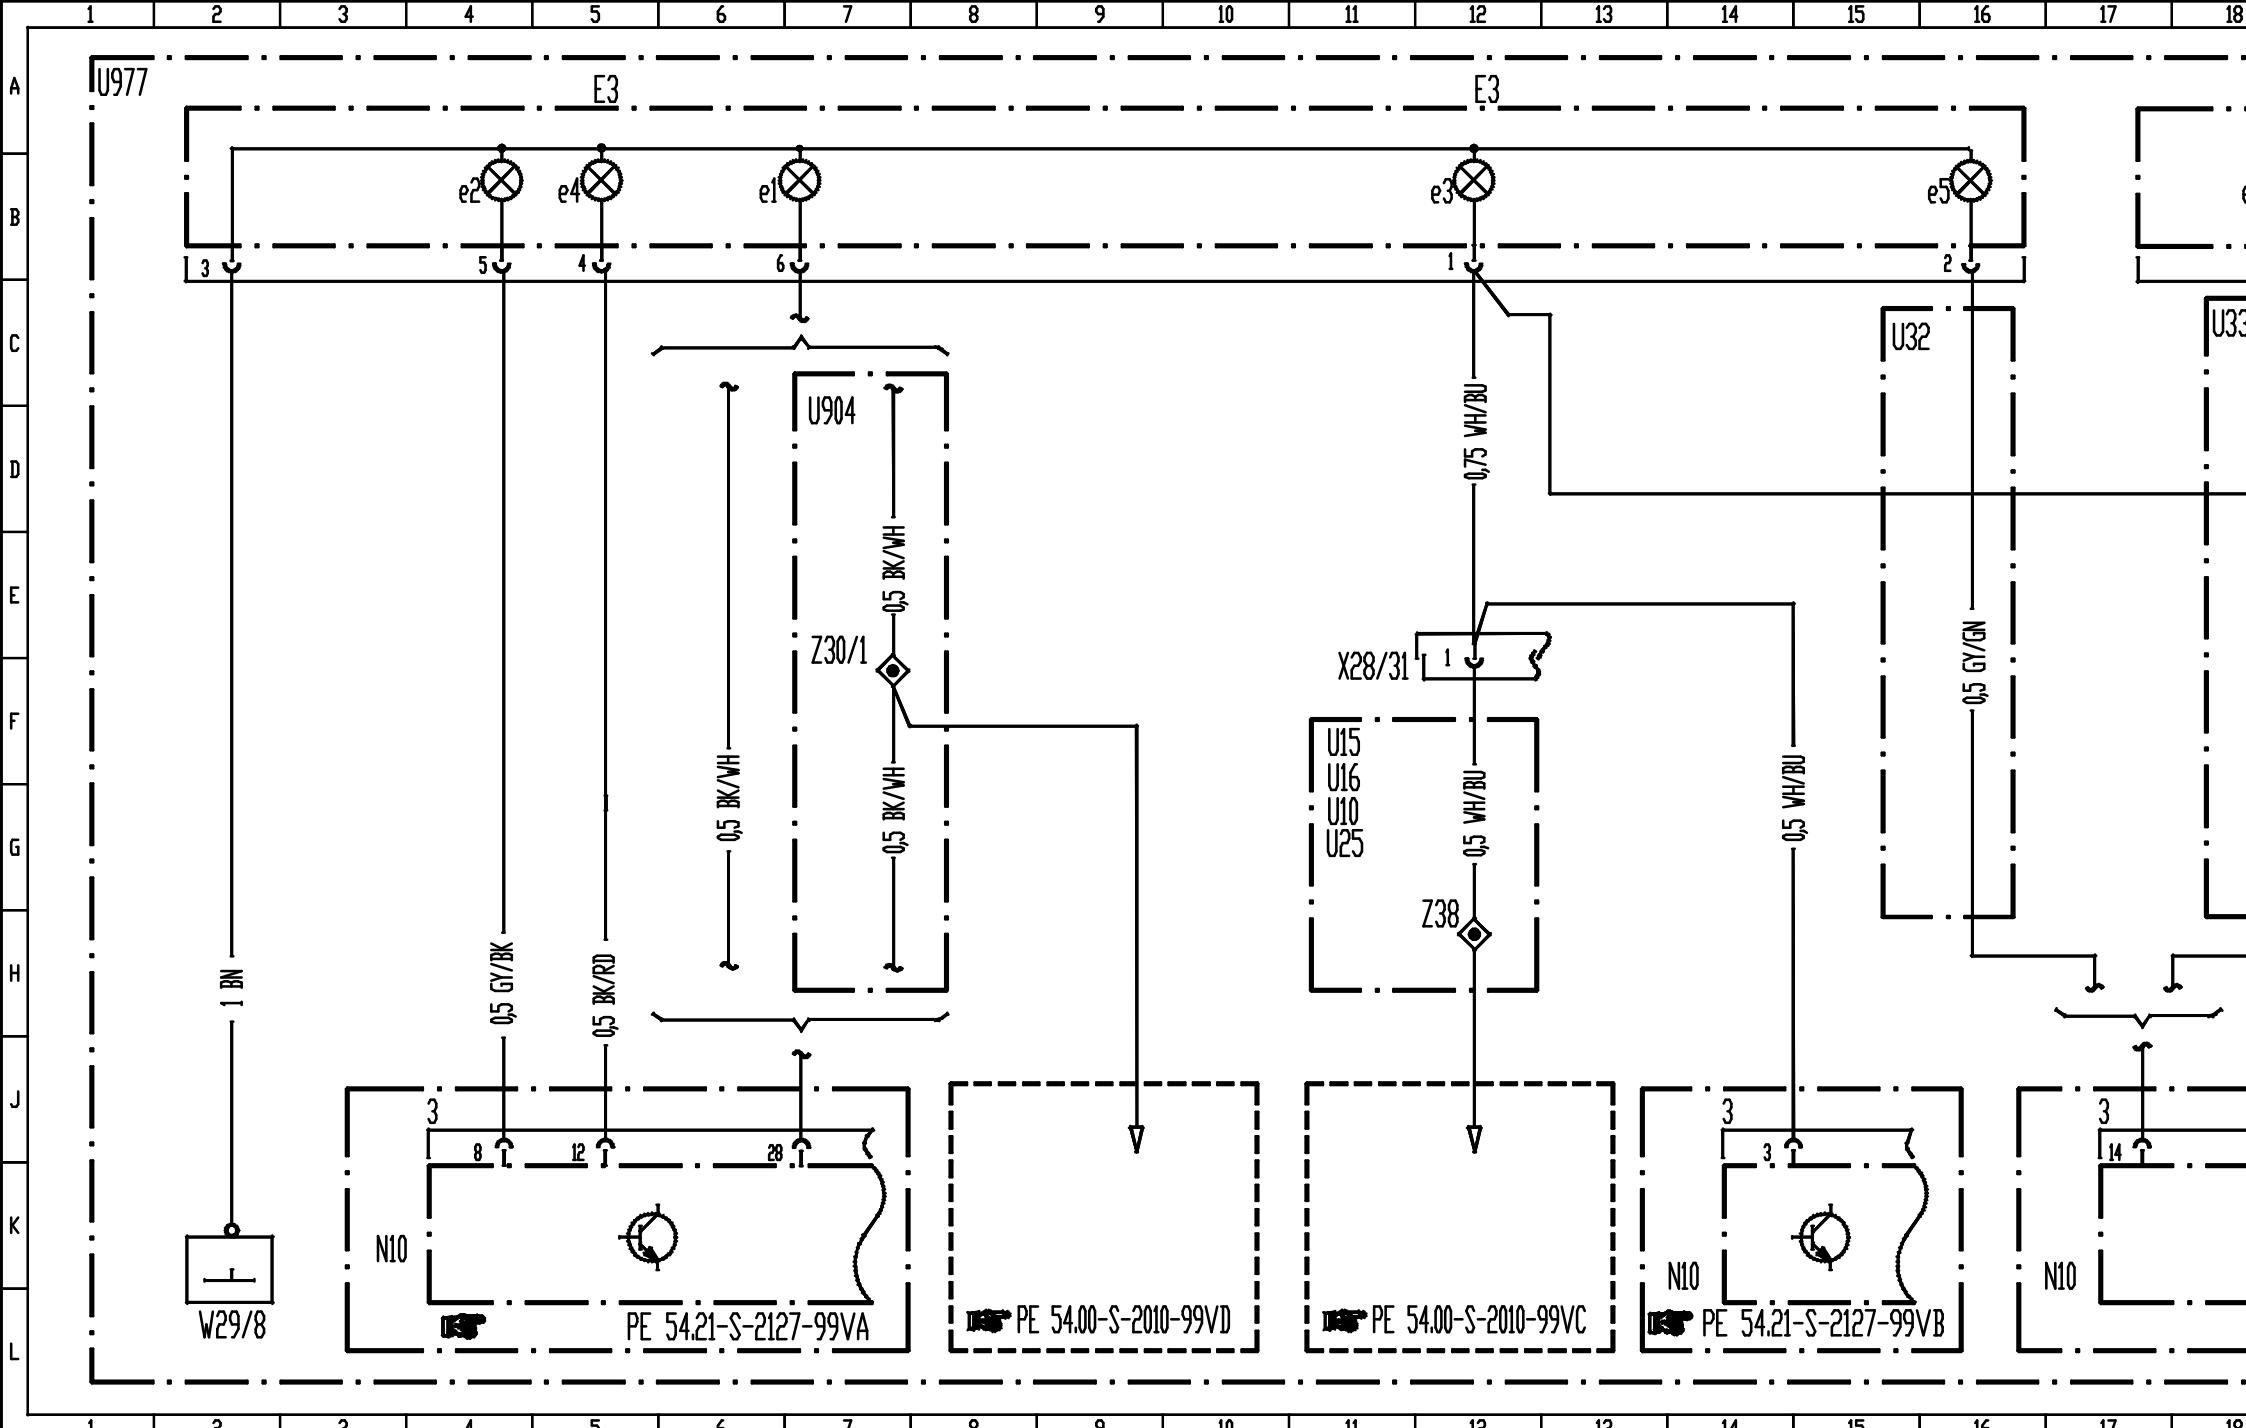

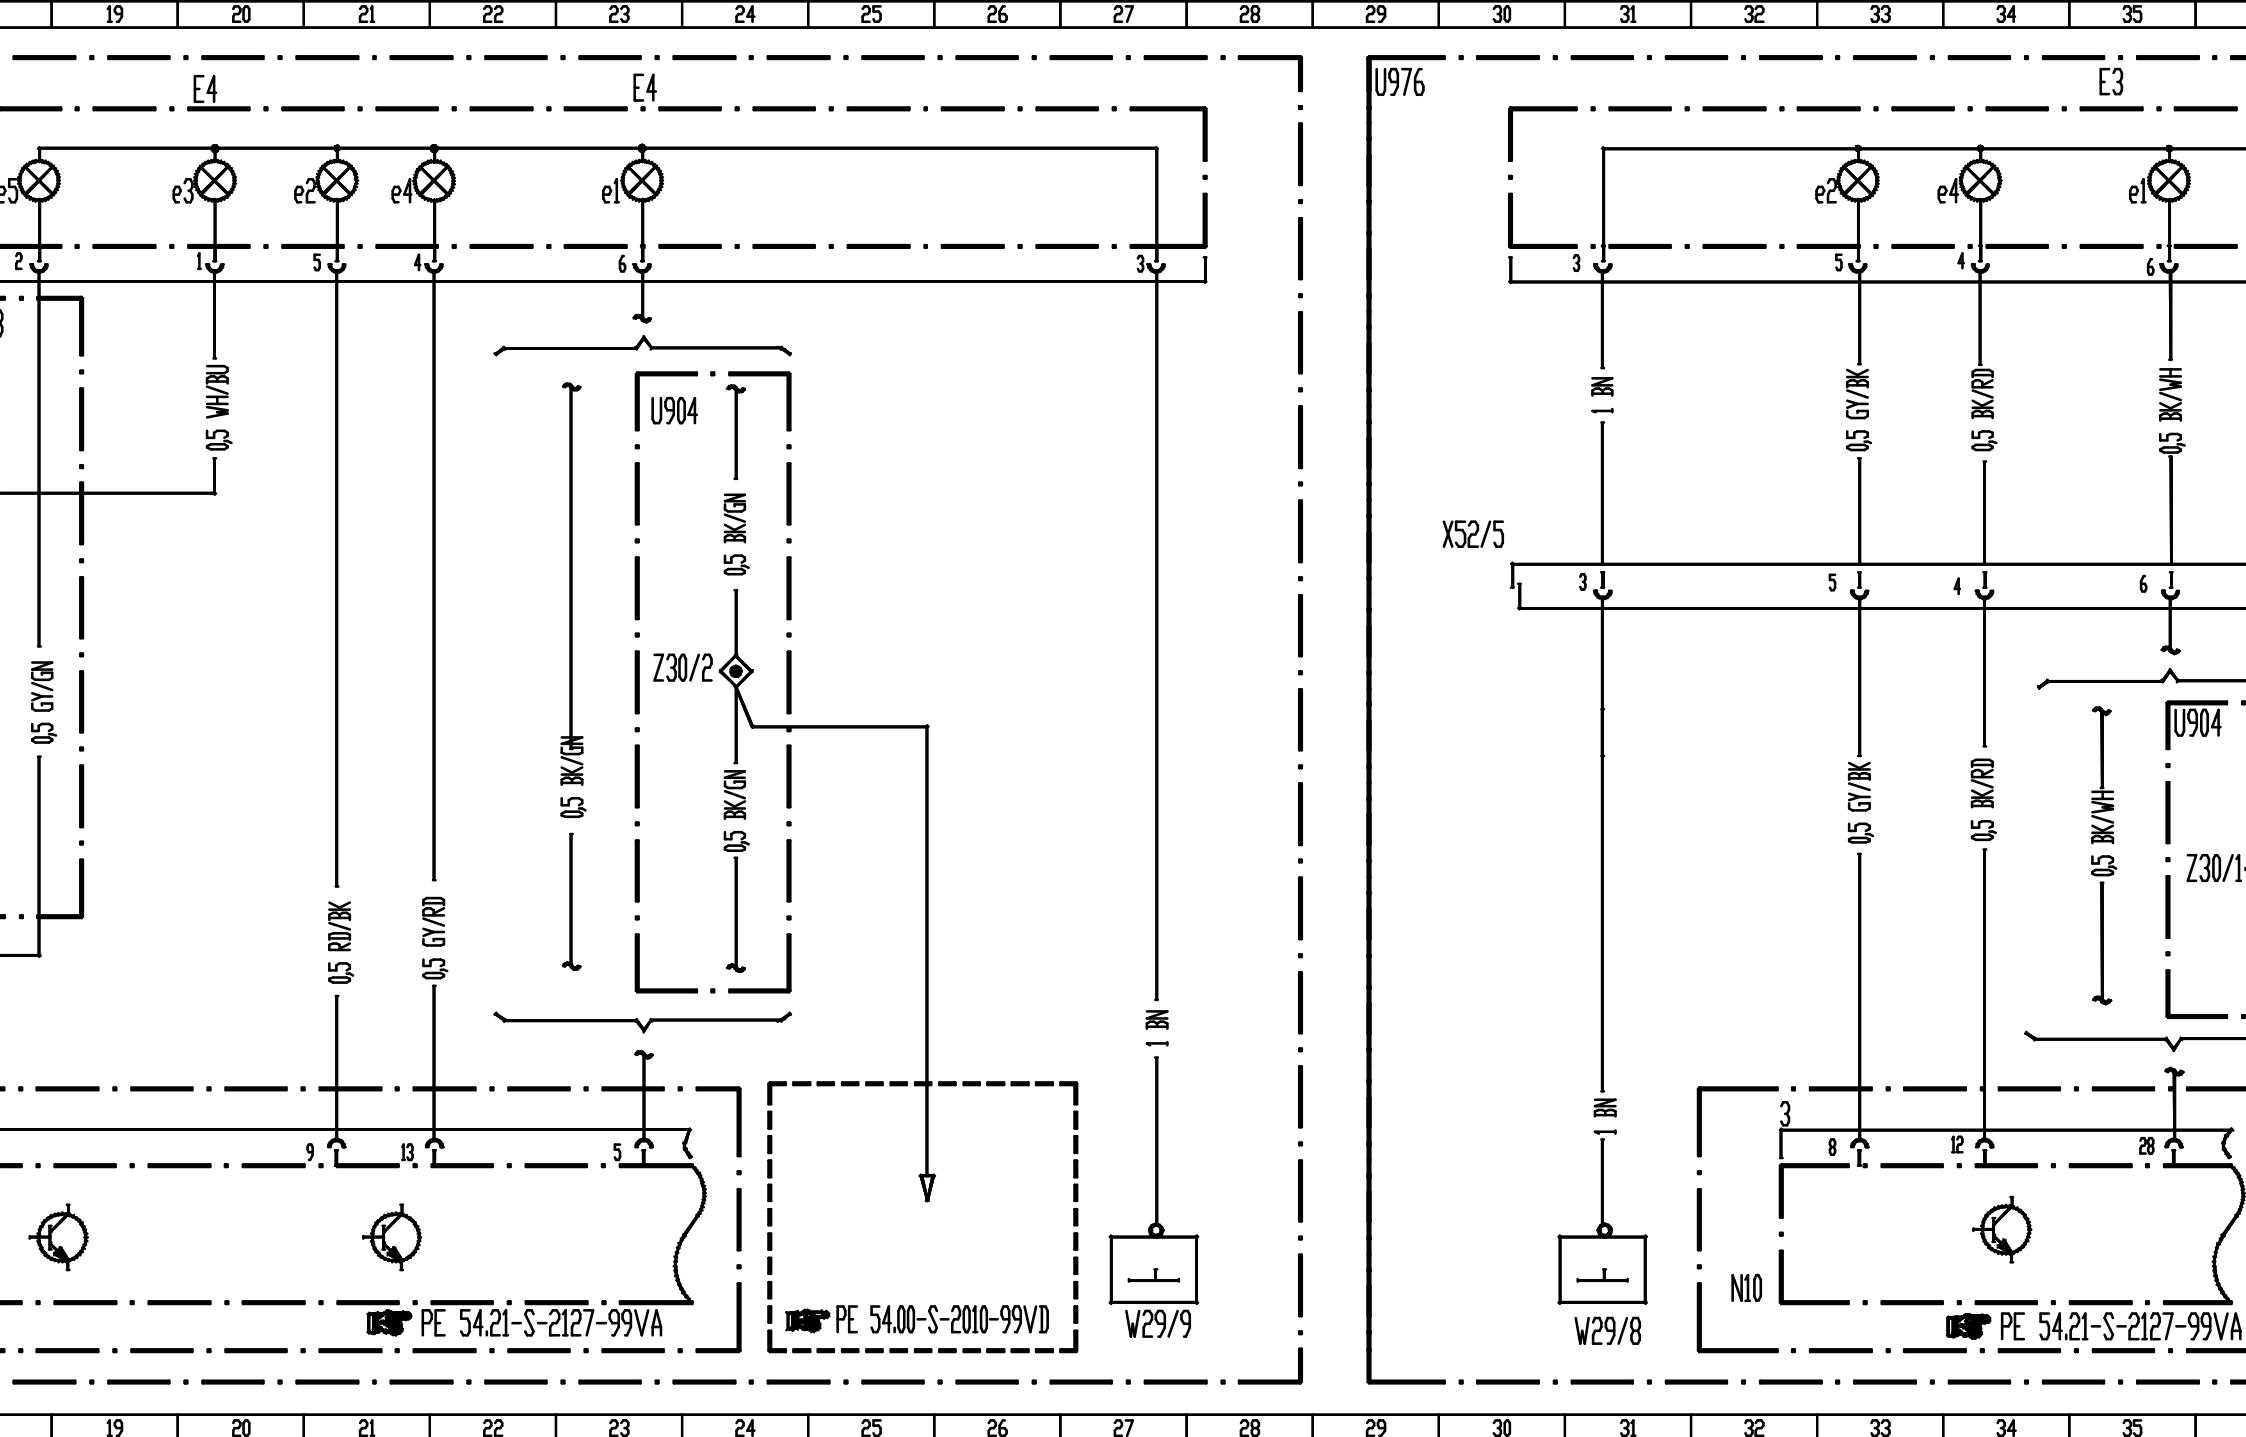

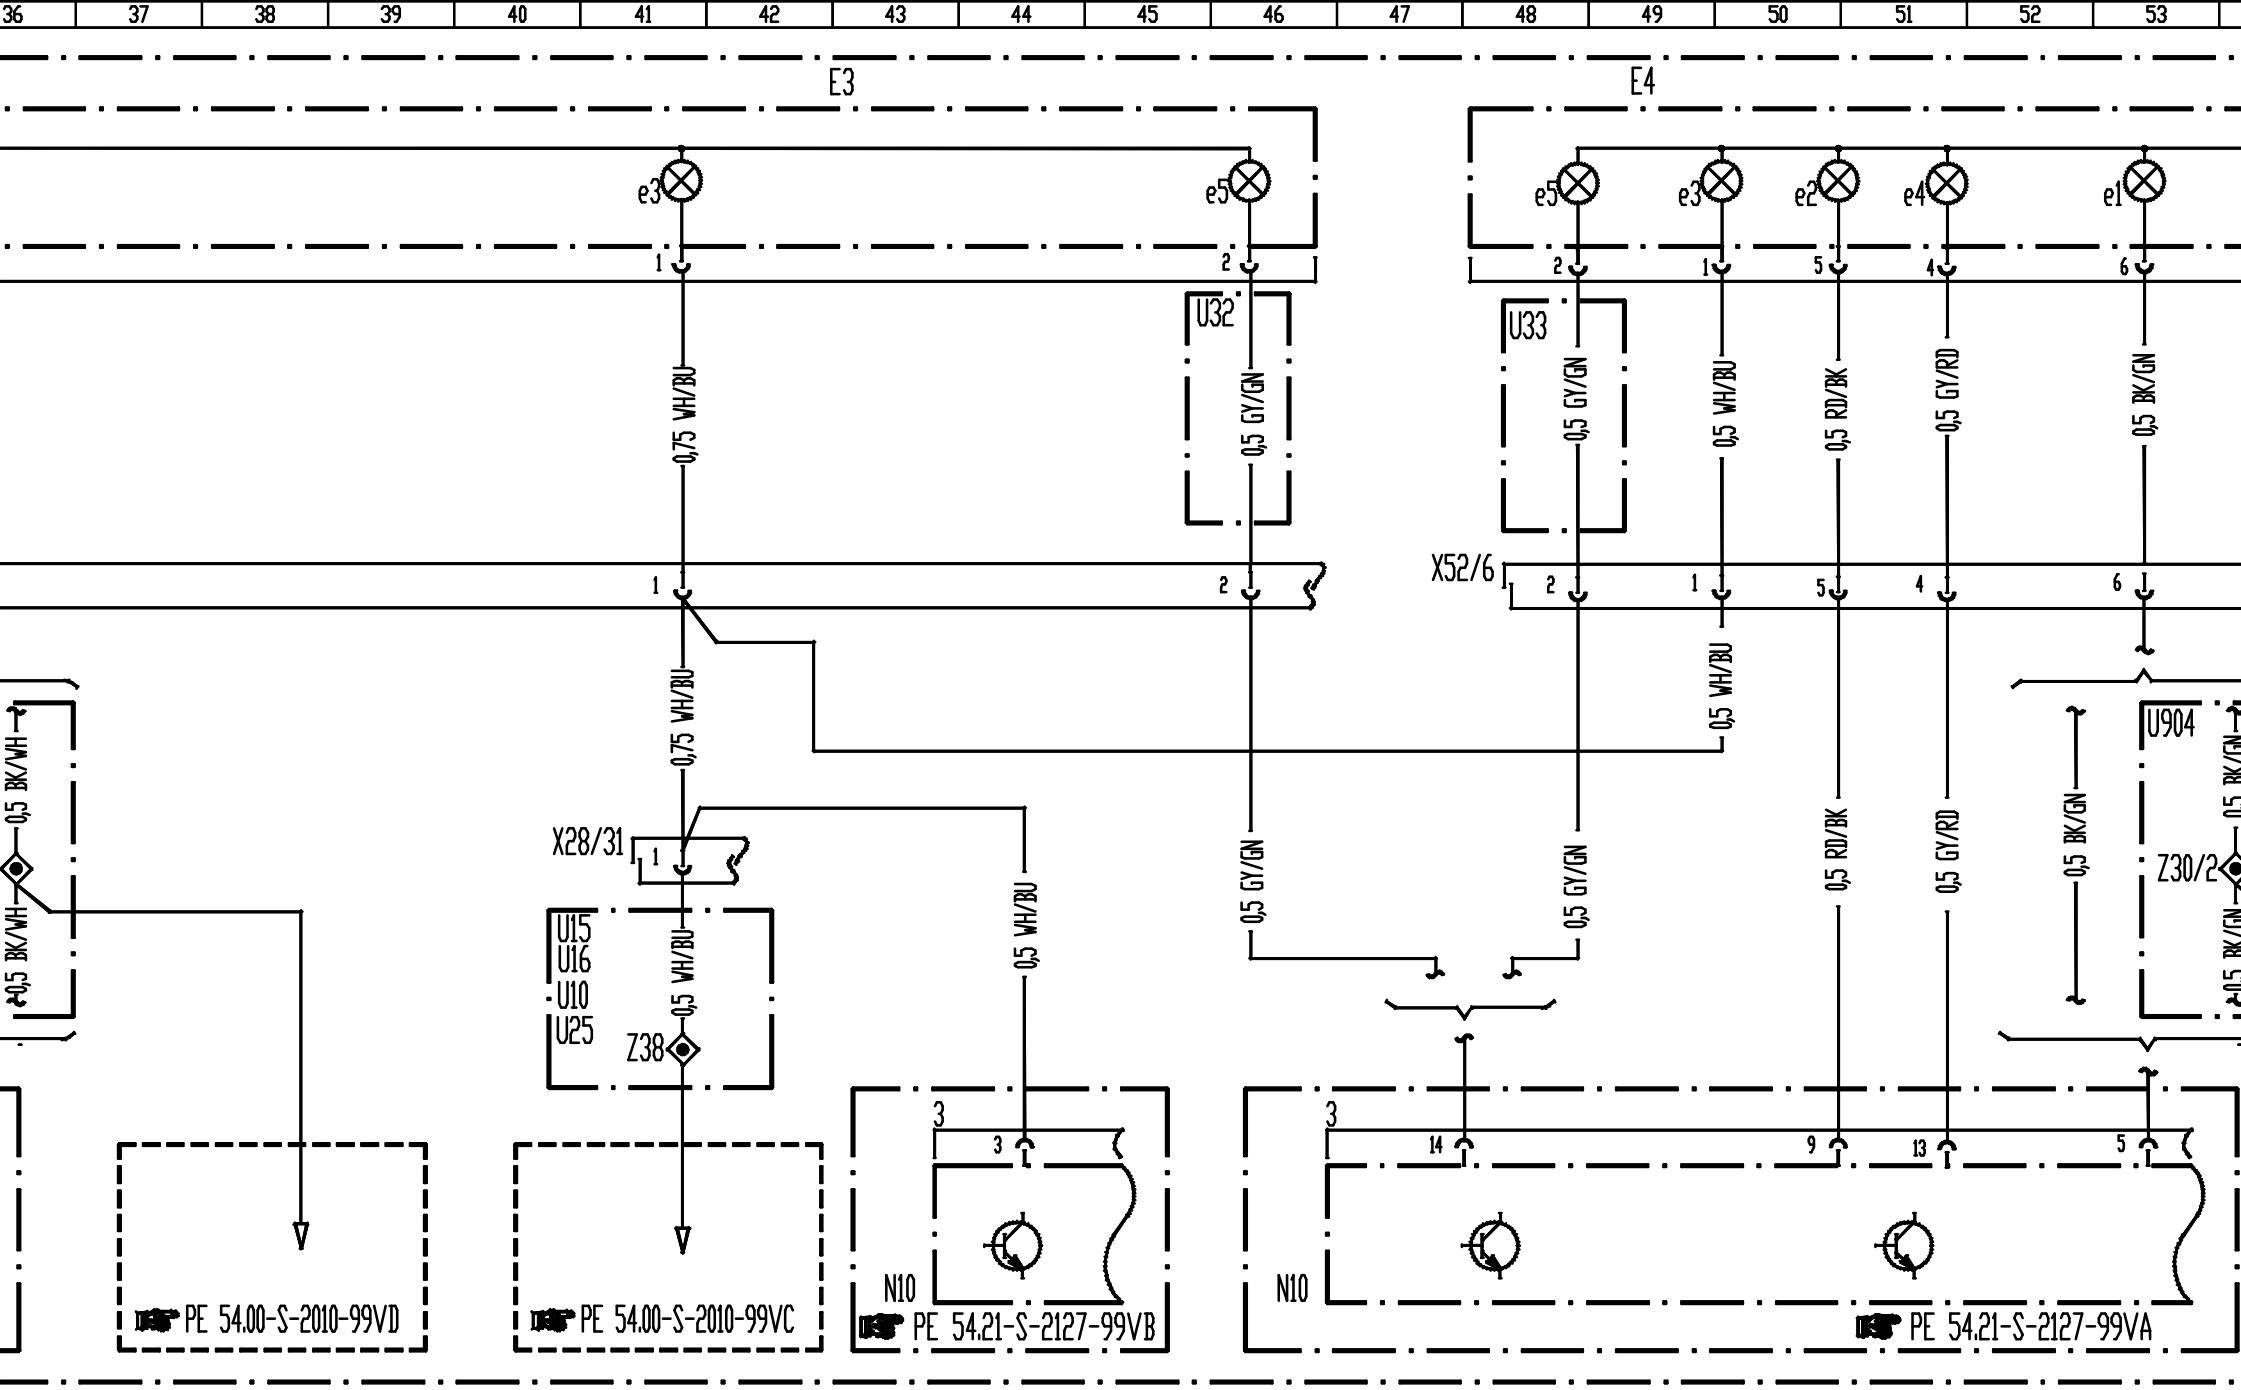

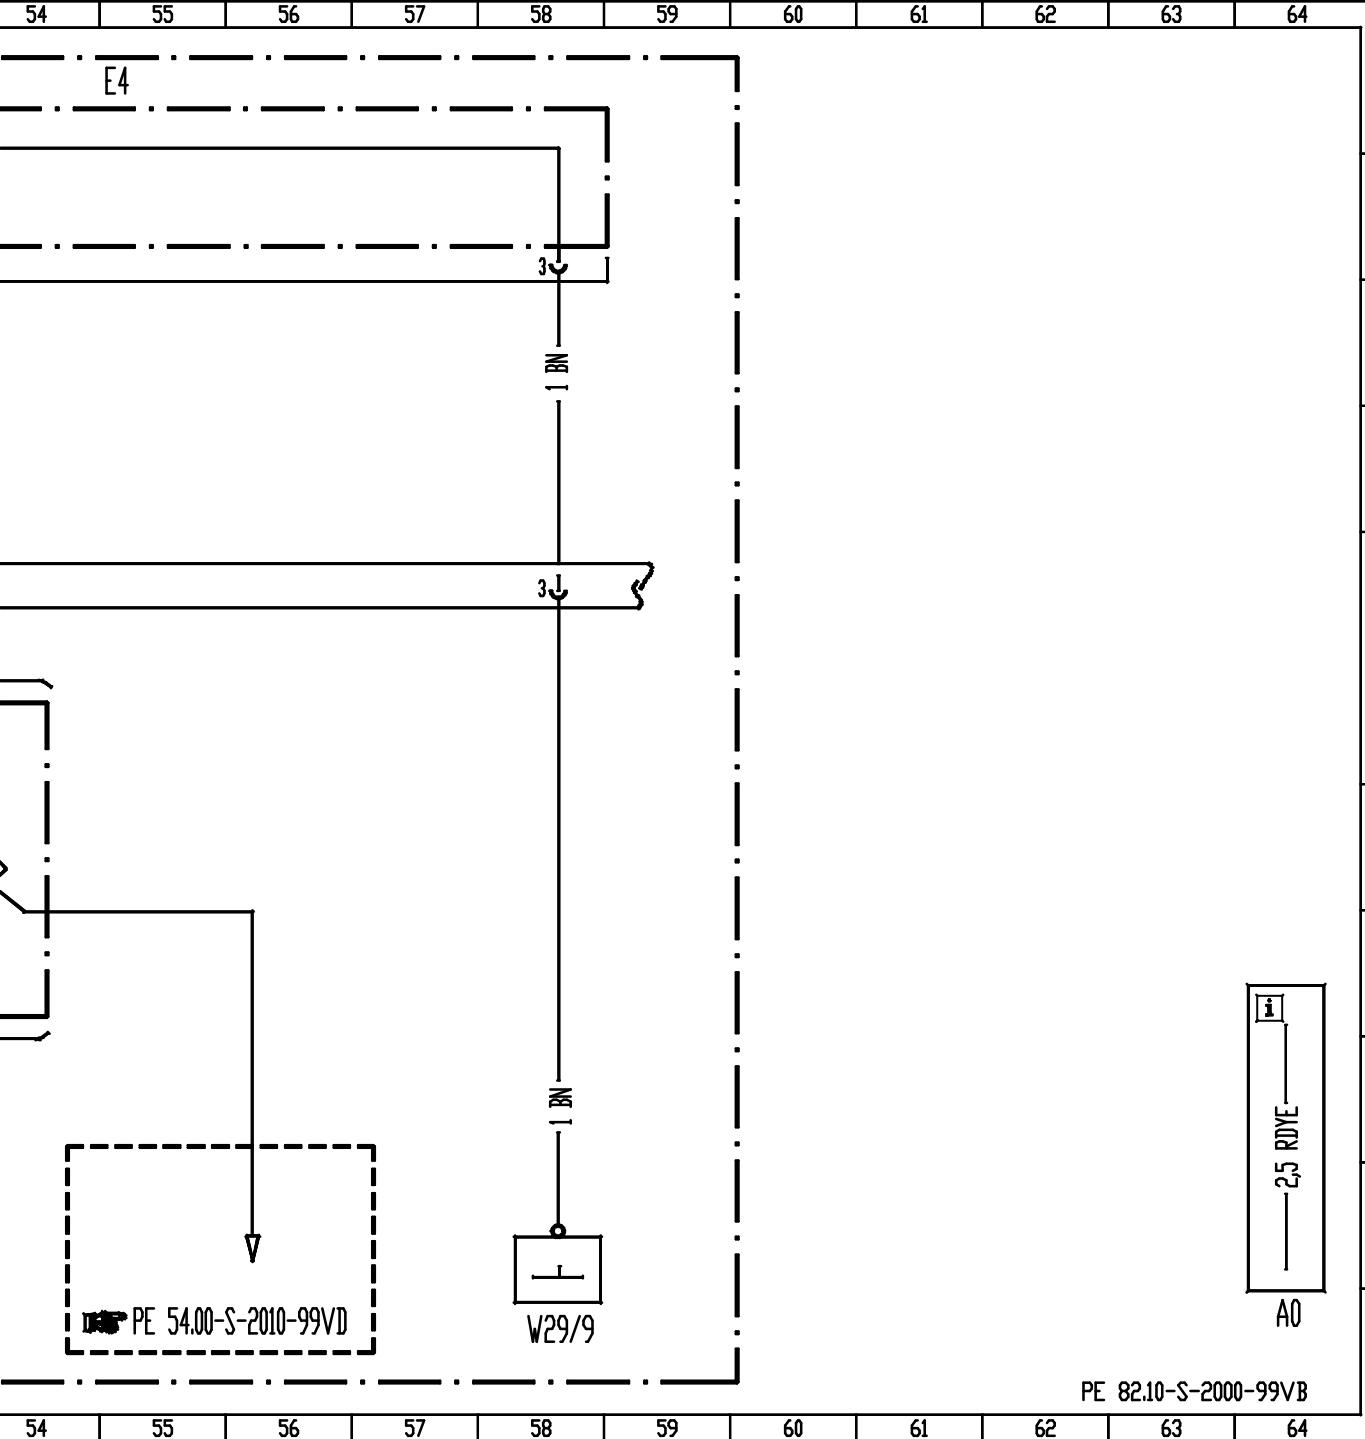

Central locking

Chapter 10


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with CODE (T19) Left sliding door

| | | | |
|---------------------|--|------------------------|---------------------|
| PE80.20-S-2000-99VA | Wiring diagram of central locking (CL) | | PE80.20-S-2000-99VA |
| PE80.20-S-2000-60VA | Legend of wiring diagram for central locking (CL) | | PE80.20-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|---|--|
| PE80.20-S-2000-60VA | Legend of wiring diagram for central locking (CL) | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with code (T19) Left sliding door | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|--------|--|-------------------|
| A26/1 | Left front IR receiver | 10L |
| A26/2 | Right front IR receiver | 27L |
| F7 | Fuse block (9-pin) | 3K 20K |
| F7f1 | Left door control unit fuse | 4K |
| F7f2 | Right door control unit fuse | 21K |
| F34 | Fuse block, 22-pin | 38F |
| F34f38 | EIS [EZS] steering lock fuse | 39E |
| M14/5 | Actuator, right CL [ZV] front door | 31L 34L |
| M14/6 | Actuator, left CL [ZV] front door | 13L 17L |
| M14/7 | Actuator, CL [ZV] tailgate | 62L |
| M14/8 | Actuator, CL [ZV] left sliding door | 53L |
| M14/9 | Actuator, right CL [ZV] sliding door | 58L |
| M14/12 | Actuator, right CL [ZV] rear-end door | 67L |
| N10 | SAM control unit | 55A 63A 71A |
| N69/1 | Door control unit, left front | 6A 14A |
| N69/2 | Door control unit, right front | 21A 27A |
| N73 | EIS [EZS] control unit | 41A 46A |
| S49/6 | Rotary tumbler switch, right rear-end door | 69L |

| | | |
|---------|--|------------------|
| S49/7 | Rotary tumbler switch, left rear-end door | 72L |
| U32 | Valid for left-hand drive vehicles | 8C |
| U33 | Valid for right-hand drive vehicles | 26C |
| U49 | Valid for Japan | 48D |
| U1020 | Valid for convenience opening/closing with IR remote control | 9D 26D |
| U1111 | Valid for vehicle ident end. no. 148282 | 12D 30D |
| U1112 | Valid as of vehicle ident. end no. 148283 | 16D 33D |
| U919 | Valid for all, except Japan | 46D |
| U924 | Valid for tailgate | 60D |
| U925 | Valid for 180°, 2-wing rear-end door | 65D |
| U926 | Valid for 270°, 2-wing rear-end door | 65D |
| W12 | Ground (cockpit and center console) | 42L |
| W43/1 | Ground (left interior compartment firewall) | 2L |
| W43/2 | Ground (right interior compartment firewall) | 19L |
| X8/20 | Right rear-end door connector | 61F 65F |
| X8/22 | Left rear-end door connector | 71F |
| X30/24 | Interior CAN bus connector | 6K 23K 43K |
| X30/25 | Interior CAN bus connector | 6K 23K 43K |
| X30/26 | Interior CAN bus connector | 6K 23K 43K |
| X43/10 | CL [ZV] motor connector, rear-end door | 56D |
| X100/5 | Right sliding door contact plate 1 separation point | 56F |
| X100/6 | Right sliding door contact pin 1 separation point | 56G |
| X100/9 | Left sliding door contact plate 1 separation point | 51F |
| X100/10 | Left sliding door contact pin 1 separation point | 51F |

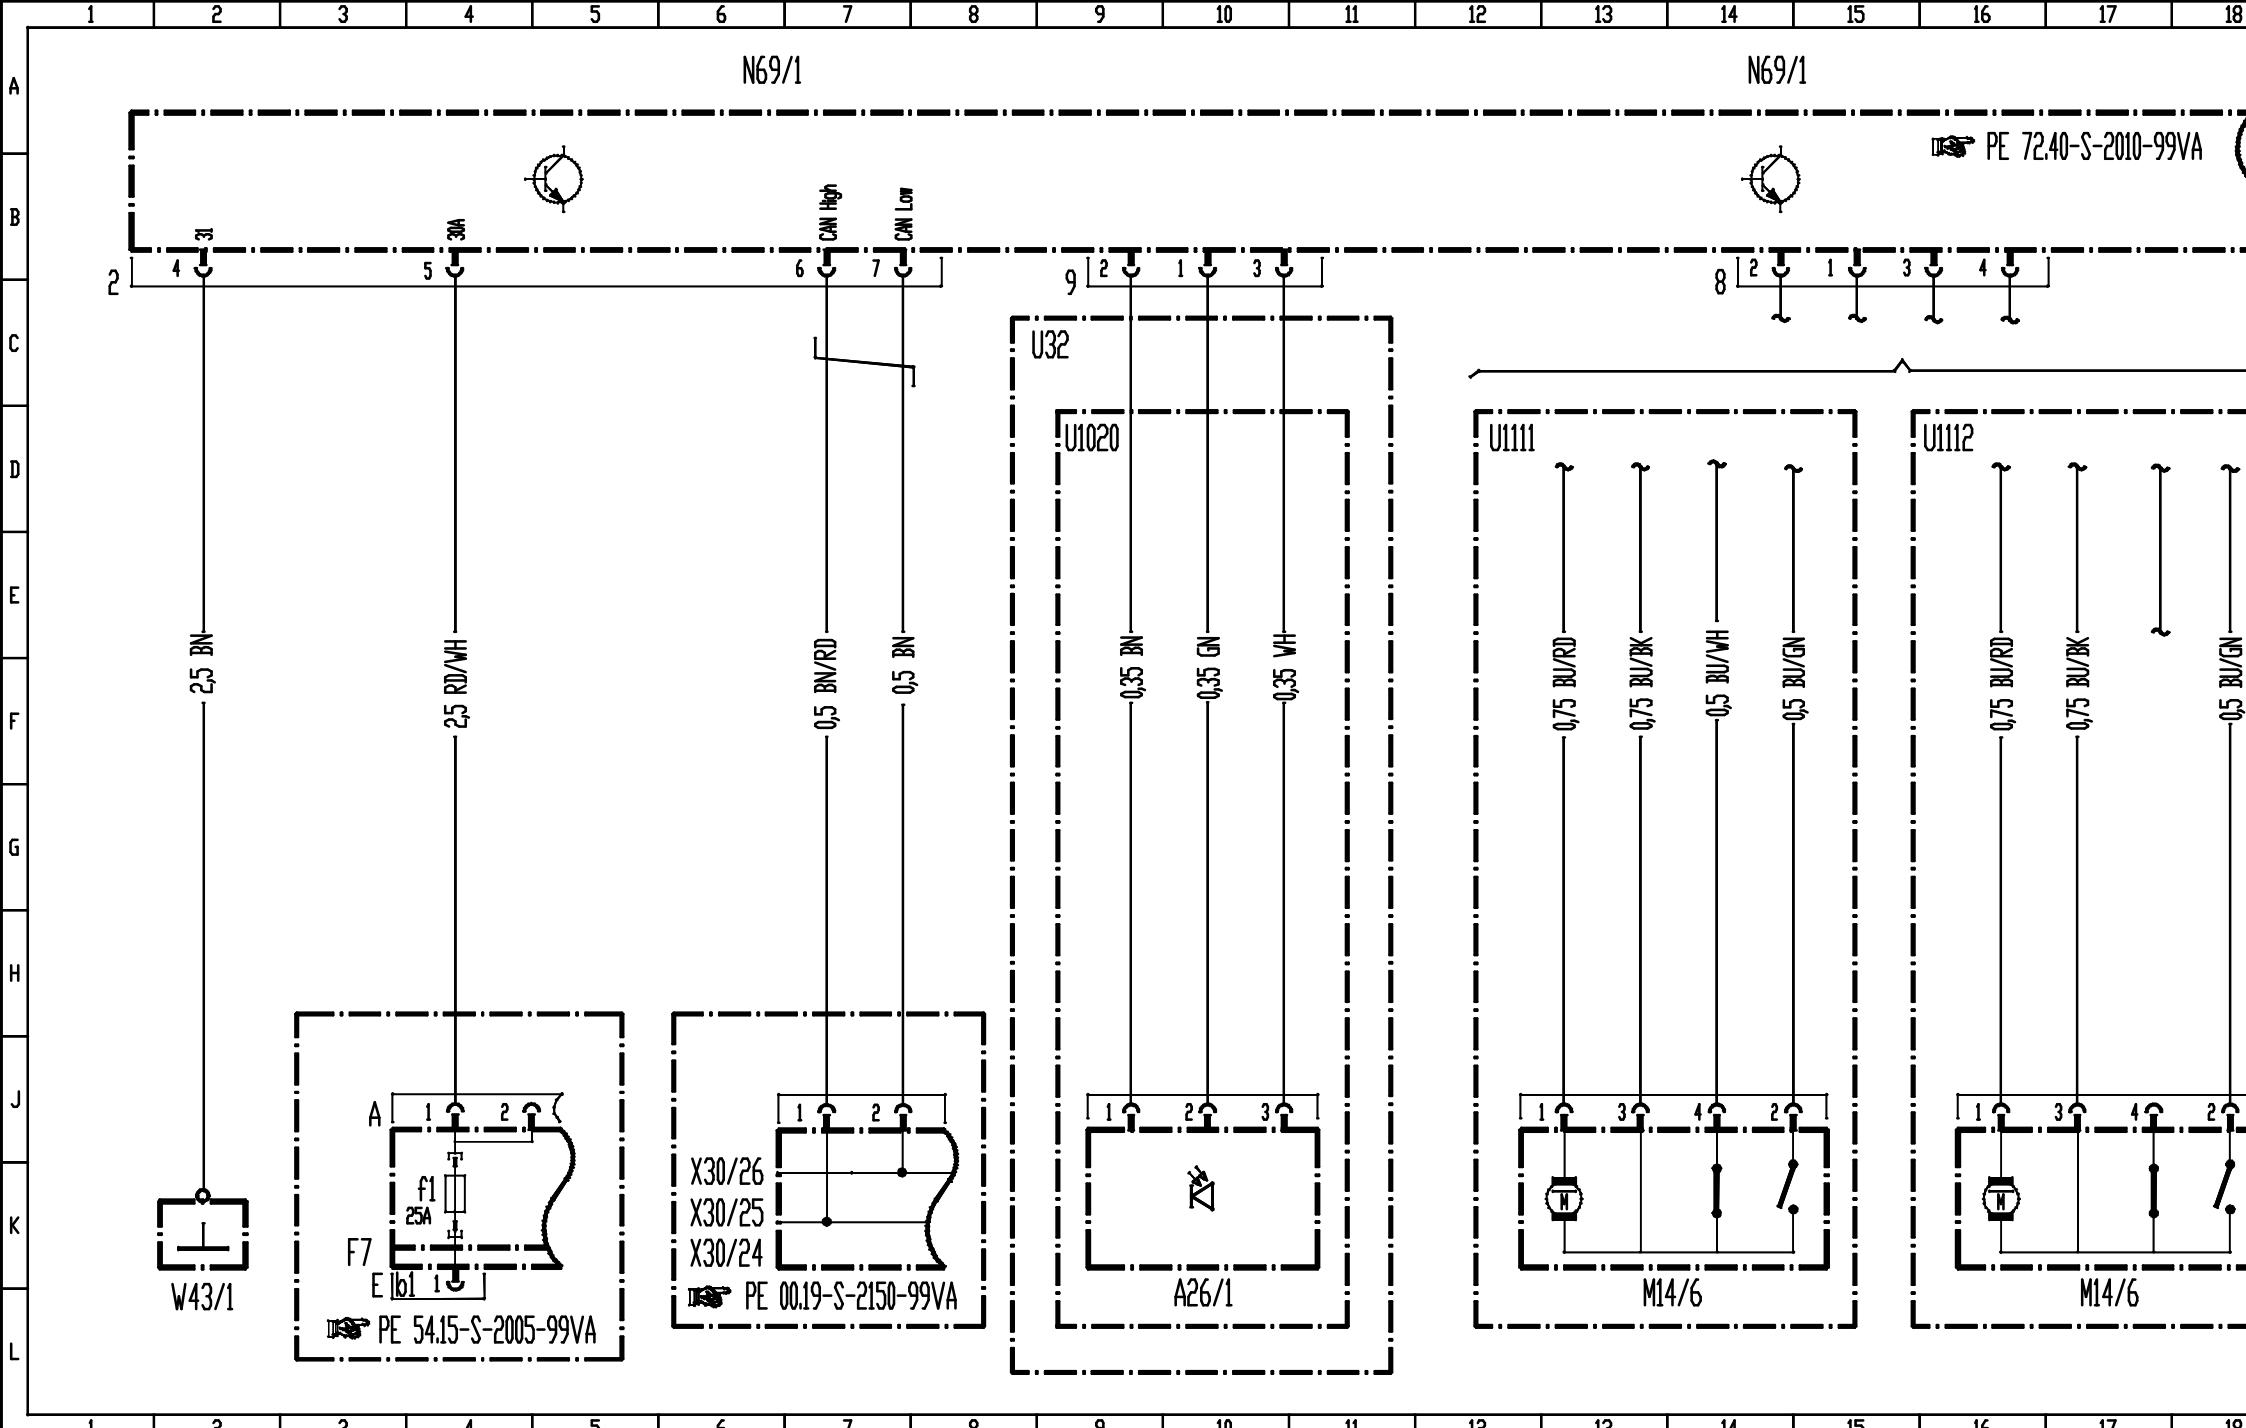


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

N69/2



N69/2

PE 72.40-S-2011-99VA

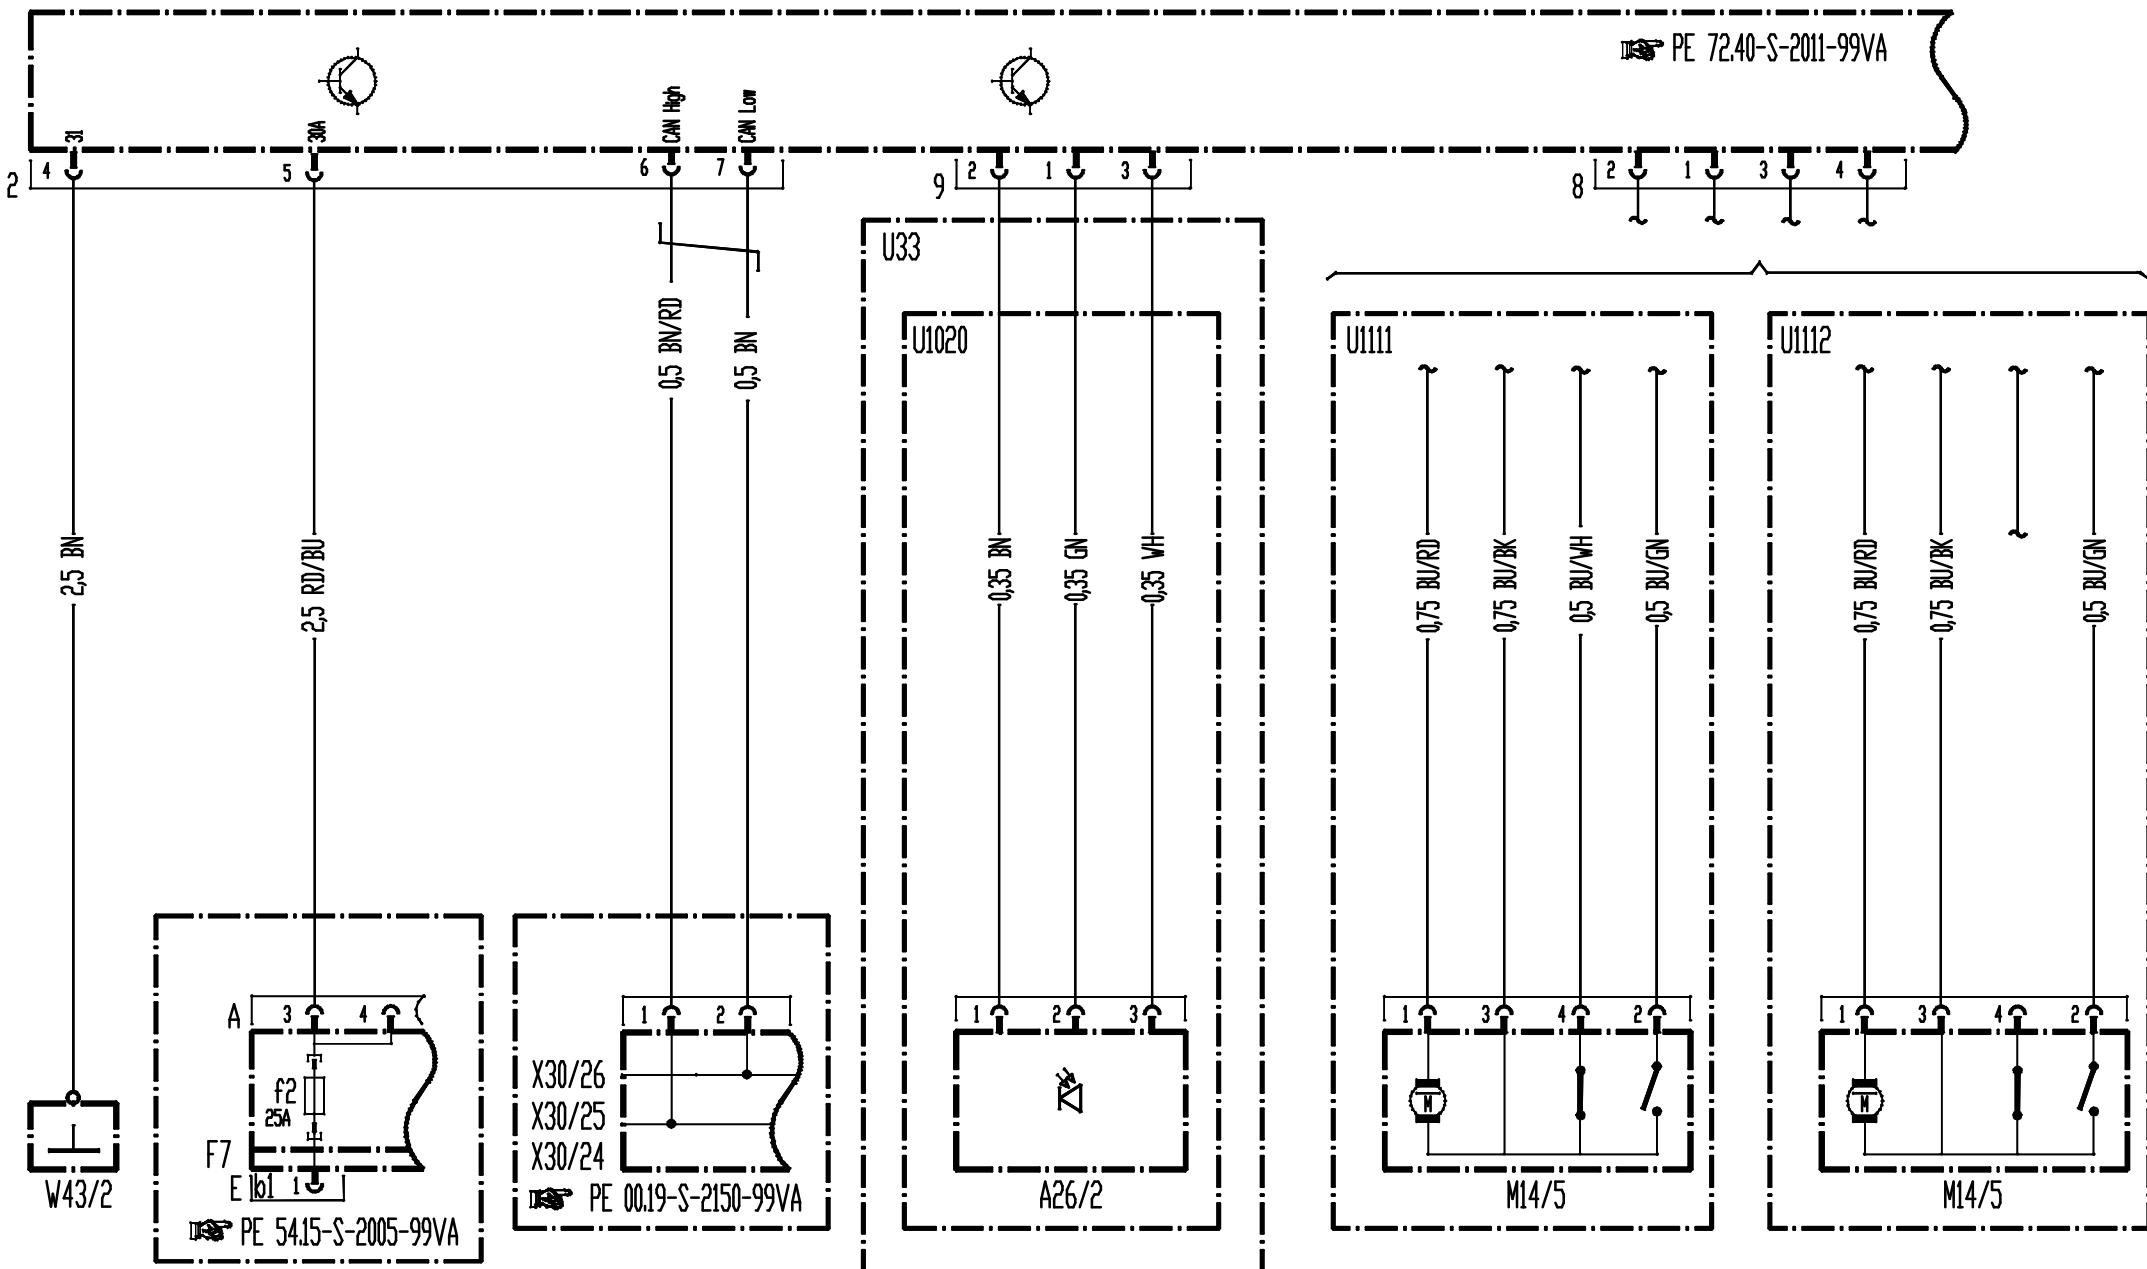



19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

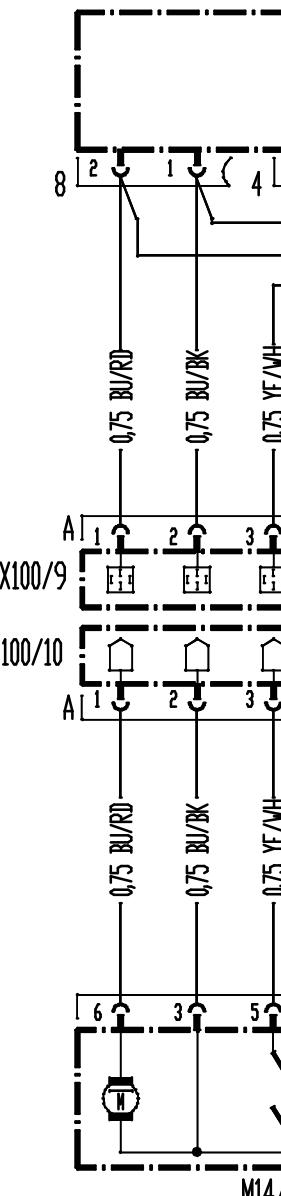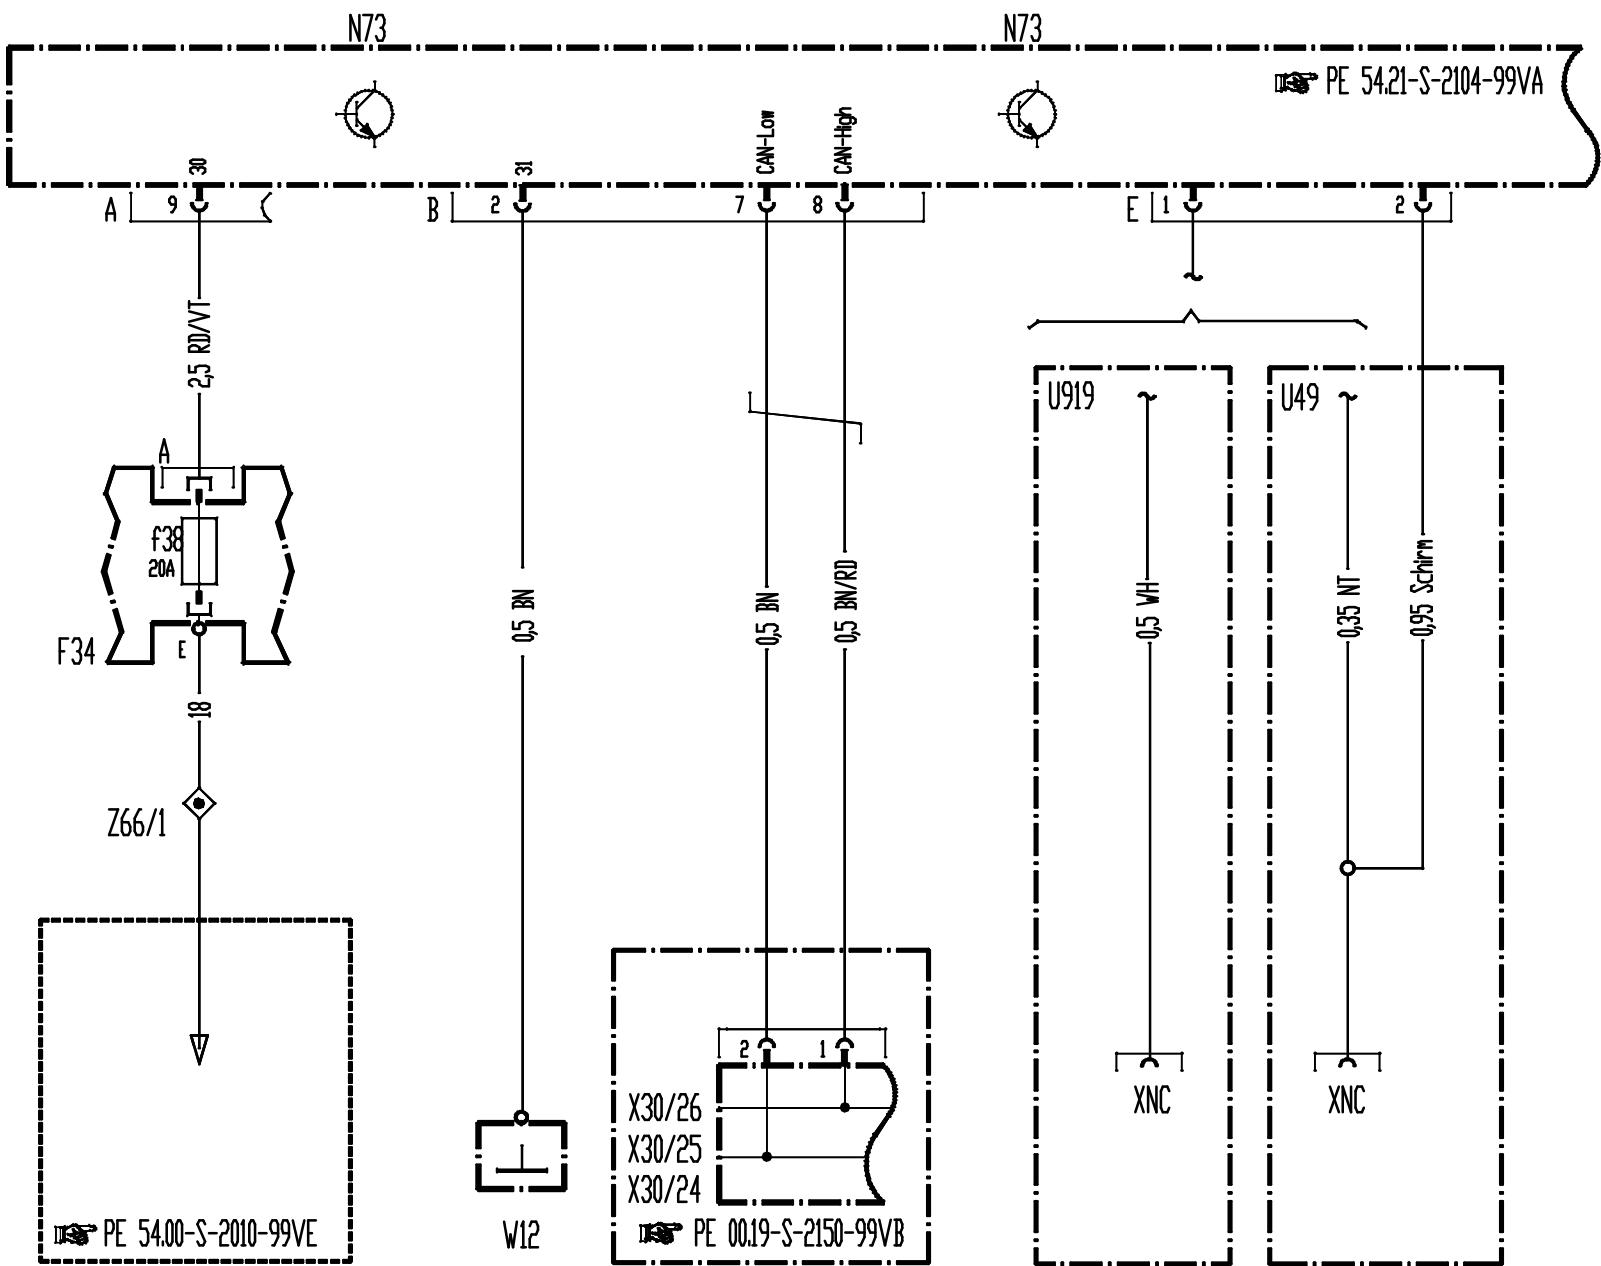

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

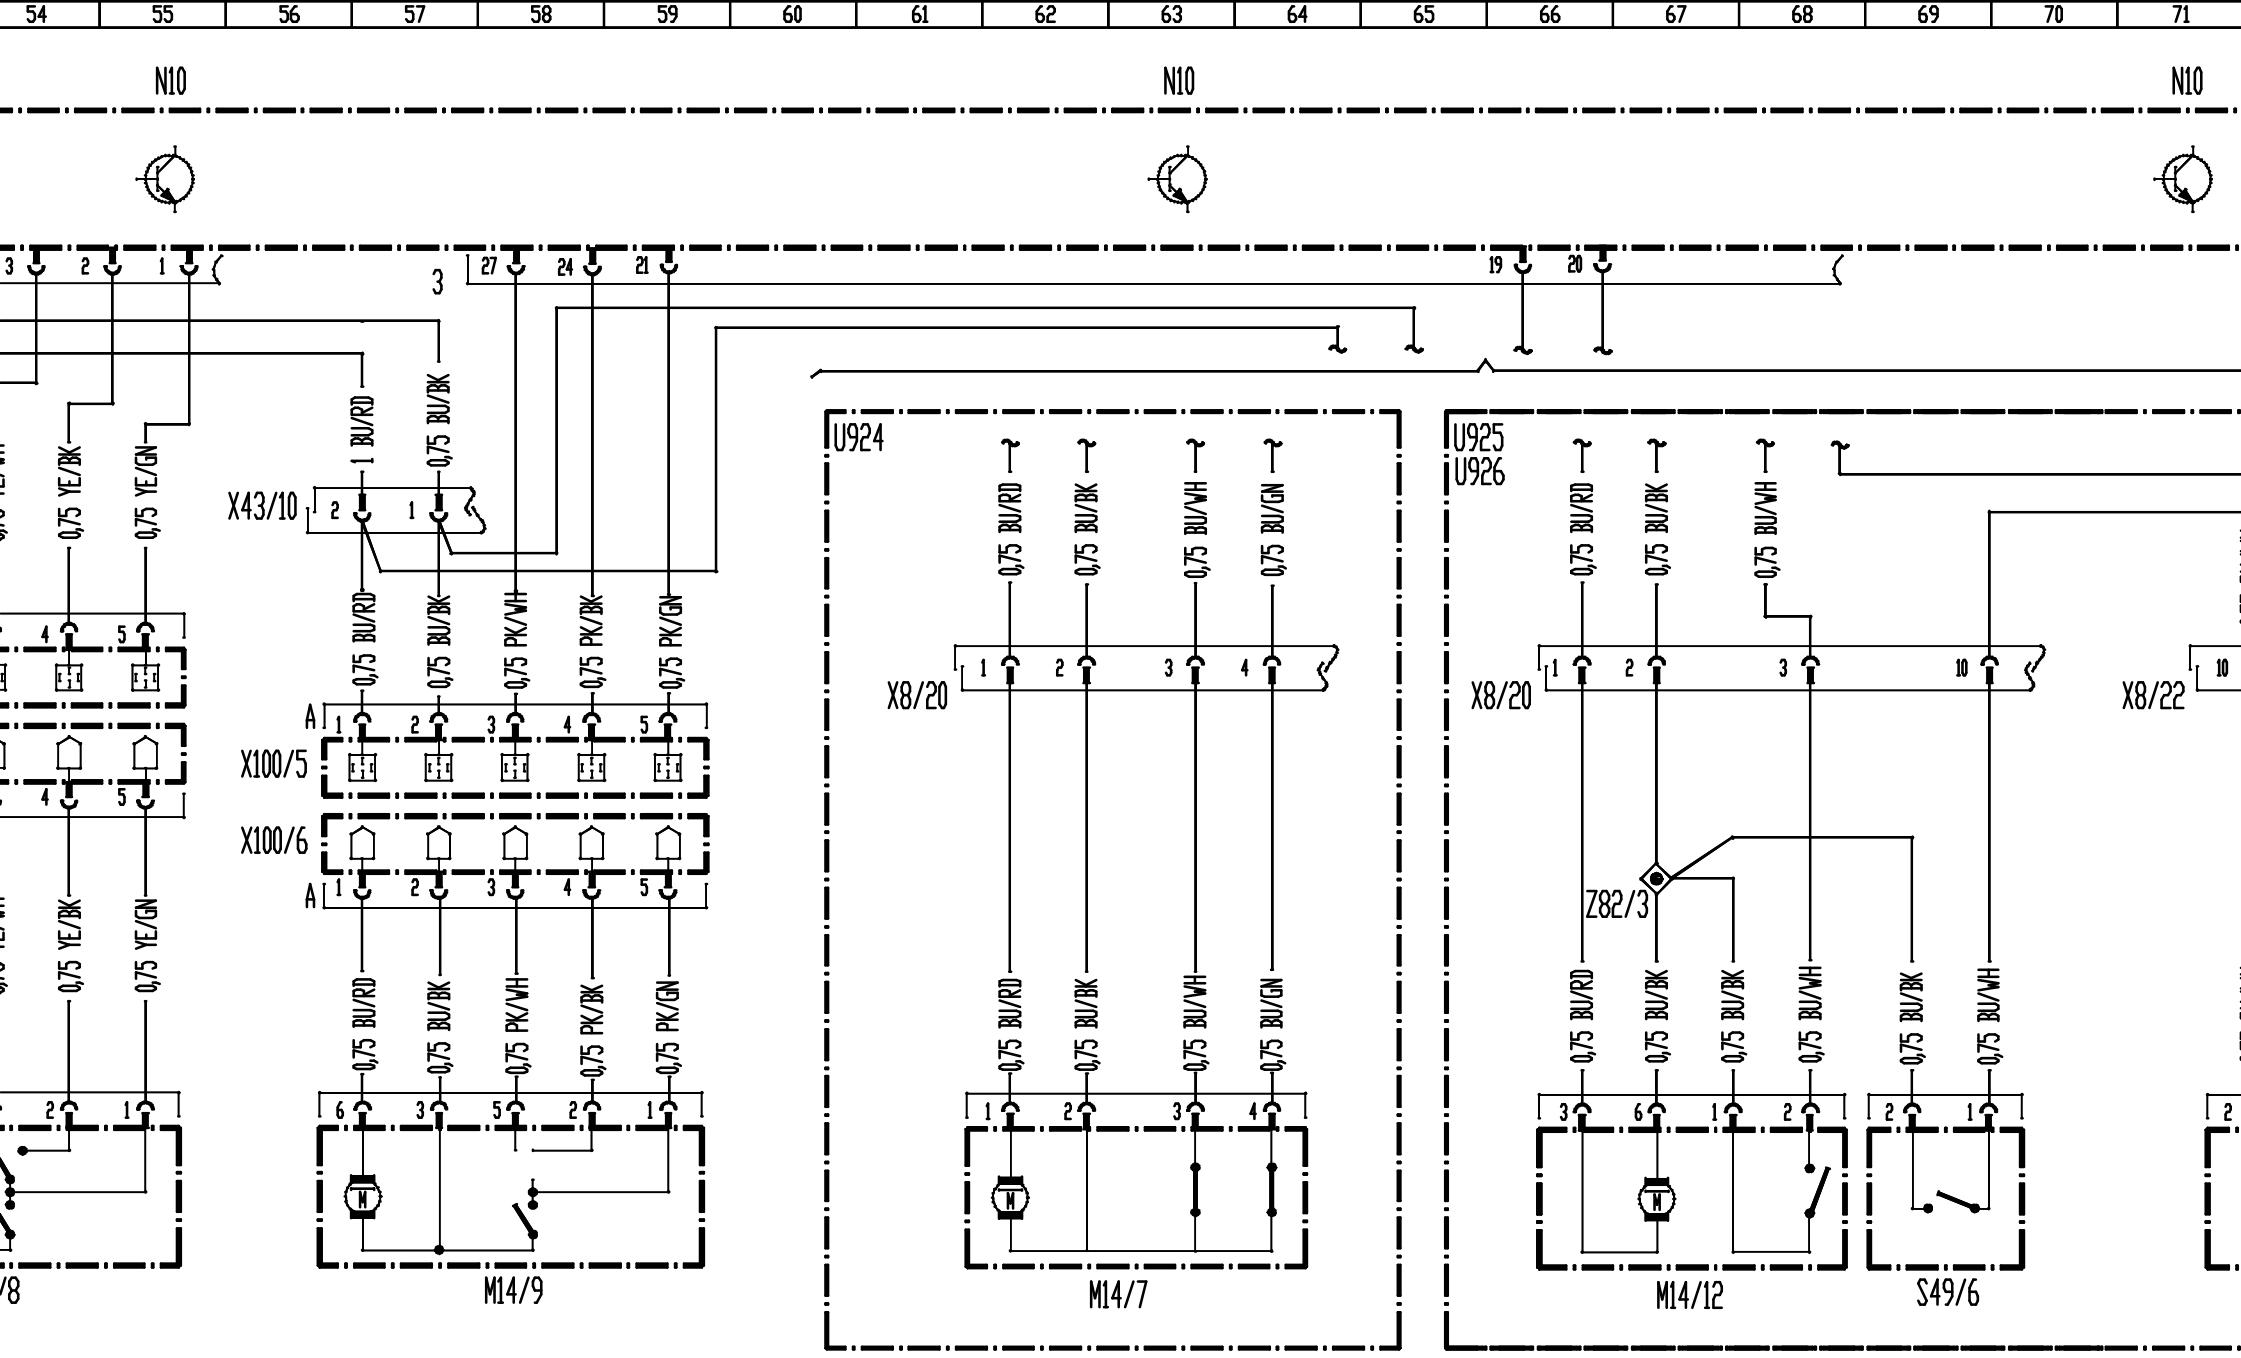

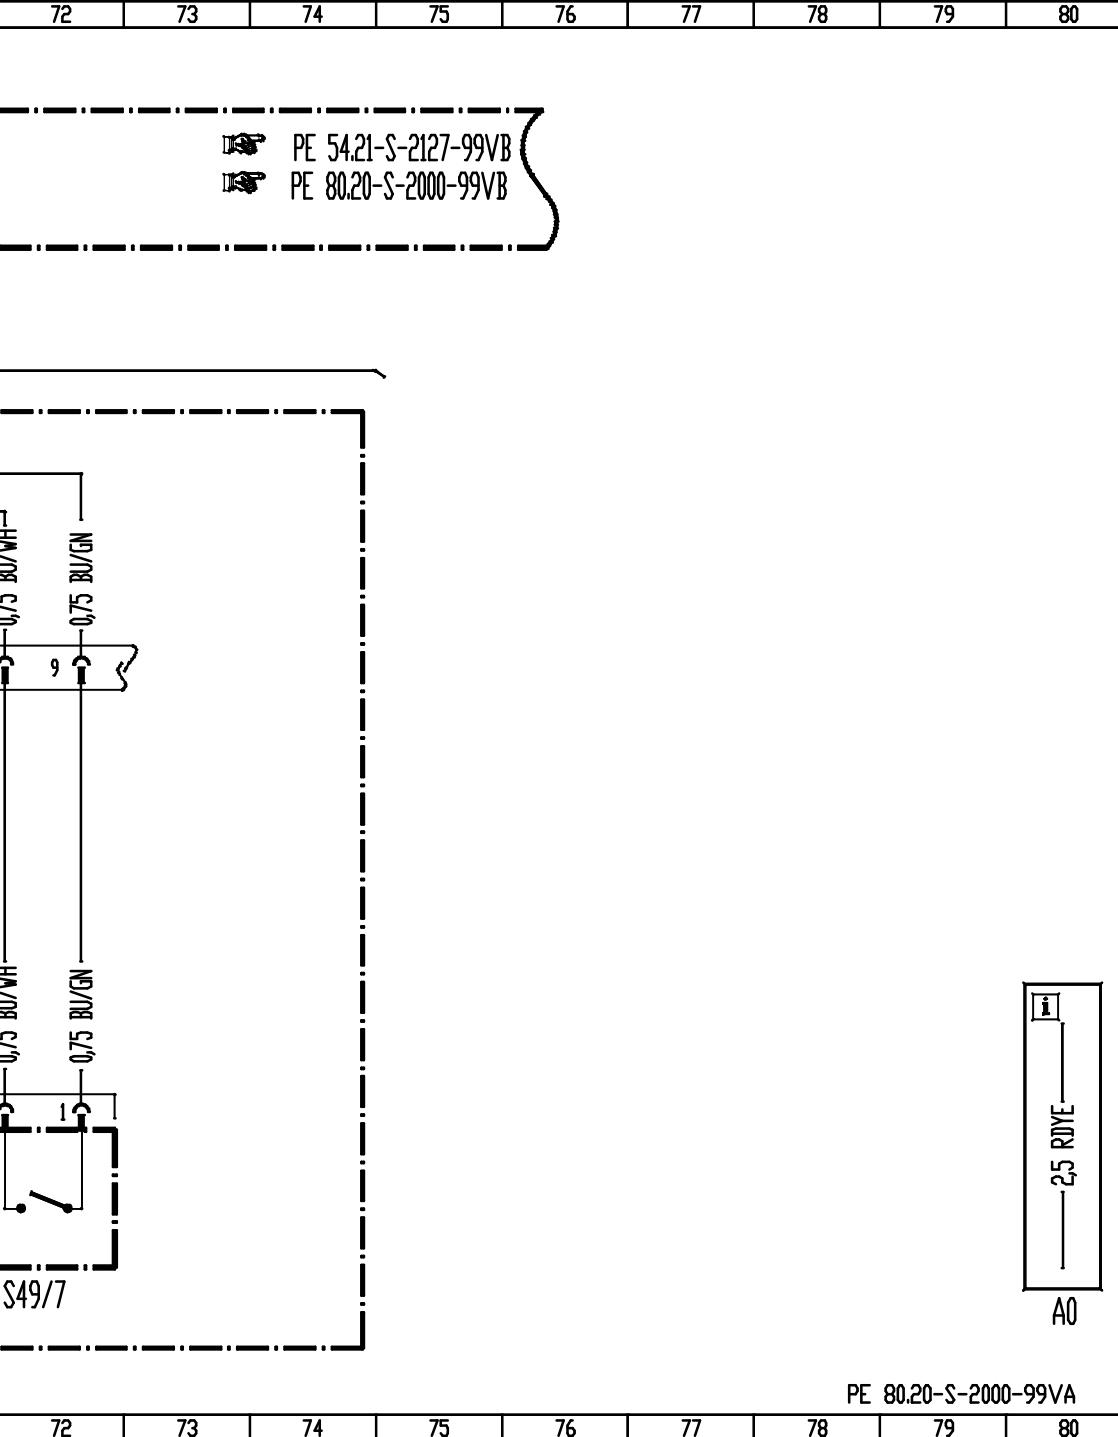

CAN bus

Chapter 11

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


Sheet 1

| | | | |
|---------------------|--|------------------------|---------------------|
| PE00.19-S-2150-99VA | Wiring diagram of CAN bus | Sheet 1 | PE00.19-S-2150-99VA |
| PE00.19-S-2150-60VA | Legend for electric wiring diagrams of CAN bus | Sheet 1 | PE00.19-S-2150-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|---|--------------------|
| A0 | Color code key | 80L |
| A6n1 | STH control unit | 34L |
| N2/2 | SRS control unit | 23L |
| N2/10 | SRS control unit | 26L |
| N2/11 | ARCADE airbag control unit | 30K |
| N10 | SAM control unit | 1K |
| N19/3 | Rear AC control unit FONDKLA | 55K |
| N26/15 | PSM control unit | 41L |
| N28/1 | Trailer connection unit [AAG] control unit | 9L 13L |
| N32/1 | Left front seat adjustment control unit with memory | 62L |
| N32/2 | Right front seat adjustment control unit with memory | 65L |
| N51/3 | ENR control unit | 69L |
| N62 | PTS control unit | 37L |
| N69/1 | Door control unit, left front | 16L |
| N69/2 | Door control unit, right front | 19L |
| N70 | Overhead control panel control unit | 3C |
| N70/1 | Rear sliding roof unit control unit (SDE-H) | 45L |
| U26 | Valid for taxi version with emergency alarm system | 41E |
| U27 | Valid for taxi version without emergency alarm system | 41E |
| U37 | Valid for ATA [EDW] I | 2C |
| U38 | Valid for ATA [EDW] II | 2B |
| U1009 | Valid for light/rain sensor | 2C |


| | | |
|-------|---|------------|
| U1016 | Valid for glass tilting/sliding roof in passenger compartment without roof and rear-end doors, high version | 44D |
| U1017 | Valid for electrohydraulic "Easy up" pop-up roof and glass tilting/sliding roof in driver/front passenger compartment | 49E 58D |
| U1107 | Valid up to 08/2005 | 9D 22D |
| U1108 | Valid as of 09/2005 | 13D 30D |
| U285 | Valid for partially electric seat adjustment, driver | 49E 62D |
| U286 | Valid for partially electric seat adjustment, front passenger | 49E 65D |
| U538 | Valid for Parktronic System | 37D |
| U914 | Valid for rental vehicle package with emergency alarm system | 41E |
| U934 | Valid for rental vehicle package without emergency alarm system | 41F |
| U939 | Valid for socket for rear-mounted bicycle carrier repeater lamp | 9D 13D |
| U940 | Valid for electrical system for trailer socket | 9E 13E |
| U941 | Valid for fixed trailer hitch | 9E 13E |
| U942 | Valid for removable trailer hitch | 9E 13E |
| U943 | Valid with window thoraxbag for driver and front passenger | 26D |
| U944 | Valid without window thoraxbag for driver and front passenger | 22D |
| U945 | Valid for warm water auxiliary heater | 34D |
| U946 | Valid for diesel heater booster | 34D |
| U947 | Valid for parameterizable special module | 41D |
| U949 | Valid for glass tilting/sliding roof in passenger compartment | 2B |
| U951 | Valid for rear lowerable/raisable air suspension | 49D 69D |
| U952 | Valid for Tempmatic/Additional air conditioning in rear | 49D 55D |
| U953 | Valid for electrohydraulic "Easy up" pop-up roof | 41D |
| U954 | Valid for glass tilting/sliding roof in driver/passenger compartment | 2B |

| | | |
|--------|--|--|
| X8/25 | Sliding roof in pop-up roof separation point (Westfalia) | 59L |
| X30/24 | Interior CAN bus connector | 15A 26A 42A 56A 64A 71A |
| X30/25 | Interior CAN bus connector | 15A 26A 42A 56A 64A 71A |
| X30/26 | Interior CAN bus connector | 15A 26A 42A 56A 64A 71A |

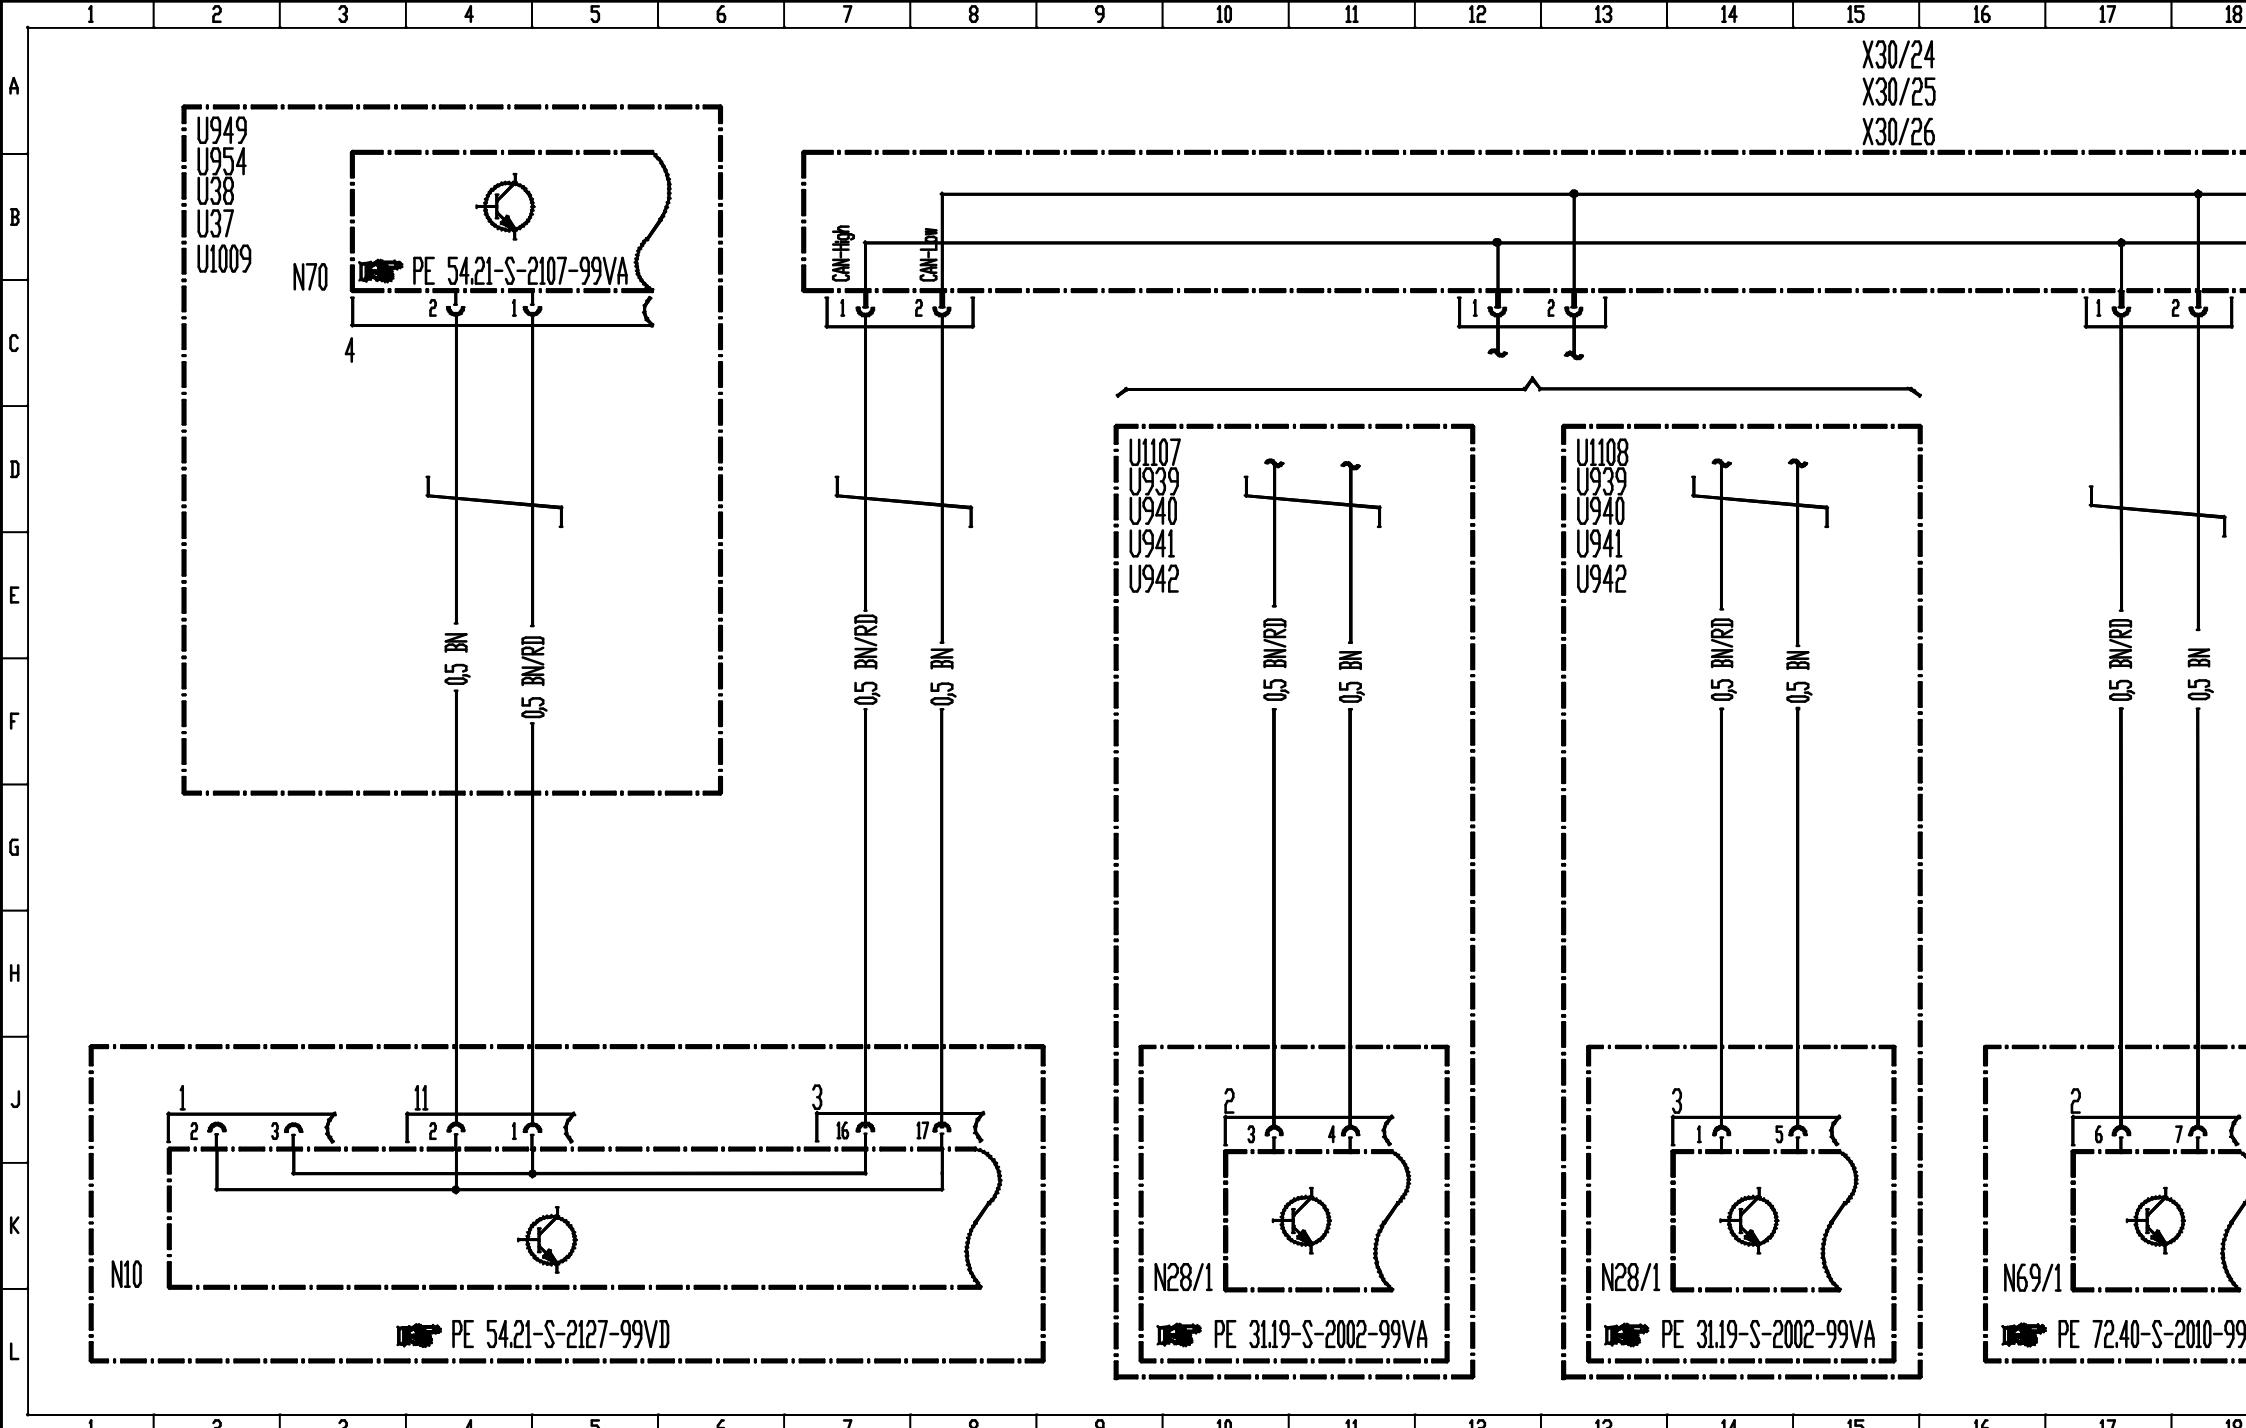

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35





X30/24
X30/25
X30/26

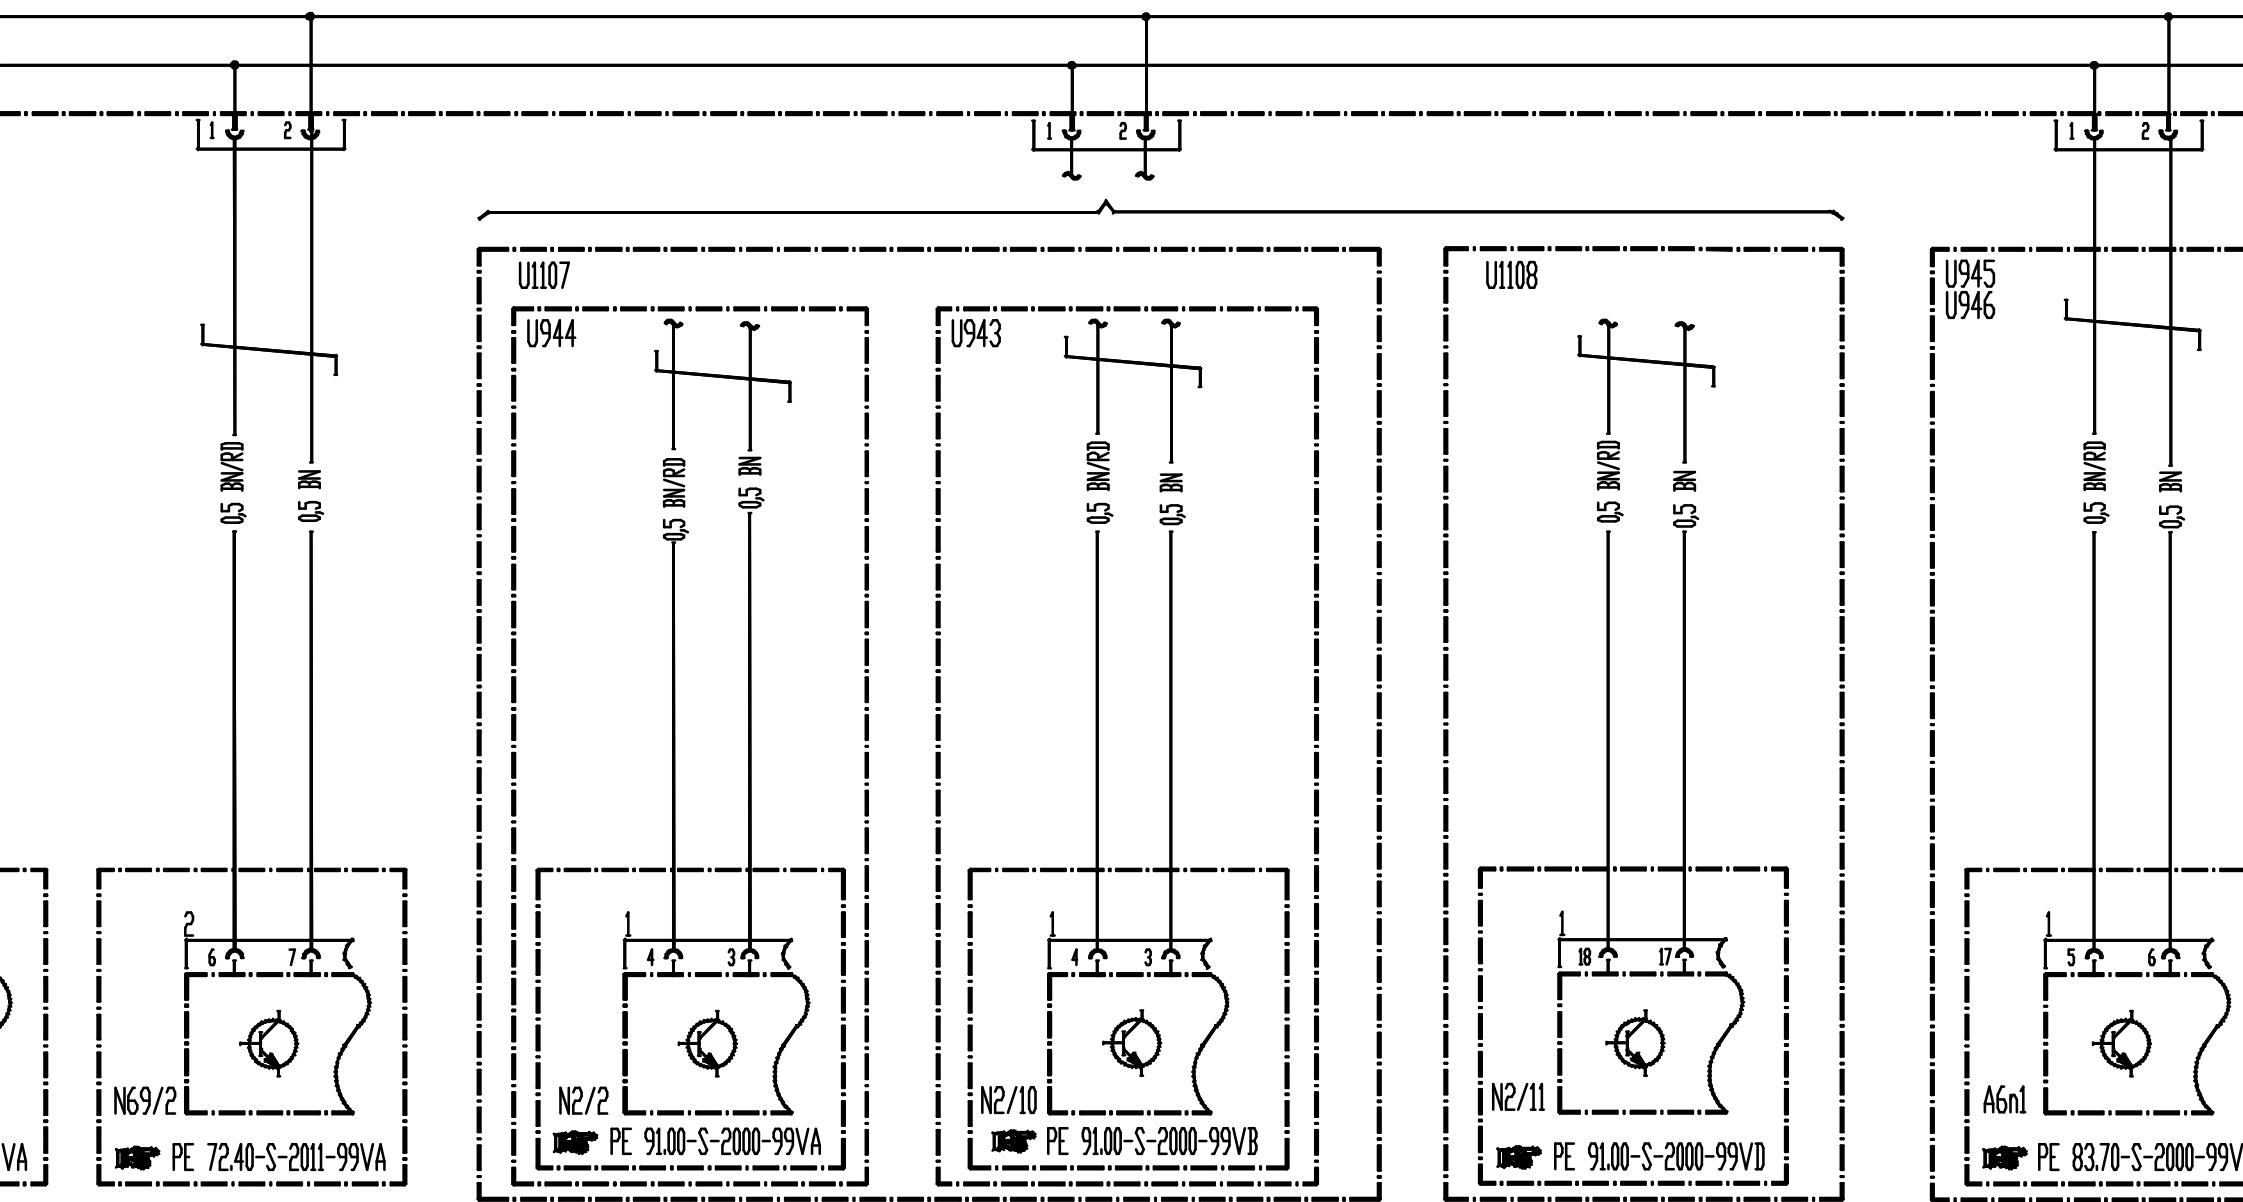

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53


X30/24
X30/25
X30/26

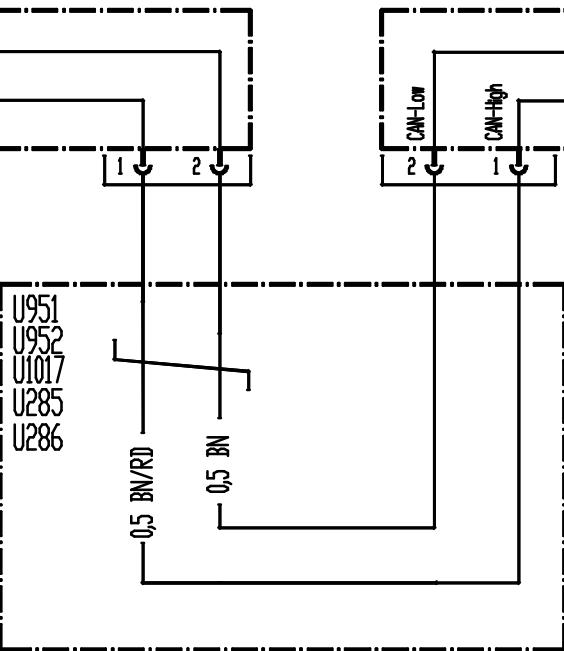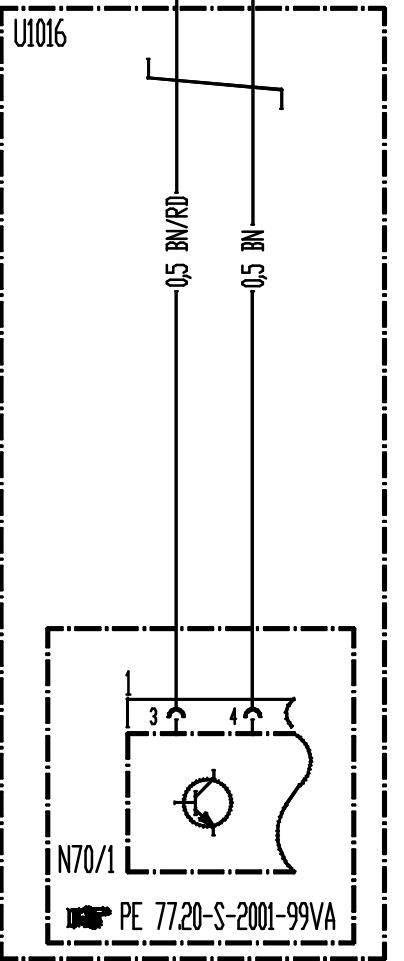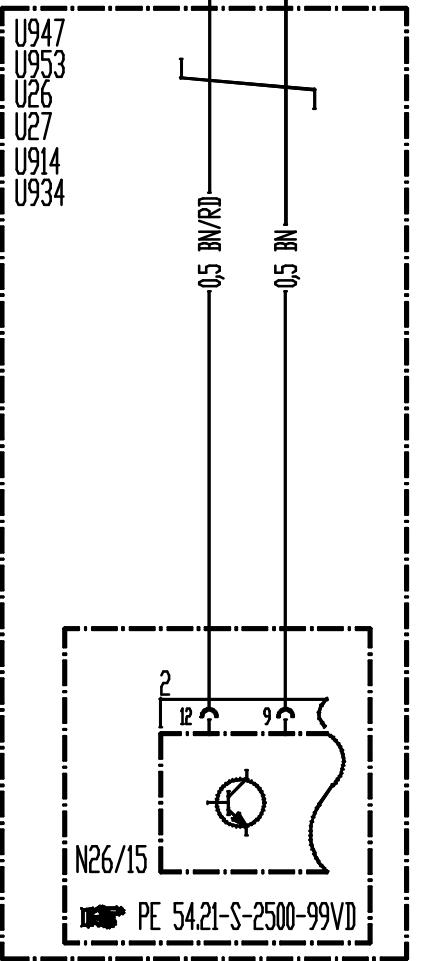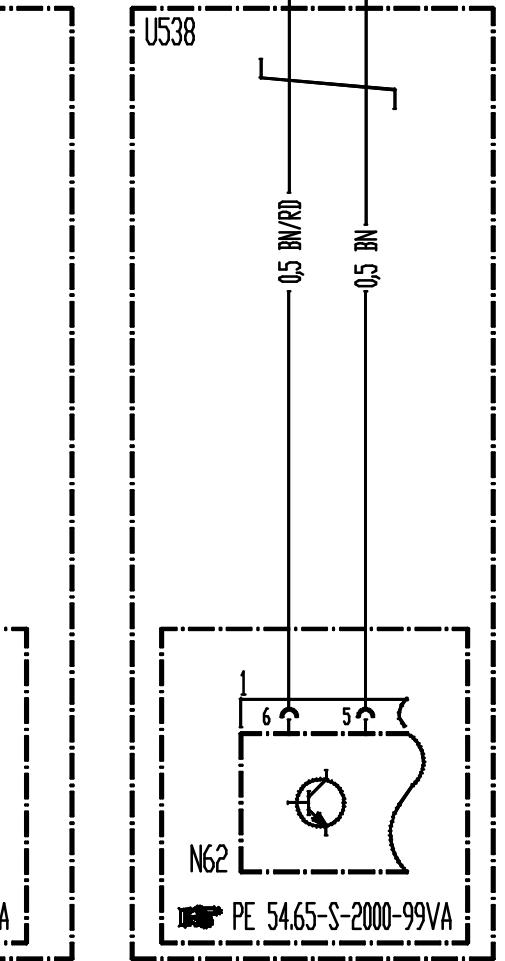

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

X30/24
X30/25
X30/26 X30/24
X30/25
X30/26 X30/24
X30/25
X30/26

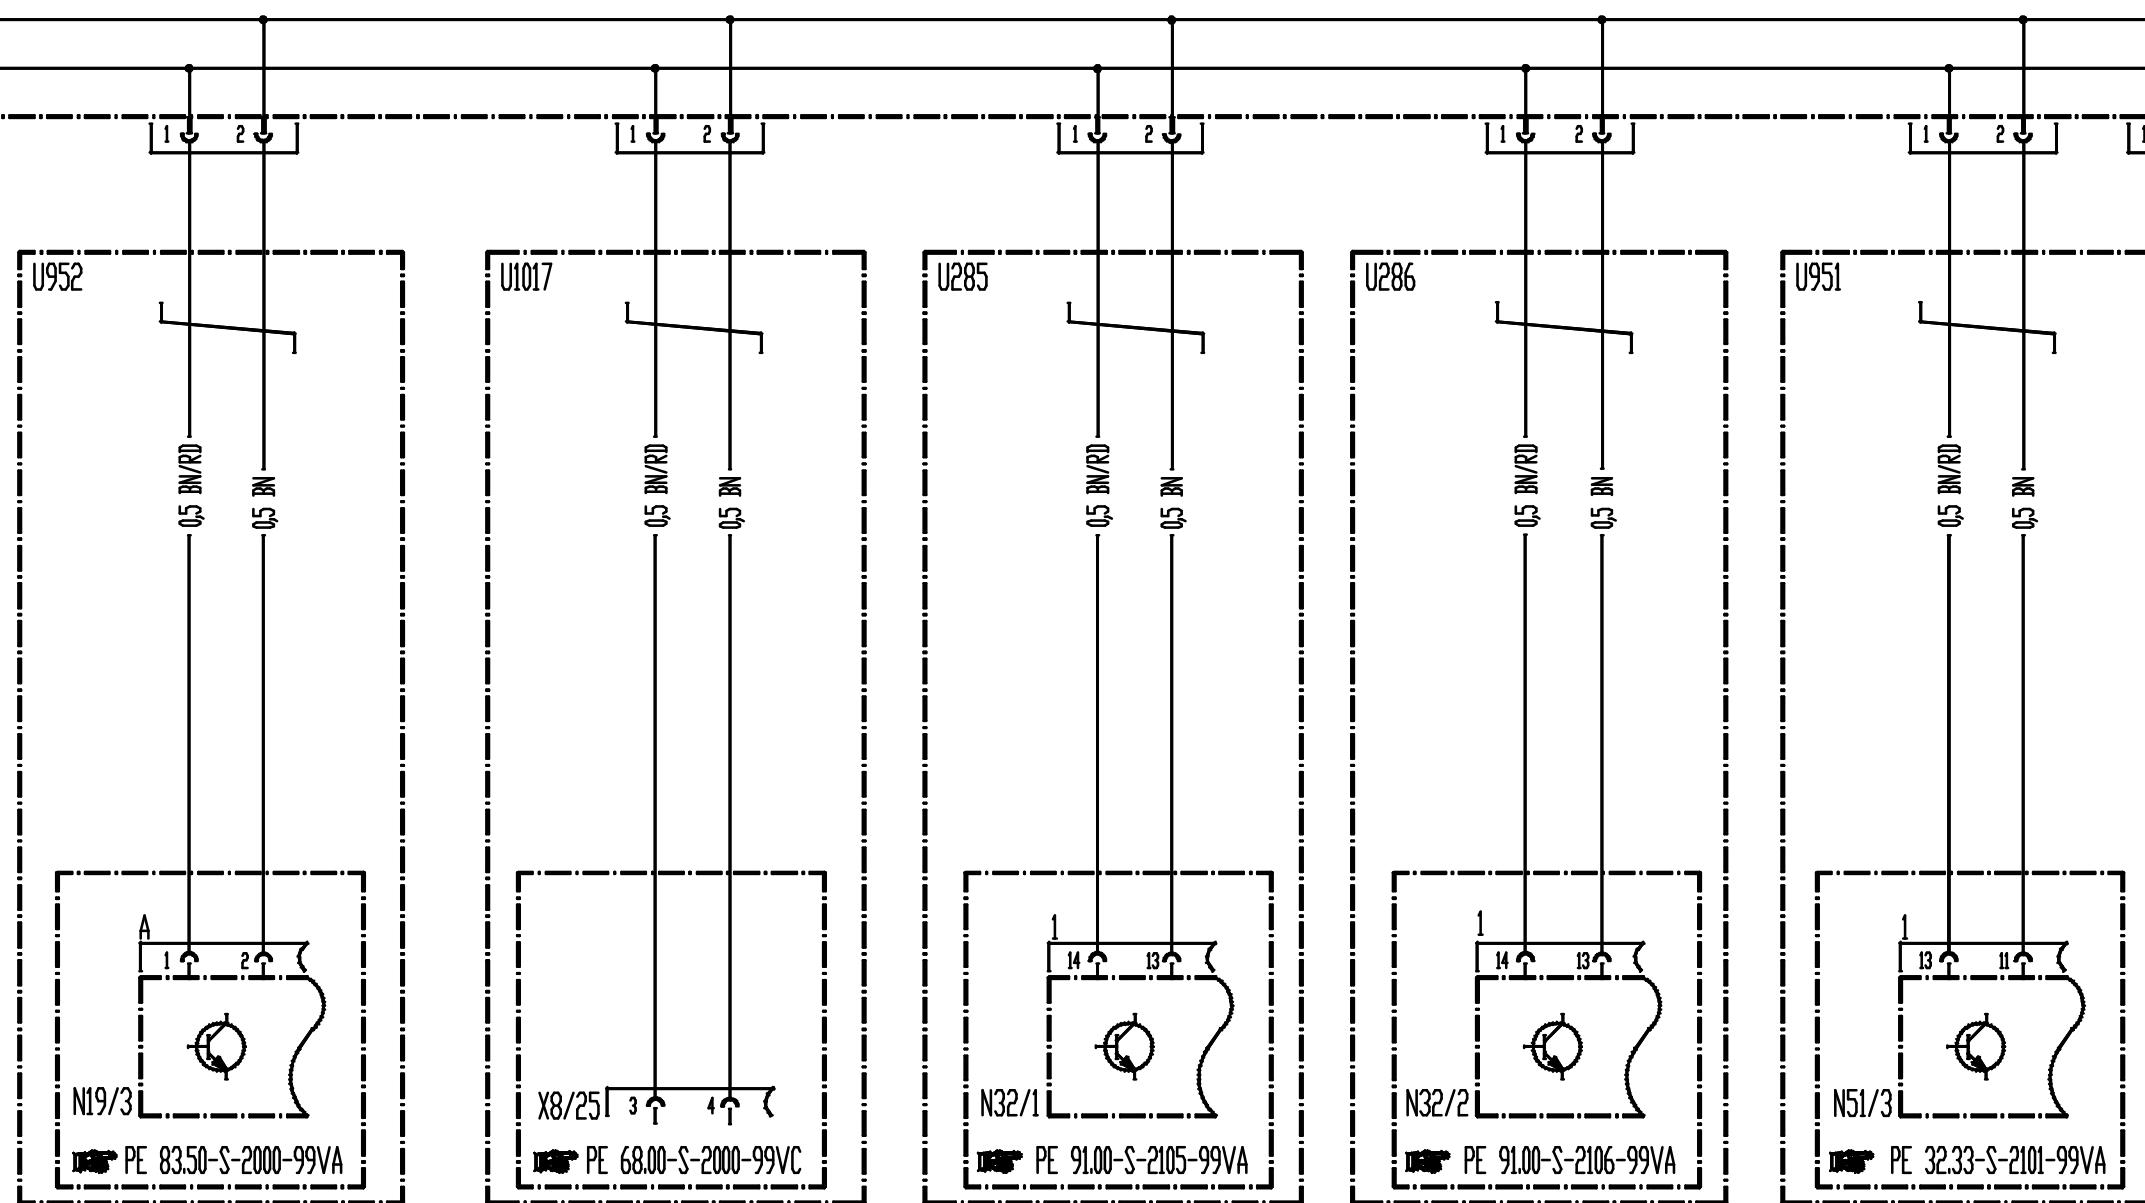


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

Sheet 2

| | | | |
|---------------------|--|------------------------|---------------------|
| PE00.19-S-2150-99VB | Wiring diagram of CAN bus | Sheet 2 | PE00.19-S-2150-99VB |
| PE00.19-S-2150-60VB | Legend for electric wiring diagrams of CAN bus | Sheet 2 | PE00.19-S-2150-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| Code | Designation | Coordinates |
|-------------|---|--------------------|
| A0 | Color code key | 80L |
| A1 | Instrument cluster | 11K 61K |
| A2 | Radio / Sound 10 / Sound 40 / Audio 10 | 20K |
| A2/56 | Radio and navigation unit | 23K |
| A2/77 | Telephone and communication unit | 33K |
| A2/78 | Audio-Video-Navigation (AVN) | 30K |
| A40/3 | COMAND operating, display and control unit | 27K |
| B24/8 | Steering angle sensor | 55K |
| N3/9 | CDI control unit | 49K |
| N3/10 | ME control unit | 45K |
| N3/20 | CDI control unit | 42K |
| N10 | SAM control unit | 1K |
| N15/3 | EGS control unit | 67K |
| N15/5 | Electronic selector lever module control unit | 64K |
| N30/4 | ESP control unit | 57K |
| N72/1 | Upper control panel control unit | 13K |
| N73 | EIS [EZS] control unit | 8K 53K |
| S98 | Air conditioning operating module | 16K |
| U11 | Valid for radio with cassette drive, Latin America | 19D |
| U13 | Valid for auto pilot system with TMC interface | 26D |
| U53 | Valid for automatic air conditioning "Thermotronic" | 16D |
| U54 | Valid for regulated air conditioning "Tempmatic" | 16D |

| | | |
|--------|--|--------------------------|
| U150 | Valid for engine M 112 | 45D |
| U507 | Valid for Electronic Stability Program (ESP) | 55D |
| U740 | Valid for engine OM 646 | 48D |
| U955 | Valid for alternator 14V / 200 Ah | 16E |
| U956 | Valid for auto pilot system for Japan, large display | 30D |
| U957 | Valid for Audio 10 radio with cassette drive | 19D |
| U958 | Valid for Audio 10 radio with CD | 19E |
| U959 | Valid for Audio 30 APS radio with TMC interface | 23D |
| U960 | Valid for engine OM 642 | 41D |
| U961 | Valid for automatic transmission | 64D |
| W43/2 | Ground (right interior compartment firewall) | 51K |
| X30/24 | Interior CAN bus connector | 11A 22A |
| X30/25 | Interior CAN bus connector | 11A 22A |
| X30/26 | Interior CAN bus connector | 11A 22A |
| X30/27 | Engine CAN bus connector | 46A 56A 68A 79A |

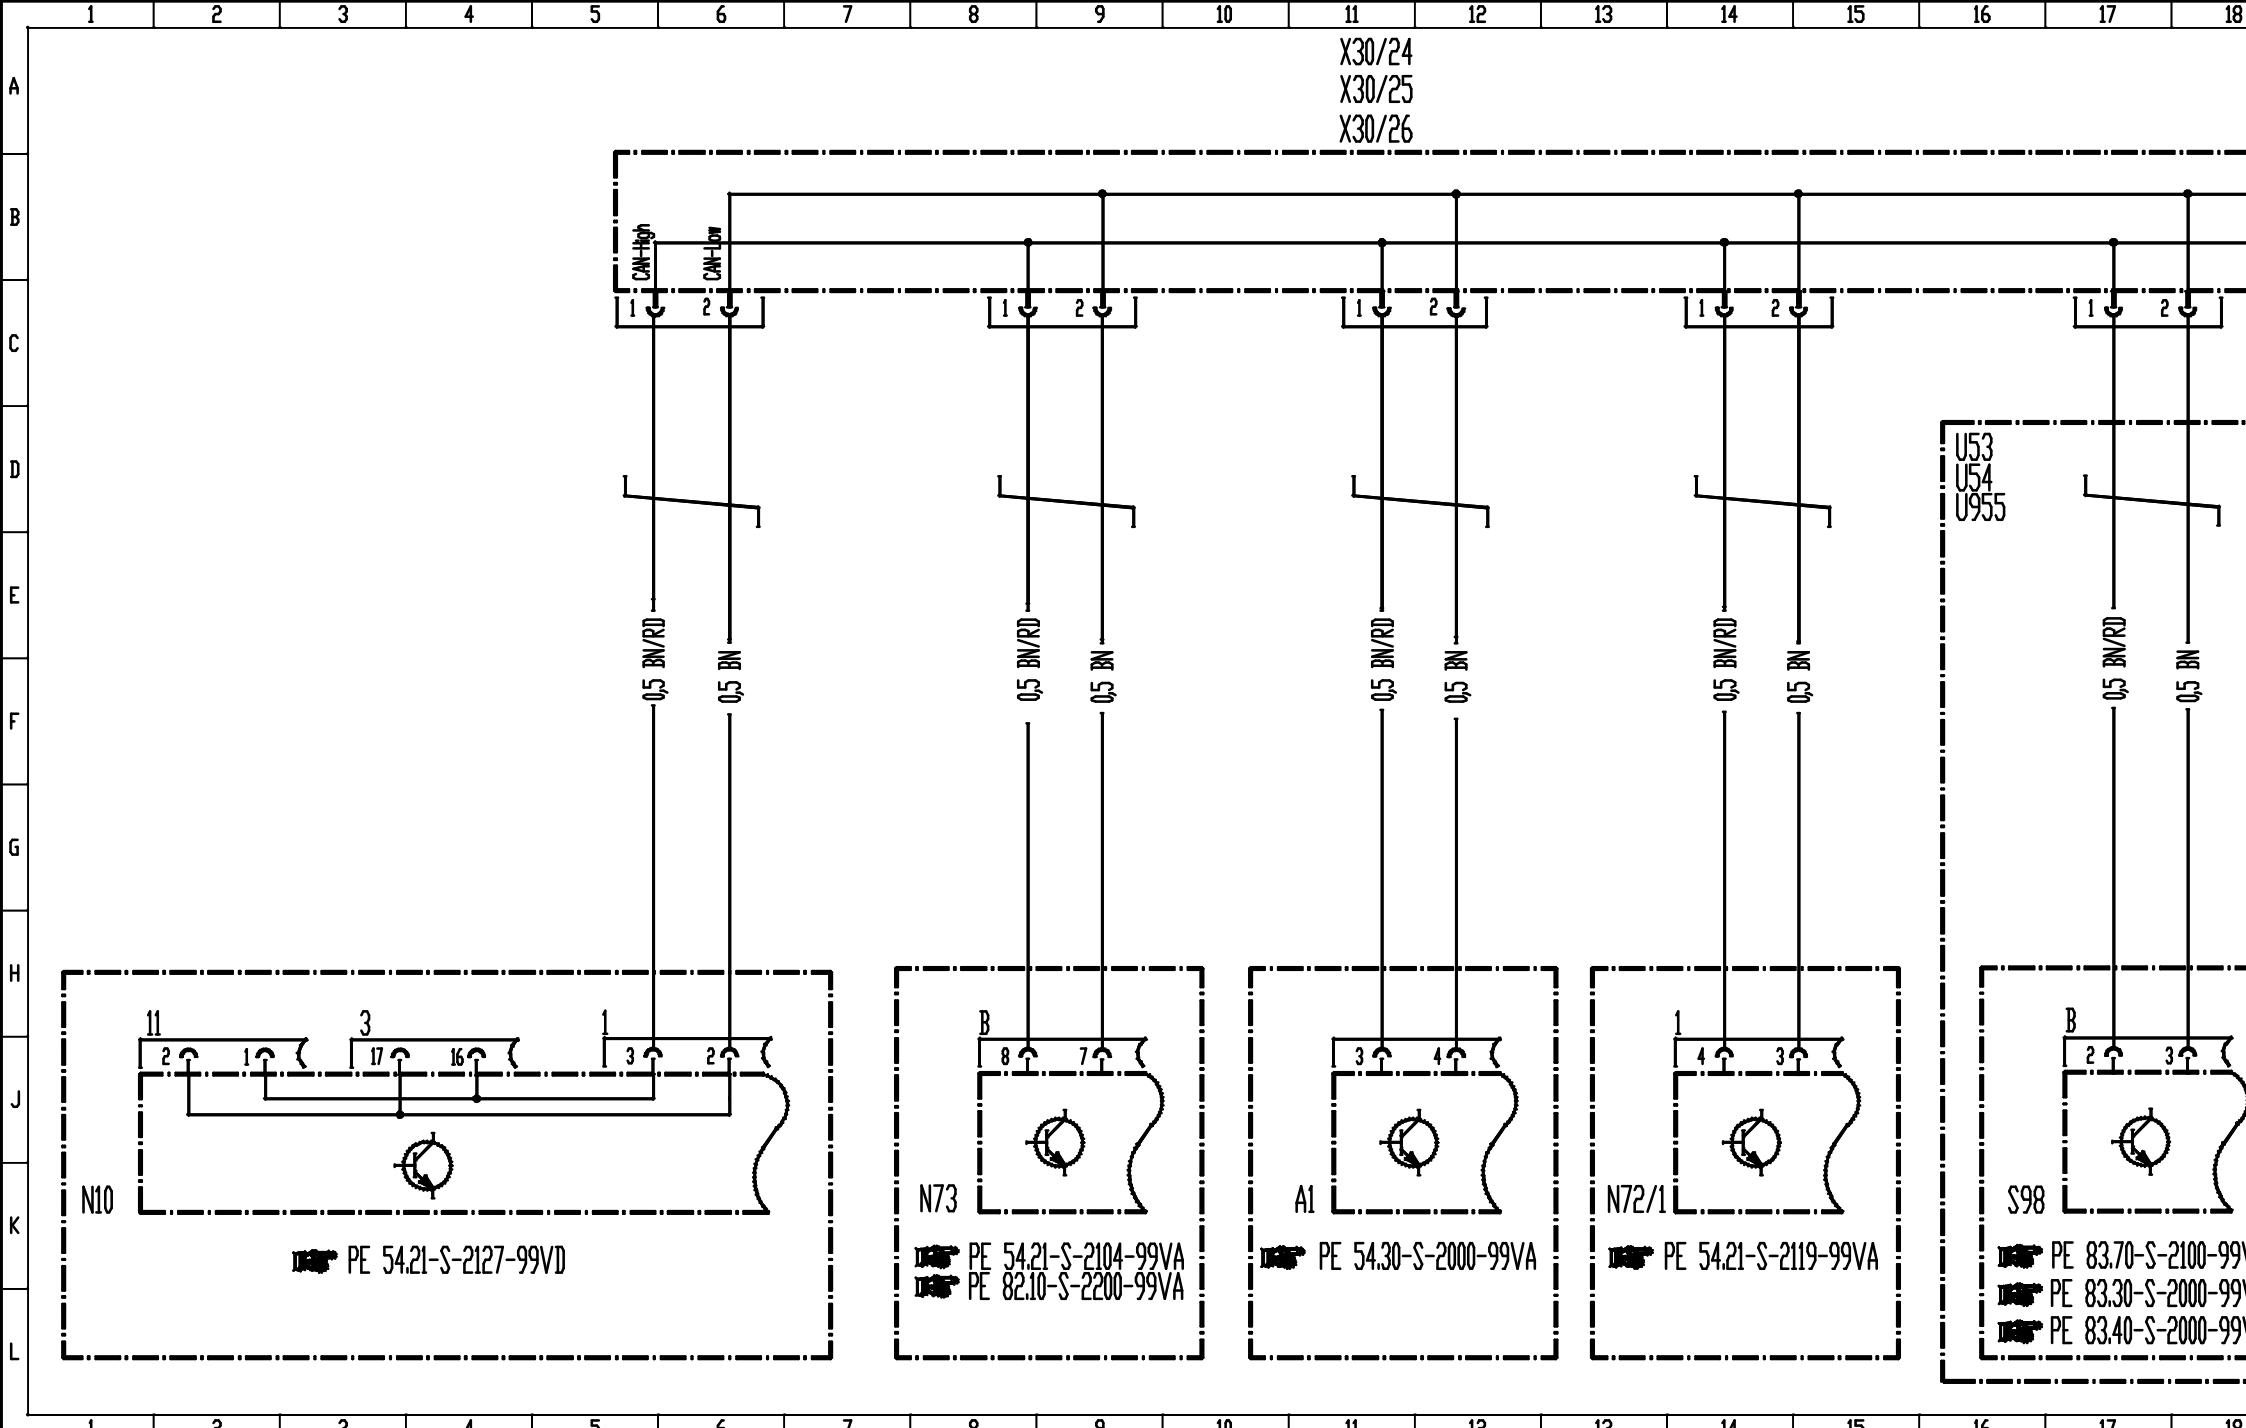


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

X30/24

X30/25


X30/26

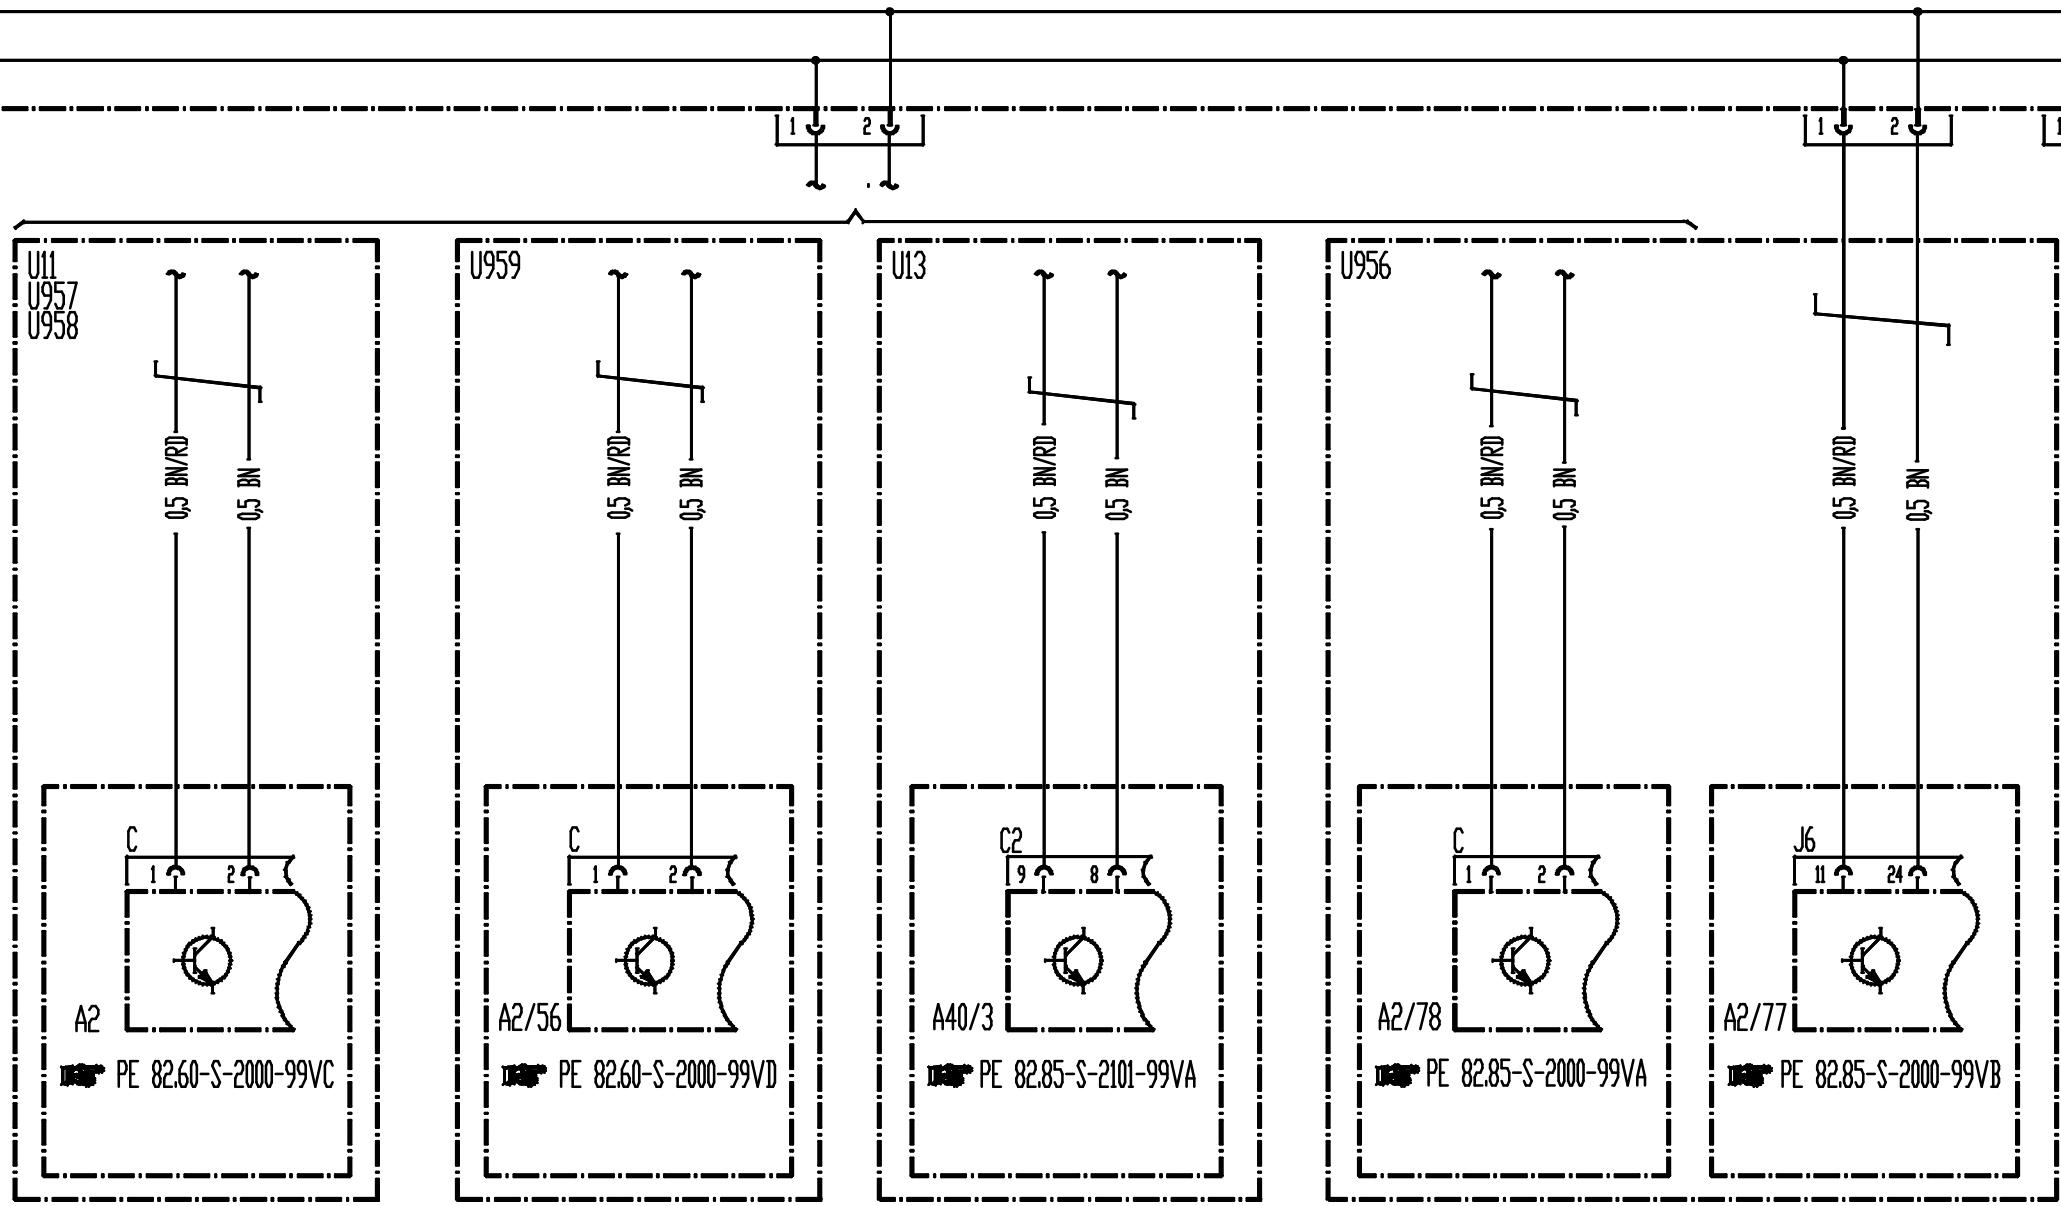

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53


36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

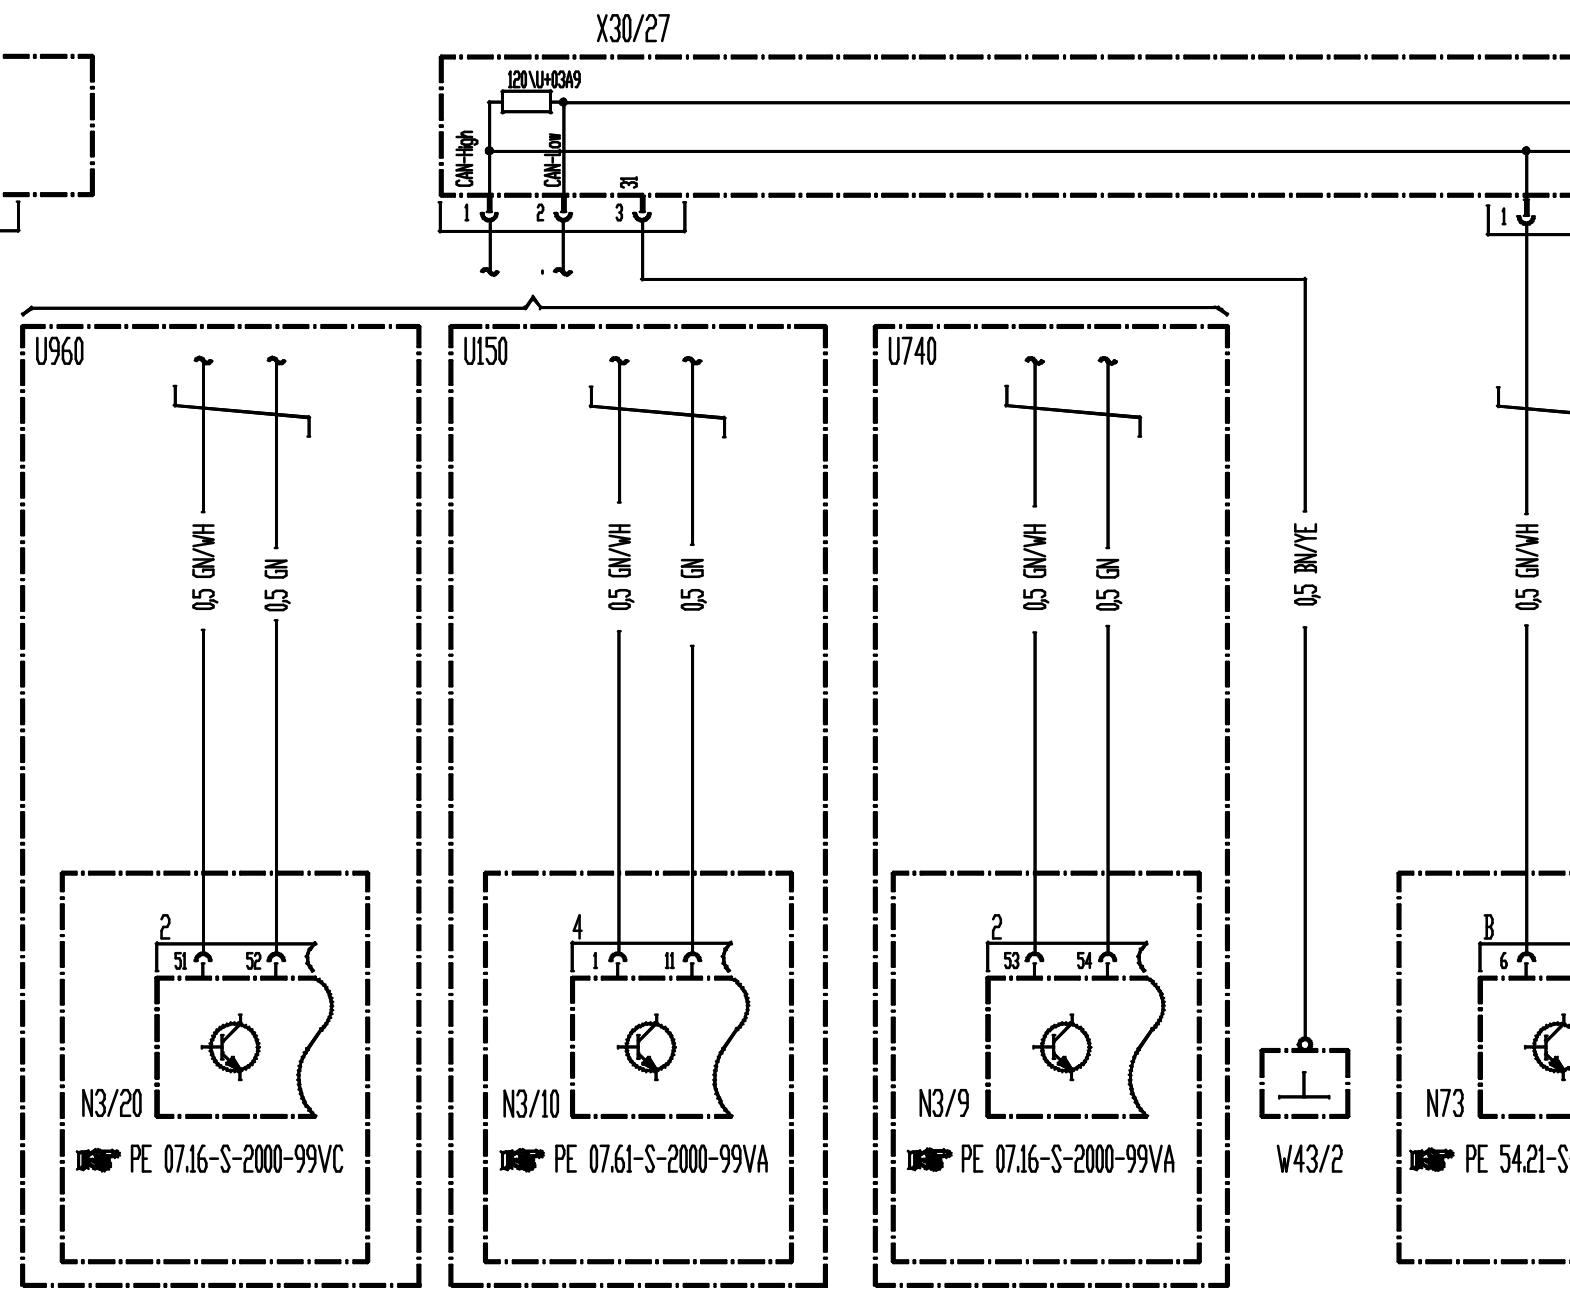

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

X30/27

X30/27

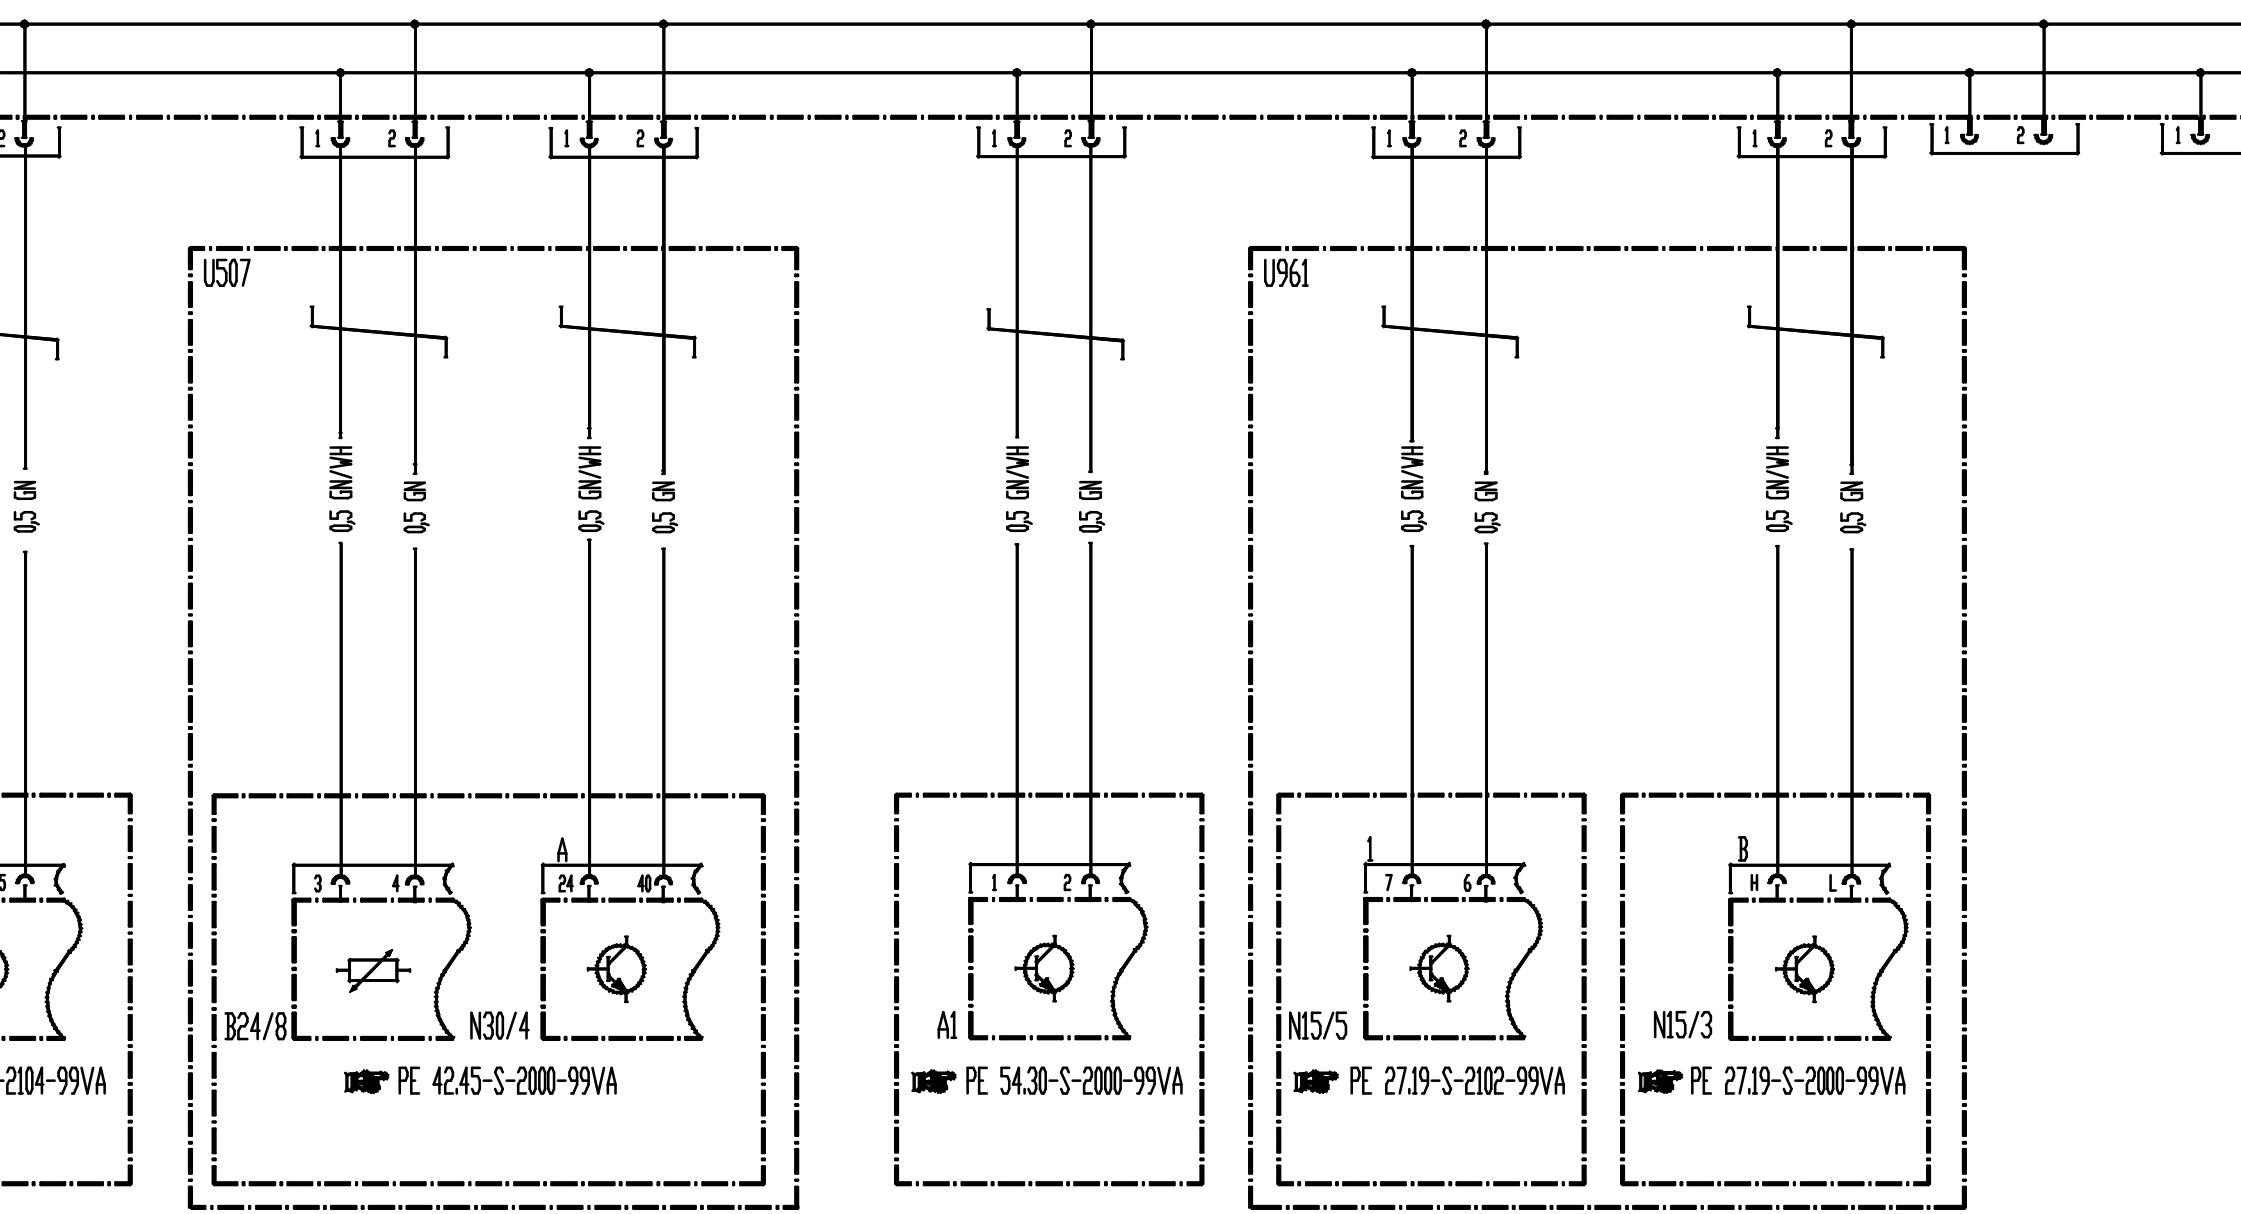

Instrument cluster

Chapter 12


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815

| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.30-S-2000-99VA | Wiring diagram of instrument cluster (IC)/gages/warning devices | | PE54.30-S-2000-99VA |
| PE54.30-S-2000-60VA | Legend of wiring diagram for instrument cluster (CLUS) / display instruments / warning devices | | PE54.30-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|--|--|
| PE54.30-S-2000-60VA | Legend of wiring diagram for instrument cluster (CLUS) / display instruments / warning devices | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 | |
|---------------------|---|--|--|

| Code | Designation | Coordinates |
|-------|--|---------------------------------------|
| A1 | Instrument cluster | 2A 10A 19A 28A 35A 39A |
| A2 | Radio / Sound 10 / Sound 40 / Audio 10 | 39L 42L |
| A56 | Modular tachograph | 22L |
| B6 | Speed inductive sensor | 35L |
| B6/4 | Speed inductive sensor | 30L |
| B6/6 | Speed inductive sensor | 18L |
| K40/9 | Fuse and relay block | 9L |
| N66/4 | Rear conversation unit control unit | 51L |
| N123 | Hands-free system control unit | 48L |
| U10 | Valid for Sound 40 Pro radio | 42J |
| U15 | Valid for screen in rear and DVD player | 51J |
| U16 | Valid for screen in rear, DVD player and TV tuner | 51J |
| U51 | Valid for telephone preinstallation | 48J |
| U905 | Valid without ABS/ASR and with 1 day/2 driver tachograph | 16D |
| U906 | Valid for odometer preinstallation and without 1 day/2 driver tachograph | 16E |
| U907 | Valid without ABS/ASR and with 1 day/2 driver tachograph | 20D |
| U908 | Valid for odometer preinstallation and with 1 day/2 driver tachograph | 20E |
| U909 | Valid for radio preinstallation | 45J |
| U910 | Valid for radio Sound 10 with cassette drive | 39J |
| U911 | Valid for 1 day/2 driver tachograph and with automatic transmission | 33G |

| | | |
|--------|--|------------|
| U912 | Valid for 1 day/2 driver tachograph and without automatic transmission | 27G |
| W12 | Ground (cockpit and center console) | 2L 21L |
| X2/5 | Tachograph connector | 16E 30E |
| X30/24 | Interior CAN bus connector | 6L |
| X30/25 | Interior CAN bus connector | 6K |
| X30/26 | Interior CAN bus connector | 6K |
| X30/27 | Engine CAN bus connector | 3L |
| Z3/11 | Terminal 15 connector sleeve | 11E |
| Z60 | Speed-dependent volume control signal connector sleeve | 42E |

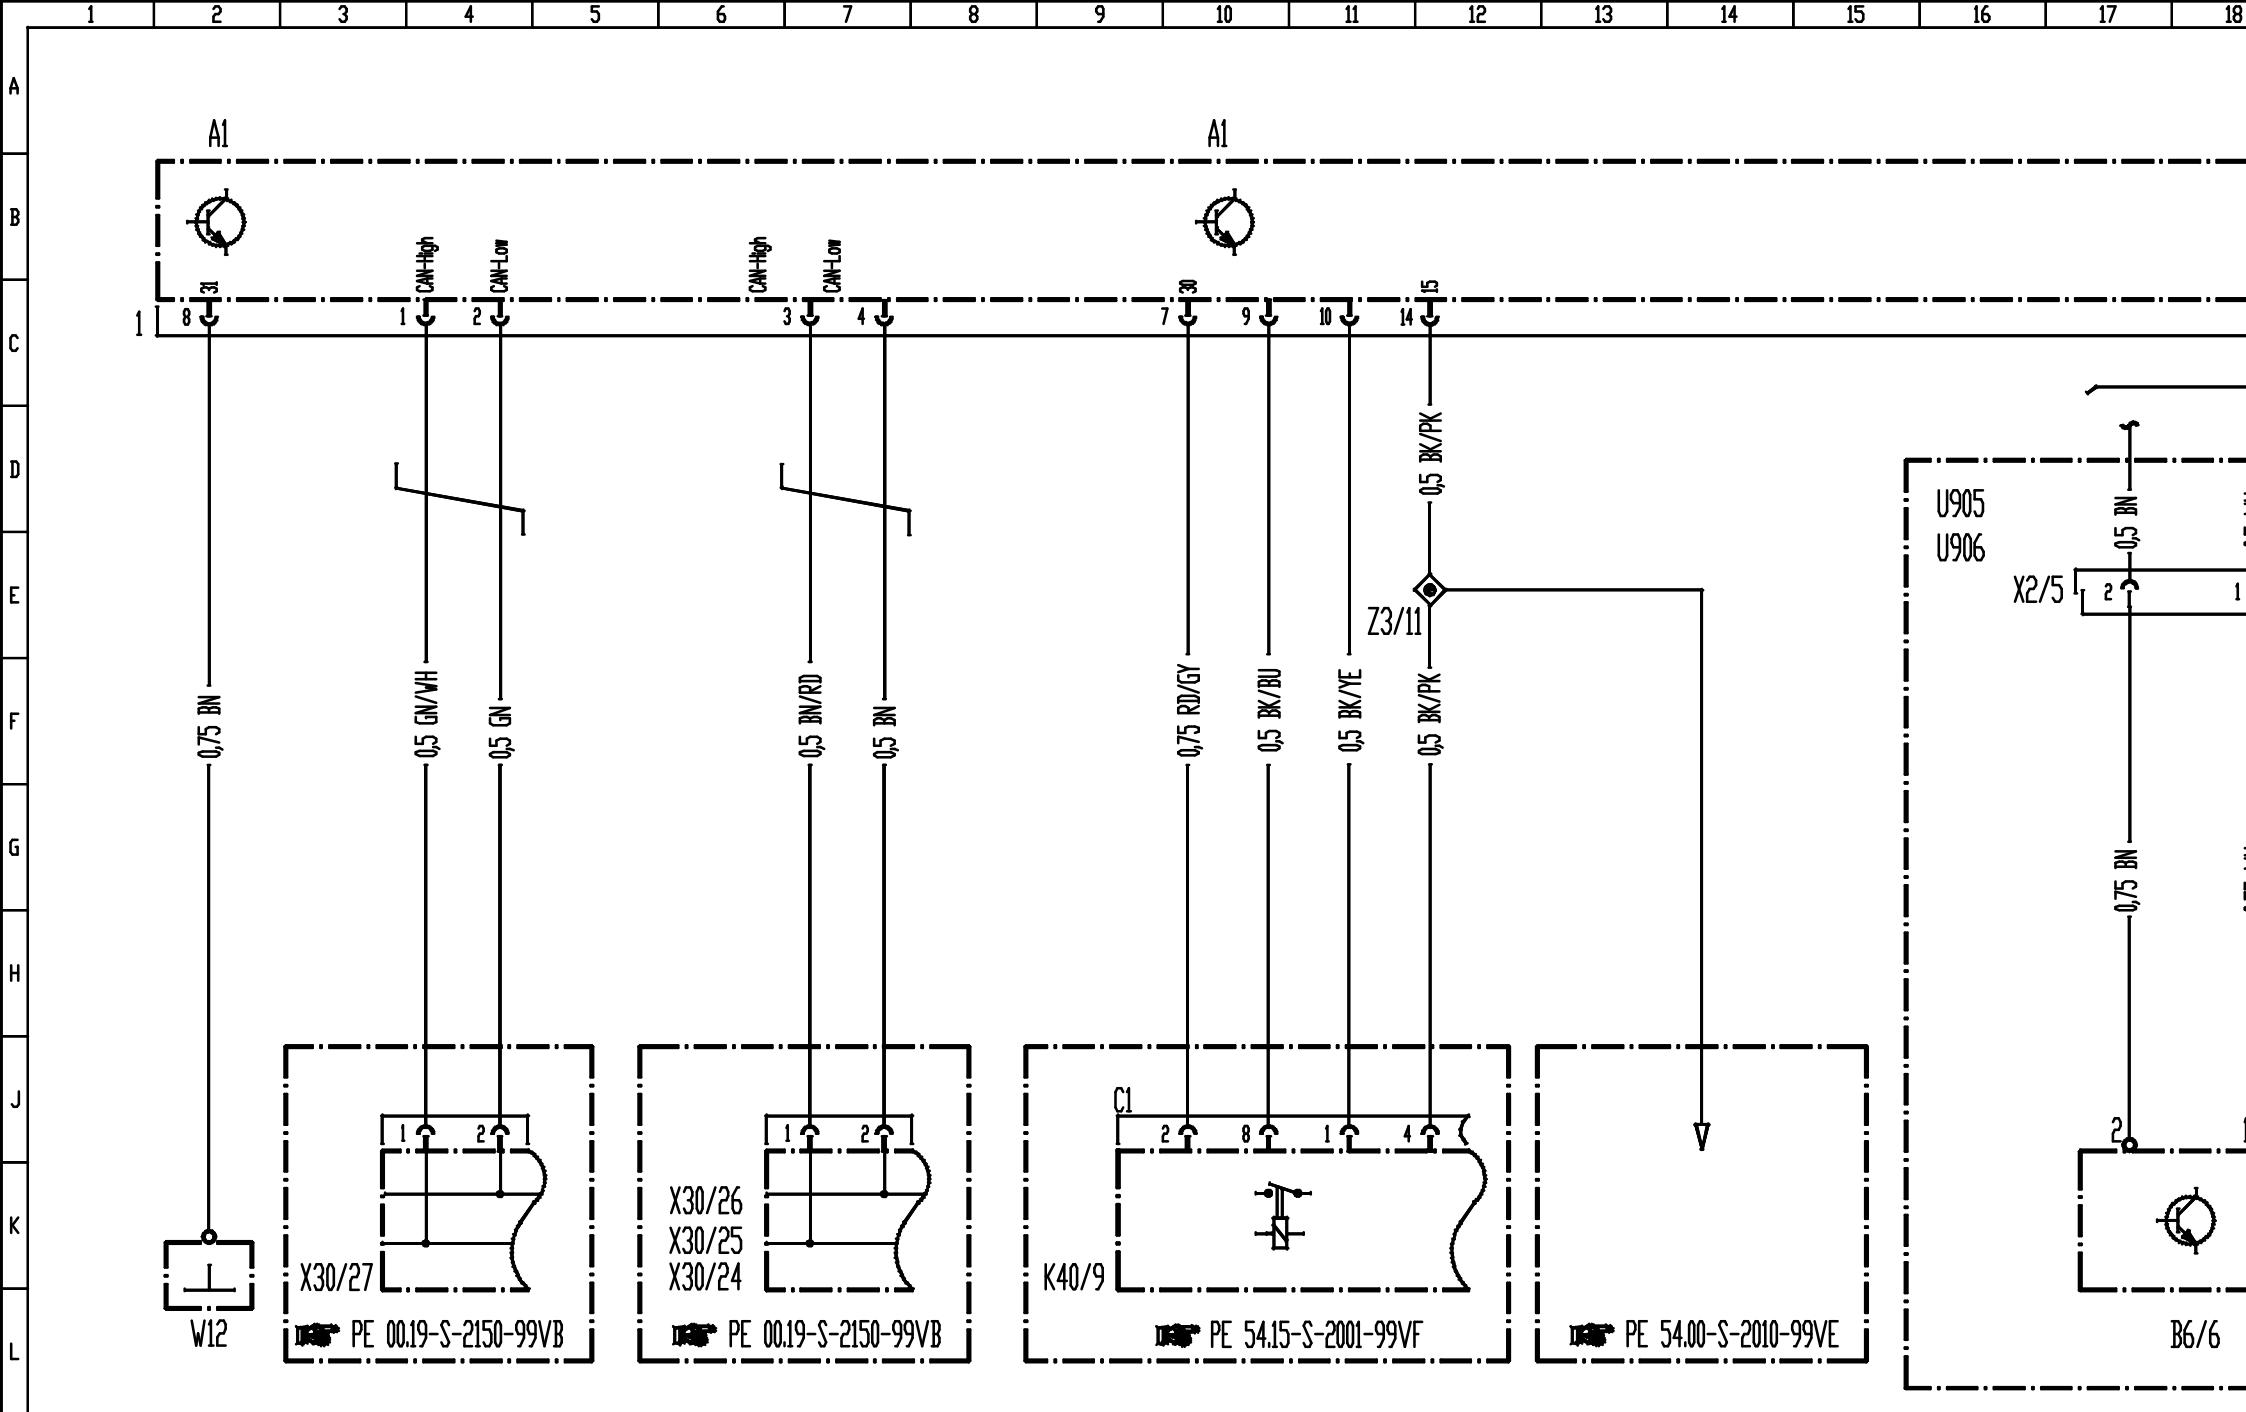


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

A1

A1


A1

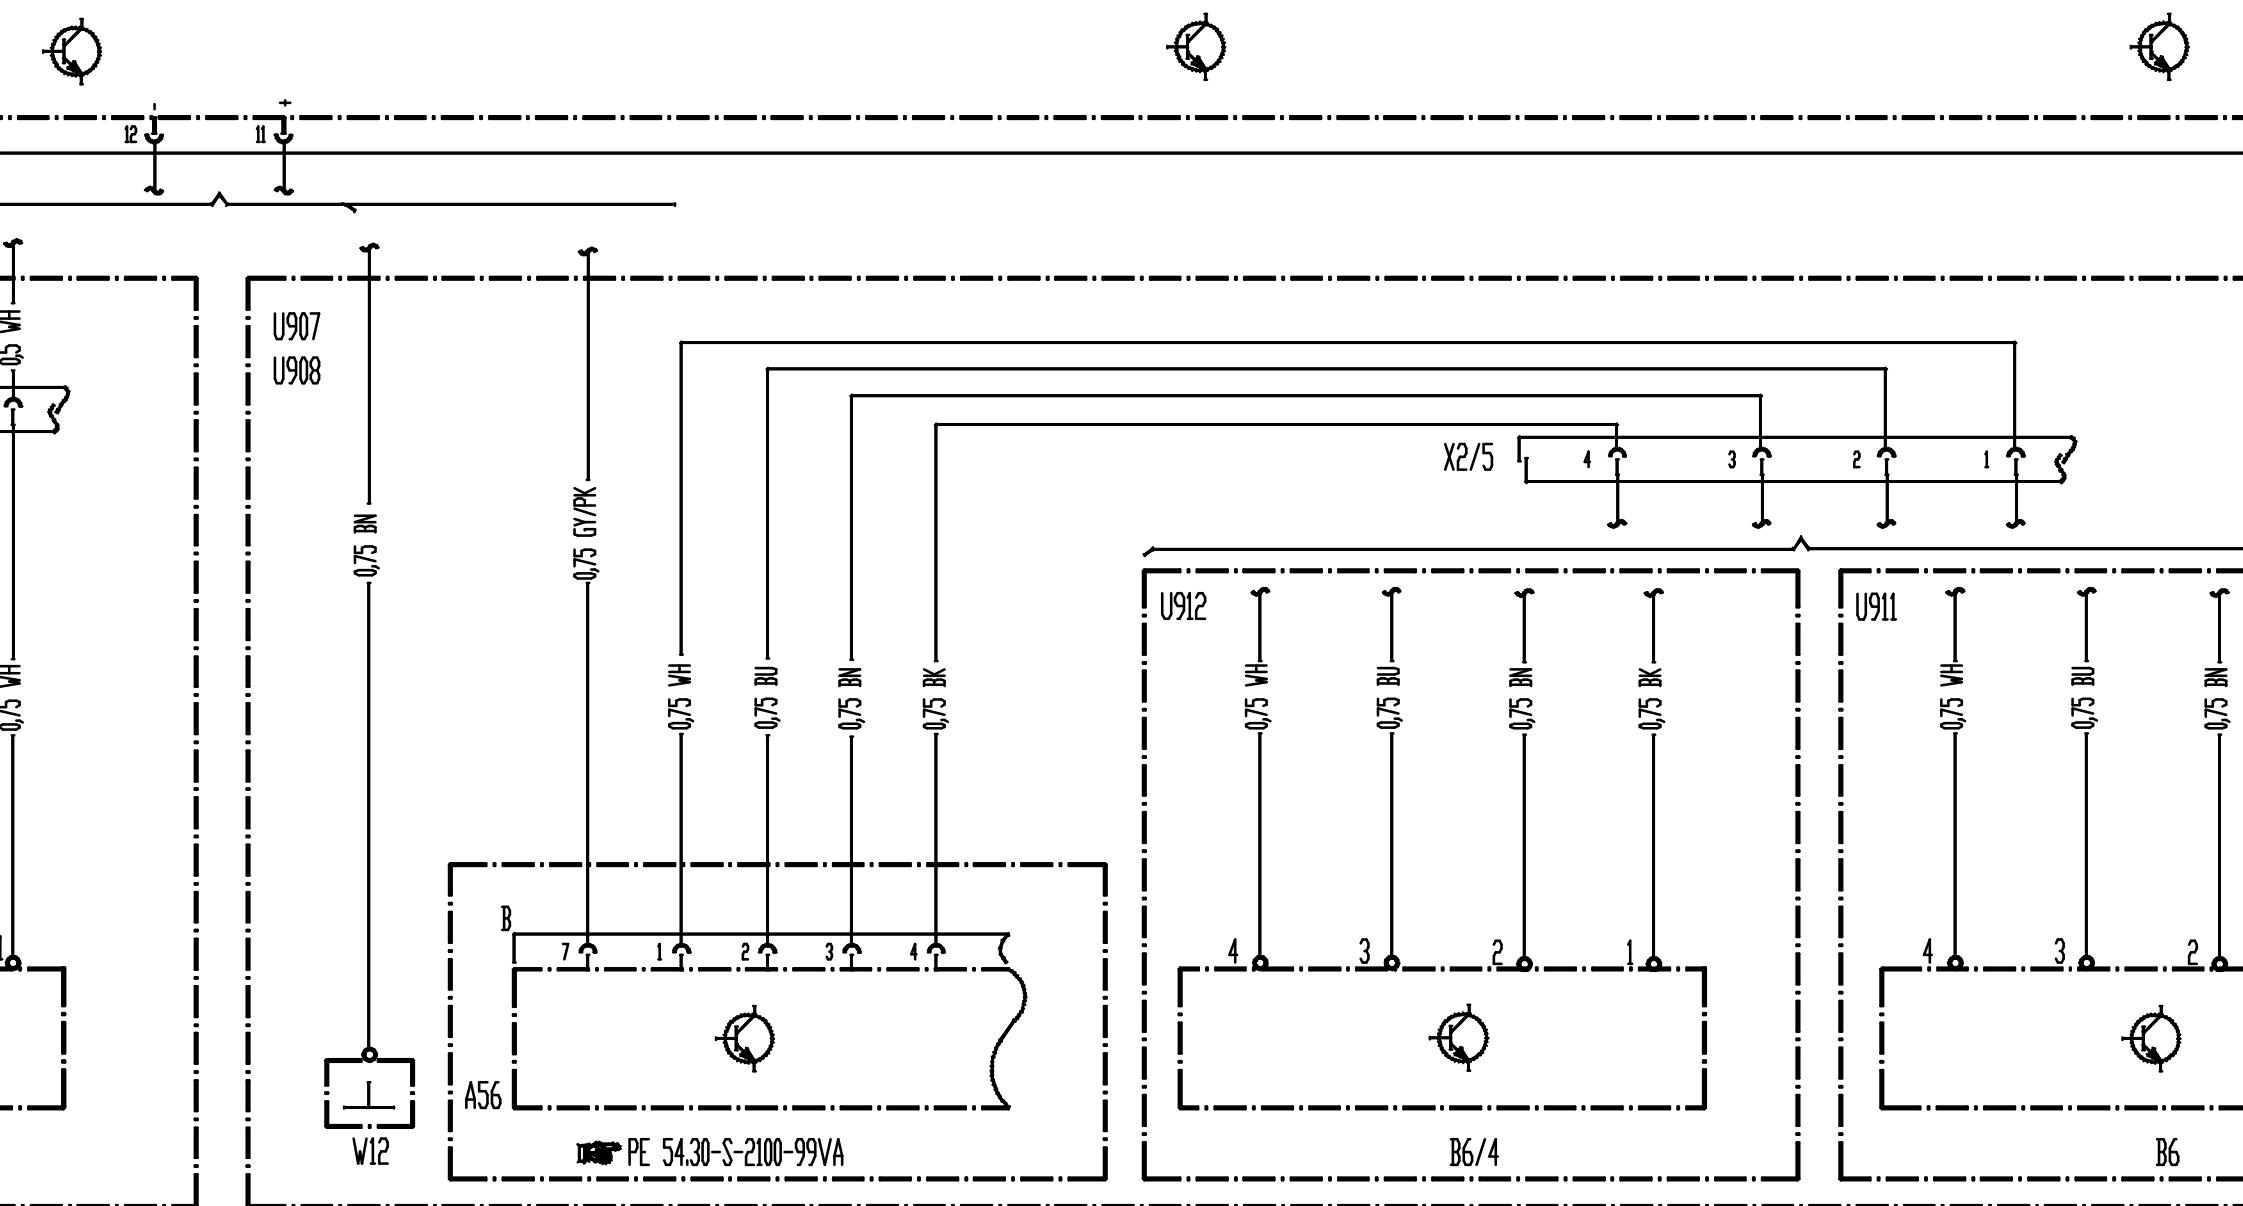

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

A1

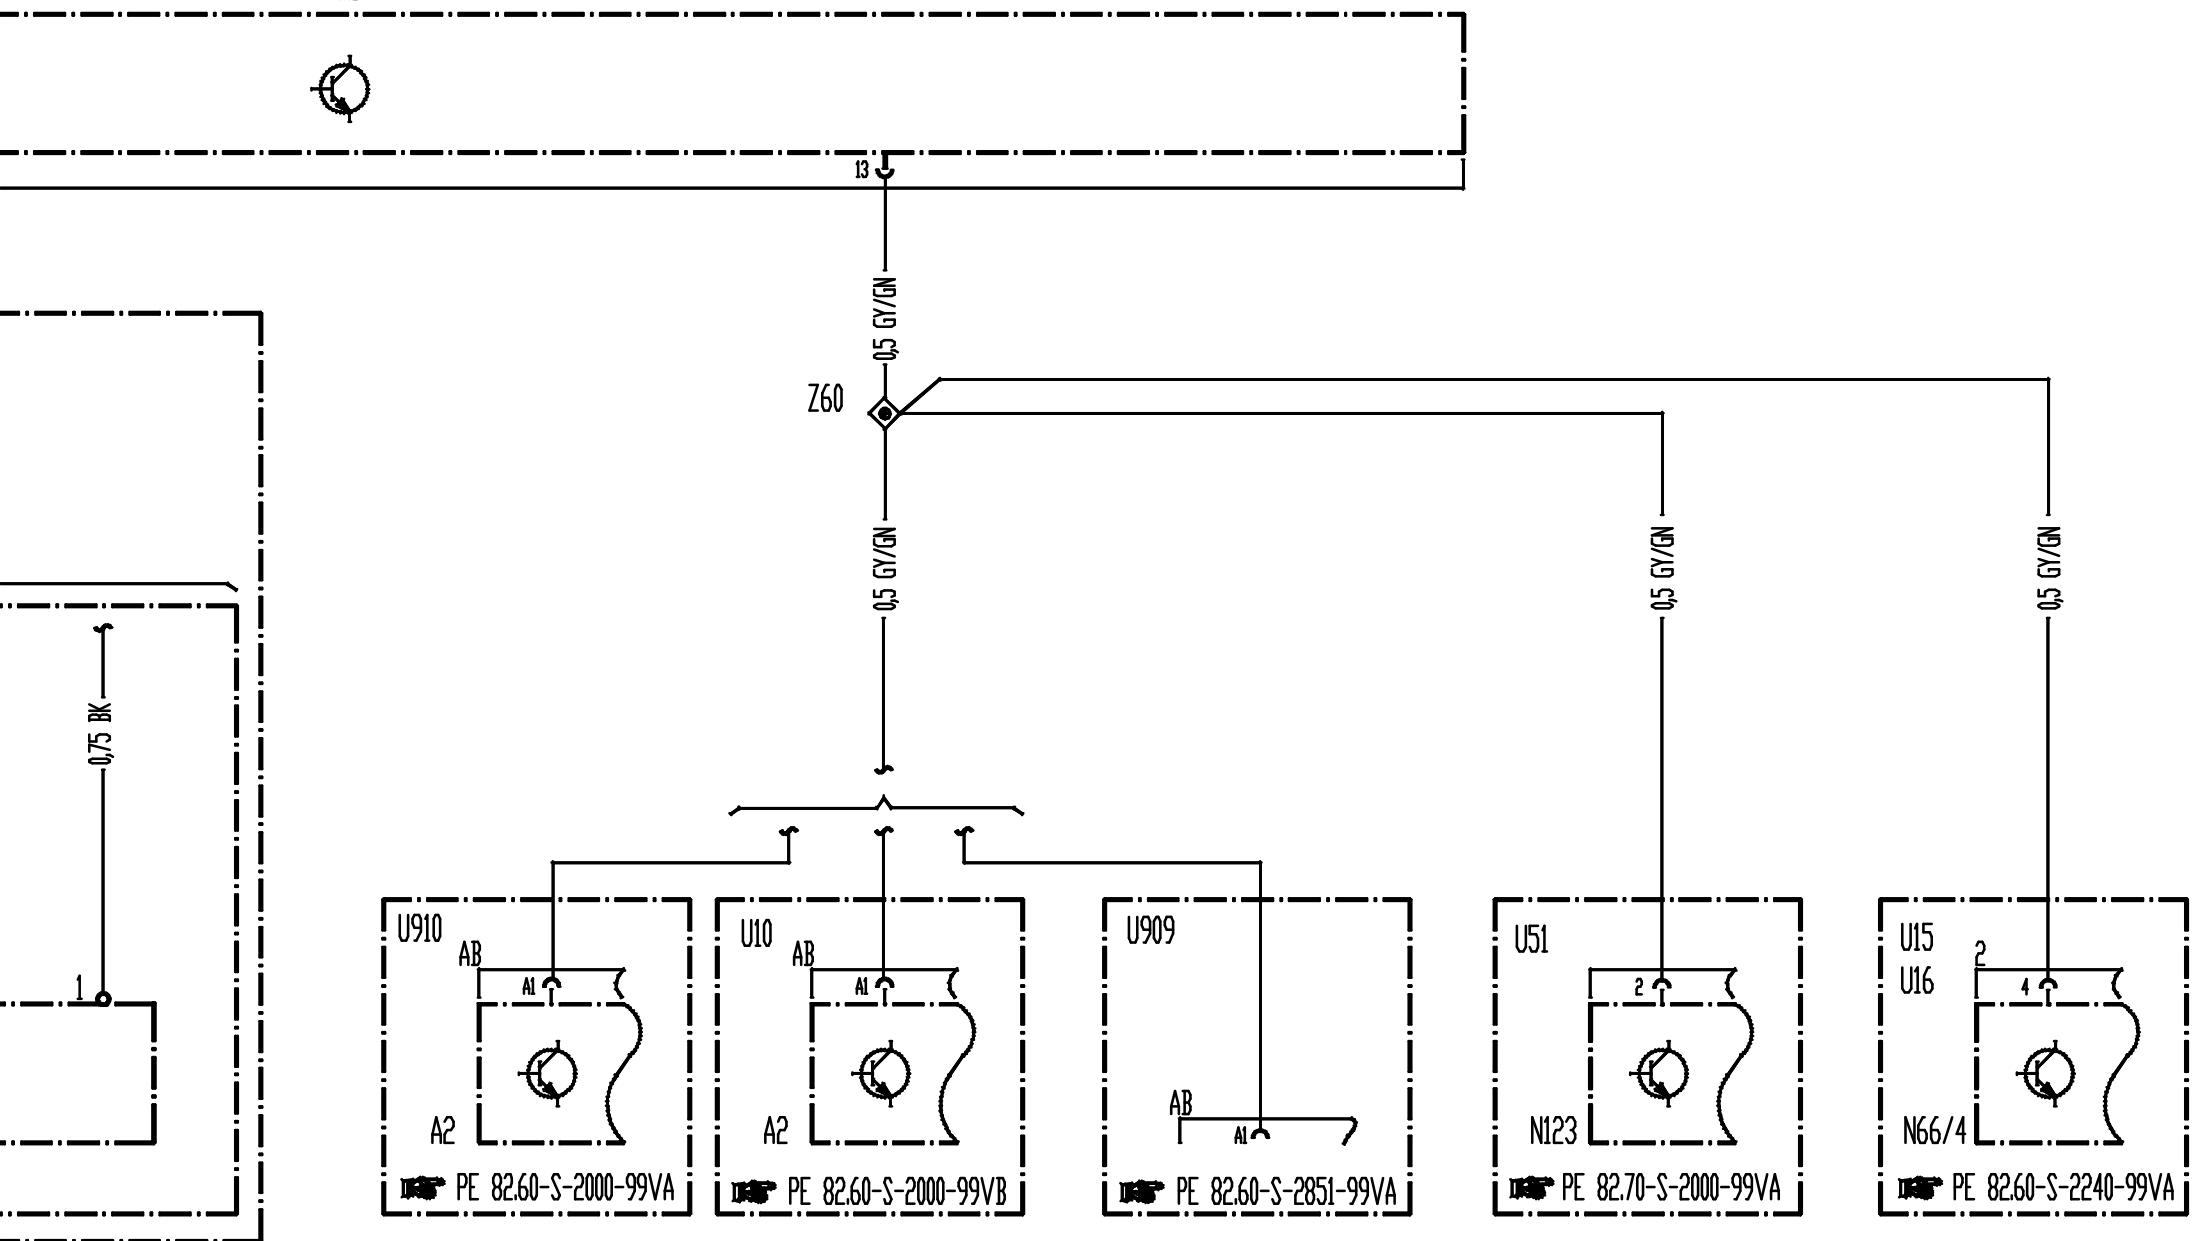

Electronic ignition switch (EIS)


Chapter 13

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


| | | | |
|---------------------|--|------------------------|---------------------|
| PE54.21-S-2104-99VA | Wiring diagram of electronic ignition switch (EIS) control unit | | PE54.21-S-2104-99VA |
| PE54.21-S-2104-60VA | Legend of wiring diagram for electronic ignition switch control unit (EIS) | | PE54.21-S-2104-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |


| | | | |
|---------------------|--|--|--|
| PE54.21-S-2104-60VA | Legend of wiring diagram for electronic ignition switch control unit (EIS) | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 | |
|---------------------|--|--|--|

| Code | Designation | Coordinates |
|--------|---|--------------------------------|
| A45/1 | Steering wheel clock spring contact | 42K |
| F34 | Fuse block, 22-pin | 1G |
| F34f38 | EIS [EZS] steering lock fuse | 2F |
| K40/9 | Fuse and relay block | 9K |
| N10 | SAM control unit | 19K |
| N15/5 | Electronic selector lever module control unit | 22K |
| N26/5 | Electric steering lock control unit | 6L |
| N73 | EIS [EZS] control unit | 4A 12A 20A 31A 40A |
| S40 | Pushbutton switch with variable speed limiter TPM | 33L |
| S144 | Combination switch | 39L |
| U49 | Valid for Japan | 27E |
| U52 | Valid for voice control | 35D |
| U559 | Valid for cruise control | 29D |
| U918 | Valid for Australia and [] with automatic transmission | 22E |
| U919 | Valid for all except Japan | 25E |
| W12 | Ground (cockpit and center console) | 8L 41L 47L |
| X11 | Data link connector | 12K |
| X18/46 | Voice control switch connector | 35F |
| X30/24 | Interior CAN bus connector | 16K |
| X30/25 | Interior CAN bus connector | 16K |

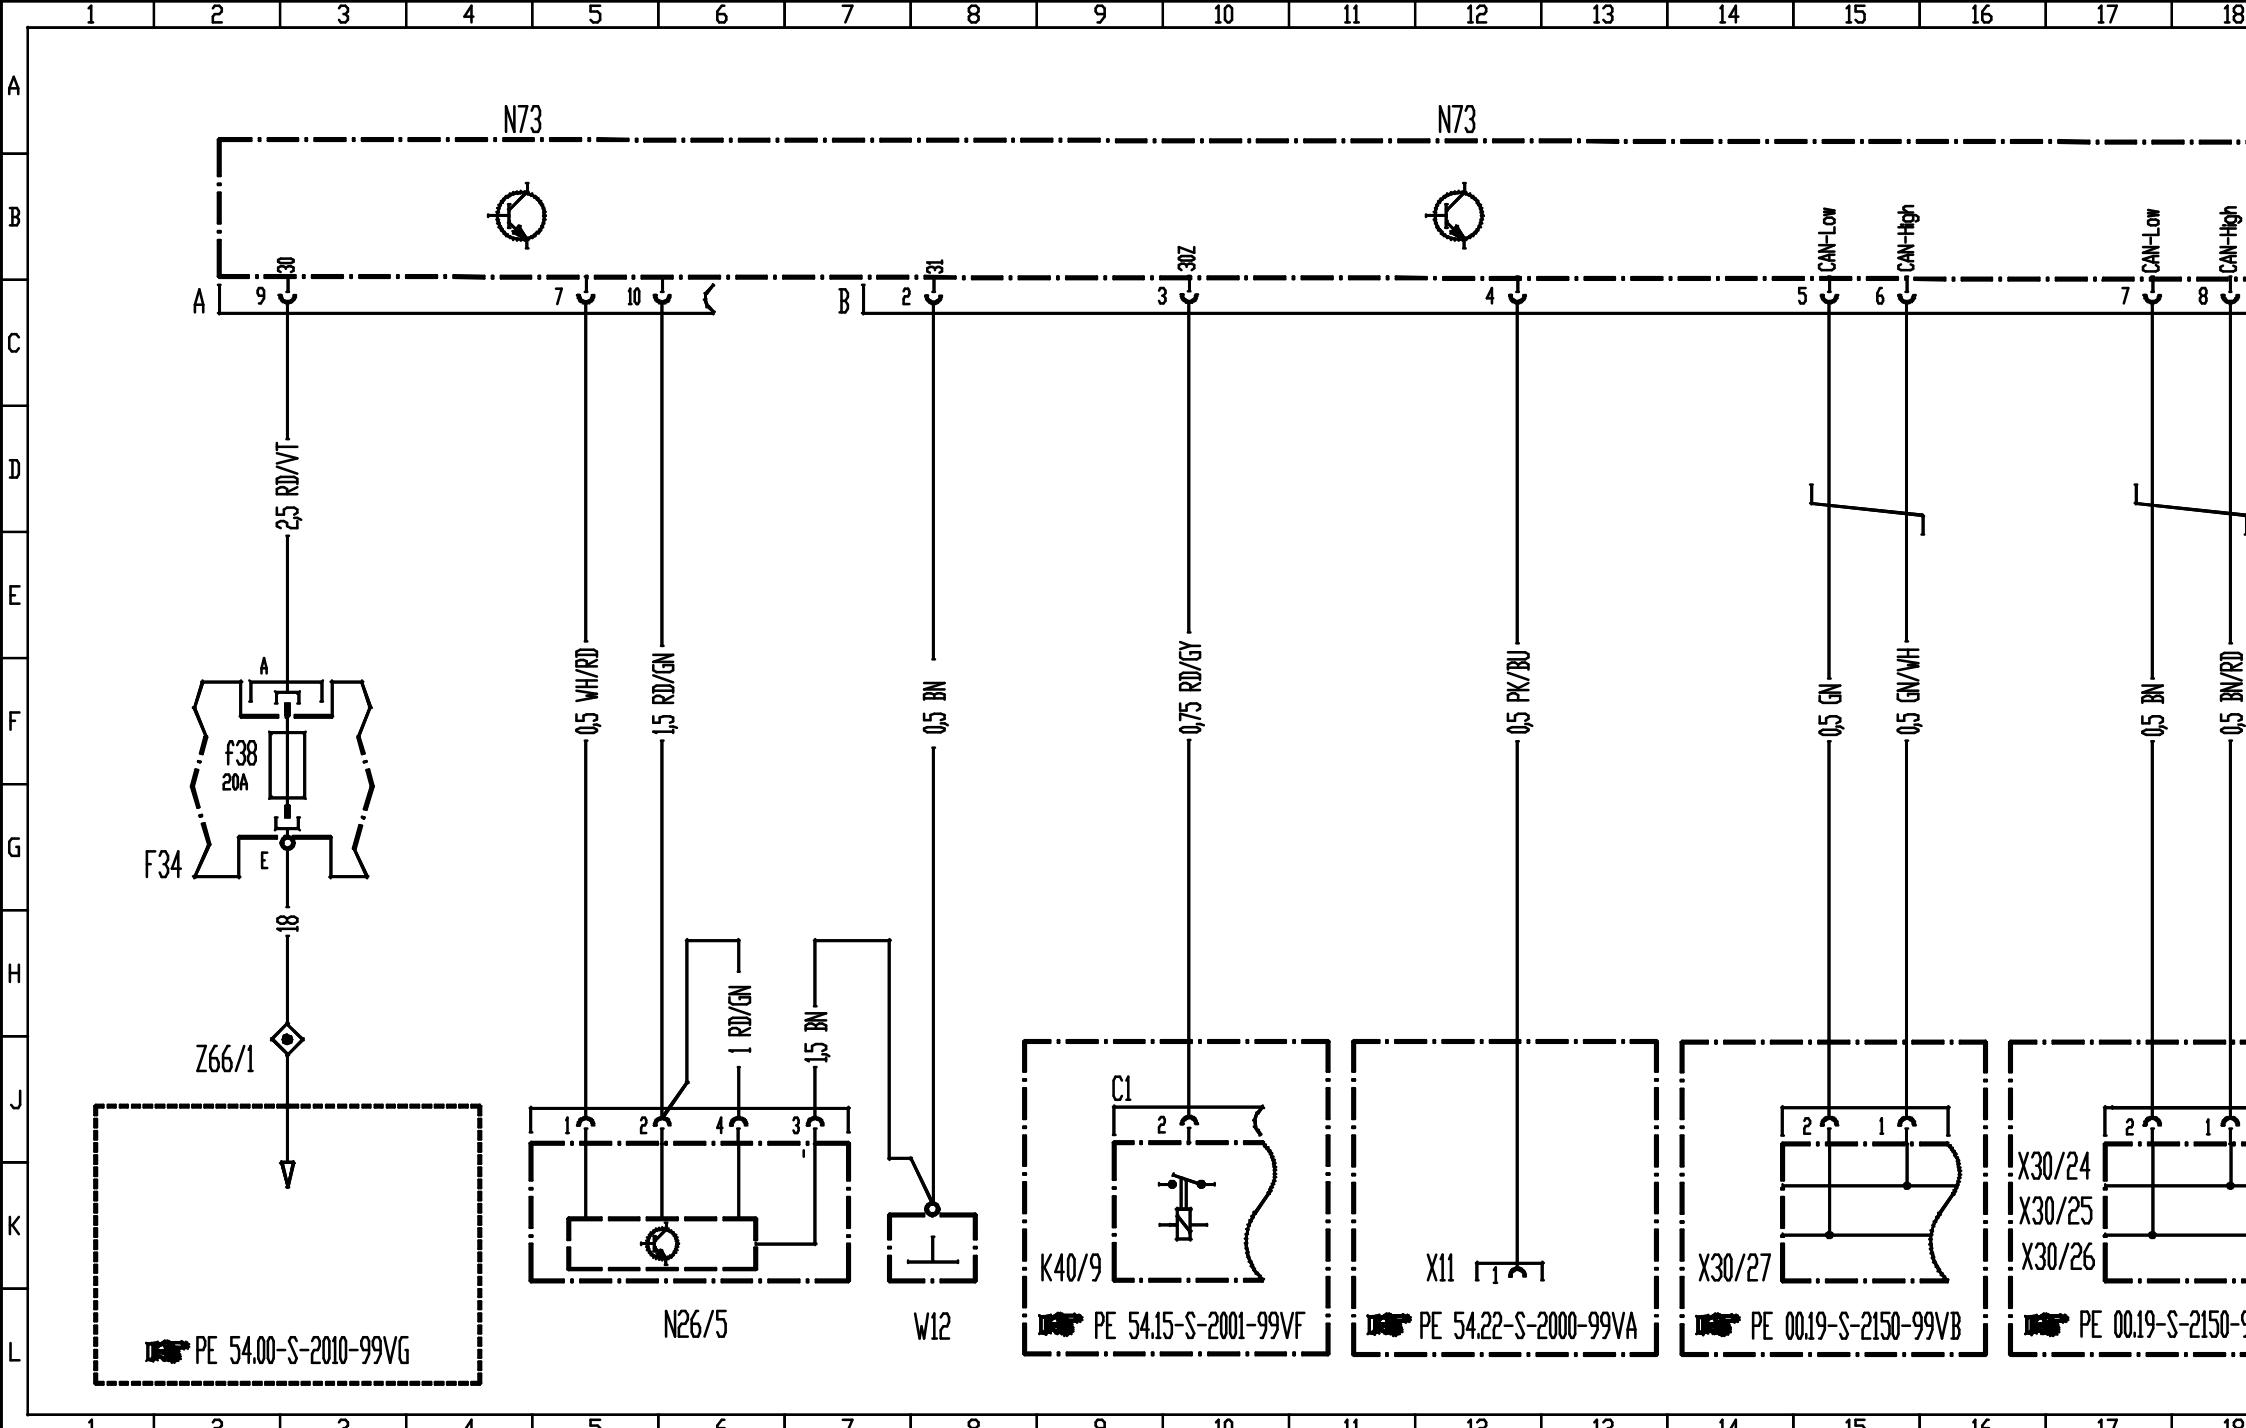

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

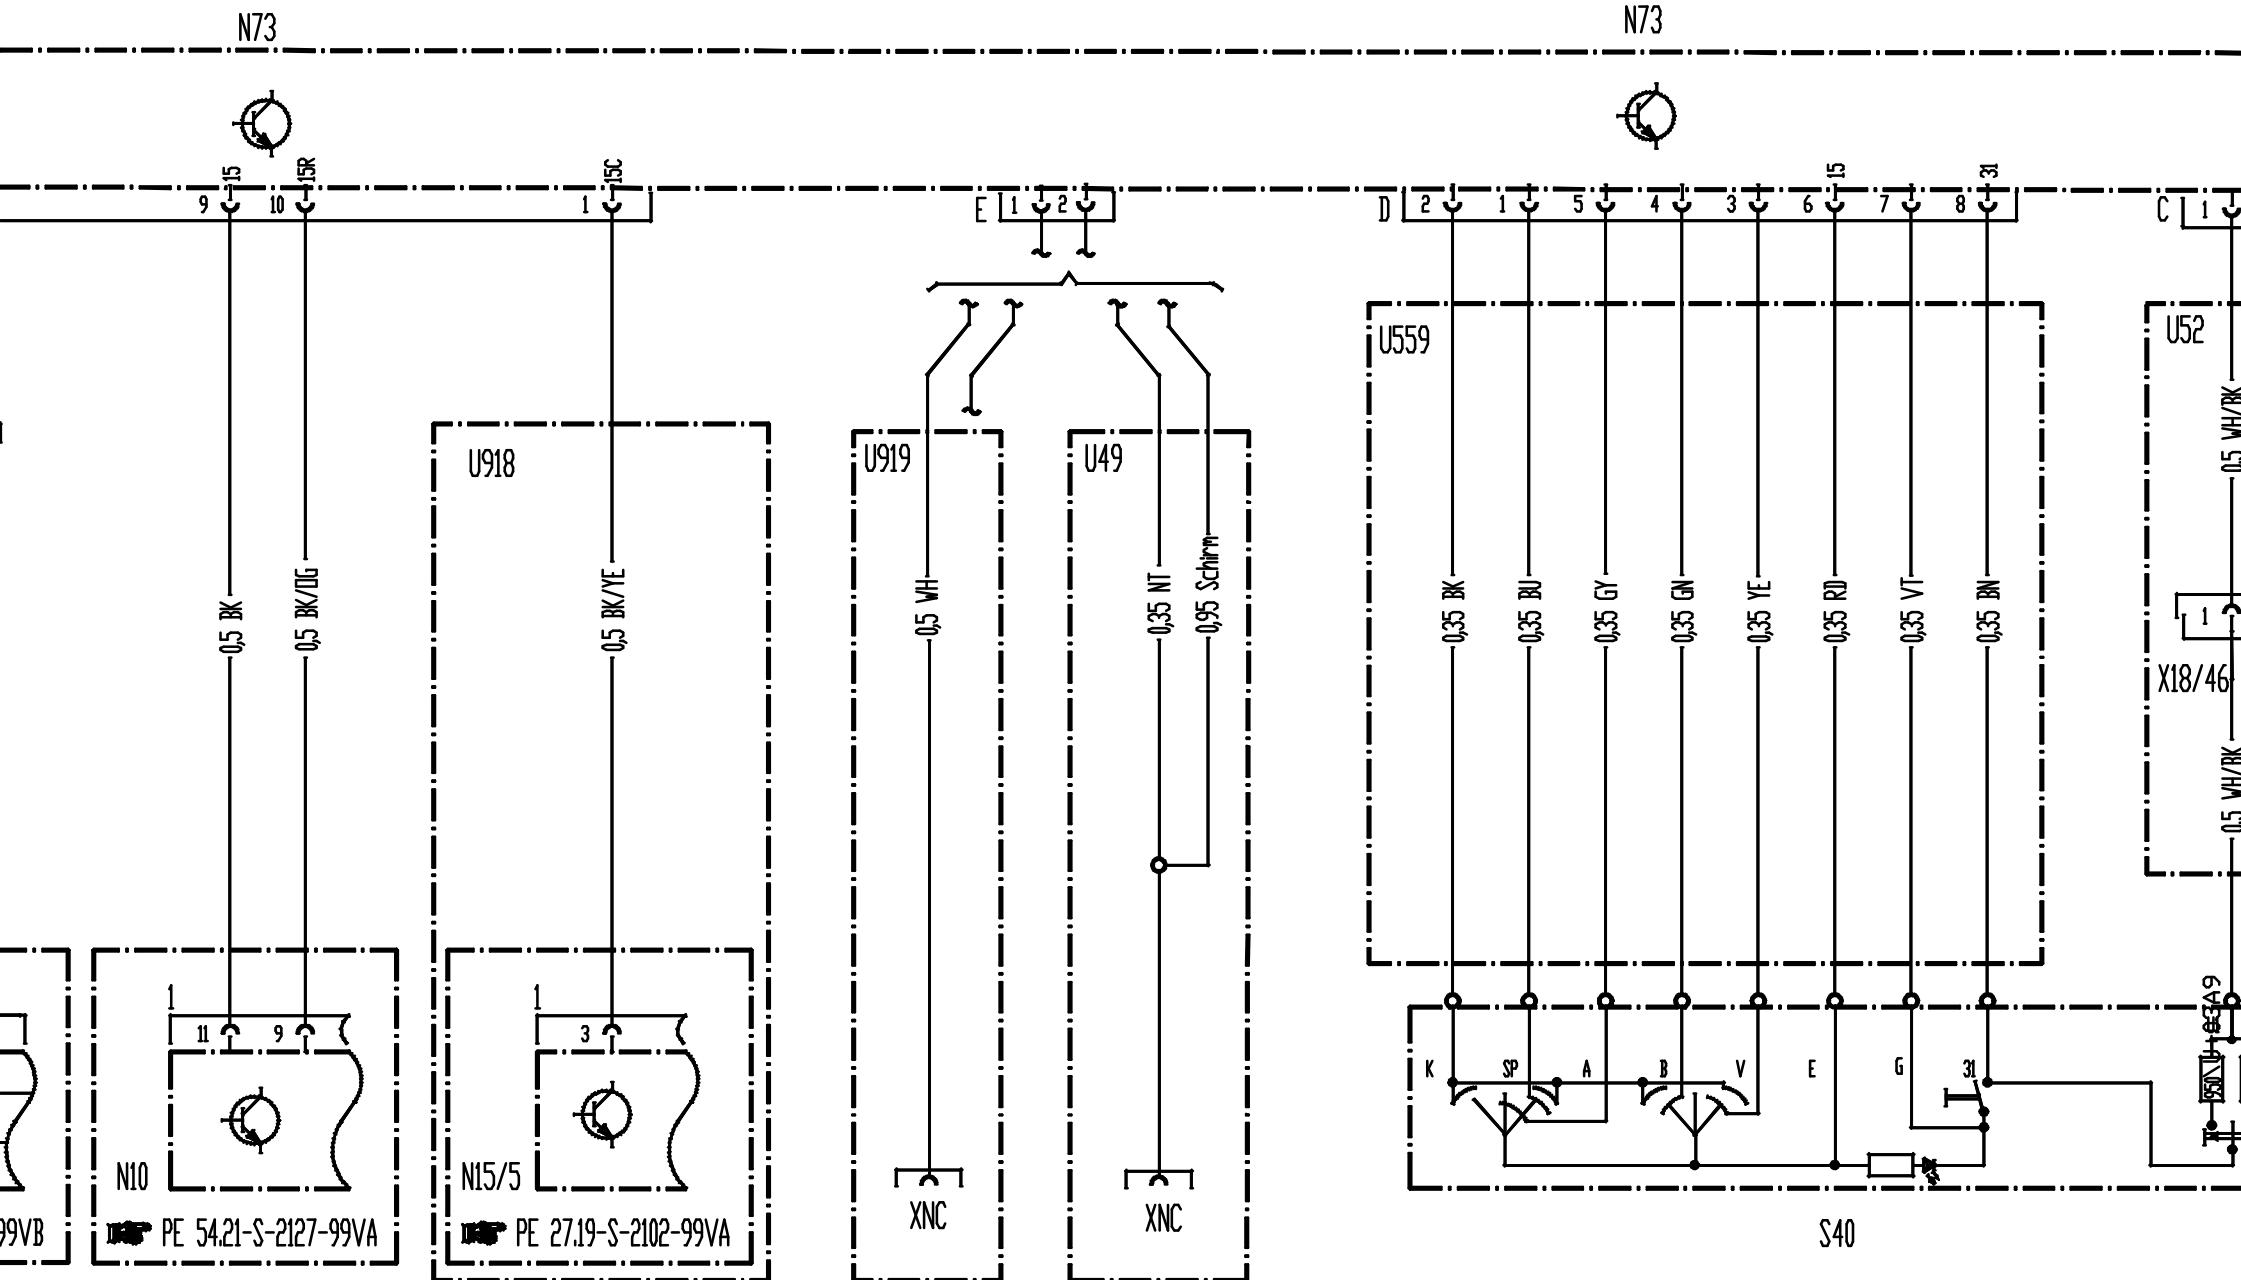

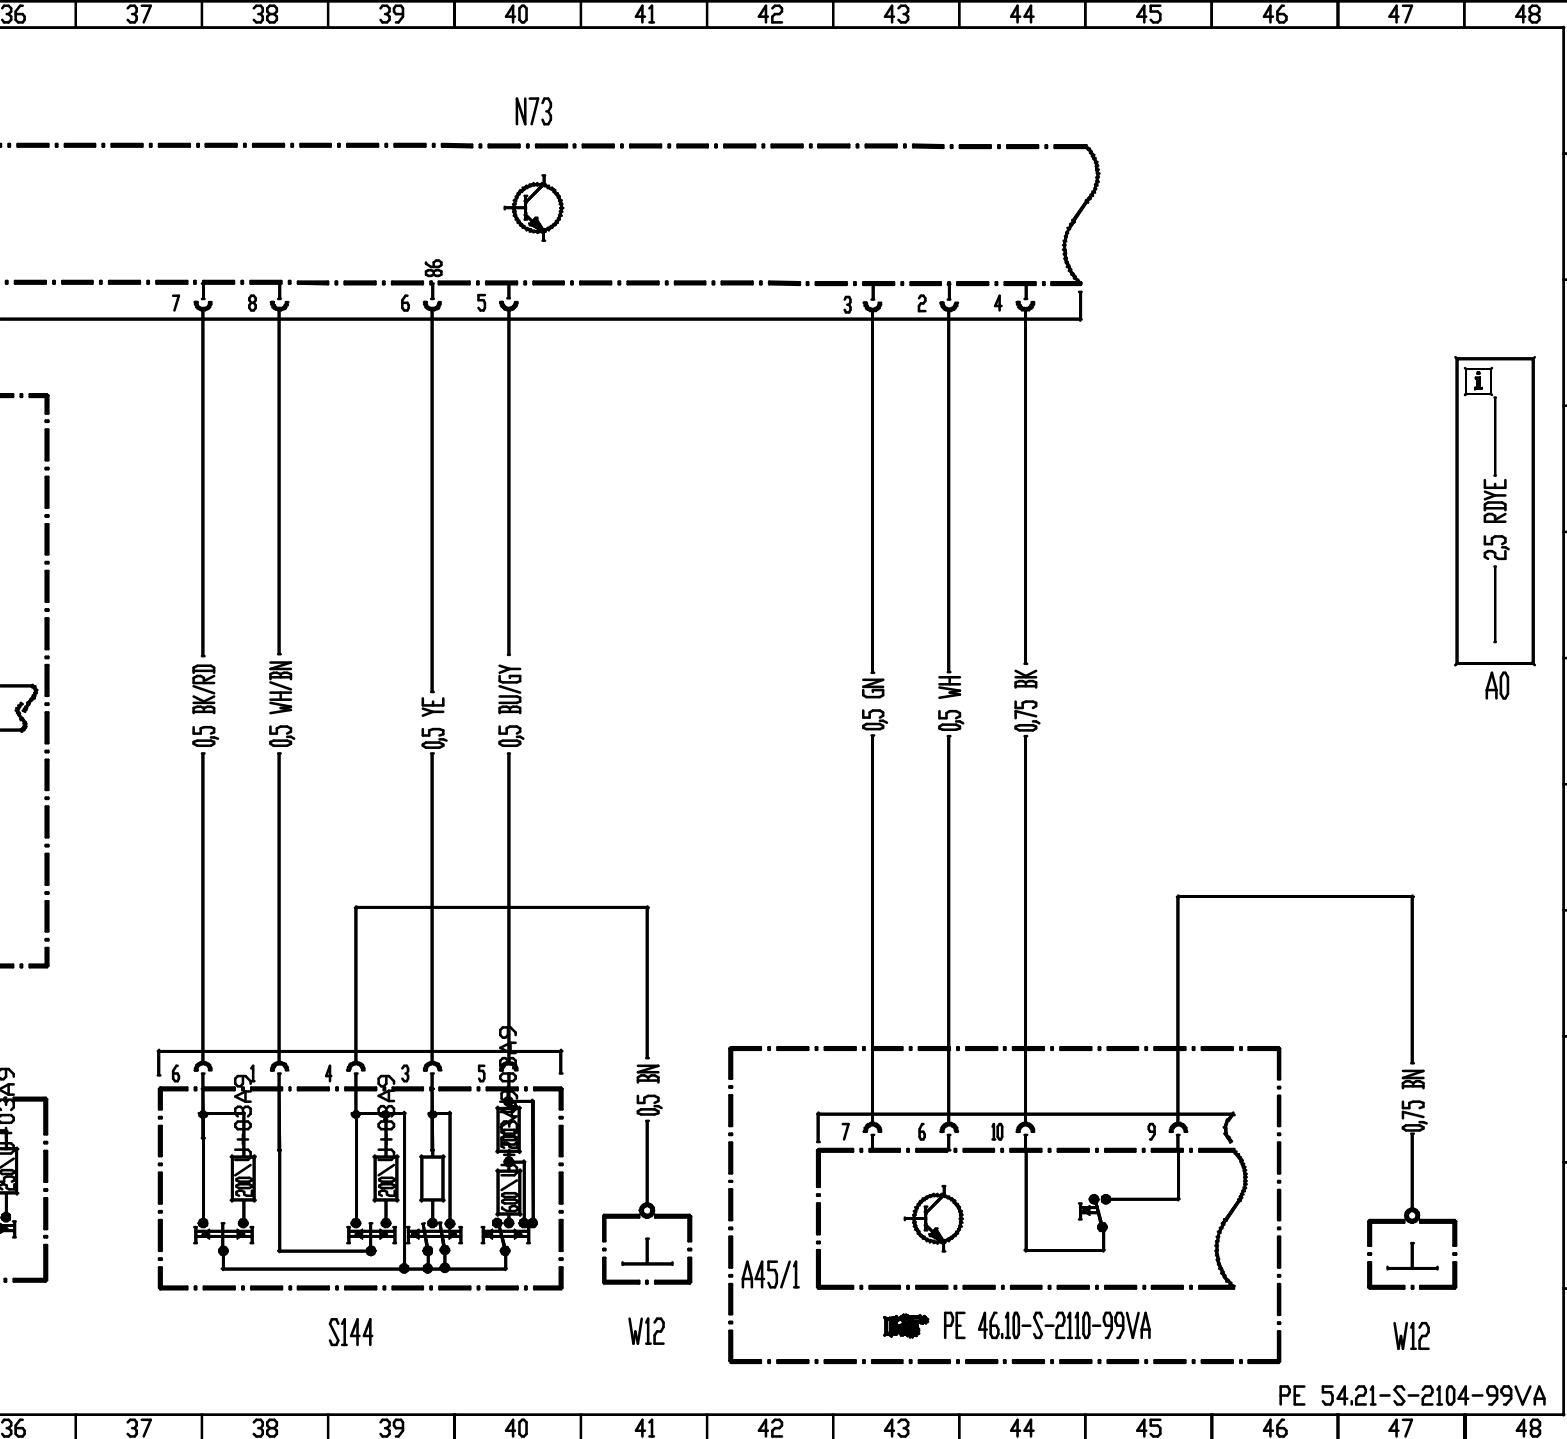

Electronic stability control (ESP)

Chapter 14


MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with CODE (BB3) Electronic Stability Program (ESP)

| | | | |
|---------------------|--|------------------------|---------------------|
| PE42.45-S-2000-99VA | Wiring diagram - electronic stability program (ESP) | | PE42.45-S-2000-99VA |
| PE42.45-S-2000-60VA | electronic stability program | | PE42.45-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|------------------------------|---|--|
| PE42.45-S-2000-60VA | electronic stability program | MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815 with CODE (BB3) Electronic Stability Program (ESP) | |
|---------------------|------------------------------|---|--|

| Code | Designation | Coordinates |
|----------|---|---|
| A0 | Color code key | 73L |
| B24/8 | Steering angle sensor | 35L |
| B24/15 | Turn rate and lateral acceleration sensor | 31L |
| F34 | Fuse block, 22-pin | 2G |
| F34f40 | Brake system valve fuse | 4F |
| F34f41 | Brake system delivery pump fuse | 3F |
| K40/9 | Fuse and relay block | 10L |
| K40/9f14 | Brake system fuse | 11K |
| L6/1 | Left front rpm sensor | 51L 54L |
| L6/2 | Right front rpm sensor | 57L 60L |
| L6/3 | Left rear rpm sensor | 41L 46L |
| L6/4 | Right rear rpm sensor | 43L 48L |
| N15/5 | Electronic selector lever module control unit | 21K |
| N30/4 | ESP control unit | 3A 10A 17A 24A 31A 38A 45A 52A 59A 66A |



| | | |
|--------|--|------------------|
| S9/1 | Stop lamp switch | 17K |
| U32 | Valid for left-hand drive vehicles | 6D 50D 56D |
| U33 | Valid for right-hand drive vehicles | 8D 52D 59D |
| U920 | Valid up to vehicle identification end no. 30230 | 40D |
| U921 | Valid as of vehicle identification end no. 30231 | 44D |
| W2/1 | Ground (right front ABS) | 8L |
| W9/3 | Ground (left front ABS) | 6L |
| X11 | Data link connector | 24K |
| X18/29 | Connector 1, left engine compartment or right engine compartment | 50F |
| X18/30 | Connector 2, left engine compartment or right engine compartment | 59F |
| X26/23 | Engine compartment to cockpit connector | 29F |
| X30/27 | Engine CAN bus connector | 27K 37K |
| X62/6 | Rpm sensor and brake wear sensor connector, right front | 56H 59H |
| X62/7 | Rpm sensor and brake wear sensor connector, left front | 50H 53H |
| X62/8 | Rpm sensor and brake wear sensor connector, left rear | 40H |
| X62/21 | ABS/ASR rpm signal connector, left rear | 45H |
| X62/22 | ABS/ASR rpm signal connector, right rear | 47H |
| X62/28 | Rpm sensor connector | 40F 45F |
| Z66/1 | Additional fuse box feed connector sleeve | 3J |

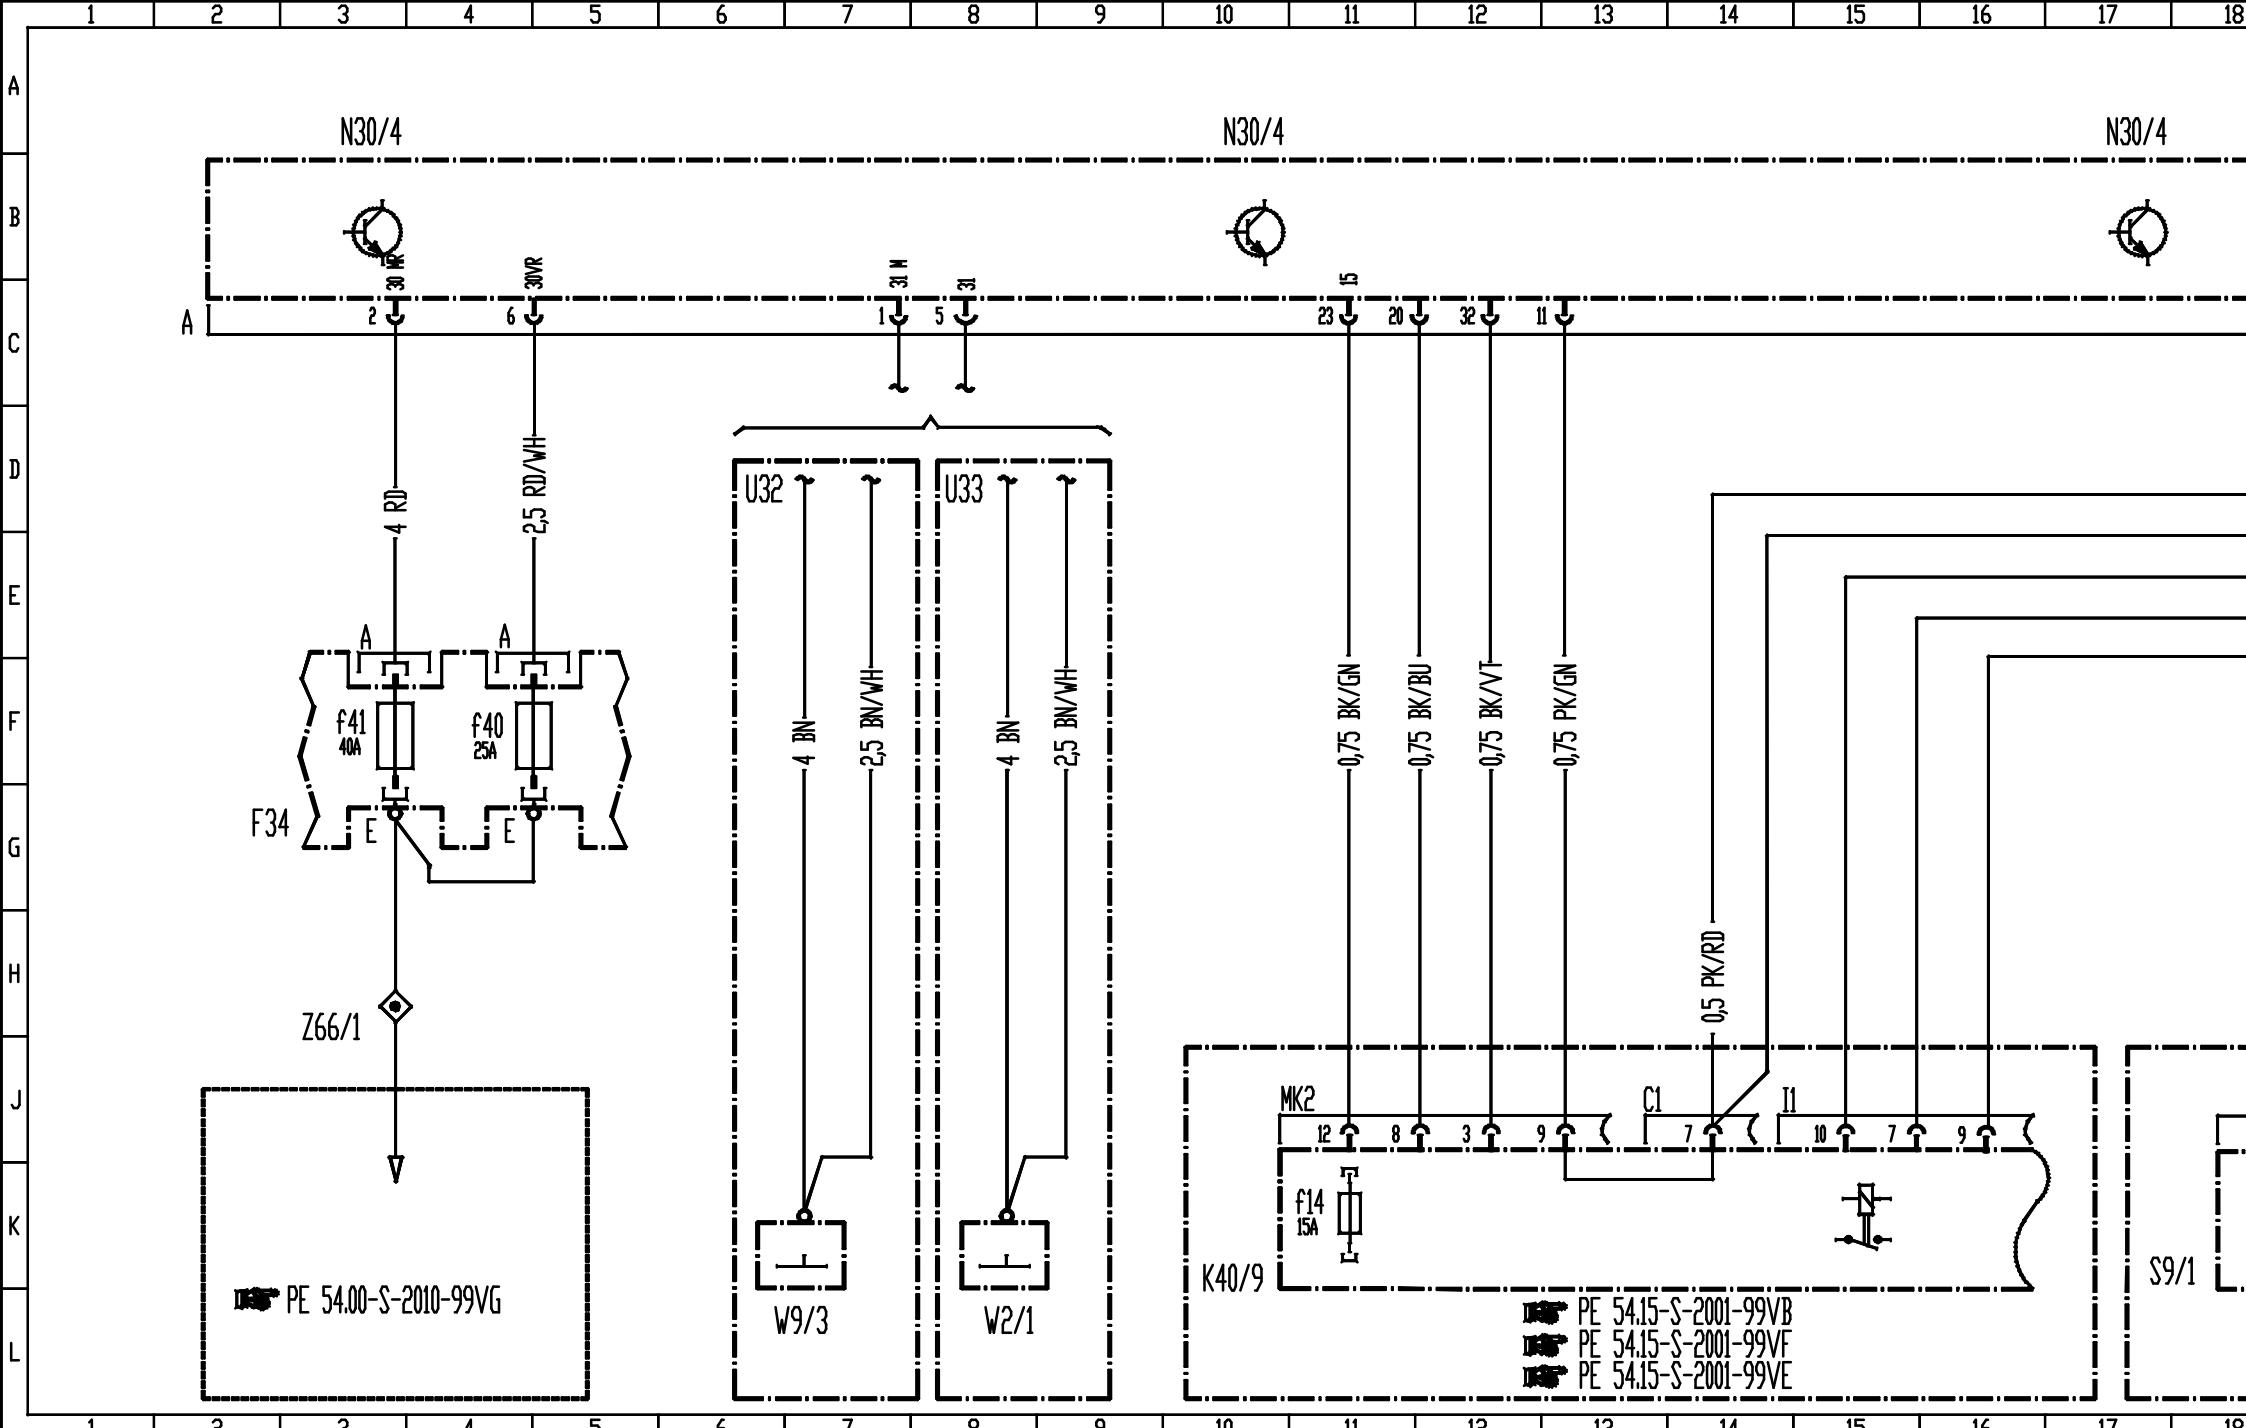

19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

N30/4

N30/4

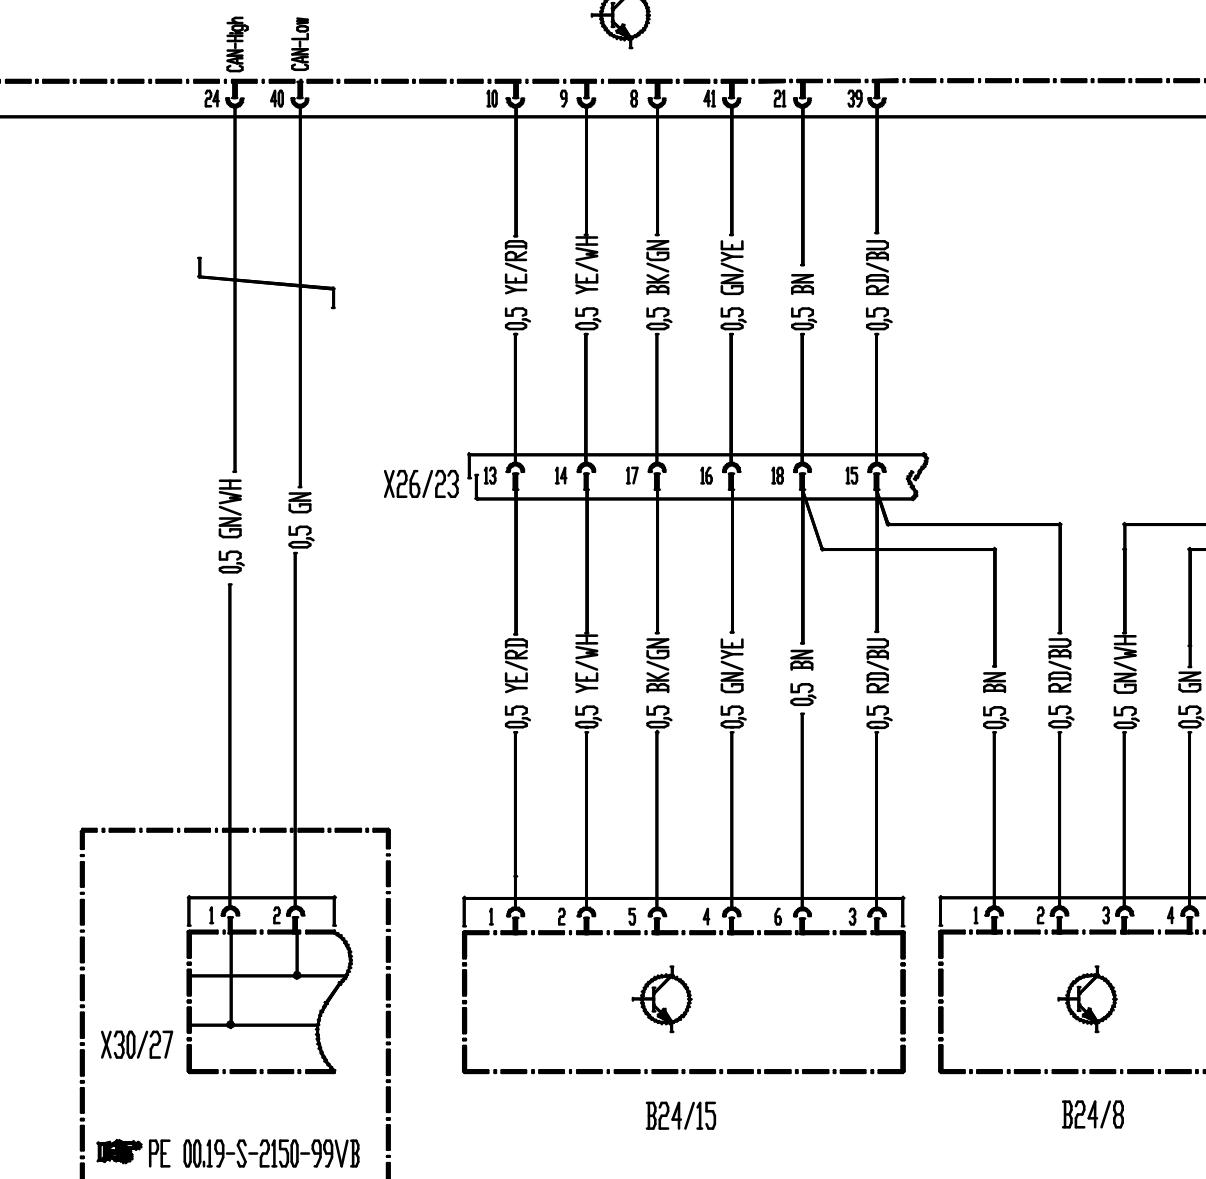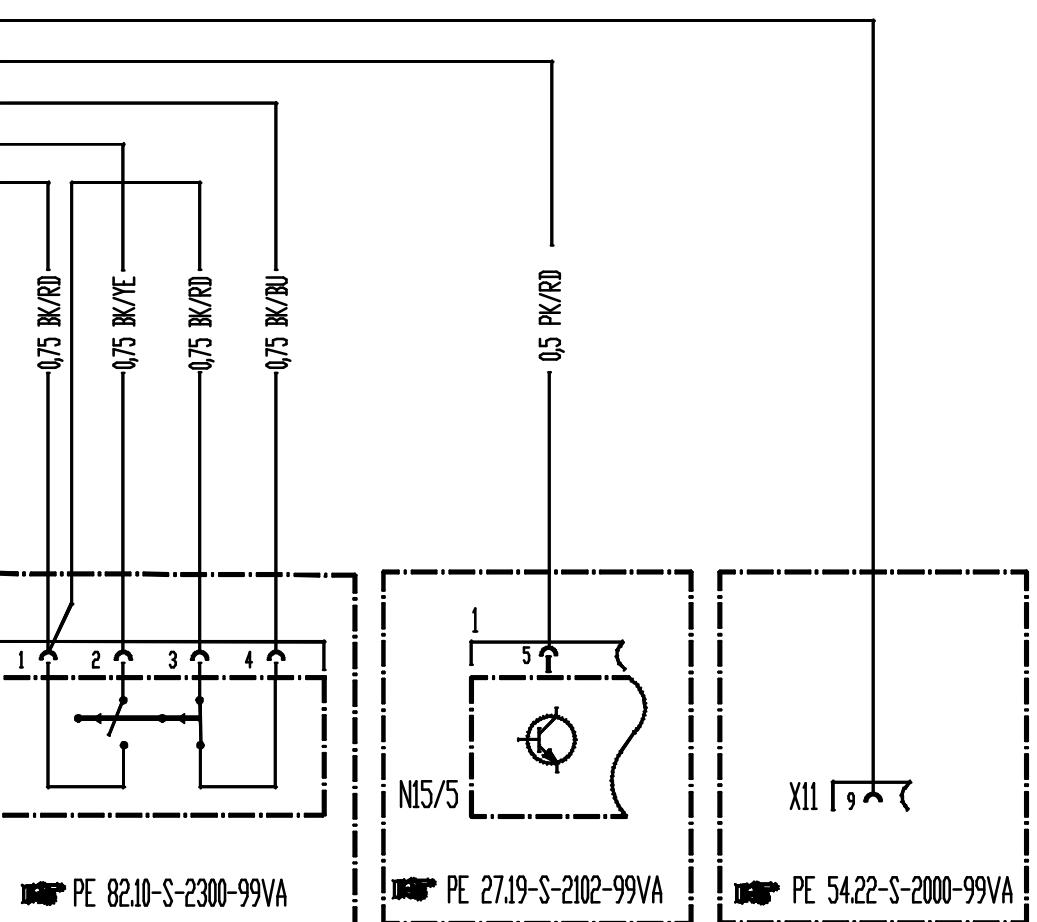

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N30/4




N30/4

N30/4



13 ↓ 29 ↓ 30 ↓ 31 ↓

28 ↓ 12 ↓

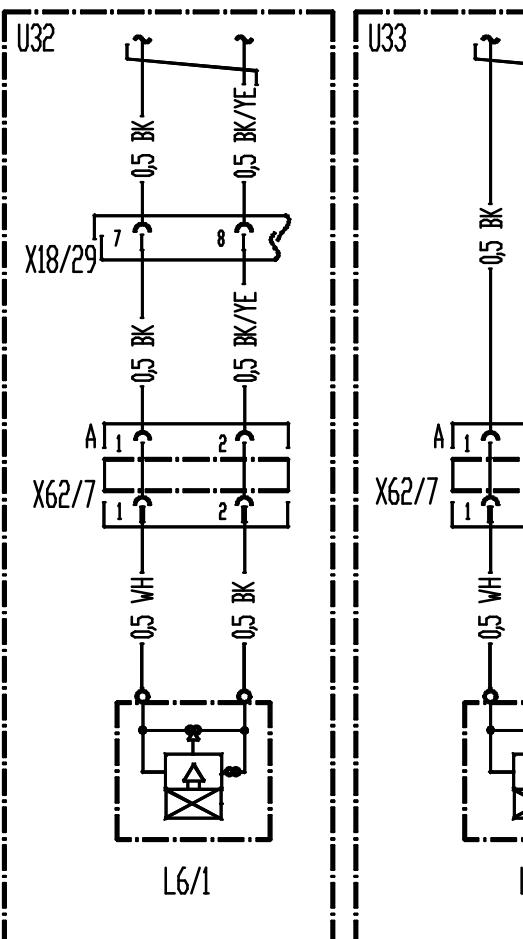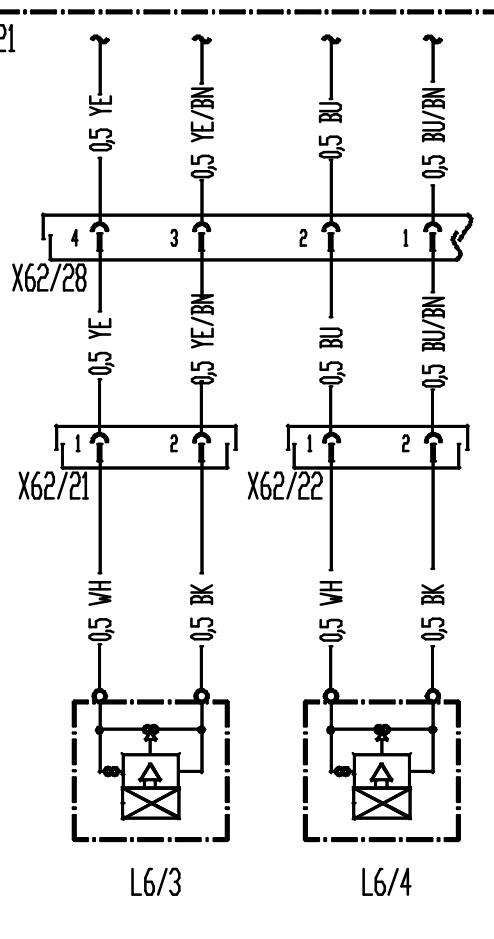
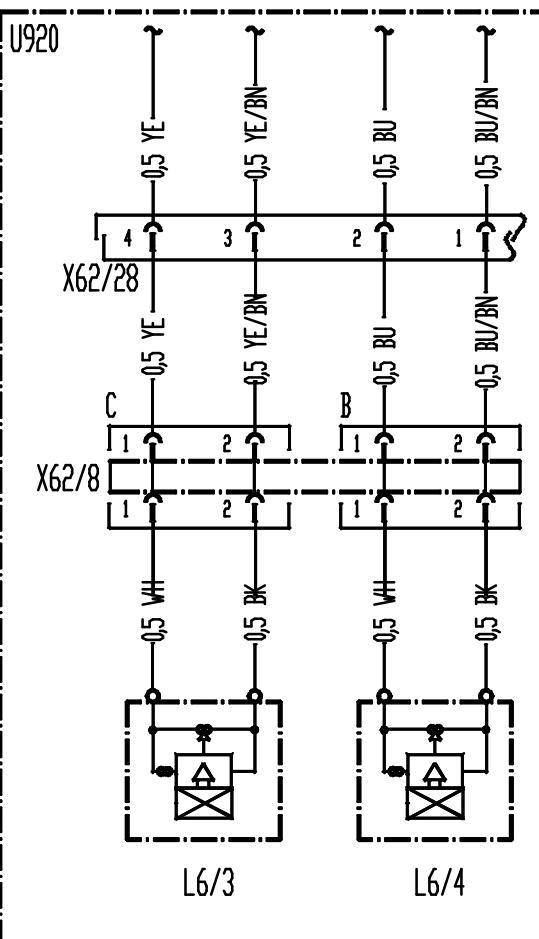


36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

54 55 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70

N30/4

N30/4

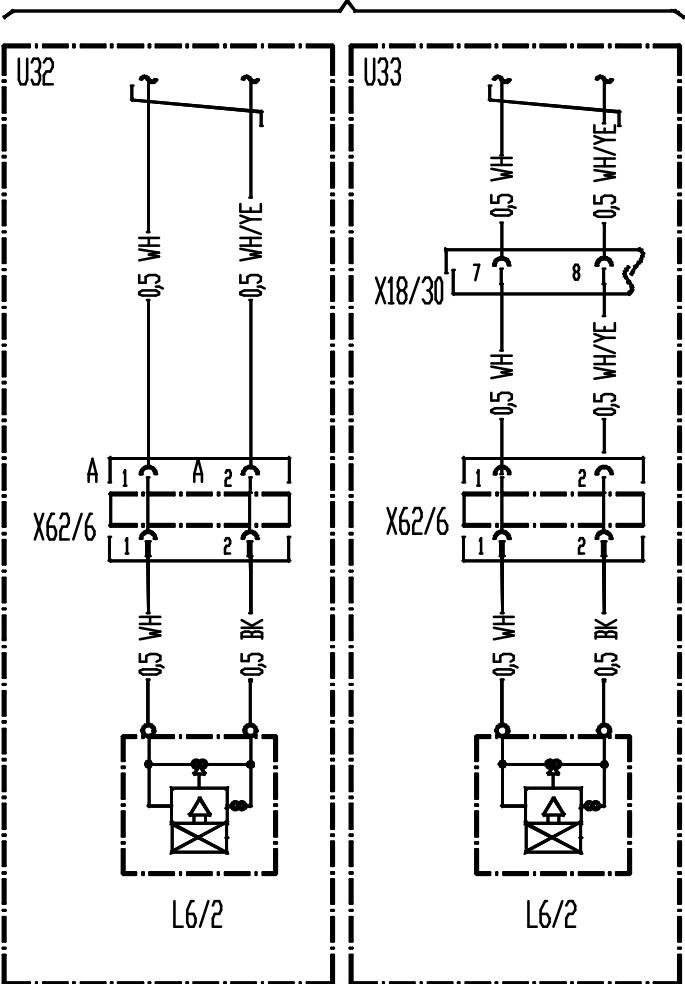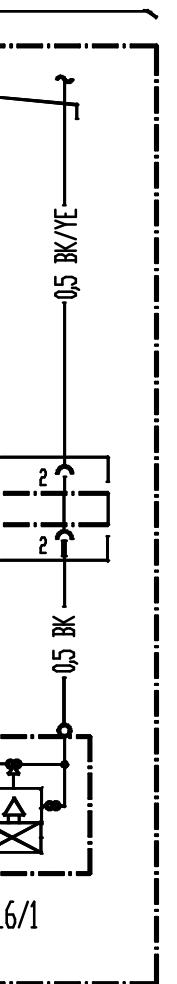

PE 42

Common rail diesel injection (CDI)

Chapter 15


ENGINE 646.982 /983 in MODELS 639.601 /603 /605 /701 /703 /705**Sheet 1****ENGINE 646.982 in MODELS 639.711 /713 /811 /813 /815****Sheet 1**

| | | | |
|---------------------|--|------------------------|---------------------|
| PE07.16-S-2000-99VA | Wiring diagram for common rail diesel injection (CDI) control unit | Sheet 1 | PE07.16-S-2000-99VA |
| PE07.16-S-2000-60VA | Legend of wiring diagram for common rail diesel injection (CDI) | Sheet 1 | PE07.16-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box - location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|--|--|
| PE07.16-S-2000-60VA | Legend of wiring diagram for common rail diesel injection (CDI) | ENGINE 646.982 /983 in MODELS 639.601 /603 /605 /701 / 703 /705 Sheet 1 | |
| | | ENGINE 646.982 in MODELS 639.711 713 /811 /813 /815/ Sheet 1 | |

| Code | Designation | Coordinates |
|-------|-------------------------------------|---|
| A0 | Color code key | 64L |
| B37/3 | Pedal value sensor | 29L 32L |
| B37/4 | Accelerator pedal module | 25L |
| F1 | 1-pin prefuse box | 43K |
| K40/9 | Fuse and relay block | 5K |
| N3/9 | CDI control unit | 5A 12A 19A 26A 33A 40A 47A 54A |
| N14/2 | Glow output stage | 48L |
| R9/7 | Cylinder 1 glow plug | 52L |
| R9/8 | Cylinder 2 glow plug | 54L |
| R9/9 | Cylinder 3 glow plug | 56L |
| R9/10 | Cylinder 4 glow plug | 58L |
| S40/3 | Clutch pedal switch | 34L |
| U32 | Valid for left-hand drive vehicles | 16D 40G |
| U33 | Valid for right-hand drive vehicles | 18D 41G |
| U1113 | Valid up to 12/2005 | 27D |

| | | |
|--------|--|------------|
| U1114 | Valid as of 01/2006 | 23D |
| U559 | Valid for cruise control | 31E |
| U961 | Valid for automatic transmission | 6D 31D |
| U990 | Valid without automatic transmission | 34D |
| W2 | Ground (right front lamp unit) | 19L 41L |
| W9 | Ground (left front lamp unit) | 17L 40L |
| W43/2 | Ground (right interior compartment firewall) | 33L |
| X11 | Data link connector | 3L |
| X22 | Engine compartment and engine connector | 6F |
| X30/27 | Engine CAN bus connector | 20K |
| Y77/1 | Charge pressure control vacuum transducer | 37L |

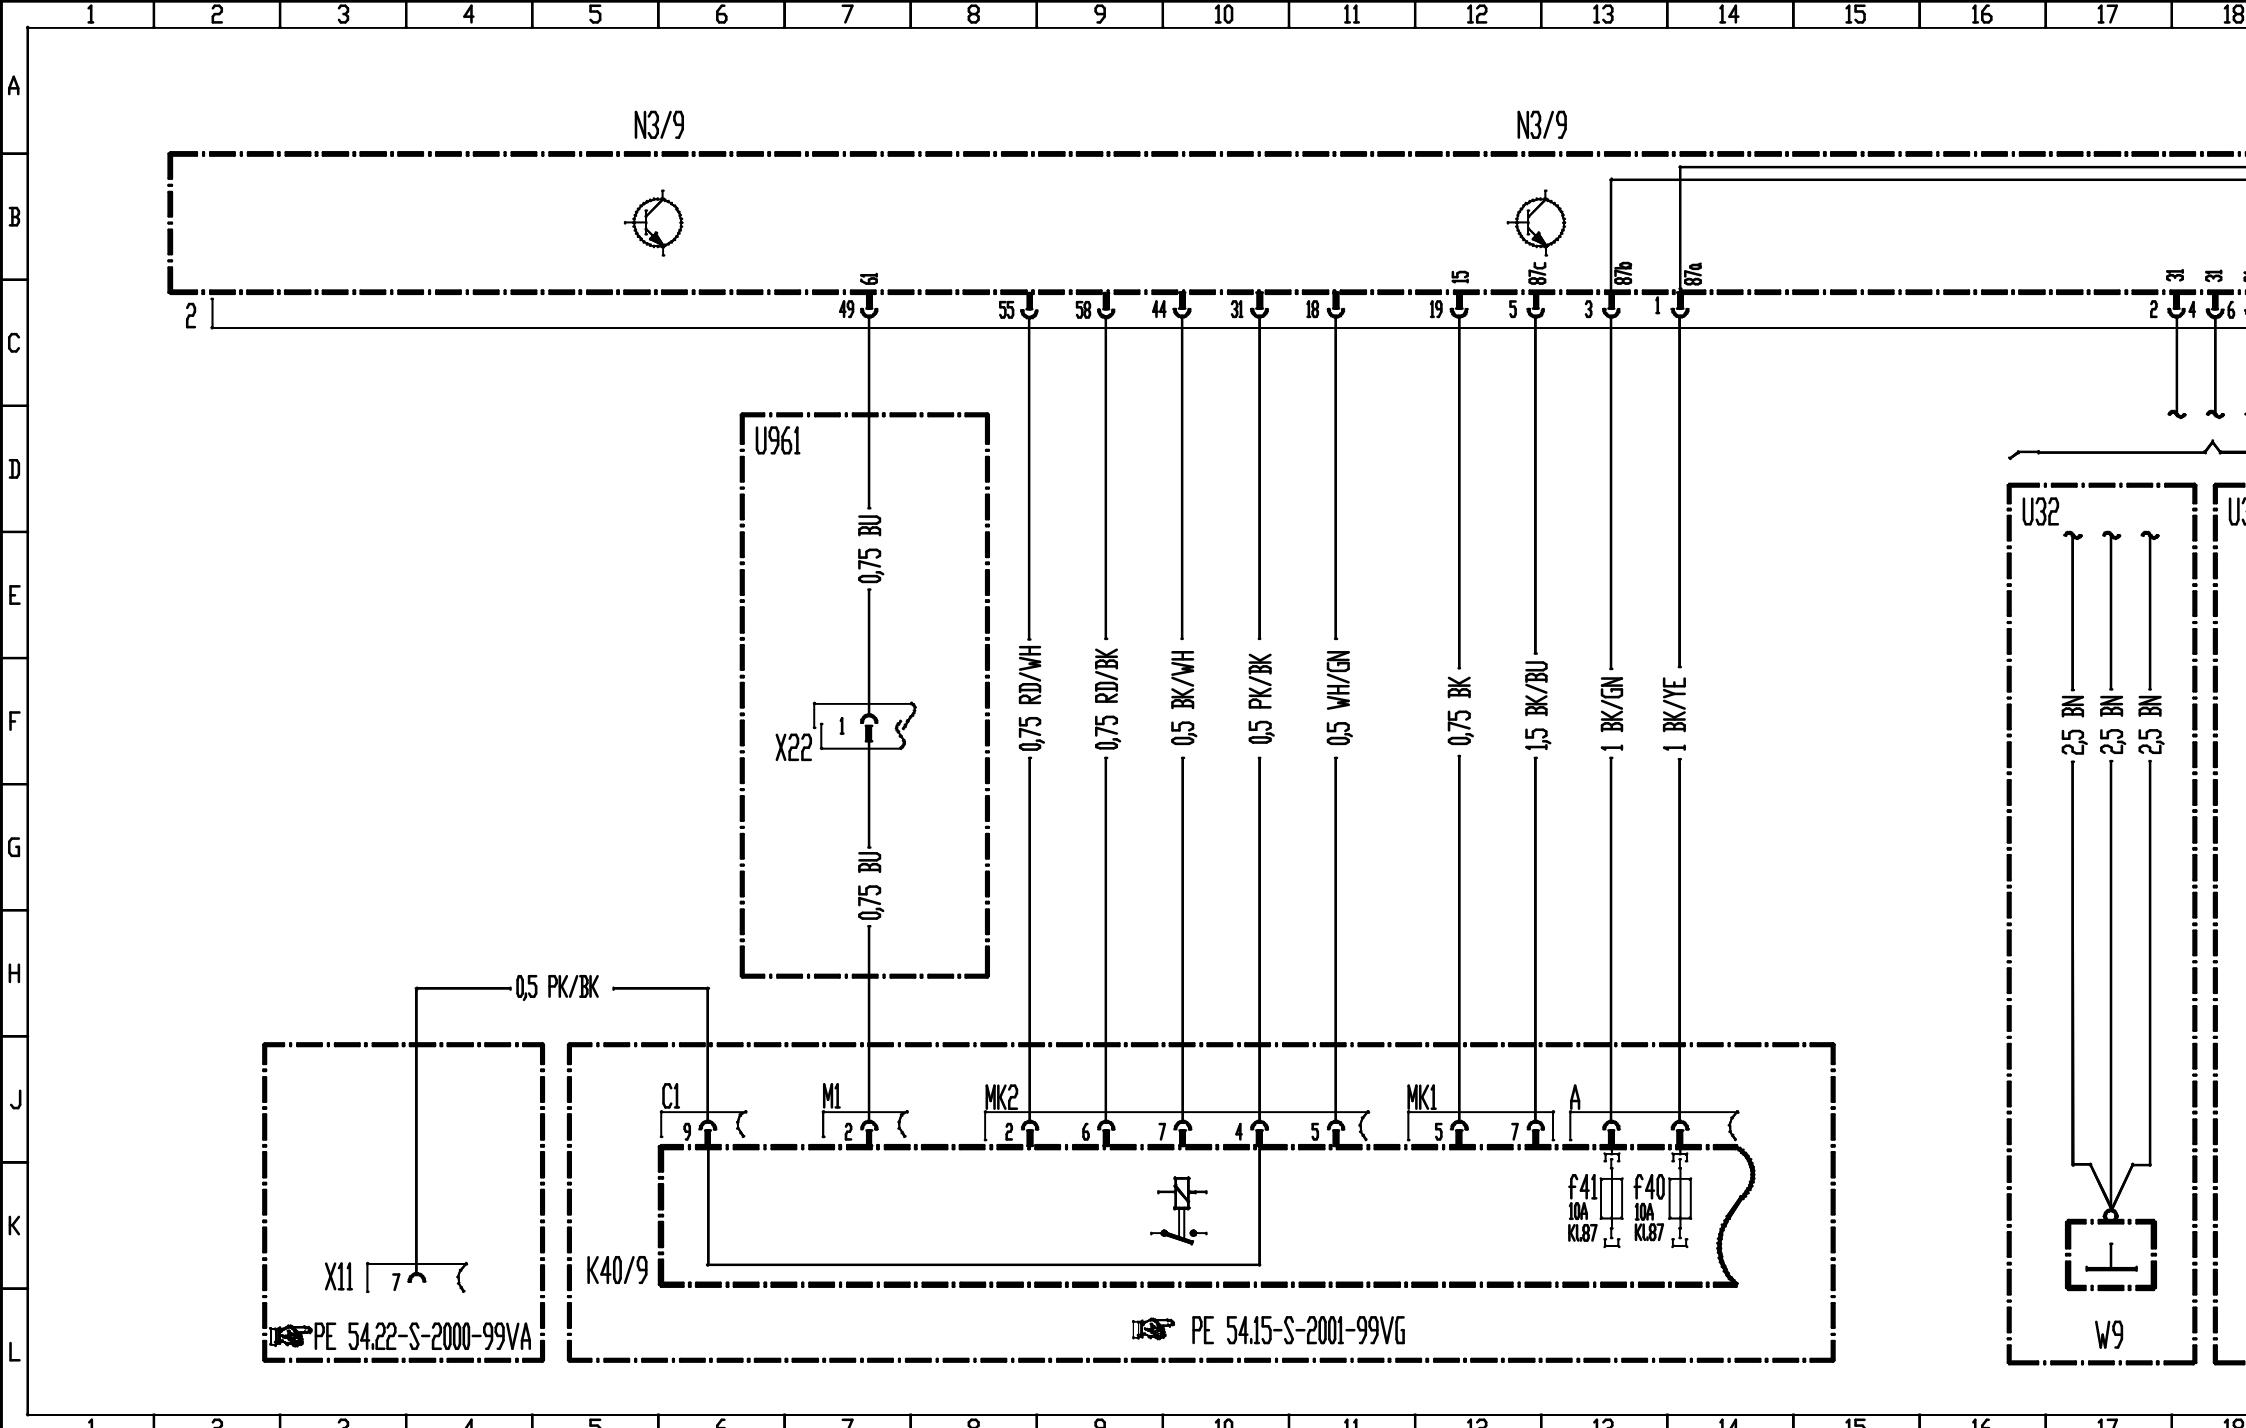


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

N3/9

N3/9

N3/9

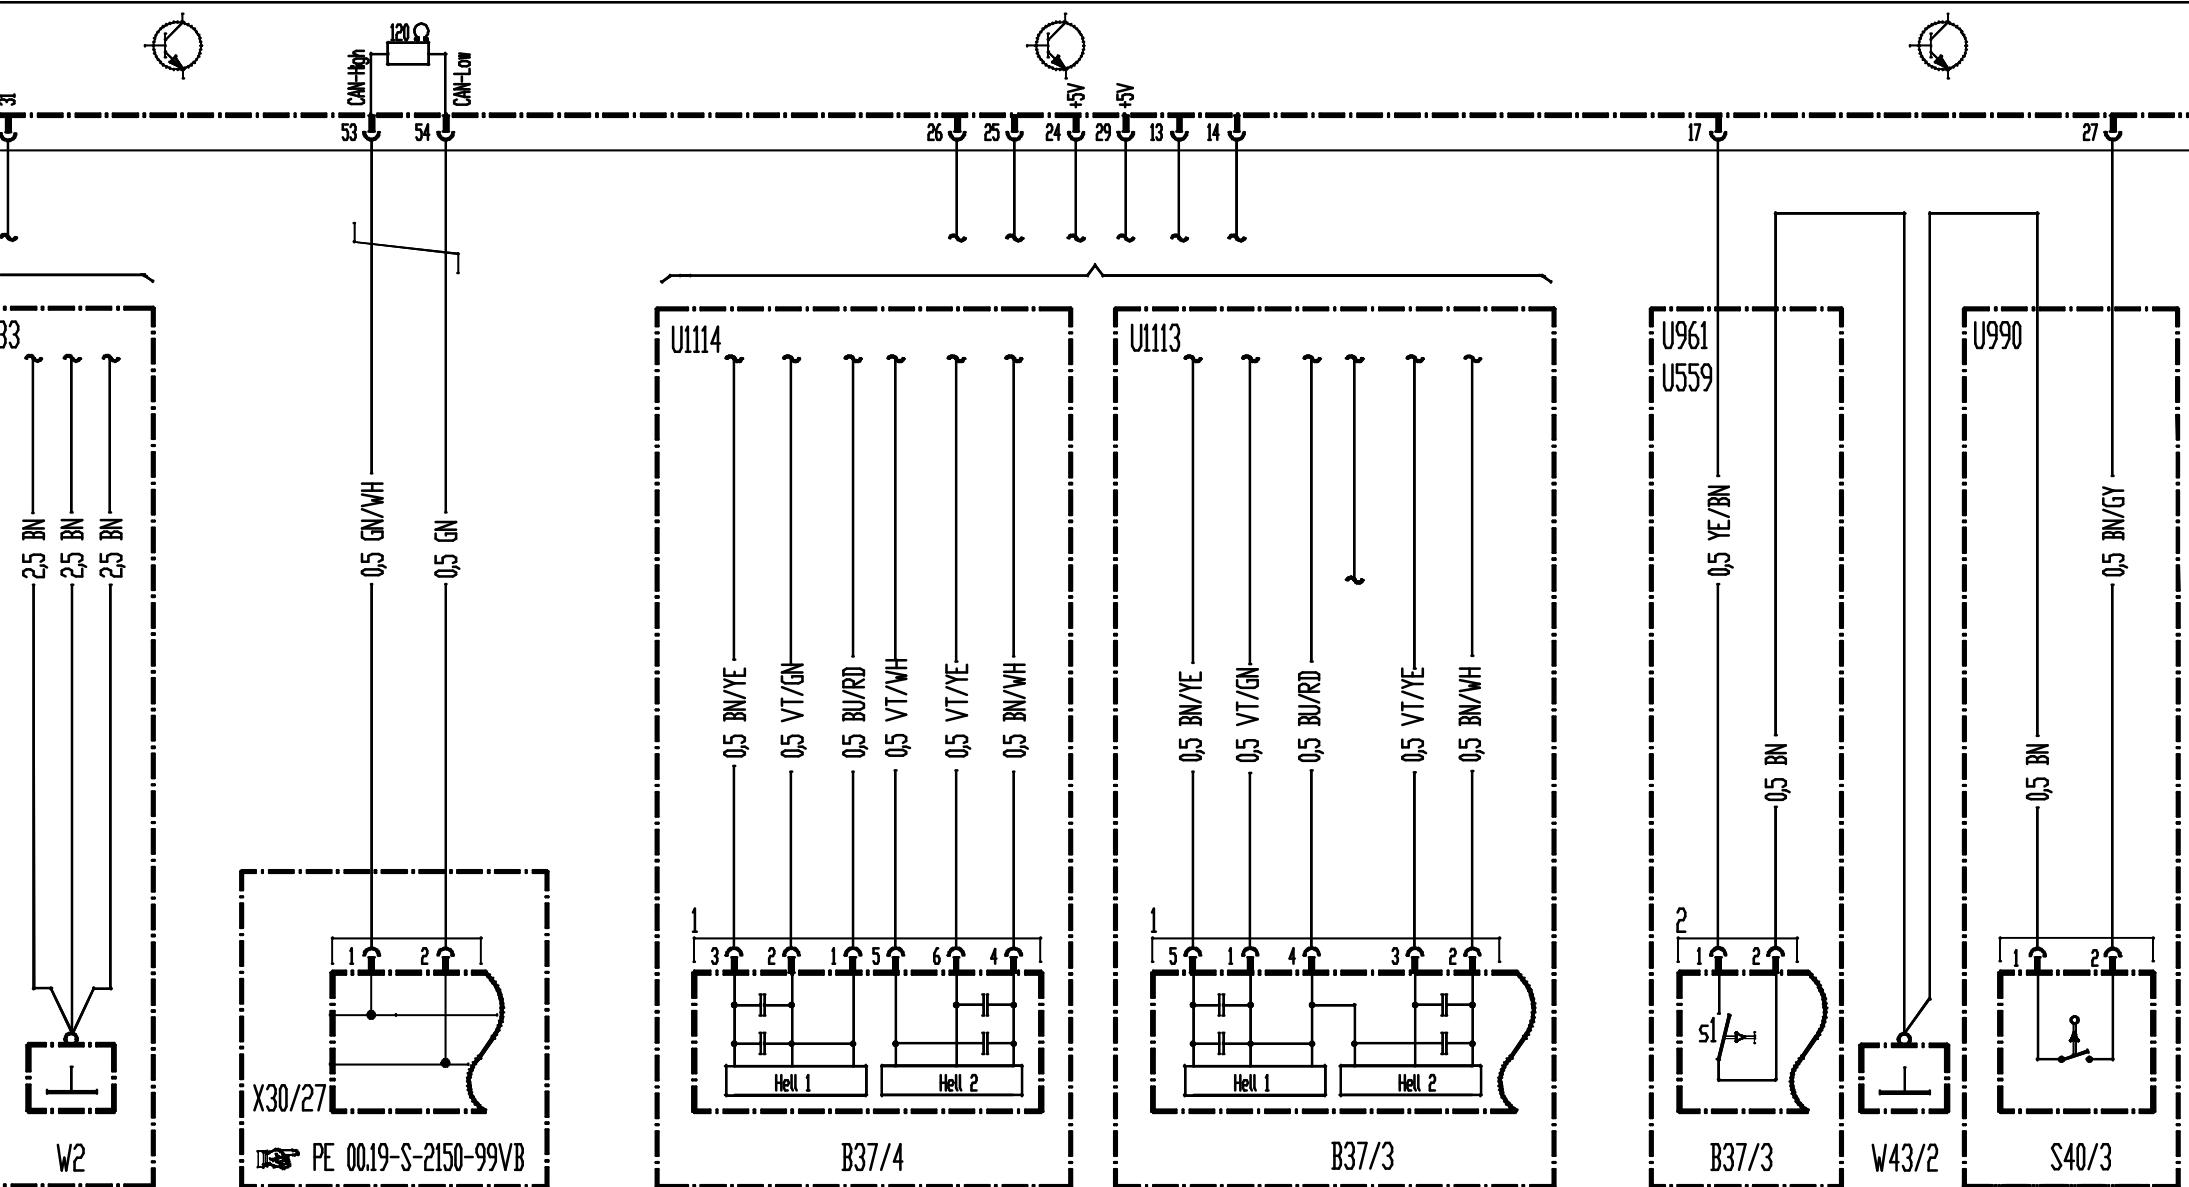


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35


36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N3/9

N3/9

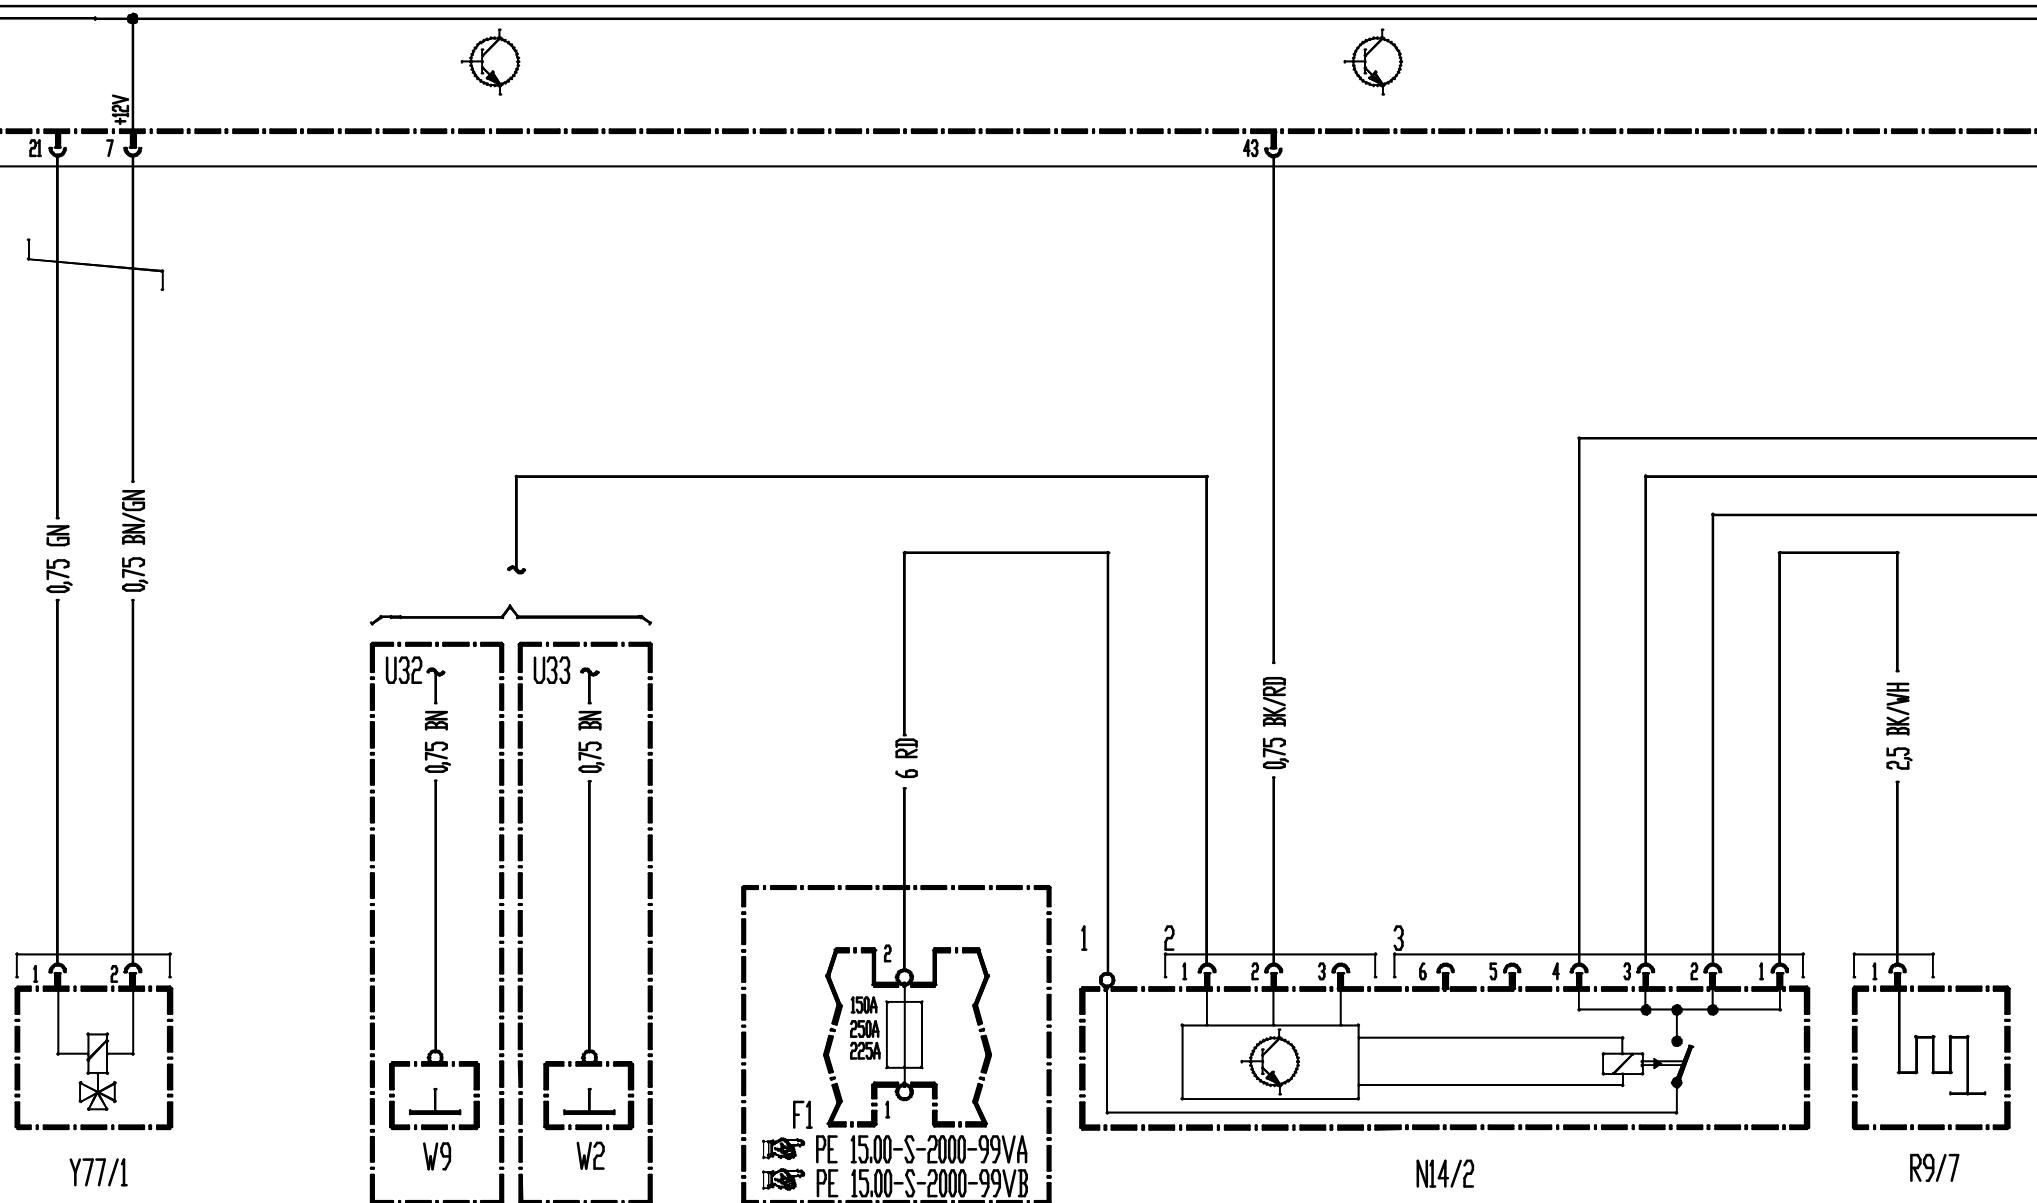

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

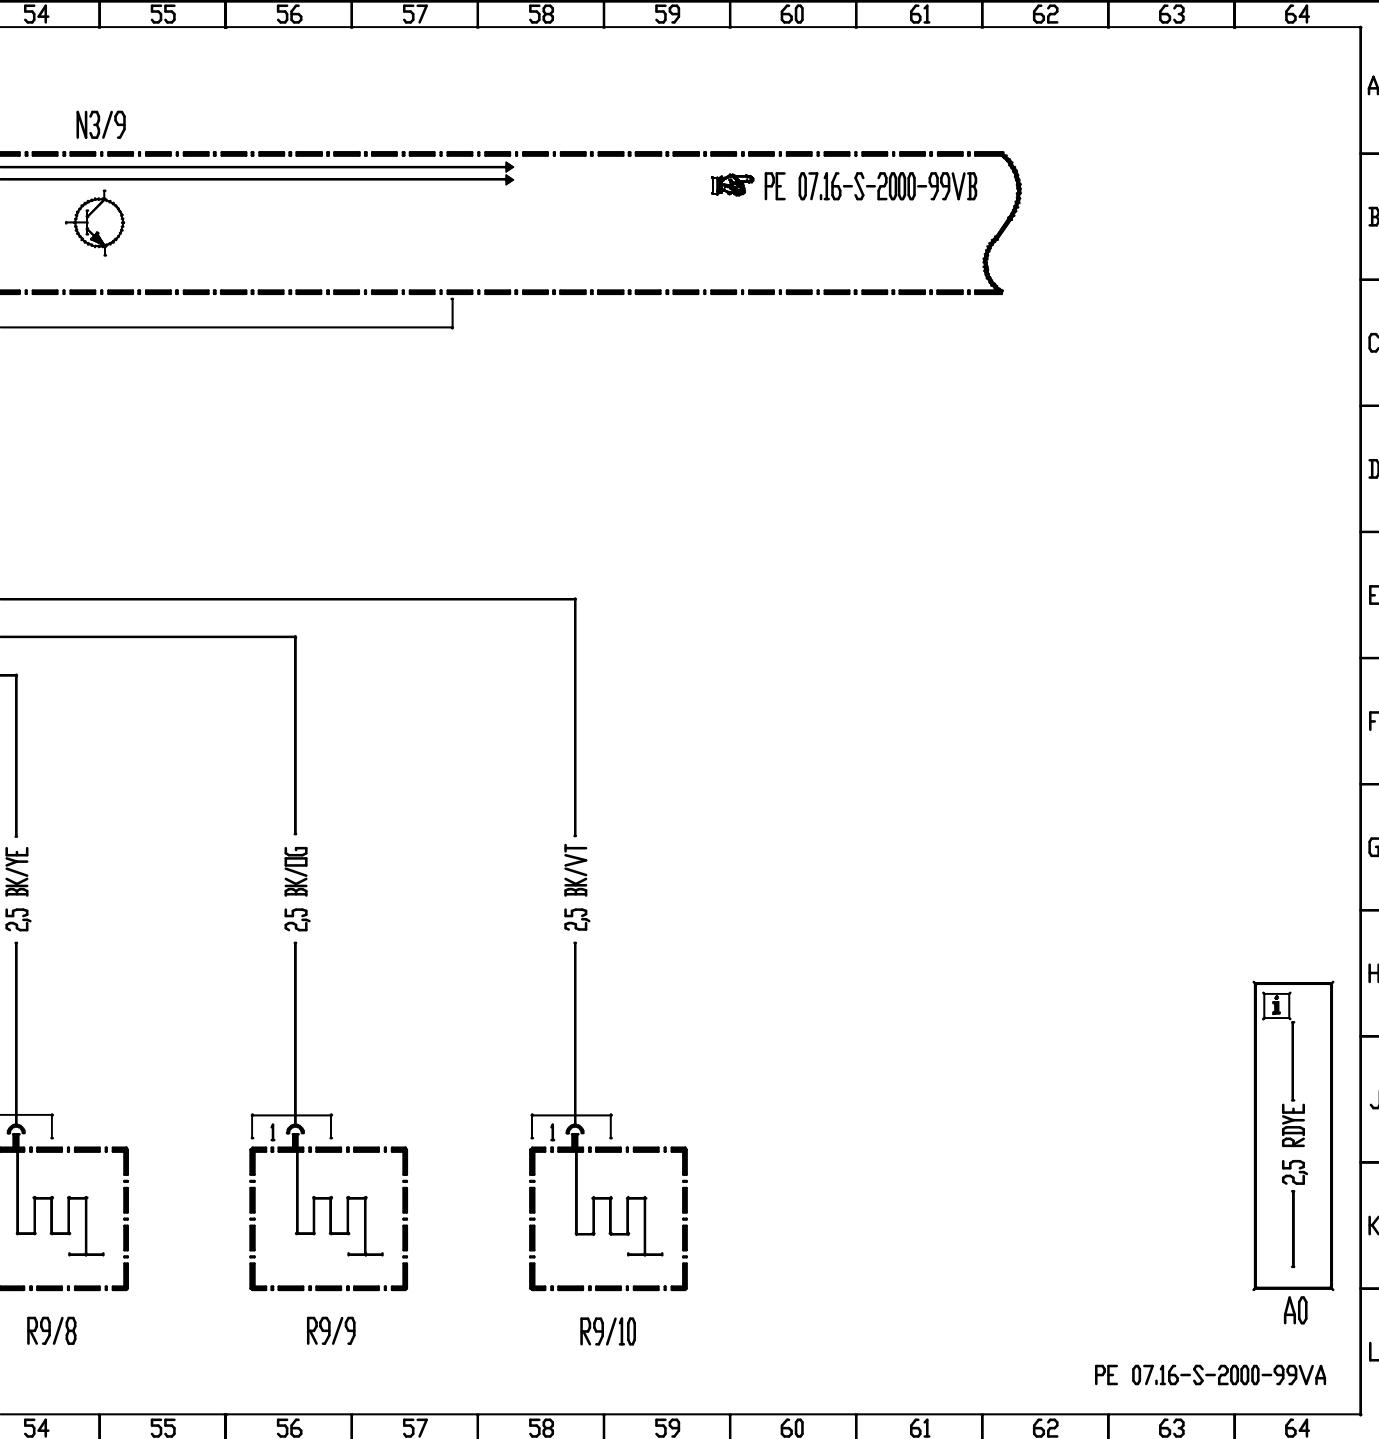

ENGINE 646.982 /983 in MODELS 639.601 /603 /605 /701 /703 /705**Sheet 2****ENGINE 646.982 in MODELS 639.711 /713 /811 /813 /815****Sheet 2**


| | | | |
|---------------------|--|------------------------|---------------------|
| PE07.16-S-2000-99VB | Wiring diagram for common rail diesel injection (CDI) control unit | Sheet 2 | PE07.16-S-2000-99VB |
| PE07.16-S-2000-60VB | Legend of wiring diagram for common rail diesel injection (CDI) | Sheet 2 | PE07.16-S-2000-60VB |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box - location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---|---|--|
| PE07.16-S-2000-60VB | Legend of wiring diagram for common rail diesel injection (CDI) | ENGINES 646.982 /983 in MODELS 639.601 /603 /605 /701 / 703 /705 Sheet 2 ENGINE 646.982 in MODELS 639.711/ 713 /811 /813 /815 Sheet 2 | |
|---------------------|---|---|--|

| Code | Designation | Coordinates |
|--------|--|-------------|
| A0 | Color code key | 72L |
| B2/5 | Mass air flow sensor hot film | 38L |
| B4/6 | Rail pressure sensor | 32L |
| B5/1 | Charge pressure sensor | 31L |
| B6/1 | Hall sensor for camshaft | 24L |
| B11 | Coolant temperature sensor | 19L |
| B17/9 | Charge air temperature sensor | 21L |
| B19/9 | Temperature sensor upstream of diesel particulate filter | 56L |
| B19/10 | Temperature sensor downstream of TWC | 63L 65L |
| B28/1 | Pressure sensor downstream of air filter | 29L |
| B28/14 | Pressure differential sensor (DPF) | 58L 60L |
| B40 | Oil sensor (oil level, temperature and quality) | 27L |
| B50 | Fuel temperature sensor | 22L |
| B60 | Exhaust back pressure sensor | 68L |
| B76 | Fuel filter water level sensor | 16L |
| B85 | O2 sensor, upstream of TWC | 41L |
| G2/5 | 200 A Alternator | 52K |
| K40/9 | Fuse and relay block | 11K 49K |

| | | |
|----------|--|--|
| K40/9f10 | Engine components voltage supply fuse | 50K |
| K40/9f20 | Ignition coil M112 fuse | 12K |
| L5/7 | Crankshaft position sensor | 26L |
| M16/9 | Intake air throttle valve actuator | 45L |
| N3/9 | CDI control unit | 6A 13A 20A 27A 33A 40A 47A 54A 61A |
| R39/1 | Vent line heater element | 10L |
| U32 | Valid for left-hand drive vehicles | 57F 62F |
| U33 | Valid for right-hand drive vehicles | 59F 64F |
| U961 | Valid for automatic transmission | 52D |
| U991 | Valid for particulate filter | 55D |
| U992 | Valid for low emission vehicle EU4 Group III | 37D 47D |
| U993 | Valid for low emission engine EU3 Group III (diesel) | 47D |
| U994 | Valid for fuel filter with water separator | 14D |
| U995 | Valid for engine version Euro 3 (diesel) | 14D |
| U996 | Valid for all except engine version Euro 3 (diesel) | 15D |
| X18/65 | Connector for O2 sensor | 59H 64H |
| X25/13 | Connector for O2 sensor/exhaust gas temperature sensor | 57E |
| Y27 | EGR positioner | 48L |
| Y74 | Pressure regulator valve | 34L |
| Y76/1 | Cylinder 1 fuel injector | 3L |
| Y76/2 | Cylinder 2 fuel injector | 5L |
| Y76/3 | Cylinder 3 fuel injector | 6L |

| | | |
|-------|-------------------------------------|-----|
| Y76/4 | Cylinder 4 fuel injector | 8L |
| Y83 | Inlet port shutoff switchover valve | 43L |
| Y94 | Quantity control valve | 36L |
| Z7/24 | Circuit 87 connector sleeve | 50F |

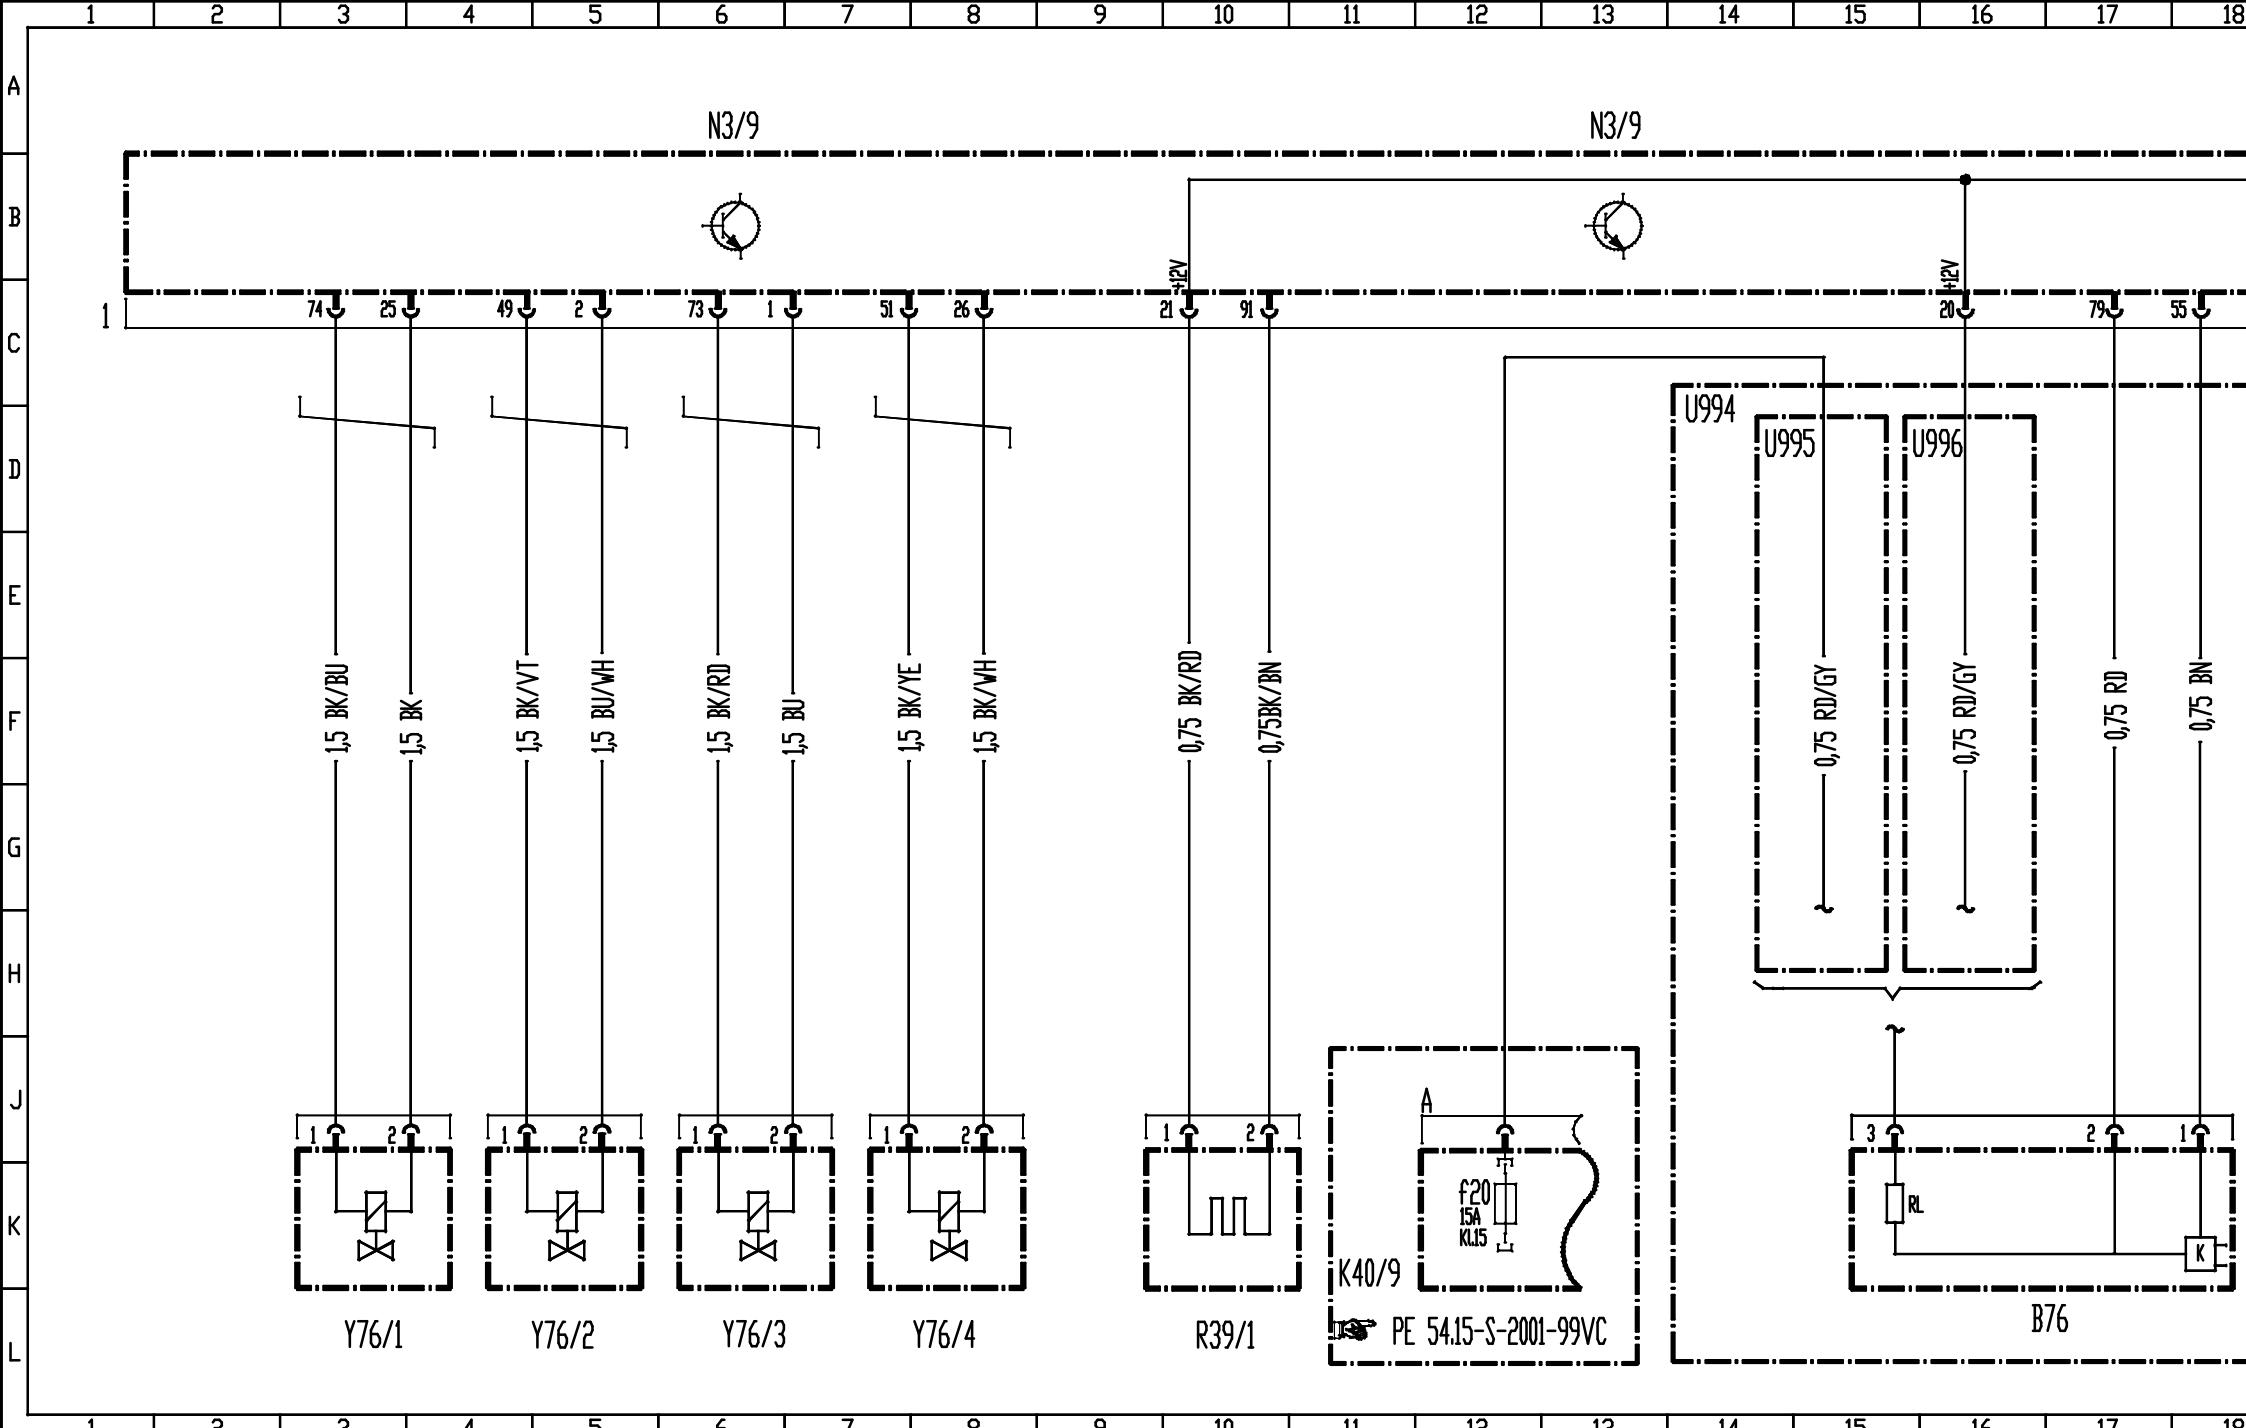


19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35

N3/9

N3/9


N3/9

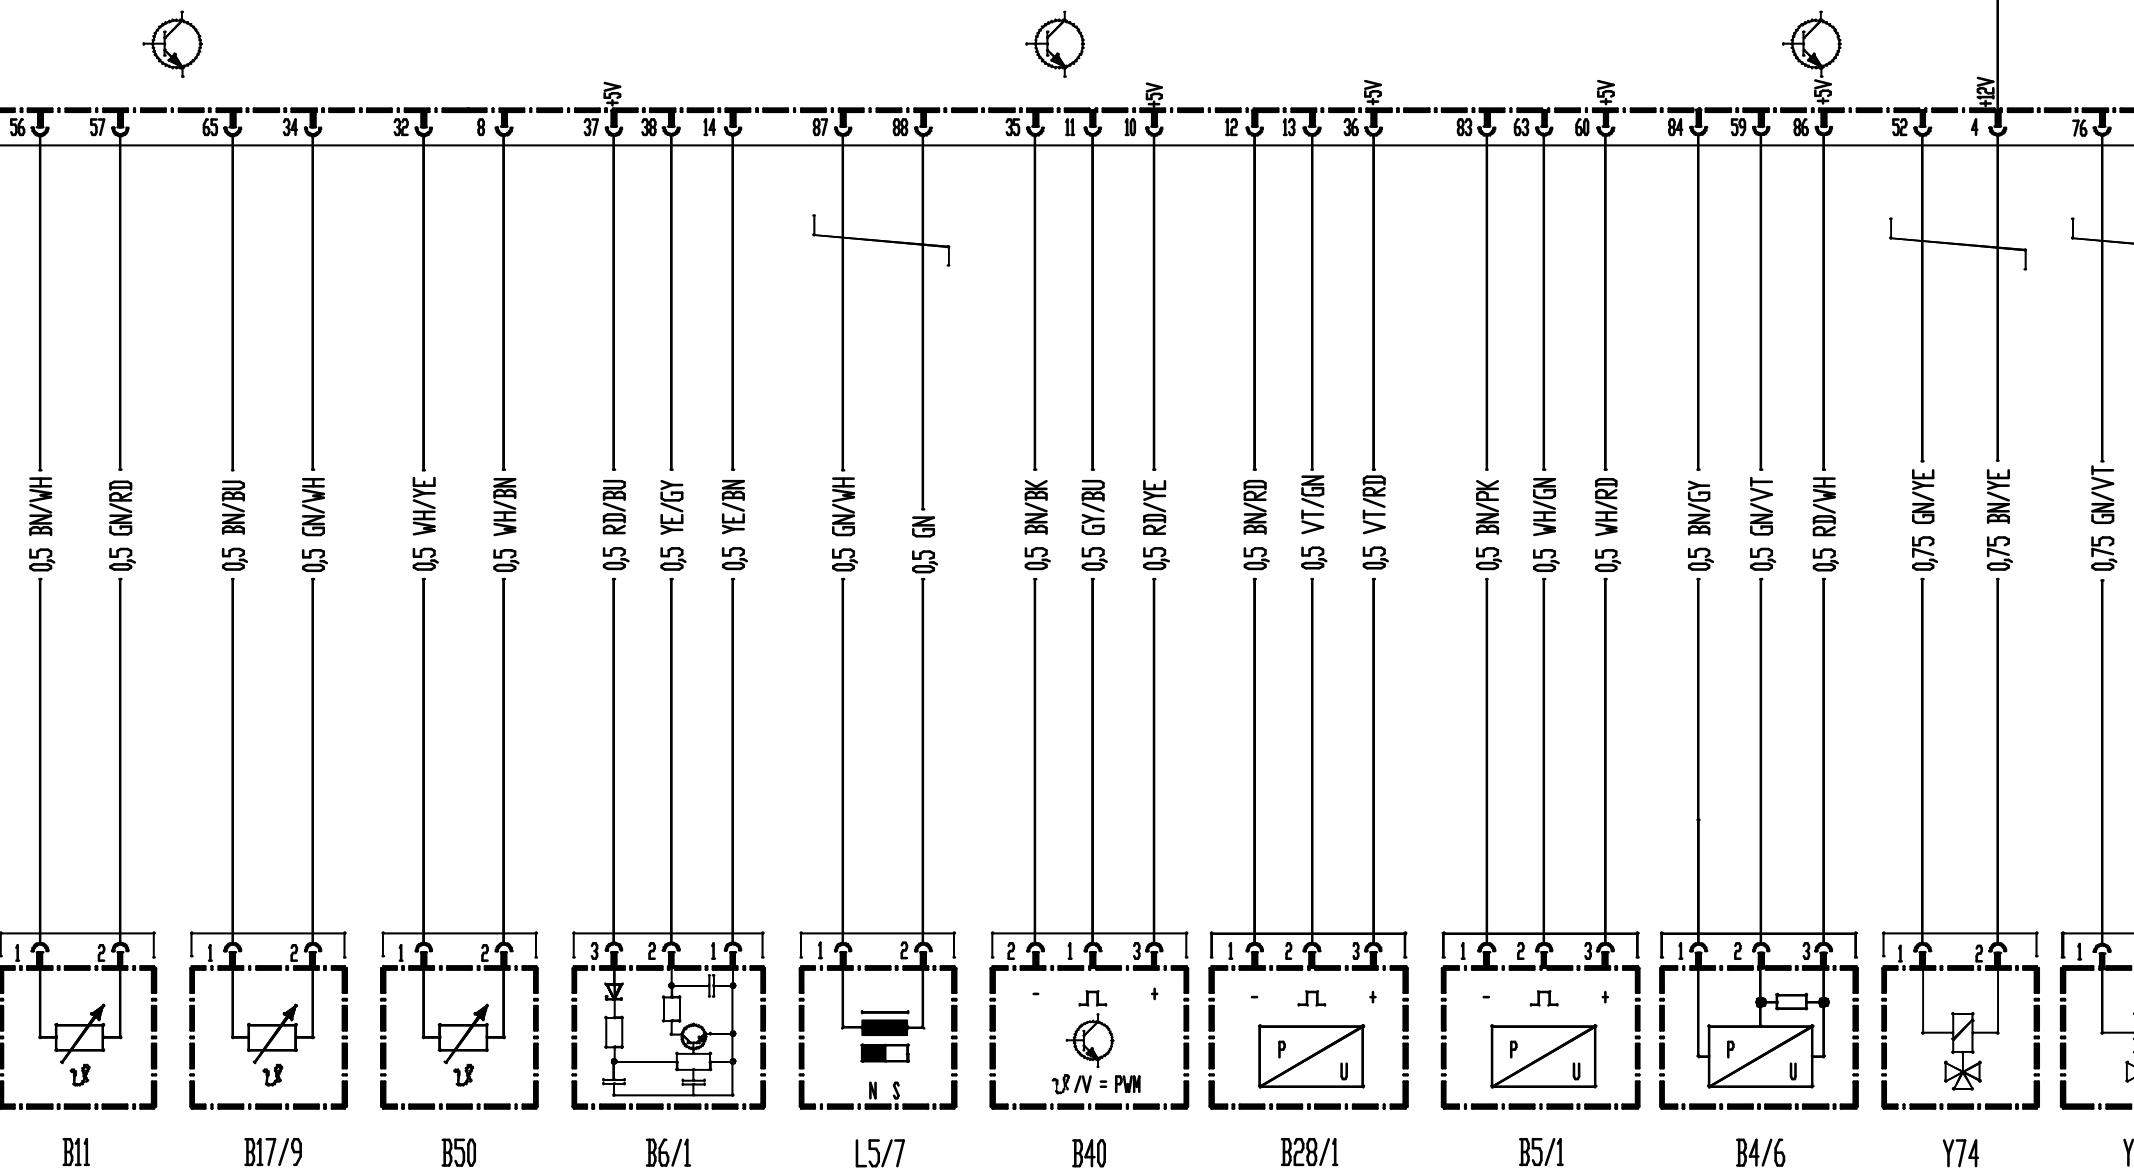

36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 51 52 53

N3/9

N3/9

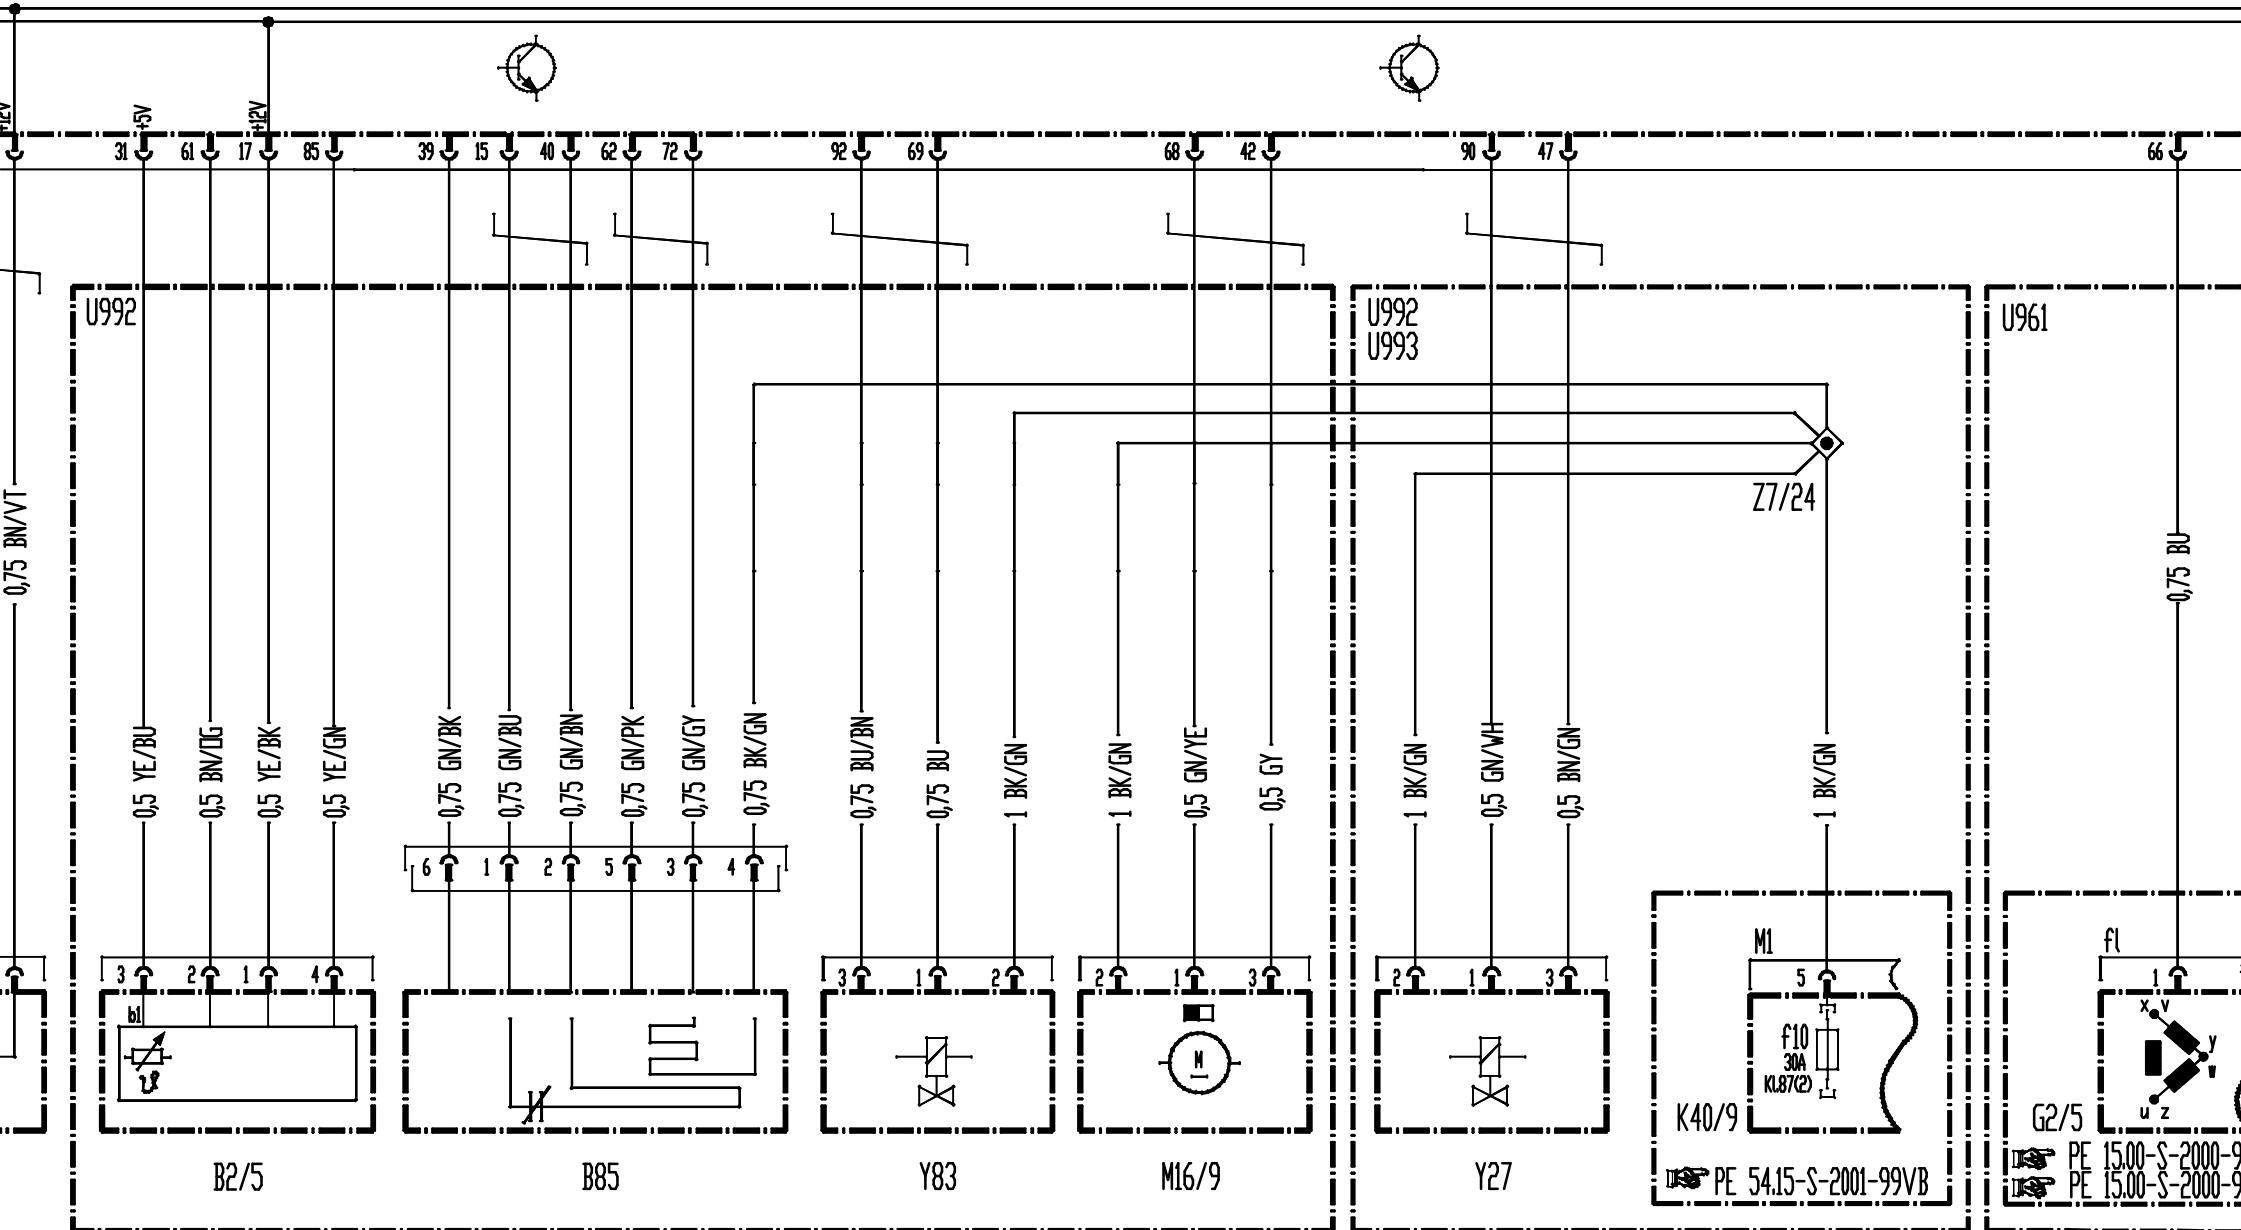

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

N3/9

N3/9

PE 07.16-S-2000-99VA



U991
0,5 BN/PK
0,5 GY/BN
B19/9
9VA
9VB

X25/13

U32

0,75 BK

0,5 VT/BN

0,5 PK/VT

B28/14

P

U

U33

0,75 BK

0,5 VT/BN

0,5 PK/VT

B28/14

P

U

X18/65

0,75 BK

0,5 VT/BN

0,5 PK/VT

B19/10

P

U

U32

0,5 BN/VT

0,5 YE/BN

0,5 BN/VT

B19/10

P

U

U33

0,5 BN/VT

0,5 YE/BN

0,5 BN/VT

B19/10

P

U

X18/65

0,5 BN/VT

0,5 YE/BN

0,5 BN/VT

B60

P

U

0,75 VT/GN

0,5 VT/BN

0,5 VT/YE

54 55 56 57 58 59 60 61 62 63 64 65 66 67 68 69 70 71

PE 07.16-S-20

Standard heater

Chapter 16

MODEL 639.601 /603 /605 /701 /703 /705 /711 /713 /811 /813 /815


except CODE (HH4) Automatic air conditioning


except CODE (HH9) Regulated air conditioning (Tempmatic)

| | | | |
|---------------------|--|------------------------|---------------------|
| PE83.20-S-2000-99VA | Wiring diagram heater | | PE83.20-S-2000-99VA |
| PE83.20-S-2000-60VA | Legend of wiring diagram heater | | PE83.20-S-2000-60VA |
| OV00.01-S-1901-03VA | Use of wiring diagrams | | OV00.01-S-1901-03VA |
| OV00.01-S-1901VA | Search aid for all wiring diagram groups | | OV00.01-S-1901VA |
| OV00.01-S-1909VA | Search aid for all electrical components | Components from A to E | OV00.01-S-1909VA |
| OV00.01-S-1909VB | Search aid for all electrical components | Components from F to J | OV00.01-S-1909VB |
| OV00.01-S-1909VC | Search aid for all electrical components | Components from K to O | OV00.01-S-1909VC |
| OV00.01-S-1909VD | Search aid for all electrical components | Components from P to T | OV00.01-S-1909VD |
| OV00.01-S-1909VE | Search aid for all electrical components | Components from U to Z | OV00.01-S-1909VE |
| OV00.01-S-1001-27VA | Abbreviations for wiring diagrams | | OV00.01-S-1001-27VA |
| OV00.01-S-1001-28VA | Abbreviations of signal and circuit designations for wiring diagrams | | OV00.01-S-1001-28VA |
| GF00.19-S-1000VB | Location and assignment of line and plug connectors | | GF00.19-S-1000VB |
| GF00.19-S-1100VB | Location and assignment of connectors and sockets | | GF00.19-S-1100VB |
| GF00.19-S-2000VB | Location and assignment of ground points | | GF00.19-S-2000VB |
| GF00.19-S-3000VB | Location and assignment of Z connector sleeves (line connectors in wiring harness) | | GF00.19-S-3000VB |
| GF54.15-S-0900VA | Fuse and relay box, location/assignment | | GF54.15-S-0900VA |

| | | | |
|---------------------|---------------------------------|--|--|
| PE83.20-S-2000-60VA | Legend of wiring diagram heater | MODEL 639.601 /603 /605 /701 / 703 /705 /711 /713 /811 / 813 /815 except CODE (HH4) Automatic air conditioning except CODE (HH9) Regulated air conditioning, (Tempmatic) | |
|---------------------|---------------------------------|--|--|

| Code | Designation | Coordinates |
|---------|---|------------------|
| F34 | Fuse block, 22-pin | 3G |
| F34f39 | Front blower fuse | 4F |
| K40/9 | Fuse and relay block | 17K |
| K40/9f4 | Heater fuse | 17K |
| M2 | Blower motor | 13L |
| M16/21 | Fresh air/air recirculation flap actuator motor | 15L |
| N10 | SAM control unit | 24K |
| R14 | Blower motor series resistor group | 10L |
| S98 | Air conditioning operating module | 6A 12A 22A |
| W12 | Ground (cockpit and center console) | 14L 20L |
| X31/9 | Blower switch feed-in connector | 4E |
| X31/12 | Blower connector, terminal 31 | 14G |
| Z66/1 | Additional fuse box feed connector sleeve | 4H |
| Z81/5 | Cockpit terminal 58d connector sleeve | 24F |
| Z151 | Heater 1st stage connector sleeve | 9F |
| Z162 | Blower motor connector sleeve | 11G |

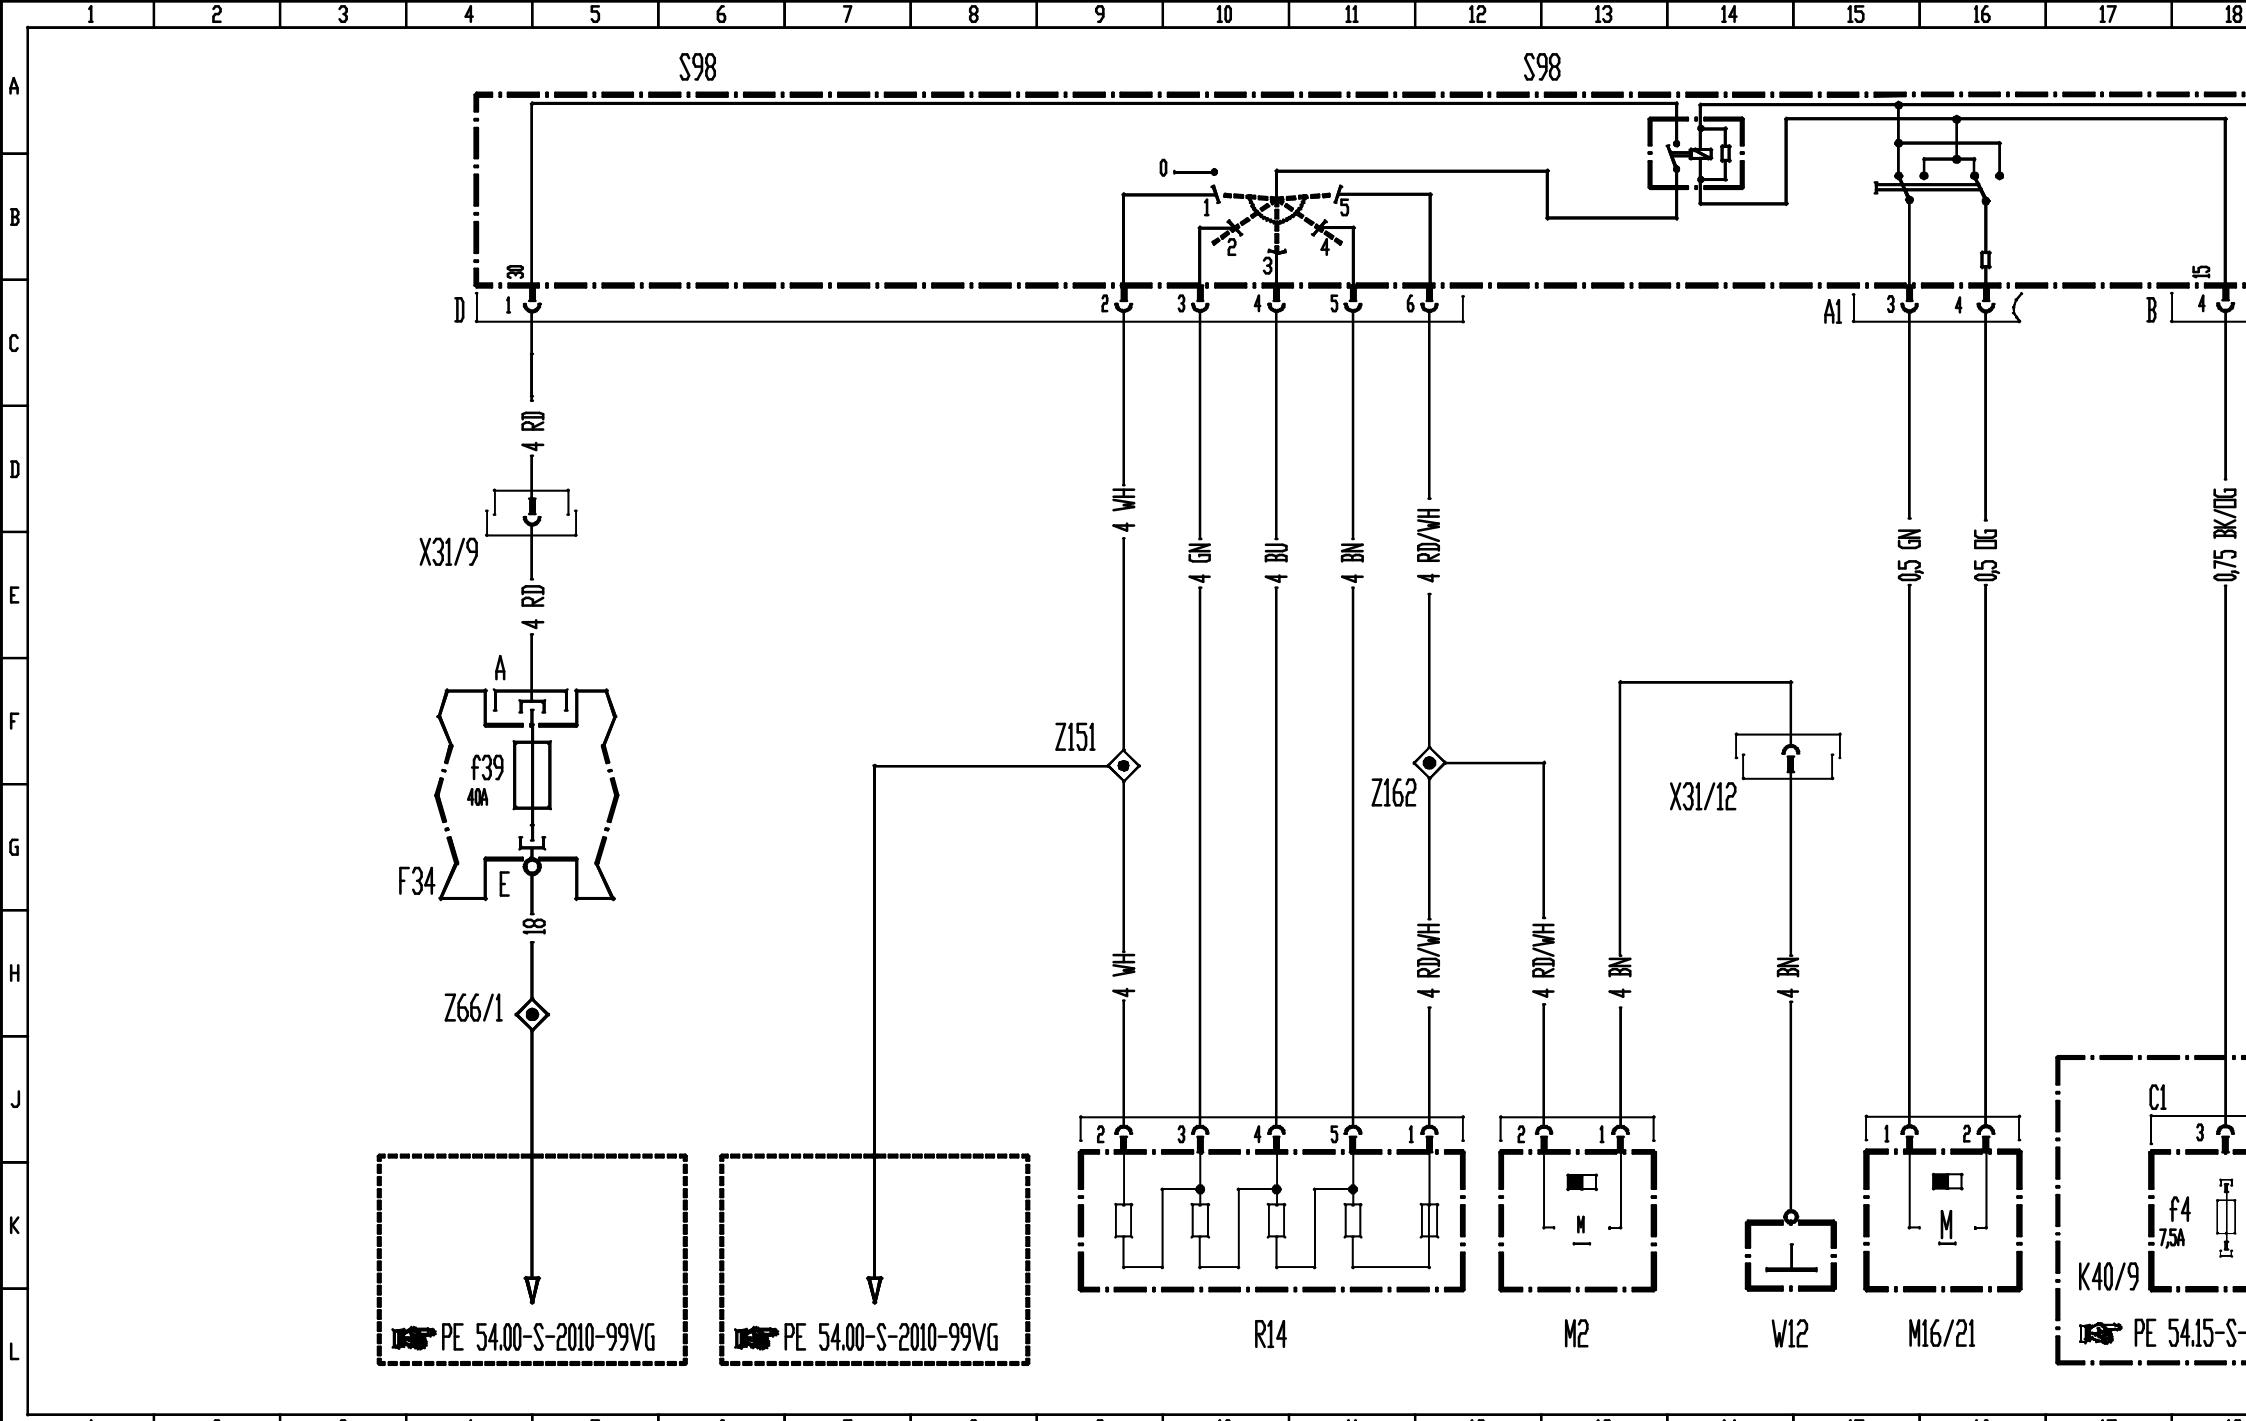

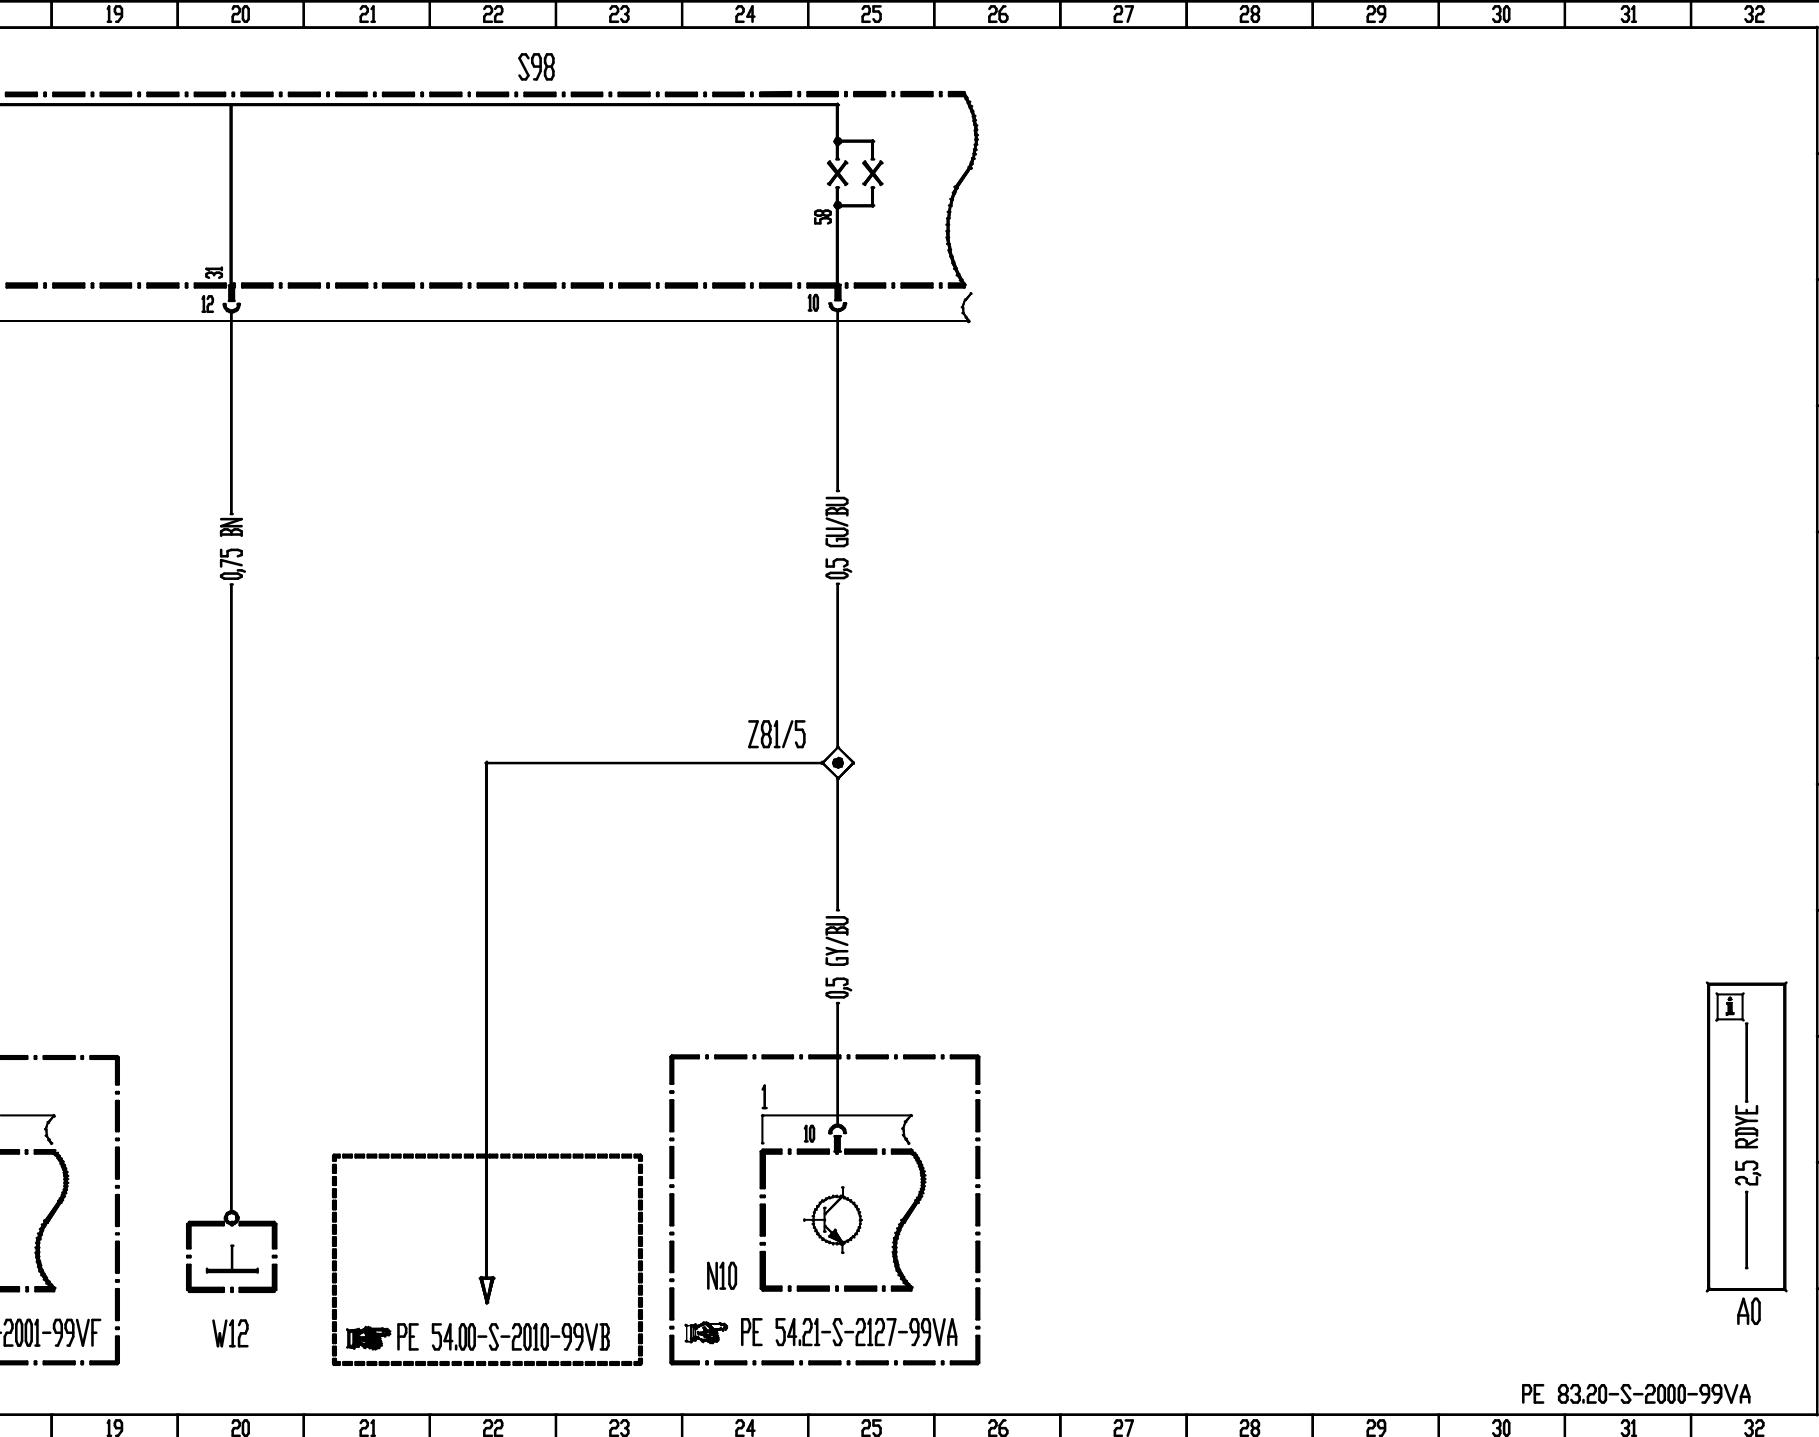

» ... Staff must in future assume the role of personal knowledge managers, who actively take responsibility for their own qualification ... « Jürgen E. Schrempp

DCUK Training.

CV Electrics and Telematics Team

Prepared by Ian Swales

Mercedes-Benz Commercial Vehicle Training

CV Electrics & Telematics Team

DaimlerChrysler UK Ltd.
Training & Development
Delaware Drive
Tongwell
Milton Keynes
MK15 8BA

