
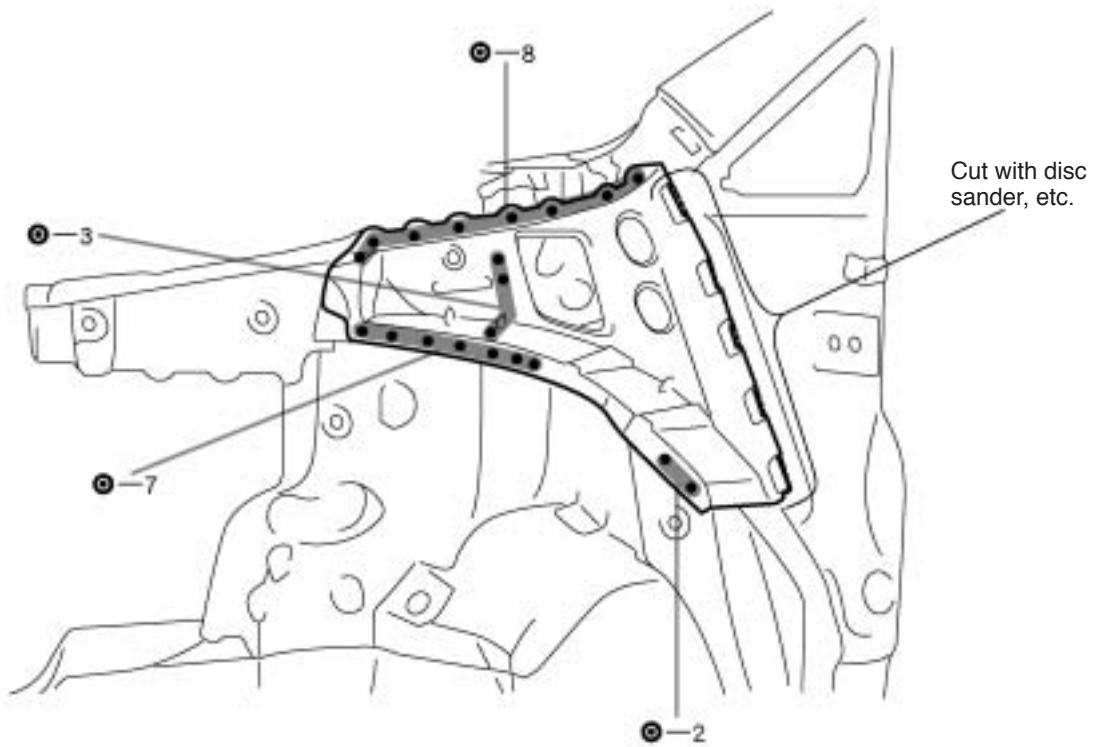


## COWL TOP SIDE PANEL (ASSY) REPLACEMENT

### 1. REMOVE COWL TOP SIDE PANEL

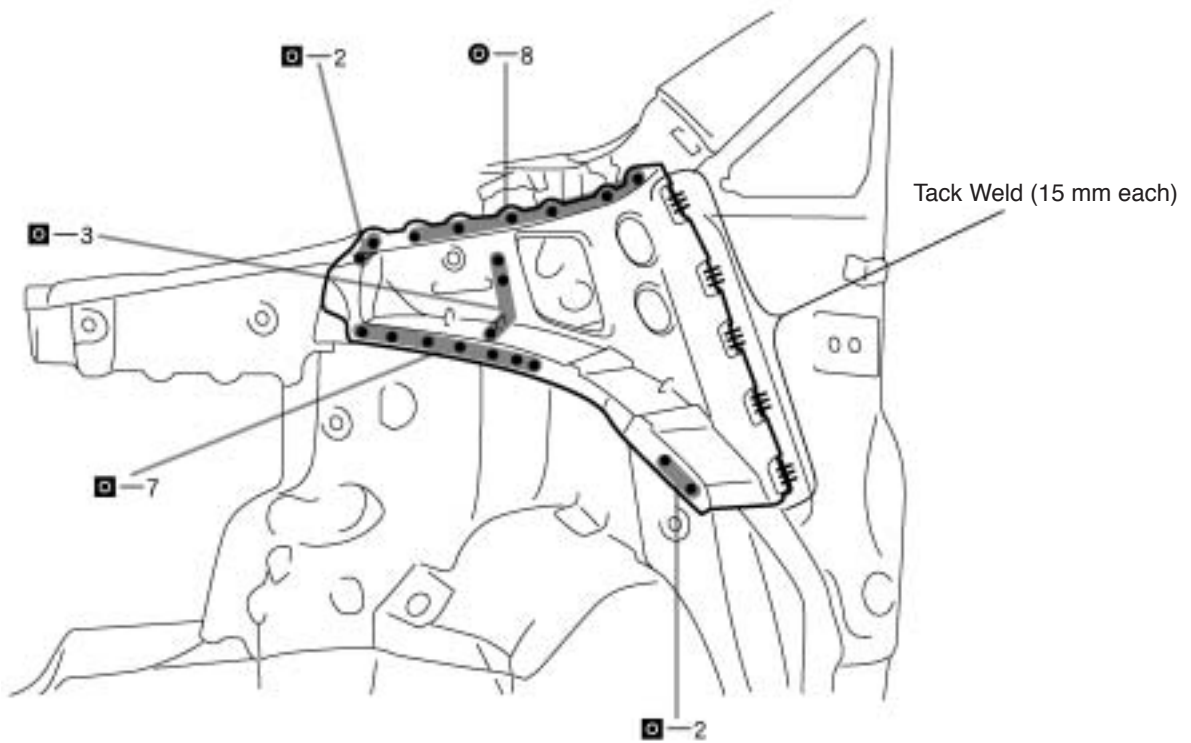

**2. INSTALL COWL TOP SIDE PANEL**

mm	in.
15	0.59

F12216A

**3. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.