


## ROCKER OUTER PANEL (CUT-P) REPLACEMENT

### 1. REMOVE ROCKER OUTER PANEL


- (a) Cut and join the parts at the locations as shown below.

HINT:


Take care not to damage the internal reinforcement.

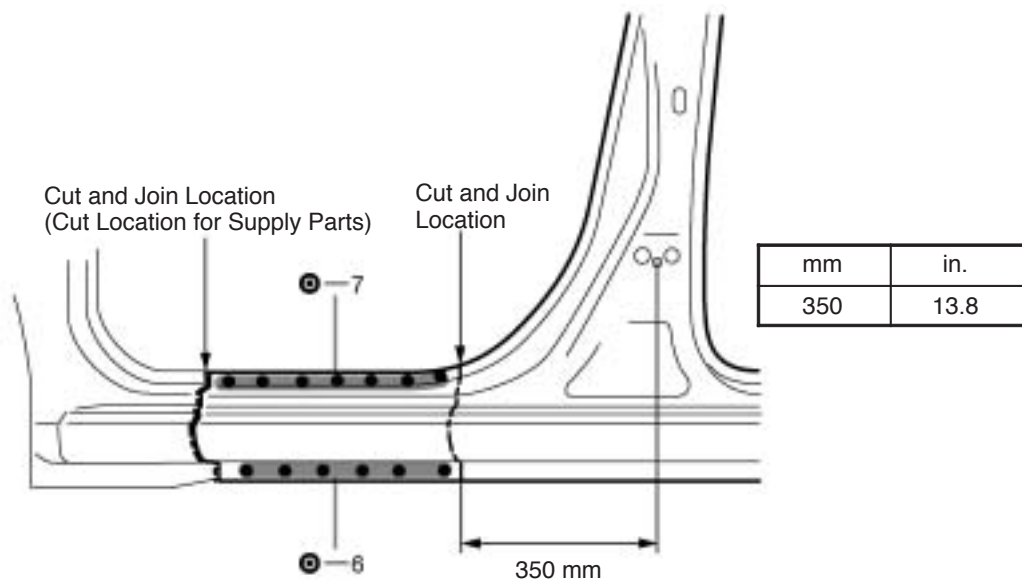

[Cut and Join Location]

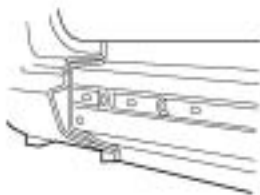

[Cut and Join Location]

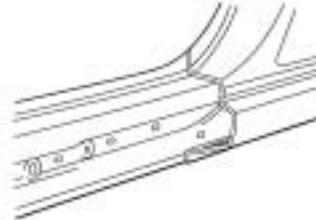


## 2. INSTALL ROCKER OUTER PANEL

### HINT:

Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

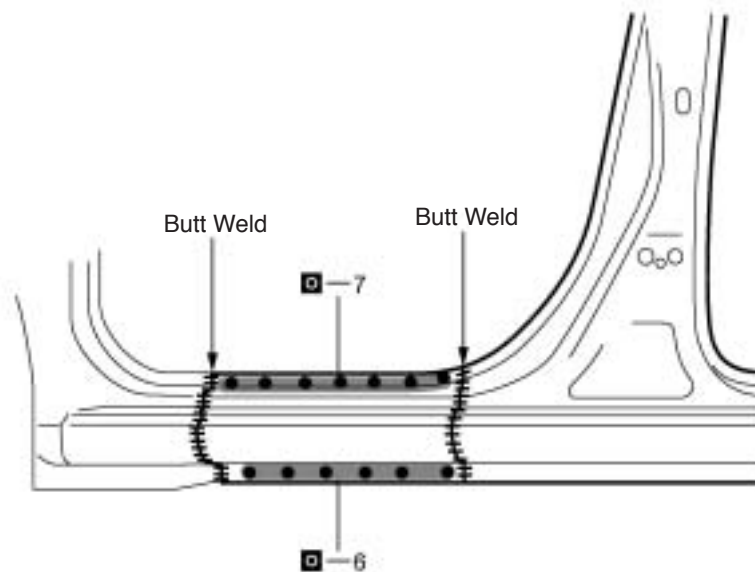

F12235A

## 3. MEASURING OPENING PORTION DIMENSIONS ([See page BP-94](#))

## 4. APPLYING UNDER COATING ([See page PC-6](#))

## 5. APPLYING ANTI-RUST AGENT

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.