


## ROCKER OUTER PANEL (CUT) REPLACEMENT

### 1. REMOVE ROCKER OUTER PANEL


- (a) Cut and join the parts at the locations as shown below.

HINT:


Take care not to damage the internal reinforcement.

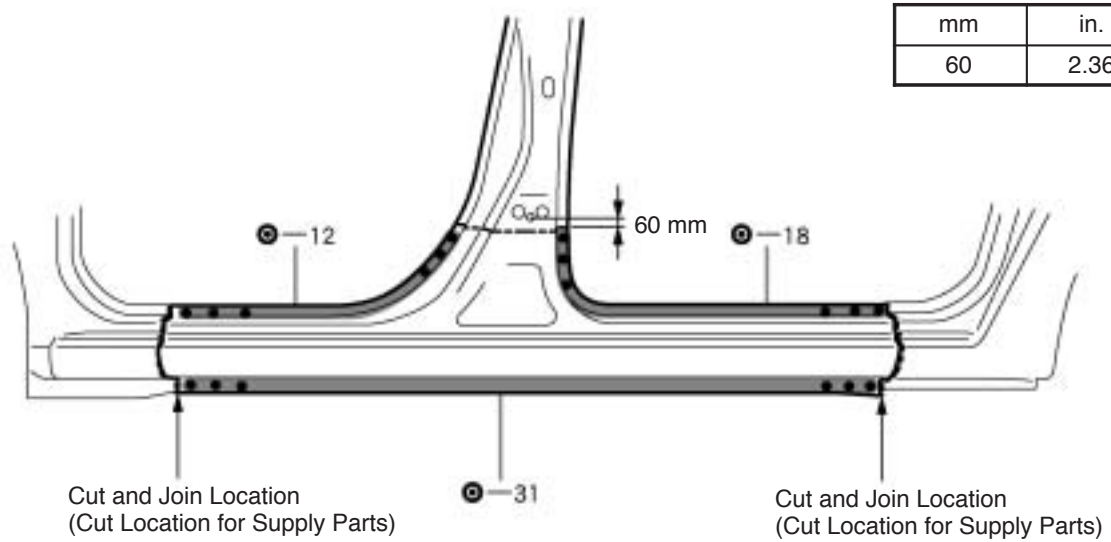


[Cut and Join Location]

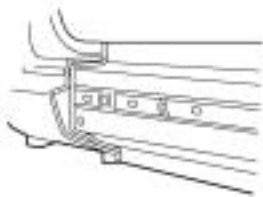

[Cut and Join Location]

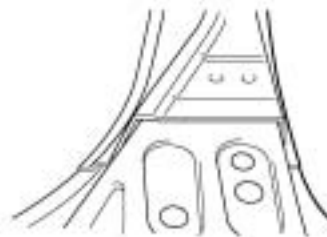


[Cut and Join Location]

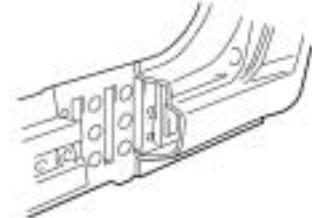

**2. INSTALL ROCKER OUTER PANEL****HINT:**

Inspect the fitting of the front door, etc., before welding, since this affects the appearance of the finish.

- (a) Temporarily install the new parts and measure each part in accordance with the body dimension diagram.

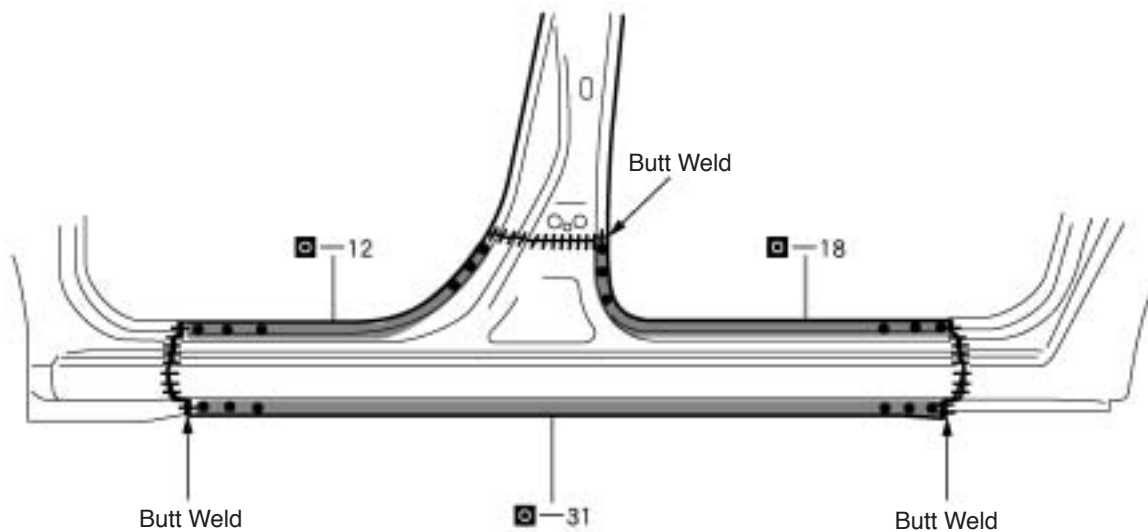

F12233A

**3. MEASURING OPENING PORTION DIMENSIONS (See page BP-94)****4. APPLYING UNDER COATING (See page PC-6)****5. APPLYING ANTI-RUST AGENT**

- (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.