

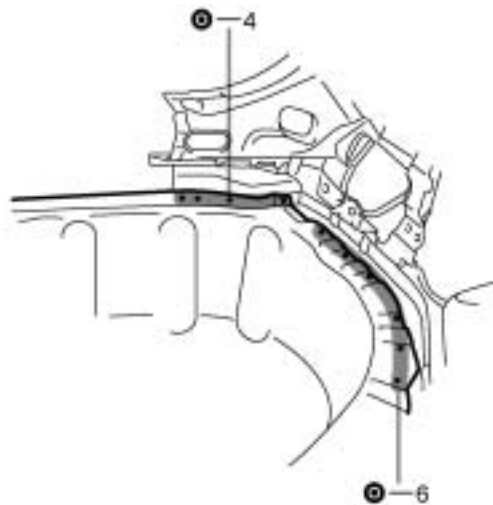


REAR FLOOR PAN (ASSY) REPLACEMENT

1. REMOVE BODY LOWER BACK PANEL ([See page BP-56](#))
2. REMOVE REAR FLOOR PAN ([See page BP-58](#))
 - (a) Remove the rear floor pan reinforcement, rear floor brace bracket at the same time.

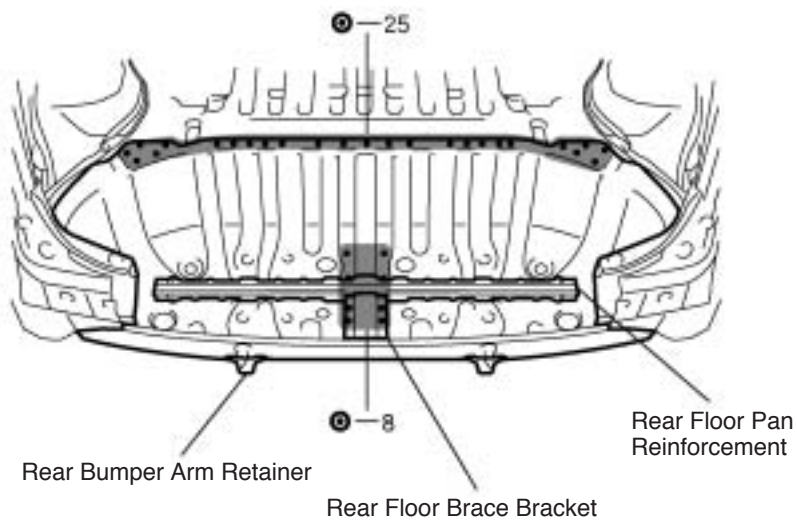

3. INSTALL REAR FLOOR PAN

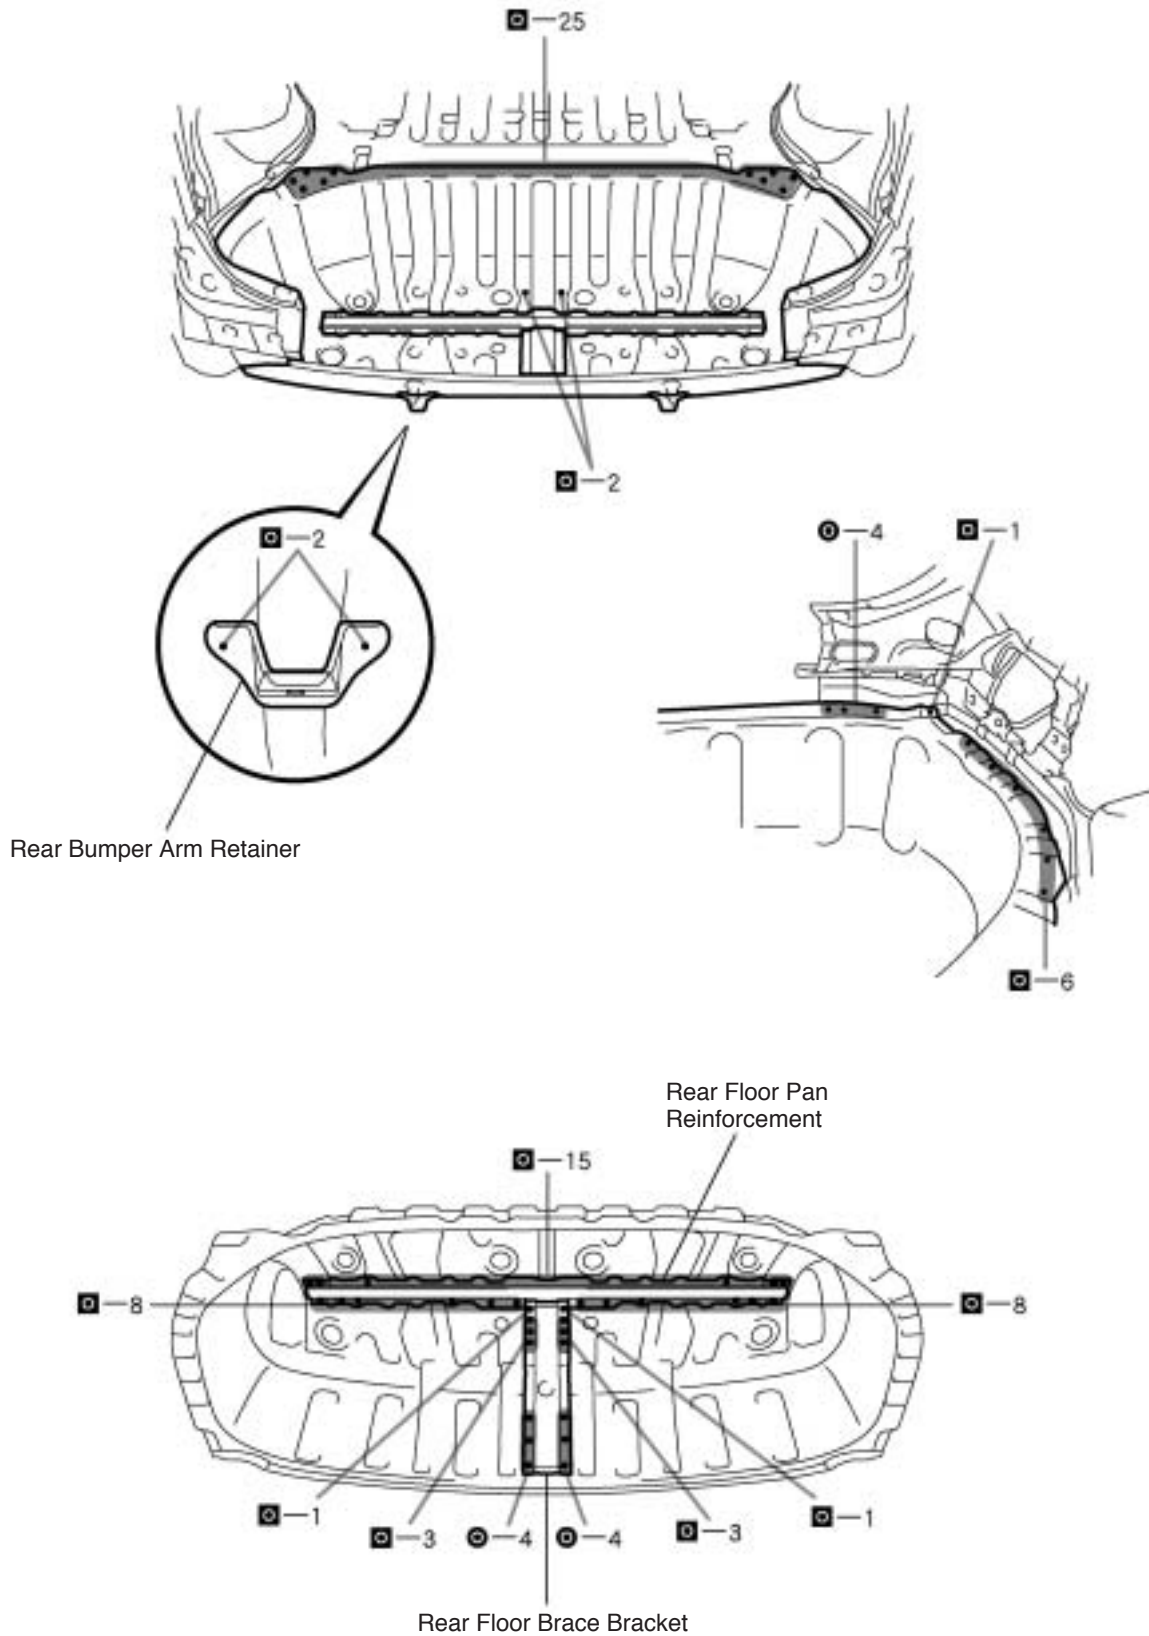

4. INSTALL BODY LOWER BACK PANEL ([See page BP-56](#))
5. APPLYING SEALER TO THE REAR LUGGAGE COMPARTMENT ([See page PC-1](#))
6. APPLYING UNDER COATING ([See page PC-6](#))
7. REPLACEMENT SILENCER SHEET ([See page PC-9](#))
8. APPLYING ANTI-RUST AGENT
 - (a) After applying the top coat layer, apply the anti-rust agent to the inside of the necked section structural weld spots.