

ABBREVIATIONS

The following abbreviations are used in this manual.

A/C	=	Air Conditioner
A/F	=	Air Fuel
A/T	=	Automatic Transaxle
ABS	=	Anti-Lock Brake System
C/B	=	Circuit Breaker
COMB.	=	Combination
DLC3	=	Data Link Connector 3
ECT	=	Electronic Control Transmission
ECU	=	Electronic Control Unit
EDU	=	Electronic Driving Unit
EFI	=	Electronic Fuel Injection
EGR	=	Exhaust Gas Recirculation
ESA	=	Electronic Spark Advance
EVAP	=	Evaporative Emission
FL	=	Fusible Link
IC	=	Integrated Circuit
INT	=	Intermittent
ISC	=	Idle Speed Control
J/B	=	Junction Block
LH	=	Left-Hand
LHD	=	Left-Hand Drive
M/T	=	Manual Transaxle
O/D	=	Overdrive
PPS	=	Progressive Power Steering
PTC	=	Positive Temperature Coefficient
R/B	=	Relay Block
RH	=	Right-Hand
RHD	=	Right-Hand Drive
SRS	=	Supplemental Restraint System
SW	=	Switch
TEMP.	=	Temperature
TVSS	=	TOYOTA Vehicle Security System
VRV	=	Vacuum Regulating Valve
VSV	=	Vacuum Switching Valve
w/	=	With
w/o	=	Without

* The titles given inside the components are the names of the terminals (terminal codes) and are not treated as being abbreviations.