


Position of Parts in Engine Compartment

[LHD : 1AZ-FE]

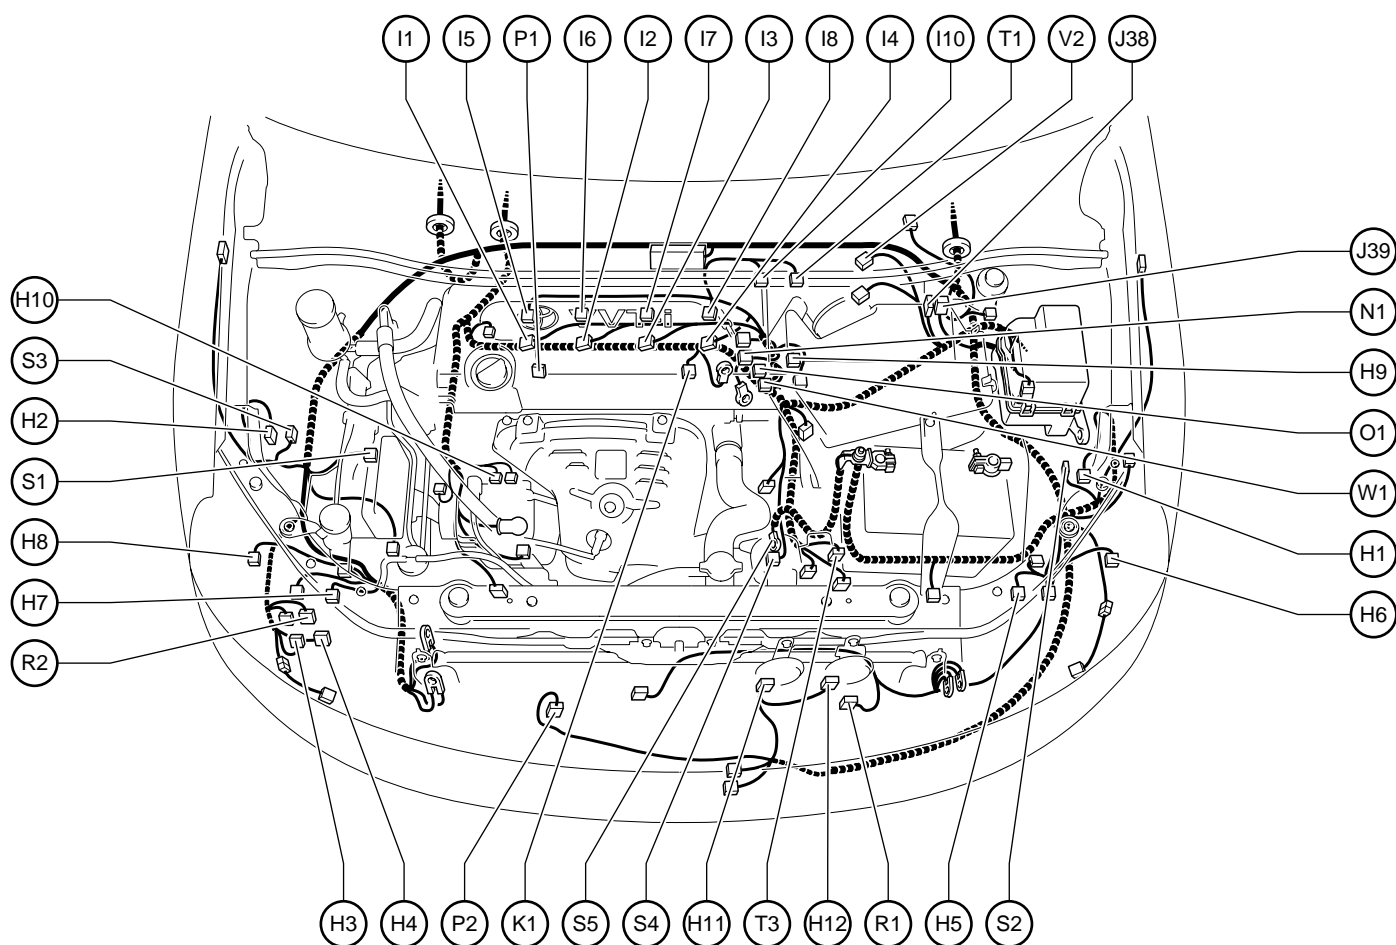

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Motor
 H 4 Headlight Cleaner Relay
 H 5 Headlight LH (High)
 H 6 Headlight LH (Low)
 H 7 Headlight RH (High)
 H 8 Headlight RH (Low)
 H 9 Heated Oxygen Sensor (Bank 1 Sensor 2)
 H10 Heated Oxygen Sensor (Bank 2 Sensor 2)
 H11 Horn (High)
 H12 Horn (Low)

I 1 Ignition Coil and Igniter No.1
 I 2 Ignition Coil and Igniter No.2
 I 3 Ignition Coil and Igniter No.3
 I 4 Ignition Coil and Igniter No.4
 I 5 Injector No.1
 I 6 Injector No.2
 I 7 Injector No.3
 I 8 Injector No.4
 I 10 ISC Valve

J 38 Junction Block
 J 39 Junction Block

K 1 Knock Sensor

N 1 Noise Filter

O 1 Oil Pressure SW

P 1 Power Steering Oil Pressure SW

P 2 Pressure SW

R 1 Radiator Fan Motor

R 2 Rear Washer Motor

S 1 Skid Control ECU with Actuator

S 2 Speed Sensor Front LH

S 3 Speed Sensor Front RH

S 4 Starter

S 5 Starter

T 1 Throttle Position Sensor

T 3 Turbine Speed Sensor

V 2 VSV (EVAP)

W 1 Water Temp. Sensor