


Connector Joining Wire Harness and Wire Harness

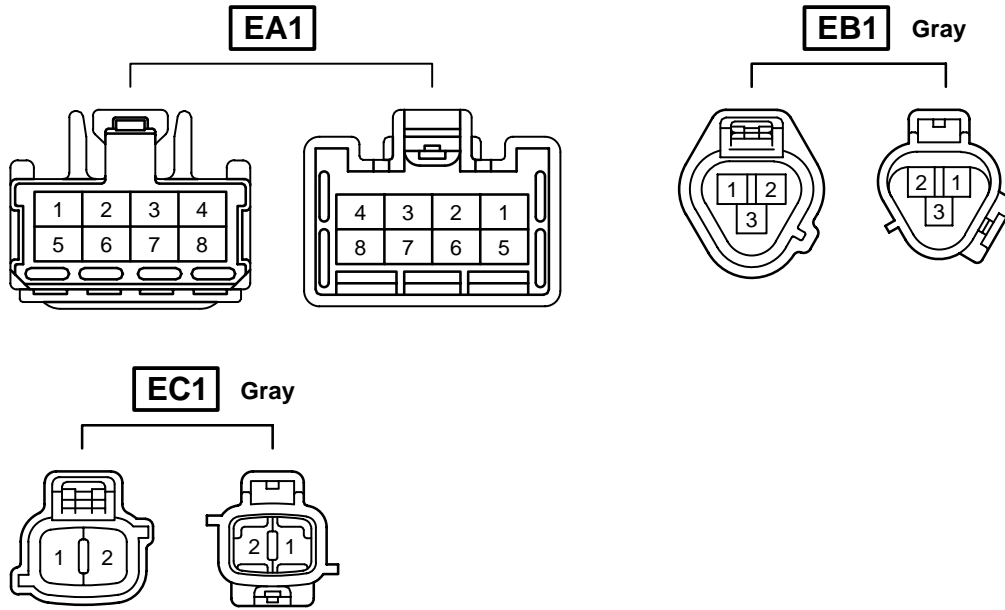

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Near the Engine Room R/B)
EB1	Engine Wire and Engine No.6 Wire (Near the Starter Motor)
EC1	Engine Wire and Engine No.4 Wire (Near the Starter Motor)