


Connector Joining Wire Harness and Wire Harness

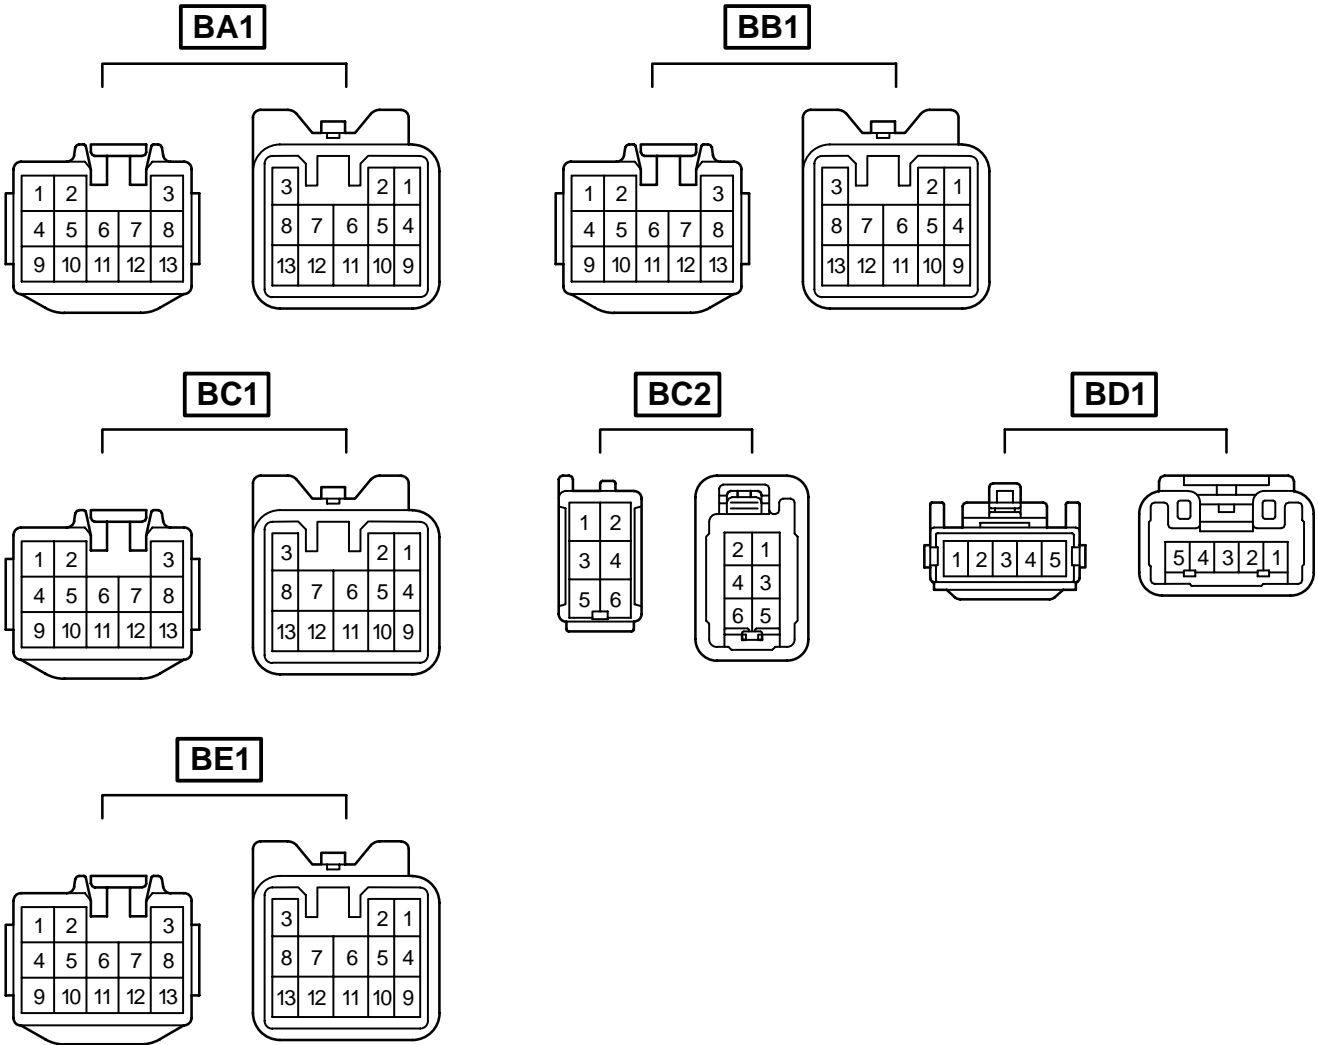

Code	Joining Wire Harness and Wire Harness (Connector Location)
BA1	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BC1	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BC2	
BD1	Roof No.2 Wire and Floor No.2 Wire (Right Quarter Panel)
BE1	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)