


## Connector Joining Wire Harness and Wire Harness

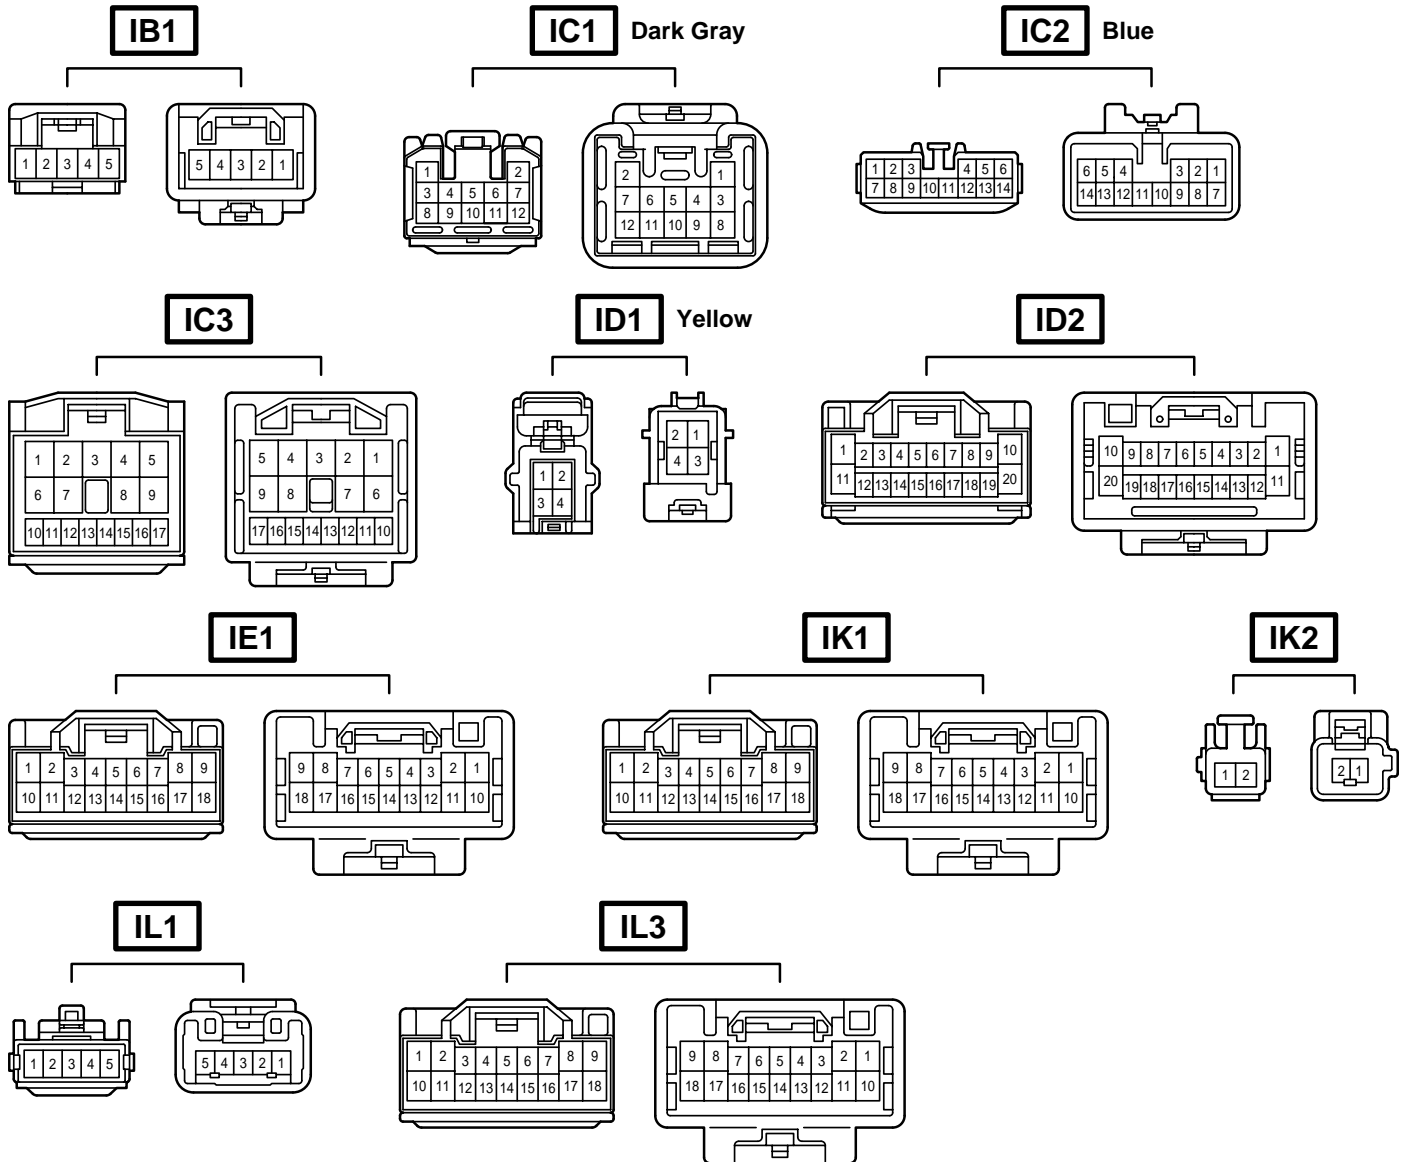

Code	Joining Wire Harness and Wire Harness (Connector Location)
IB1	Instrument Panel Wire and Roof Wire (Upper Part of Front Body Pillar LH)
IC1	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC2	
IC3	
ID1	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
ID2	
IE1	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IK1	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IK2	
IL1	Engine Wire and Instrument Panel Wire (Left Kick Panel)
IL3	