


## Connector Joining Wire Harness and Wire Harness

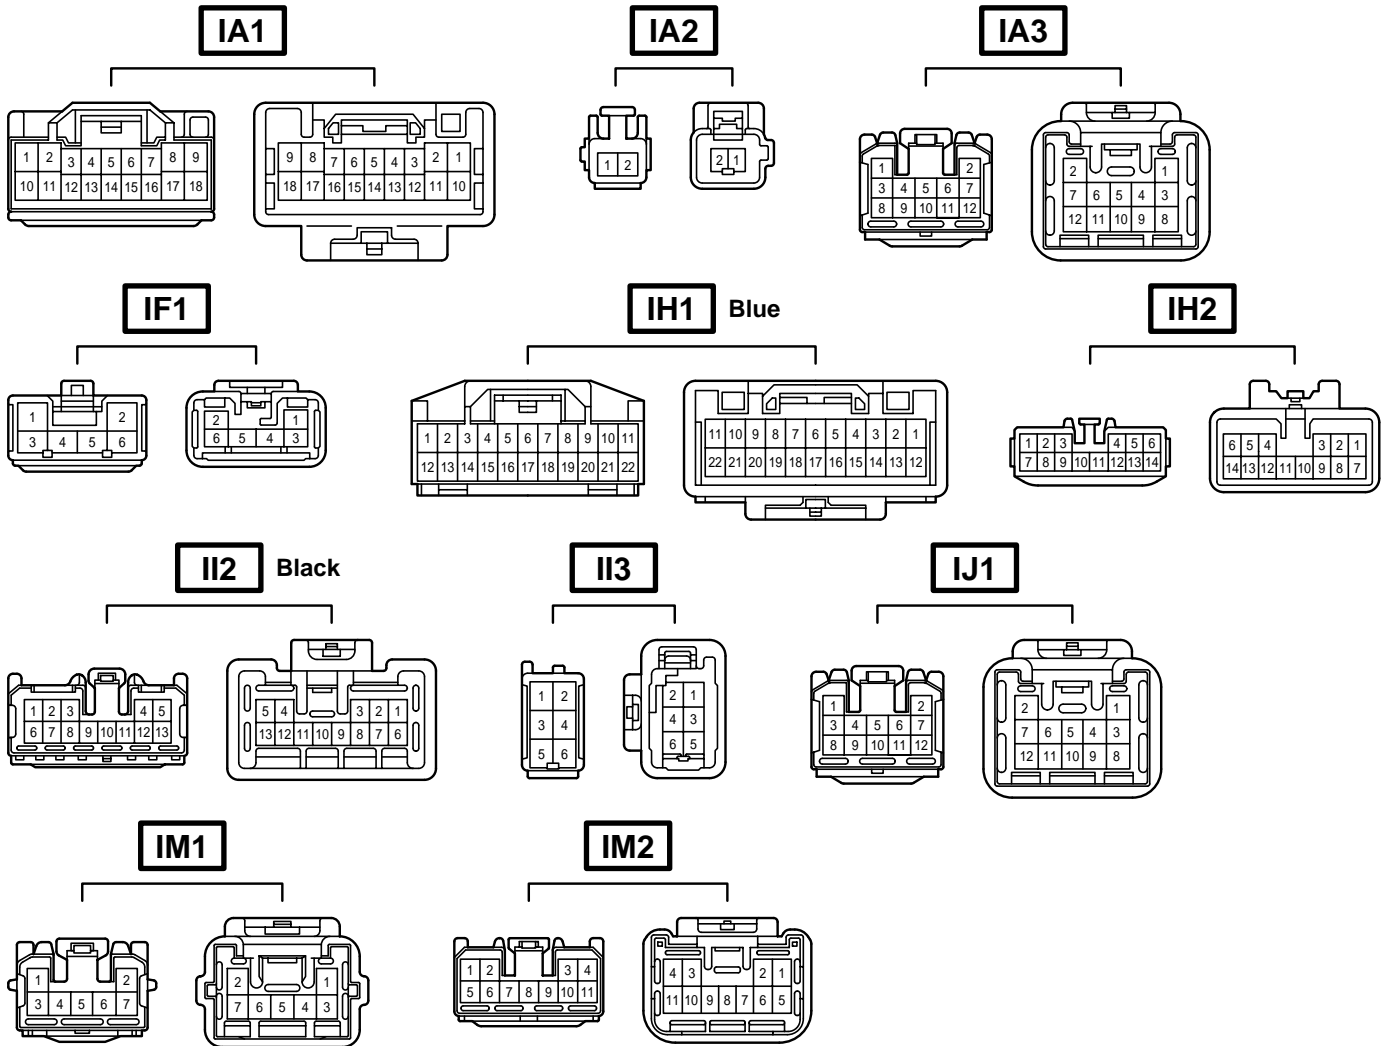

Code	Joining Wire Harness and Wire Harness (Connector Location)
IA1	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IA2	
IA3	
IF1	Instrument Panel Wire and Cowl No.2 Wire (Behind the Combination Meter)
IH1	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IH2	
II2	
II3	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IJ1	
IM1	Engine Room Main Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IM2	
	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)