

Service Hints

B1 Back-Up Light SW (M/T)

2-1 : Closed with the shift lever at **R** position

A2 Back-Up Light SW (A/T)

3-2 : Closed with the shift lever at **R** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A2	32 (LHD 1AZ-FE)	J36	A	40 (LHD)	R17
					41 (LHD)
B1	32 (LHD 1AZ-FE)	J37	B	40 (LHD)	
	34 (LHD 1CD-FTV)	R15		41 (LHD)	

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	52 (LHD 1AZ-FE) 54 (LHD 1CD-FTV)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
BF	60 (LHD)	Center of the Back Door Panel