

Service Hints

C6 Cigarette Lighter

2-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

4-Ground : Always continuity

P8 Power Outlet

1-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position

2-Ground : Always continuity

P4 Power Outlet Relay

5-3 : Closed with the ignition SW at **ACC** or **ON** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C6	36 (LHD)	J32	40 (LHD)	P8	41 (LHD)
J3	38 (LHD)	P4	38 (LHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IJ		
3C	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	56 (LHD)	Left Kick Panel
BC	60 (LHD)	Left Quarter Panel