

Combination Meter (RHD)

Service Hints

C8 (A), C9 (B) Combination Meter

- (A) 1–Ground : Approx. **12** volts with the ignition SW at **ON** position
- (A) 21–Ground : Always approx. **12** volts
- (A) 23–Ground : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position
- (A) 20–Ground : Always continuity
- (A) 40–Ground : Always continuity

B2 Brake Fluid Level Warning SW

- 1–2 : Closed with the float down

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A12	46 (RHD)	F11	44 (RHD 1CD–FTV)	J32	50 (RHD)
B2	42 (RHD 1AZ–FE)	F18	50 (RHD)	O1	43 (RHD 1AZ–FE)
	44 (RHD 1CD–FTV)	F19	47 (RHD)		45 (RHD 1CD–FTV)
B3	44 (RHD 1CD–FTV)	J3	48 (RHD)	R4	48 (RHD)
B10	46 (RHD)	J9	48 (RHD)	S16	A 49 (RHD)
C8	A 46 (RHD)	J15	48 (RHD)	S17	B 49 (RHD)
C9	B 46 (RHD)	J16	48 (RHD)	S30	A 49 (RHD)
E6	44 (RHD 1CD–FTV)	J21	48 (RHD)	S31	B 49 (RHD)
E7	A 47 (RHD)	J26	A 48 (RHD)	S34	A 49 (RHD)
E8	B 47 (RHD)	J27	B 48 (RHD)	S35	B 49 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3D	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3F		
3H		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC2	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC3		
IH1	68 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IL3	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	62 (RHD 1AZ–FE)	Right Radiator Side Support
	64 (RHD 1CD–FTV)	
EE	64 (RHD 1CD–FTV)	Near the Starter
IC	66 (RHD)	Right Kick Panel
BB	70 (RHD)	Front Side of the Left Quarter Panel
BC	70 (RHD)	Left Quarter Panel

