

## Service Hints

### D7 Double Lock ECU

- 1—Ground : Always approx. 12 volts
- 14—Ground : Always continuity

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	A	46 (RHD)	D17	50 (RHD)	J29	B	48 (RHD)	
D7		47 (RHD)	D20	50 (RHD)	J30		48 (RHD)	
D9		50 (RHD)	J3	48 (RHD)	J32		50 (RHD)	
D12		50 (RHD)	J16	48 (RHD)	J35		50 (RHD)	
D15		50 (RHD)	J22	48 (RHD)	W3		51 (RHD)	
D16		50 (RHD)	J28	A	48 (RHD)			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IG		
IJ		
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3B		
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3G		
3K		
4A	30 (RHD)	Center J/B No.2 and Instrument Panel Wire (Near the Steering Column)
4C		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA1	68 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IA3		
IC2	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
II2	68 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IK1	66 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
BA1	70 (RHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	70 (RHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IA	66 (RHD)	Left Kick Panel
IC	66 (RHD)	Right Kick Panel
BC	70 (RHD)	Left Quarter Panel