

## Service Hints

### EFI Relay

5-3 : Closed with the ignition SW at **ON** position

### U1 Unlock Warning SW

2-1 : Closed with the ignition key in cylinder

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	A	36 (LHD)	E11	E	37 (LHD)
C9	B	36 (LHD)	I13		37 (LHD)
E7	A	37 (LHD)	J13	A	38 (LHD)
E8	B	37 (LHD)	J14	B	38 (LHD)
E10	D	37 (LHD)	J16		38 (LHD)
				J17	38 (LHD)
				J19	38 (LHD)
				S20	A
				S21	B
				U1	39 (LHD)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
3F		
3H	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	52 (LHD 1AZ-FE)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
EC	52 (LHD 1AZ-FE)	Intake Side of Cylinder Block
ED	52 (LHD 1AZ-FE)	Left Side of Cylinder Block
IC	56 (LHD)	Right Kick Panel

## ○ : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E2	52 (LHD 1AZ-FE)	Engine Wire	E3	52 (LHD 1AZ-FE)	Engine Wire