

Engine Immobiliser System (RHD 1CD–FTV)

Service Hints

EFI Relay

5–3 : Closed with the ignition SW at **ON** position

U1 Unlock Warning SW

2–1 : Closed with the ignition key in cylinder

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
C8	A	46 (RHD)	I13		47 (RHD)	S31	B	49 (RHD)
C9	B	46 (RHD)	J3		48 (RHD)	S32	A	49 (RHD)
D6		47 (RHD)	J16		48 (RHD)	S33	B	49 (RHD)
D9		50 (RHD)	J21		48 (RHD)	T8		49 (RHD)
E7	A	47 (RHD)	J26		48 (RHD)	U1		49 (RHD)
E11	D	47 (RHD)	S30	A	49 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3H		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	64 (RHD 1CD–FTV)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
ID2	66 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	64 (RHD 1CD–FTV)	Left Radiator Side Support
EE	64 (RHD 1CD–FTV)	Near the Starter
IC	66 (RHD)	Right Kick Panel

