

## Service Hints

### A12 (A), A13 (B), A14 (C) A/C Amplifier

(A) 1–Ground : Approx. **12** volts with the ignition SW at **ON** position

### H15 Heater Control Panel

12–Ground : Approx. **12** volts with the ignition SW at **ON** position

1–Ground : Always approx. **12** volts

5–Ground : Always continuity

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A1		32 (LHD 1AZ–FE)	B6		36 (LHD)	J6	B	38 (LHD)
		34 (LHD 1CD–FTV)	B7		36 (LHD)	J8		38 (LHD)
A12	A	36 (LHD)	B8		36 (LHD)	J15		38 (LHD)
A13	B	36 (LHD)	B9	A	36 (LHD)	J16		38 (LHD)
A14	C	36 (LHD)		B	36 (LHD)	P2		33 (LHD 1AZ–FE)
A15		36 (LHD)	E7	A	37 (LHD)			35 (LHD 1CD–FTV)
A17		36 (LHD)	E8	B	37 (LHD)	P6		38 (LHD)
A18		36 (LHD)	E9	C	37 (LHD)	S16	A	39 (LHD)
A19		36 (LHD)	H15		37 (LHD)	S17	B	39 (LHD)
B5	A	36 (LHD)	J5		38 (LHD)	W2		35 (LHD 1CD–FTV)
	B	36 (LHD)	J5	A	38 (LHD)			

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
7	23	Engine Room R/B No.2 (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IC		
IF		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IP		
3F	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IF1	56 (LHD)	Instrument Panel Wire and Cowl No.2 Wire (Behind the Combination Meter)
IH2	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
II3	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IL1	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IL3		
BD1	60 (LHD)	Roof No.2 Wire and Floor No.2 Wire (Right Quarter Panel)

## Front Air Conditioner (LHD)



### : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	
IC	56 (LHD)	Right Kick Panel
BD	60 (LHD)	Front Side of the Right Quarter Panel



### : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E7	52 (LHD 1AZ-FE)	Engine Room Main Wire	I1	58 (LHD)	Cowl No.2 Wire
	54 (LHD 1CD-FTV)		I2		

