

Service Hints

F15 Front Fog Light Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position and fog light SW at **ON** position

○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page |
|-------|------------------|-------|------------------|-------|----------|
| B10 A | 36 (LHD) | F4 | 34 (LHD 1CD-FTV) | S14 A | 39 (LHD) |
| C8 | 36 (LHD) | F15 | 37 (LHD) | S15 B | 39 (LHD) |
| C12 | 36 (LHD) | J8 | 38 (LHD) | S22 A | 39 (LHD) |
| F3 | 32 (LHD 1AZ-FE) | J15 | 38 (LHD) | S23 B | 39 (LHD) |
| | 34 (LHD 1CD-FTV) | J23 A | 38 (LHD) | | |
| F4 | 32 (LHD 1AZ-FE) | J24 B | 38 (LHD) | | |

○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location) |
|------|----------|---|
| 2 | 22 | Engine Room R/B (Front Side of Left Suspension Tower) |

○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location) |
|------|----------|---|
| IA | 24 (LHD) | Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel) |
| IB | | |
| IL | 25 (LHD) | Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel) |
| 3F | 28 (LHD) | Center J/B and Instrument Panel Wire (Right Side of Grove Box) |
| 3H | | |
| 3I | | |
| 3K | | |

□ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location) |
|------|-----------------|---|
| EE1 | 52 (LHD 1AZ-FE) | Engine Room Main Wire and Engine Room No.2 Wire (Under the Headlight LH) |
| EF1 | 52 (LHD 1AZ-FE) | Engine Room Main Wire and Engine Room No.2 Wire (Under the Headlight RH) |
| IC3 | 56 (LHD) | Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH) |

▽ : Ground Points

| Code | See Page | Ground Points Location |
|------|------------------|-----------------------------|
| EA | 52 (LHD 1AZ-FE) | Left Radiator Side Support |
| | 54 (LHD 1CD-FTV) | |
| EB | 52 (LHD 1AZ-FE) | Right Radiator Side Support |
| | 54 (LHD 1CD-FTV) | |
| IC | 56 (LHD) | Right Kick Panel |