

## Service Hints

### FUEL HTR Relay

5-3 : Closed with the ignition SW at **ON** or **ST** position

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
F12	34 (LHD 1CD-FTV)				

### : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	52 (LHD 1AZ-FE)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
	54 (LHD 1CD-FTV)	

### : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EE	54 (LHD 1CD-FTV)	Near the Starter