

Service Hints

H13 Headlight Beam Level Control SW

- 1—Ground : Approx. **12** volts with the light control SW at **HEAD** position
- 2—Ground : Always continuity

H1, H2 Headlight Beam Level Control Actuator LH, RH

- 3—Ground : Approx. **12** volts with the light control SW at **HEAD** position
- 1—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
H1	33 (LHD 1AZ-FE)	H2	35 (LHD 1CD-FTV)	J15	38 (LHD)
	35 (LHD 1CD-FTV)	H13	37 (LHD)		
H2	33 (LHD 1AZ-FE)	J9	38 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	