

Service Hints

H4 Headlight Cleaner Relay

- 1—Ground : Approx. **12** volts with the ignition SW at **ON** position
- 5—Ground : Always approx. **12** volts
- 3—Ground : Always continuity
- 4—Ground : Continuity with the light control SW at **HEAD** position and headlight cleaner SW at **ON** position

: Parts Location

Code	See Page	Code	See Page	Code	See Page
C12	36 (LHD)	H4	35 (LHD 1CD—FTV)	J13	38 (LHD)
H3	33 (LHD 1AZ—FE)	H14	37 (LHD)	J15	38 (LHD)
	35 (LHD 1CD—FTV)	J3	38 (LHD)	S22	A 39 (LHD)
H4	33 (LHD 1AZ—FE)	J9	38 (LHD)	S23	B 39 (LHD)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

: Ground Points

Code	See Page	Ground Points Location
EB	52 (LHD 1AZ—FE)	Right Radiator Side Support
	54 (LHD 1CD—FTV)	
IA	56 (LHD)	Left Kick Panel