

Interior Light (RHD)

Service Hints

Body ECU

- 3-Ground : Always approx. 12 volts
- 19-Ground : Always approx. 12 volts

B12 Back Door Courtesy SW

- 1-2 : Continuity with the back door open

D8, D9, D10, D11 Door Courtesy SW Front LH, RH Rear LH, RH

- 1-Ground : Continuity with the door open

P7 Personal Light

- 1-Ground : Always approx. 12 volts
- 2-Ground : Always continuity

V4, V5 Vanity Light LH, RH

- 1-Ground : Approx. 12 volts with the ignition SW at **ON** position
- 2-Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B12	50 (RHD)	D11	50 (RHD)	J29 B	48 (RHD)
C8 A	46 (RHD)	I12 B	47 (RHD)	L3	50 (RHD)
C9 B	46 (RHD)	I13 A	47 (RHD)	P7	51 (RHD)
D2	47 (RHD)	I15	50 (RHD)	S32 A	49 (RHD)
D3	47 (RHD)	I16	50 (RHD)	S33 B	49 (RHD)
D8	50 (RHD)	J16	48 (RHD)	V4	51 (RHD)
D9	50 (RHD)	J22	48 (RHD)	V5	51 (RHD)
D10	50 (RHD)	J28 A	48 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IJ		
IK	25 (RHD)	Instrument Panel J/B and Roof Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3H	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BC2		
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)



: Ground Points

Code	See Page	Ground Points Location
IA	66 (RHD)	Left Kick Panel
BF	70 (RHD)	Center of the Back Door Panel



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	70 (RHD)	Roof Wire	B12	70 (RHD)	Back Door No.2 Wire
B8					