

### System Outline

When the driver's side door is opened with the ignition SW OFF and the tail relay ON, a buzzer comes on.

### Service Hints

#### D8 Door Courtesy SW Front LH

1—Ground : Continuity with the door open

#### C8 (A), C9 (B) Combination Meter

(A) 21—Ground : Always approx. **12** volts

(A) 1—Ground : Approx. **12** volts with the ignition SW at **ON** position

(A) 20, (A) 40—Ground : Always continuity

(A) 23—Ground : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position

### ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B10	36 (LHD)	D8	40 (LHD)	S15	B
C8	A	J16	38 (LHD)		
C9	B	S14	A		

### ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

### ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3F	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3H		
3J		
3K		

### □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC1	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC3		

### ▽ : Ground Points

Code	See Page	Ground Points Location
IC	56 (LHD)	Right Kick Panel