

System Outline

When the driver's side door is opened with the ignition SW OFF and the tail relay ON, a buzzer comes on.

Service Hints

D9 Door Courtesy SW Front RH

1—Ground : Continuity with the door open

C8 (A), C9 (B) Combination Meter

(A) 21—Ground : Always approx. **12** volts

(A) 1—Ground : Approx. **12** volts with the ignition SW at **ON** position

(A) 20, (A) 40—Ground : Always continuity

(A) 23—Ground : Approx. **12** volts with the light control SW at **TAIL** or **HEAD** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	A	46 (RHD)	D9	50 (RHD)	
C9	B	46 (RHD)	J16	48 (RHD)	

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3H		
3K		

▽ : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel