

# PTC Heater (LHD 1AZ-FE)

## Service Hints

### P6 PTC Heater Amplifier

2-Ground : Approx. 12 volts with the ignition SW at **ON** position

5-Ground : Always continuity

## ○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
A9		32 (LHD 1AZ–FE)	E10	B	37 (LHD)	J16		38 (LHD)
A10		32 (LHD 1AZ–FE)	E11	A	37 (LHD)	J17		38 (LHD)
A12		36 (LHD)	J5	A	38 (LHD)	P5		38 (LHD)
B10	A	36 (LHD)	J6	B	38 (LHD)	P6		38 (LHD)
C8		36 (LHD)	J8		38 (LHD)	S22	A	39 (LHD)
E8	D	37 (LHD)	J13	A	38 (LHD)	S23	B	39 (LHD)
E9	C	37 (LHD)	J14	B	38 (LHD)	W1		33 (LHD 1AZ–FE)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
5	23	Engine Room R/B No.4 (Left Side of Air Cleaner)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3D	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3F		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IG1	56 (LHD)	Cowl No.2 Wire and Engine Room Main Wire (Behind the Combination Meter)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
IC	56 (LHD)	Right Kick Panel

