

Radio and Player (LHD w/ Display)

Service Hints

R4 (A), R5 (B), R6 (C), R7 (D) Radio and Player

- (A) 7–Ground : Approx. **12** volts with the ignition SW at **ON** position
- (A) 18–Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (C) 3–Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (C) 4–Ground : Always approx. **12** volts
- (A) 8–Ground : Always approx. **12** volts
- (C) 7–Ground : Always continuity
- (A) 4–Ground : Always continuity
- (A) 2–Ground : Always continuity (1CD–FTV)
- (A) 1–Ground : Always continuity (1AZ–FE)

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
A11	32 (LHD 1AZ–FE)	J5	A	38 (LHD)	R7	D	38 (LHD)
A11	34 (LHD 1CD–FTV)	J6	B	38 (LHD)	R21		41 (LHD)
C8	36 (LHD)	J16		38 (LHD)	R22		41 (LHD)
E8	37 (LHD)	J18		38 (LHD)	S24	A	39 (LHD)
E11	37 (LHD)	R4	A	38 (LHD)	S25	B	39 (LHD)
F16	40 (LHD)	R5	B	38 (LHD)	T12		41 (LHD)
F17	40 (LHD)	R6	C	38 (LHD)	T13		41 (LHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
3C	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3F		
3H		
3J		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	56 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IE1	56 (LHD)	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IH2	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IK2	58 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)
IM1	58 (LHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	60 (LHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	60 (LHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IB	56 (LHD)	Behind the Combination Meter
IC	56 (LHD)	Right Kick Panel

