

## Service Hints

### R6 (A), R7 (B) Radio and Player

- (A) 3-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (A) 4-Ground : Always approx. **12** volts
- (A) 7-Ground : Always continuity

## ○ : Parts Location

Code		See Page		Code		See Page		Code		See Page	
F16		40 (LHD)		R7	B	38 (LHD)		T12		41 (LHD)	
F17		40 (LHD)		R21		41 (LHD)		T13		41 (LHD)	
R6	A	38 (LHD)		R22		41 (LHD)					

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3C	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3J		
3K		

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	56 (LHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IC1	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IE1	56 (LHD)	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IK2	58 (LHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IM1	58 (LHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	60 (LHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	60 (LHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

## ▽ : Ground Points

Code	See Page	Ground Points Location
IB	56 (LHD)	Behind the Combination Meter