

Radio and Player (RHD w/ Display)

Service Hints

R4 (A), R6 (C), R7 (D) Radio and Player

- (A) 7-Ground : Approx. **12** volts with the ignition SW at **ON** position
- (A) 18-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (C) 3-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (C) 4-Ground : Always approx. **12** volts
- (A) 8-Ground : Always approx. **12** volts
- (C) 7-Ground : Always continuity
- (A) 4-Ground : Always continuity
- (A) 2-Ground : Always continuity (1CD-FTV)
- (A) 1-Ground : Always continuity (1AZ-FE)

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
A11	42 (RHD 1AZ-FE)	J3	48 (RHD)	R22	51 (RHD)
A11	44 (RHD 1CD-FTV)	J16	48 (RHD)	S34	A 49 (RHD)
C8	46 (RHD)	J18	48 (RHD)	S35	B 49 (RHD)
E8	47 (RHD)	R4	A 48 (RHD)	T12	51 (RHD)
E11	47 (RHD)	R6	C 48 (RHD)	T13	51 (RHD)
F16	50 (RHD)	R7	D 48 (RHD)		
F17	50 (RHD)	R21	51 (RHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3D		
3F		
3H		
3I		
3J		
4B	30 (RHD)	Center J/B No.2 and Instrument Panel Wire (Near the Steering Column)
4E		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	68 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IC1	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IE1	66 (RHD)	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IH1	68 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IK2	66 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IL1	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)
IM1	68 (RHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	70 (RHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	70 (RHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IB	66 (RHD)	Behind the Combination Meter
IC	66 (RHD)	Right Kick Panel

