

Service Hints

R6 (A), R7 (B) Radio and Player

- (A) 3-Ground : Approx. **12** volts with the ignition SW at **ACC** or **ON** position
- (A) 4-Ground : Always approx. **12** volts
- (A) 7-Ground : Always continuity

○ : Parts Location

Code	See Page	Code		See Page	Code	See Page
F16	50 (RHD)	R6	A	48 (RHD)	R22	51 (RHD)
F17	50 (RHD)	R7	B	48 (RHD)	T12	51 (RHD)
J18	48 (RHD)	R21		51 (RHD)	T13	51 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3I		
3J		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IA2	68 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IC1	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IE1	66 (RHD)	Engine Room Main Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IK2	66 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM1	68 (RHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
BA1	70 (RHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	70 (RHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)

▽ : Ground Points

Code	See Page	Ground Points Location
IB	66 (RHD)	Behind the Combination Meter