

Service Hints

R18 Rear Cooler Relay

5-3 : Closed with the rear cooler SW at ON

: Parts Location

Code	See Page	Code	See Page	Code	See Page
J35	50 (RHD)	R18	51 (RHD)	R20	51 (RHD)
R13	51 (RHD)	R19	51 (RHD)		

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3K	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IJ1	68 (RHD)	Engine Room Main Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
BD1	70 (RHD)	Roof No.2 Wire and Floor No.2 Wire (Right Quarter Panel)

: Ground Points

Code	See Page	Ground Points Location
BD	70 (RHD)	Front Side of the Right Quarter Panel
BE	70 (RHD)	Right Quarter Panel

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B11	70 (RHD)	Roof No.2 Wire			