

System Outline

The rear fog light is turned on when the following conditions are met, and the rear fog light SW is ON.

* Light control SW is at HEAD position

* Light control SW is at TAIL position and the front fog light is ON

The rear fog light is turned off when the rear fog light SW is turned ON again or the light control SW is turned OFF.

Service Hints

B10 Body ECU

3—Ground : Always approx. **12** volts

4—Ground : Approx. **12** volts with the ignition SW at **ON** position

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	A	36 (LHD)	J36	A	40 (LHD)	S16	A	39 (LHD)
C8		36 (LHD)	J37	B	40 (LHD)	S17	B	39 (LHD)
C12		36 (LHD)	R15		41 (LHD)	S22	A	39 (LHD)
F15		37 (LHD)	R17		41 (LHD)	S23	B	39 (LHD)
J3		38 (LHD)	S14	A	39 (LHD)			
J7		38 (LHD)	S15	B	39 (LHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)
3F	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3H		
3I		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
ID2	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
IA	56 (LHD)	Left Kick Panel
IC	56 (LHD)	Right Kick Panel
BF	60 (LHD)	Center of the Back Door Panel