

Service Hints

R11 Rear Heater SW

6—Ground : Approx. 12 volts with the ignition SW at **ON** position

3—Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
D5	37 (LHD)	J22	38 (LHD)	R9	38 (LHD)
J4	38 (LHD)	J35	40 (LHD)	R10	38 (LHD)
J16	38 (LHD)	R8	38 (LHD)	R11	38 (LHD)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IB		
3B	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3E		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II1	58 (LHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
II2		
IM1	58 (LHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	56 (LHD)	Right Kick Panel
BE	60 (LHD)	Right Quarter Panel