

## Service Hints

### R11 Rear Heater SW

6—Ground : Approx. 12 volts with the ignition SW at **ON** position

3—Ground : Always continuity

### : Parts Location

Code	See Page	Code	See Page	Code	See Page
D5	47 (RHD)	R8	48 (RHD)	R10	48 (RHD)
J3	48 (RHD)	R9	48 (RHD)	R11	48 (RHD)

### : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
3B	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3G		
3K		

### : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	68 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)
IM2	68 (RHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)

### : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel