

## Service Hints

### RR DEF Relay

5-3 : Closed with the defogger SW at ON

## ○ : Parts Location

| Code | See Page | Code | See Page | Code | See Page   |
|------|----------|------|----------|------|------------|
| H15  | 37 (LHD) | J22  | 38 (LHD) | R25  | B 41 (LHD) |
| J1   | 38 (LHD) | M1   | 40 (LHD) | R26  | A 41 (LHD) |
| J16  | 38 (LHD) | M2   | 40 (LHD) |      |            |

## ○ : Relay Blocks

| Code | See Page | Relay Blocks (Relay Block Location)                   |
|------|----------|---|
| 2    | 22       | Engine Room R/B (Front Side of Left Suspension Tower) |

## ○ : Junction Block and Wire Harness Connector

| Code | See Page | Junction Block and Wire Harness (Connector Location)                |
|------|----------|---|
| IA   | 24 (LHD) | Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel) |
| IB   |          |   |
| IM   | 25 (LHD) | Instrument Panel J/B and Floor Wire (Lower Finish Panel)            |
| IN   | 25 (LHD) | Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel) |
| 3B   | 28 (LHD) | Center J/B and Instrument Panel Wire (Right Side of Grove Box)      |
| 3F   |          |   |
| 3K   |          |   |

## □ : Connector Joining Wire Harness and Wire Harness

| Code | See Page | Joining Wire Harness and Wire Harness (Connector Location)            |
|------|----------|---|
| IA1  | 56 (LHD) | Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)        |
| IK1  | 58 (LHD) | Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)       |
| BC1  | 60 (LHD) | Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel) |

## ▽ : Ground Points

| Code | See Page | Ground Points Location        |
|------|----------|-------------------------------|
| IC   | 56 (LHD) | Right Kick Panel              |
| BF   | 60 (LHD) | Center of the Back Door Panel |