

System Outline

When the driver's seat belt is not fastened with the ignition SW being on, the seat belt warning light comes on.

Service Hints

B11 Buckle SW RH

1-2 : Open with driver's seat belt in use

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B11	46 (RHD)	J3	48 (RHD)	S32	A 49 (RHD)
C8	46 (RHD)	J16	48 (RHD)	S33	B 49 (RHD)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
II3	68 (RHD)	Instrument Panel Wire and Floor No.2 Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
IC	66 (RHD)	Right Kick Panel