

Service Hints

S38 Stop Light SW

2-1 : Closed with the brake pedal depresses

○ : Parts Location

Code		See Page	Code		See Page	Code	See Page
H16		40 (LHD)	J33	A	40 (LHD)	R16	41 (LHD)
J23	A	38 (LHD)	J34	B	40 (LHD)	S38	39 (LHD)
J24	B	38 (LHD)	R14		41 (LHD)		

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)

▽ : Ground Points

Code	See Page	Ground Points Location
BB	60 (LHD)	Front Side of the Left Quarter Panel