

## Service Hints

## I14 Ignition SW

7-8 : Closed with the ignition SW at **ST** position

### S4 (A), S5 (B) Starter

### Points closed with the ignition SW at **ST** position

○ : Parts Location

Code	See Page	Code		See Page	Code		See Page
E7	37 (LHD)	S4	A	33 (LHD 1AZ–FE)	S5	B	33 (LHD 1AZ–FE)
I14	37 (LHD)			35 (LHD 1CD–FTV)			35 (LHD 1CD–FTV)

 : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
7	23	Engine Room R/B No.2 (Front Side of Left Suspension Tower)

 : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IH	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IP	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

 : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
EA1	52 (LHD 1AZ-FF)	Engine Wire and Engine Room Main Wire (Near The Engine Room R/B)
	54 (LHD 1CD-FTV)	
ID3	56 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IL3	58 (LHD)	Engine Wire and Instrument Panel Wire (Right Kick Panel)

 : Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E10	54 (LHD 1CD-FTV)	Engine Wire			