

Service Hints

I14 Ignition SW

7-8 : Closed with the ignition SW at **ST** position

S4 (A), S5 (B) Starter

Points closed with the ignition SW at **ST** position

: Parts Location

Code	See Page	Code		See Page	Code		See Page
E7	47 (RHD)	S4	A	43 (RHD 1AZ-FE)	S5	B	43 (RHD 1AZ-FE)
I14	47 (RHD)			45 (RHD 1CD-FTV)			45 (RHD 1CD-FTV)

: Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)
7	23	Engine Room R/B No.2 (Front Side of Left Suspension Tower)

: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IC	24 (RHD)	Instrument Panel J/B and Engine Wire (Left Side of Grove Box)
IH	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IP	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)

: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IL3	66 (RHD)	Engine Wire and Instrument Panel Wire (Left Kick Panel)

: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
E23	64 (RHD 1CD-FTV)	Engine Wire			