

Service Hints

T5 (A), T6 (B) Theft Deterrent ECU

(A) 10–Ground : Approx. **12** volts with the ignition SW at **ON** position

(A) 11–Ground : Always approx. **12** volts

(A) 22–Ground : Always continuity

B10 Body ECU

3, 25–Ground : Always approx. **12** volts

D8, D9, D10, D11 Door Courtesy SW Front LH, RH, Rear LH, RH

1–Ground : Continuity with the door open

U1 Unlock Warning SW

2–1 : Closed with the ignition key in cylinder

○ : Parts Location

Code		See Page	Code		See Page	Code		See Page
B10	A	46 (RHD)	D24	B	50 (RHD)	J22		48 (RHD)
B12		50 (RHD)	E5		42 (RHD 1AZ–FE)	J26	A	48 (RHD)
C8	A	46 (RHD)			44 (RHD 1CD–FTV)	J27	B	48 (RHD)
C9	B	46 (RHD)	E8	B	47 (RHD)	J28	A	48 (RHD)
D2		47 (RHD)		D	47 (RHD)	J29	B	48 (RHD)
D7		47 (RHD)	G3		50 (RHD)	J32		50 (RHD)
D8		50 (RHD)	G4		50 (RHD)	J35		50 (RHD)
D9		50 (RHD)	H6	B	43 (RHD 1AZ–FE)	R3		48 (RHD)
D10		50 (RHD)			45 (RHD 1CD–FTV)	S30	A	49 (RHD)
D11		50 (RHD)	I15		50 (RHD)	S31	B	49 (RHD)
D12	A	50 (RHD)	I16		50 (RHD)	T5	A	49 (RHD)
D13	B	50 (RHD)	J1	A	48 (RHD)	T6	B	49 (RHD)
D15	A	50 (RHD)	J2	B	48 (RHD)	T9		49 (RHD)
D16	A	50 (RHD)	J3		48 (RHD)	T11		51 (RHD)
D17	A	50 (RHD)	J7		48 (RHD)	U1		49 (RHD)
D21	B	50 (RHD)	J15		48 (RHD)	W3		51 (RHD)
D23	B	50 (RHD)	J16		48 (RHD)			

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

Theft Deterrent (RHD)



: Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IB		
IG		
IJ		
IK	25 (RHD)	Instrument Panel J/B and Roof Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3A	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3B		
3C		
3E	28 (RHD)	Center J/B and Floor No.2 Wire (Lower Finish Panel)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3H		
3J		
3K		
4A	30 (RHD)	Center J/B No.2 and Instrument Panel Wire (Near the Steering Column)
4B		
4C		



: Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
ED1	62 (RHD 1AZ-FE)	Engine Room No.4 Wire and Engine Room Main Wire (Near the Radiator Fan Motor)
	64 (RHD 1CD-FTV)	
IA1	68 (RHD)	Front Door RH Wire and Instrument Panel Wire (Right Kick Panel)
IA3		
IC1	66 (RHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
IC2		
IC3		
ID2	66 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar LH)
IH1	68 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)
IK1	66 (RHD)	Front Door LH Wire and Instrument Panel Wire (Left Kick Panel)
IM1	68 (RHD)	Floor No.2 Wire and Instrument Panel Wire (Right Kick Panel)
IM2		
BA1	70 (RHD)	Rear Door LH Wire and Floor Wire (Left Center Pillar)
BB1	70 (RHD)	Rear Door RH Wire and Floor No.2 Wire (Right Center Pillar)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)



: Ground Points

Code	See Page	Ground Points Location
EB	62 (RHD 1AZ-FE)	Right Radiator Side Support
	64 (RHD 1CD-FTV)	
IA	66 (RHD)	Left Kick Panel
IC	66 (RHD)	Right Kick Panel
BC	70 (RHD)	Left Quarter Panel
BE	70 (RHD)	Right Quarter Panel
BF	70 (RHD)	Center of the Back Door Panel



: Splice Points

Code	See Page	Wire Harness with Splice Points	Code	See Page	Wire Harness with Splice Points
B7	70 (RHD)	Roof Wire	B8	70 (RHD)	Roof Wire

