

Taillight (LHD)

Service Hints

TAIL Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
B10 A	36 (LHD)	J3	38 (LHD)	J37 B	40 (LHD)
C12	36 (LHD)	J8	38 (LHD)	L1	40 (LHD)
F1	32 (LHD 1AZ-FE)	J15	38 (LHD)	L2	40 (LHD)
	34 (LHD 1CD-FTV)	J33 A	40 (LHD)	R14	41 (LHD)
F2	32 (LHD 1AZ-FE)	J34 B	40 (LHD)	R16	41 (LHD)
	34 (LHD 1CD-FTV)	J36 A	40 (LHD)		

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)
IN	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IC3	56 (LHD)	Instrument Panel Wire and Floor Wire (Upper Part of Front Body Pillar LH)
BC1	60 (LHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	60 (LHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
EB	52 (LHD 1AZ-FE)	Right Radiator Side Support
	54 (LHD 1CD-FTV)	
IA	56 (LHD)	Left Kick Panel
BB	60 (LHD)	Front Side of the Left Quarter Panel
BF	60 (LHD)	Center of the Back Door Panel

