

# Taillight (RHD)

## Service Hints

### TAIL Relay

5-3 : Closed with the light control SW at **TAIL** or **HEAD** position

## ○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C12	B	46 (RHD)	J3	48 (RHD)	L1
	A	46 (RHD)	J8	48 (RHD)	L2
F1		42 (RHD 1AZ-FE)	J33	A	50 (RHD)
		44 (RHD 1CD-FTV)	J34	B	50 (RHD)
F2		42 (RHD 1AZ-FE)	J36	A	50 (RHD)
		44 (RHD 1CD-FTV)	J37	B	50 (RHD)
				R14	51 (RHD)
				R15	51 (RHD)
				R16	51 (RHD)
				R17	51 (RHD)

## ○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

## ○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IA	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
IN	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)

## □ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
BC1	70 (RHD)	Back Door No.1 Wire and Floor Wire (Upper Part of Left Quarter Panel)
BE1	70 (RHD)	Back Door No.1 Wire and Back Door No.2 Wire (Back Door Left)

## ▽ : Ground Points

Code	See Page	Ground Points Location
EA	62 (RHD 1AZ-FE)	Left Radiator Side Support
	64 (RHD 1CD-FTV)	
IC	66 (RHD)	Right Kick Panel
BB	70 (RHD)	Front Side of the Left Quarter Panel
BF	70 (RHD)	Center of the Back Door Panel

