

Turn Signal and Hazard Warning Light (LHD)

Service Hints

T9 Turn Signal Flasher Relay

4-Ground : Always approx. 12 volts

1-Ground : Approx. 12 volts with the ignition SW at **ON** position

7-Ground : Always continuity

○ : Parts Location

Code		See Page	Code	See Page	Code		See Page
C8	A	36 (LHD)	F7	32 (LHD 1AZ–FE)	J32		40 (LHD)
C9	B	36 (LHD)		34 (LHD 1CD–FTV)	J33		40 (LHD)
C12		36 (LHD)	F8	32 (LHD 1AZ–FE)	R23		41 (LHD)
F5	32 (LHD 1AZ–FE)			34 (LHD 1CD–FTV)	R24		41 (LHD)
	34 (LHD 1CD–FTV)		H15	37 (LHD)	S14	A	39 (LHD)
F6	32 (LHD 1AZ–FE)		J8	38 (LHD)	S15	B	39 (LHD)
	34 (LHD 1CD–FTV)		J16	38 (LHD)	T9		39 (LHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (LHD)	Instrument Panel J/B and Instrument Panel Wire (Lower Finish Panel)
IL	25 (LHD)	Instrument Panel J/B and Engine Room Main Wire (Lower Finish Panel)
IM	25 (LHD)	Instrument Panel J/B and Floor Wire (Lower Finish Panel)
3F	28 (LHD)	Center J/B and Instrument Panel Wire (Right Side of Grove Box)
3H		
3I		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	58 (LHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	52 (LHD 1AZ-FE)	Left Radiator Side Support
	54 (LHD 1CD-FTV)	
IC	56 (LHD)	Right Kick Panel
BB	60 (LHD)	Front Side of the Left Quarter Panel
BC	60 (LHD)	Left Quarter Panel

