

Turn Signal and Hazard Warning Light (RHD)

Service Hints

T9 Turn Signal Flasher Relay

4–Ground : Always approx. 12 volts

1–Ground : Approx. 12 volts with the ignition SW at **ON** position

7–Ground : Always continuity

○ : Parts Location

Code	See Page	Code	See Page	Code	See Page
C8	A	46 (RHD)	F7	J16	48 (RHD)
C9	B	46 (RHD)		J33	A
C12	A	46 (RHD)	F8	J34	B
	B	46 (RHD)		R23	50 (RHD)
F5	42 (RHD 1AZ–FE)	H15	47 (RHD)	R24	51 (RHD)
	44 (RHD 1CD–FTV)	J3	48 (RHD)	S14	A
F6	42 (RHD 1AZ–FE)	J8	48 (RHD)	S15	B
	44 (RHD 1CD–FTV)	J15	48 (RHD)	T9	49 (RHD)

○ : Relay Blocks

Code	See Page	Relay Blocks (Relay Block Location)
2	22	Engine Room R/B (Front Side of Left Suspension Tower)

○ : Junction Block and Wire Harness Connector

Code	See Page	Junction Block and Wire Harness (Connector Location)
IB	24 (RHD)	Instrument Panel J/B and Instrument Panel Wire (Left Side of Grove Box)
IL	25 (RHD)	Instrument Panel J/B and Engine Room Main Wire (Left Side of Grove Box)
IM	25 (RHD)	Instrument Panel J/B and Floor Wire (Left Side of Grove Box)
3F	28 (RHD)	Center J/B and Instrument Panel Wire (Lower Finish Panel)
3H		
3I		
3K		

□ : Connector Joining Wire Harness and Wire Harness

Code	See Page	Joining Wire Harness and Wire Harness (Connector Location)
IH1	68 (RHD)	Instrument Panel Wire and Engine Room Main Wire (Upper Part of Front Body Pillar RH)

▽ : Ground Points

Code	See Page	Ground Points Location
EA	62 (RHD 1AZ–FE)	Left Radiator Side Support
	64 (RHD 1CD–FTV)	
EB	62 (RHD 1AZ–FE)	Right Radiator Side Support
	64 (RHD 1CD–FTV)	
IC	66 (RHD)	Right Kick Panel
BB	70 (RHD)	Front Side of the Left Quarter Panel

