

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
A 1	A/C Lock Sensor	90980-11016	B13	Back Door Opener SW	90980-10860
	A/C Magnetic Clutch		C 1	Camshaft Position Sensor	90980-10947
A 2	A/T Indicator Light SW	90980-11784	C 2	Camshaft Timing Oil Control Valve	90980-11162
	Back-Up Light SW		C 3	Condenser Fan Motor (Except 1AZ-FE Europe)	90980-10928
	Neutral Start SW			Condenser Fan Motor (1AZ-FE Europe)	90980-11237
A 3	Air Flow Meter	90980-11317	C 4	Counter Gear Speed Sensor	90980-11156
A 4	Air Fuel Ratio Sensor (Bank 1 Sensor 1)	90980-11178	C 5	Crankshaft Position Sensor (1AZ-FE)	90980-10947
A 5	Air Fuel Ratio Sensor (Bank 1 Sensor 2)			Crankshaft Position Sensor (1CD-FTV)	90980-12028
A 6	Airbag Sensor Front LH	90980-11856	C 6	Cigarette Lighter	90980-10795
A 7	Airbag Sensor Front RH		C 7	Circuit Opening Relay	82660-20340
A 8	Alternator	90980-09212	C 8	Combination Meter	90980-12169
A 9	Alternator	90980-11964	C 9	Combination Meter	90980-12155
A10	Ambient Temp. Sensor No.1	90980-11070	C10	Combination SW	90980-11148
A11	Ambient Temp. Sensor No.2		C11	Combination SW	90980-11986
A12	A/C Amplifier	90980-11915	C12	Combination SW	90980-11672
A13	A/C Amplifier	90980-11913	C13	Curtain Shield Airbag Squib LH	90980-11886
A14	A/C Amplifier	90980-11911	C14	Curtain Shield Airbag Squib RH	
A15	A/C Evaporator Temp. Sensor	90980-11918	D 1	Diesel Throttle Control Motor	90980-11144
A16	Accelerator Pedal Position Sensor	90980-11144	D 2	Diode	90980-11608
A17	Air Inlet Control Servo Motor	90980-11909	D 3	Diode	
A18	Air Mix Control Servo Motor		D 4	Diode (Fan)	90980-11251
A19	Air Vent Mode Control Servo Motor		D 5	Diode	90980-11608
A20	Airbag Sensor Assembly	90980-11873	D 6	DLC3	90980-11665
A21	Airbag Sensor Assembly	90980-11872	D 7	Double Door Lock ECU	90980-10807
A22	Airbag Sensor Assembly	90980-11871	D 8	Door Courtesy SW Front LH	90980-10871
A23	Airbag Squib (Front Passenger Airbag Assembly)	90980-11884	D 9	Door Courtesy SW Front RH	
A24	Airbag Squib (Steering Wheel Pad)		D10	Door Courtesy SW Rear LH	
A25	Ashtray Illumination	90980-10355	D11	Door Courtesy SW Rear RH	
B 1	Back-Up Light SW	90980-11250	D12	Door Key Lock and Unlock SW Front LH	90980-10891
B 2	Brake Fluid Level Warning SW (LHD)	90980-11009		Door Lock Motor Front LH	
	Brake Fluid Level Warning SW (RHD)	90980-11207		Door Unlock Detection SW Front LH	
B 3	Brake Vacuum Warning SW	90980-11252		Double Door Lock Motor Front LH	
B 4	Back-Up Light Relay	82660-20340		Double Lock Position SW Front LH	
B 5	Blower Motor (Except Two Way Flow Heater)	90980-10214	D13	Door Key Lock and Unlock SW Front RH	90980-11858
	Blower Motor (Two Way Flow Heater)	90980-10903		Door Lock Motor Front RH	
B 6	Blower Relay (HI)	82660-28230	D14	Door Key Lock and Unlock SW Front LH	
B 7	Blower Relay (M1)	82660-20340		Door Lock Motor Front LH	
B 8	Blower Relay (M2)			Door Unlock Detection SW Front LH	
B 9	Blower Resistor (Except Two Way Flow Heater)	90980-11136	D15	Door Key Lock and Unlock SW Front RH	90980-10891
	Blower Resistor (Two Way Flow Heater)	90980-10976		Door Lock Motor Front RH	
B10	Body ECU	90980-11915		Door Unlock Detection SW Front RH	
B11	Buckle SW RH	90980-10825		Double Door Lock Motor Front RH	
B12	Back Door Courtesy SW	90980-10795			
	Back Door Lock Motor				

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
D16	Door Key Lock and Unlock SW Rear LH	90980-10891	F10	Front Wiper Motor	90980-11599
	Door Lock Motor Rear LH		F11	Fuel Filter Warning SW	90980-11003
	Door Unlock Detection SW Rear LH		F12	Fuel Heater	90980-10928
	Double Door Lock Motor Rear LH		F13	Fuel Pressure Sensor	90980-10845
	Double Lock Position SW Rear LH		F14	Fuel Temp. Sensor	90980-10737
D17	Door Key Lock and Unlock SW Rear RH		F15	Front Fog Light Relay	82660-20340
	Door Lock Motor Rear RH		F16	Front Door Speaker LH	90980-10935
	Door Unlock Detection SW Rear RH		F17	Front Door Speaker RH	
	Double Door Lock Motor Rear RH		F18	Fuel Pump	90980-11077
	Double Lock Position SW Rear RH			Fuel Sender	
D18	Door Lock Control SW Front LH	90980-11947	F19	Fuse Holder	82610-20080
	Power Window SW Front LH		G 1	Glow Plug	99141-12006
D19	Door Lock Control SW Front RH		G 2	Glow Plug Relay	90980-11569
	Power Window SW Front RH		G 3	Glass Breakage Sensor	90980-10799
D20	Door Lock Control SW	90980-12166	G 4	Glass Breakage Sensor Microphone	90980-11368
	Power Window Master SW		H 1	Headlight Beam Level Control Actuator LH	90980-11016
D21	Door Lock Motor Front LH	90980-11019	H 2	Headlight Beam Level Control Actuator RH	
D22	Door Lock Motor Front RH		H 3	Headlight Cleaner Motor	90980-11410
D23	Door Lock Motor Rear LH		H 4	Headlight Cleaner Relay	90980-10939
D24	Door Lock Motor Rear RH		H 5	Headlight LH (High)	90980-11659
			H 6	Headlight LH (Low)	90980-11660
E 1	ECT Solenoid	90980-11658	H 7	Headlight RH (High)	90980-11659
E 2	EGR Valve Control Motor	90980-11144	H 8	Headlight RH (Low)	90980-11660
E 3	Electronic Driver Unit	90980-11592	H 9	Heated Oxygen Sensor (Bank 1 Sensor 2)	90980-11028
E 4	Electronic Driver Unit	90980-11024	H10	Heated Oxygen Sensor (Bank 2 Sensor 2)	
E 5	Engine Hood Courtesy SW (LHD)	90980-10887	H11	Horn (High)	90980-10619
	Engine Hood Courtesy SW (RHD)	90980-11003	H12	Horn (Low)	
E 6	Engine Oil Level Sensor	90980-11235	H13	Headlight Beam Level Control SW	90980-10996
E 7	Engine and ECT ECU (A/T)	90980-11638	H14	Headlight Cleaner SW	90980-11013
	Engine ECU (M/T)		H15	Heater Control Panel	90980-11915
E 8	Engine and ECT ECU (A/T)	90980-11637	H16	High Mounted Stop Light	90980-11148
	Engine ECU (M/T)		I 1	Ignition Coil and Igniter No.1	90980-11885
E 9	Engine and ECT ECU (A/T)	90980-11586	I 2	Ignition Coil and Igniter No.2	
	Engine ECU (M/T)		I 3	Ignition Coil and Igniter No.3	
E10	Engine and ECT ECU (A/T)	90980-11476	I 4	Ignition Coil and Igniter No.4	
	Engine ECU (M/T)		I 5	Injector No.1 (1AZ-FE)	90980-11875
E11	Engine and ECT ECU (A/T)	90980-11421		Injector No.1 (1CD-FTV)	90980-12005
	Engine ECU (M/T)		I 6	Injector No.2 (1AZ-FE)	90980-11875
F 1	Front Clearance Light LH	90980-11156		Injector No.2 (1CD-FTV)	90980-12005
F 2	Front Clearance Light RH		I 7	Injector No.3 (1AZ-FE)	90980-11875
F 3	Front Fog Light LH	90980-11660		Injector No.3 (1CD-FTV)	90980-12005
F 4	Front Fog Light RH		I 8	Injector No.4 (1AZ-FE)	90980-11875
F 5	Front Side Turn Signal Light LH	90980-11162		Injector No.4 (1CD-FTV)	90980-12005
F 6	Front Side Turn Signal Light RH		I 9	Intake Air Temp. Sensor	90980-11025
F 7	Front Turn Signal Light LH	90980-11019	I10	ISC Valve	90980-11145
F 8	Front Turn Signal Light RH				
F 9	Front Washer Motor	90980-10981			

L PART NUMBER OF CONNECTORS

Code	Part Name	Part Number	Code	Part Name	Part Number
I11	Idle-Up SW	90980-10933	K 1	Knock Sensor	90980-11166
I12	Ignition Key Cylinder Light	90980-11148	K 2	Kick Down SW	90980-11156
I13	Ignition Key Cylinder Light	90980-12092	L 1	License Plate Light LH	90980-11148
	Transponder Key Amplifier		L 2	License Plate Light RH	
I14	Ignition SW	90980-11615	L 3	Luggage Compartment Light	90980-11187
I15	Interior Light (Front)	90980-10908	M 1	Mirror Heater LH	90980-11587
I16	Interior Light (Rear)	90980-10935		Remote Control Mirror LH	
J 1	Junction Connector	90980-11661	M 2	Mirror Heater RH	
J 2	Junction Connector			Remote Control Mirror RH	
J 3	Junction Connector	90980-11583	M 3	Moon Roof Control Relay	90980-10799
J 4	Junction Connector	90980-11542		Moon Roof Control SW	
J 5	Junction Connector	90980-11661	M 4	Moon Roof Limit SW	90980-11011
J 6	Junction Connector			Moon Roof Motor	
J 7	Junction Connector	90980-11542	N 1	Noise Filter	90980-11019
J 8	Junction Connector		O 1	Oil Pressure SW	90980-11363
J 9	Junction Connector		O 2	O/D Main SW	90980-10824
J10	Junction Connector		P 1	Power Steering Oil Pressure SW	90980-11428
J11	Junction Connector	90980-11661	P 2	Pressure SW	90980-10943
J12	Junction Connector		P 3	Parking Brake SW	90980-10871
J13	Junction Connector		P 4	Power Point Relay	82660-20340
J14	Junction Connector		P 5	PTC Heater	90980-10956
J15	Junction Connector	90980-11542	P 6	PTC Heater Amplifier	90980-10807
J16	Junction Connector	90980-12244	P 7	Personal Light	90980-10935
J17	Junction Connector	90980-11542	P 8	Power Outlet	90980-10859
J18	Junction Connector	90980-11529	P 9	Power Window Control SW Rear LH	90980-11947
J19	Junction Connector	90980-11542	P10	Power Window Control SW Rear RH	
J20	Junction Connector	90980-11529	P11	Power Window Motor Front LH	90980-10797
J21	Junction Connector	90980-11695	P12	Power Window Motor Front RH	
J22	Junction Connector	90980-11583	P13	Power Window Motor Rear LH	
J23	Junction Connector	90980-11661	P14	Power Window Motor Rear RH	
J24	Junction Connector		P15	Pretensioner LH	90980-12138
J25	Junction Connector	90980-11542	P16	Pretensioner RH	
J26	Junction Connector	90980-11661	R 1	Radiator Fan Motor	90980-10928
J27	Junction Connector		R 2	Rear Washer Motor	90980-11250
J28	Junction Connector		R 3	Radar Sensor	90980-11013
J29	Junction Connector		R 4	Radio and Player	90980-10819
J30	Junction Connector	90980-11542	R 5	Radio and Player	90980-10803
J31	Junction Connector	90980-11529	R 6	Radio and Player	90980-10997
J32	Junction Connector	90980-11539	R 7	Radio and Player	90980-10996
J33	Junction Connector	90980-11661	R 8	Rear Heater Blower Motor	90980-10795
J34	Junction Connector		R 9	Rear Heater Relay	82660-20340
J35	Junction Connector	90980-10976	R10	Rear Heater Relay (HI)	
J36	Junction Connector	90980-11661	R11	Rear Heater SW	90980-10797
J37	Junction Connector		R12	Remote Control Mirror SW	90980-11657
J38	Junction Block	82671-44010	R13	Rear Blower Motor	90980-10214
J39	Junction Block	90980-11775	R14	Rear Combination Light LH	90980-10908

Note: Not all of the above part numbers of the connector are established for the supply.

Code	Part Name	Part Number	Code	Part Name	Part Number
R15	Rear Combination Light LH	90980-11399	S27	Short Connector	90980-10871
R16	Rear Combination Light RH	90980-10908	S28	Short Connector	90980-10870
R17	Rear Combination Light RH	90980-11399	S29	Short Connector	90980-10871
R18	Rear Cooler Relay	82660-37070	S30	Short Connector	90980-11909
R19	Rear Cooler Resistor	90980-10976	S31	Short Connector	90980-11920
R20	Rear Cooler SW		S32	Short Connector	90980-11923
R21	Rear Door Speaker LH	90980-10935	S33	Short Connector	90980-11922
R22	Rear Door Speaker RH		S34	Short Connector	90980-11909
R23	Rear Turn Signal Light LH	90980-10906	S35	Short Connector	90980-11920
R24	Rear Turn Signal Light RH		S36	Side Airbag Squib LH	90980-11864
R25	Rear Window Defogger (-)	90980-10871	S37	Side Airbag Squib RH	
R26	Rear Window Defogger (+)		S38	Stop Light SW	90980-11118
R27	Rear Wiper Motor	90980-11296	S39	Side Airbag Sensor LH	90980-11857
	Rear Wiper Relay		S40	Side Airbag Sensor RH	
S 1	Skid Control ECU with Actuator	90980-12020	S41	Speed Sensor Rear LH	90980-11060
S 2	Speed Sensor Front LH	90980-11002	S42	Speed Sensor Rear RH	90980-10859
S 3	Speed Sensor Front RH		S43	Short Connector	90980-10870
S 4	Starter	90980-11400	S44	Short Connector	90980-10871
S 5	Starter	90980-09507	T 1	Throttle Position Sensor	90980-11261
S 6	Suction Control Valve No.1	90980-11285	T 2	Throttle Position SW	90980-11038
S 7	Suction Control Valve No.2	90980-11284	T 3	Turbine Speed Sensor	90980-11156
S 8	Seat Heater LH	90980-11296	T 4	Turbo Pressure Sensor	90980-10845
S 9	Seat Heater RH		T 5	Theft Deterrent ECU	90980-11392
S10	Seat Heater SW LH	90980-10797	T 6	Theft Deterrent ECU	90980-11424
S11	Seat Heater SW RH	90980-10996	T 8	Transponder Key Computer	90980-11556
S12	Short Connector	90980-10825	T 9	Turn Signal Flasher Relay	90980-10799
S13	Short Connector	90980-10824	T10	TVSS ECU	90980-11971
S14	Short Connector	90980-11909	T11	Theft Deterrent Siren (LHD)	90980-10988
S15	Short Connector	90980-11920		Theft Deterrent Siren (RHD)	90980-10942
S16	Short Connector	90980-11909	T12	Tweeter LH	90980-10915
S17	Short Connector	90980-11920	T13	Tweeter RH	
S18	Short Connector	90980-10871	U 1	Unlock Warning SW	90980-10860
S19	Short Connector	90980-10870	V 1	VRV (EGR)	90980-11162
S20	Short Connector	90980-11909	V 2	VSV (EVAP)	90980-11156
S21	Short Connector	90980-11920	V 3	VSV (Turbo Pressure Sensor)	90980-11149
S22	Short Connector	90980-11909	V 4	Vanity Light LH	90980-10621
S23	Short Connector	90980-11920	V 5	Vanity Light RH	
S24	Short Connector	90980-10908	W 1	Water Temp. Sensor	90980-10737
S25	Short Connector	90980-10907	W 2	Water Temp. SW	90980-11235
S26	Short Connector	90980-10870	W 3	Wireless Door Lock Control Receiver	90980-11909