


* The system shown here is an EXAMPLE ONLY. It is different to the actual circuit shown in the wiring diagram section.

4

HOW TO READ THIS SECTION

AVENSIS VERSO / PICNIC (EWD568E)

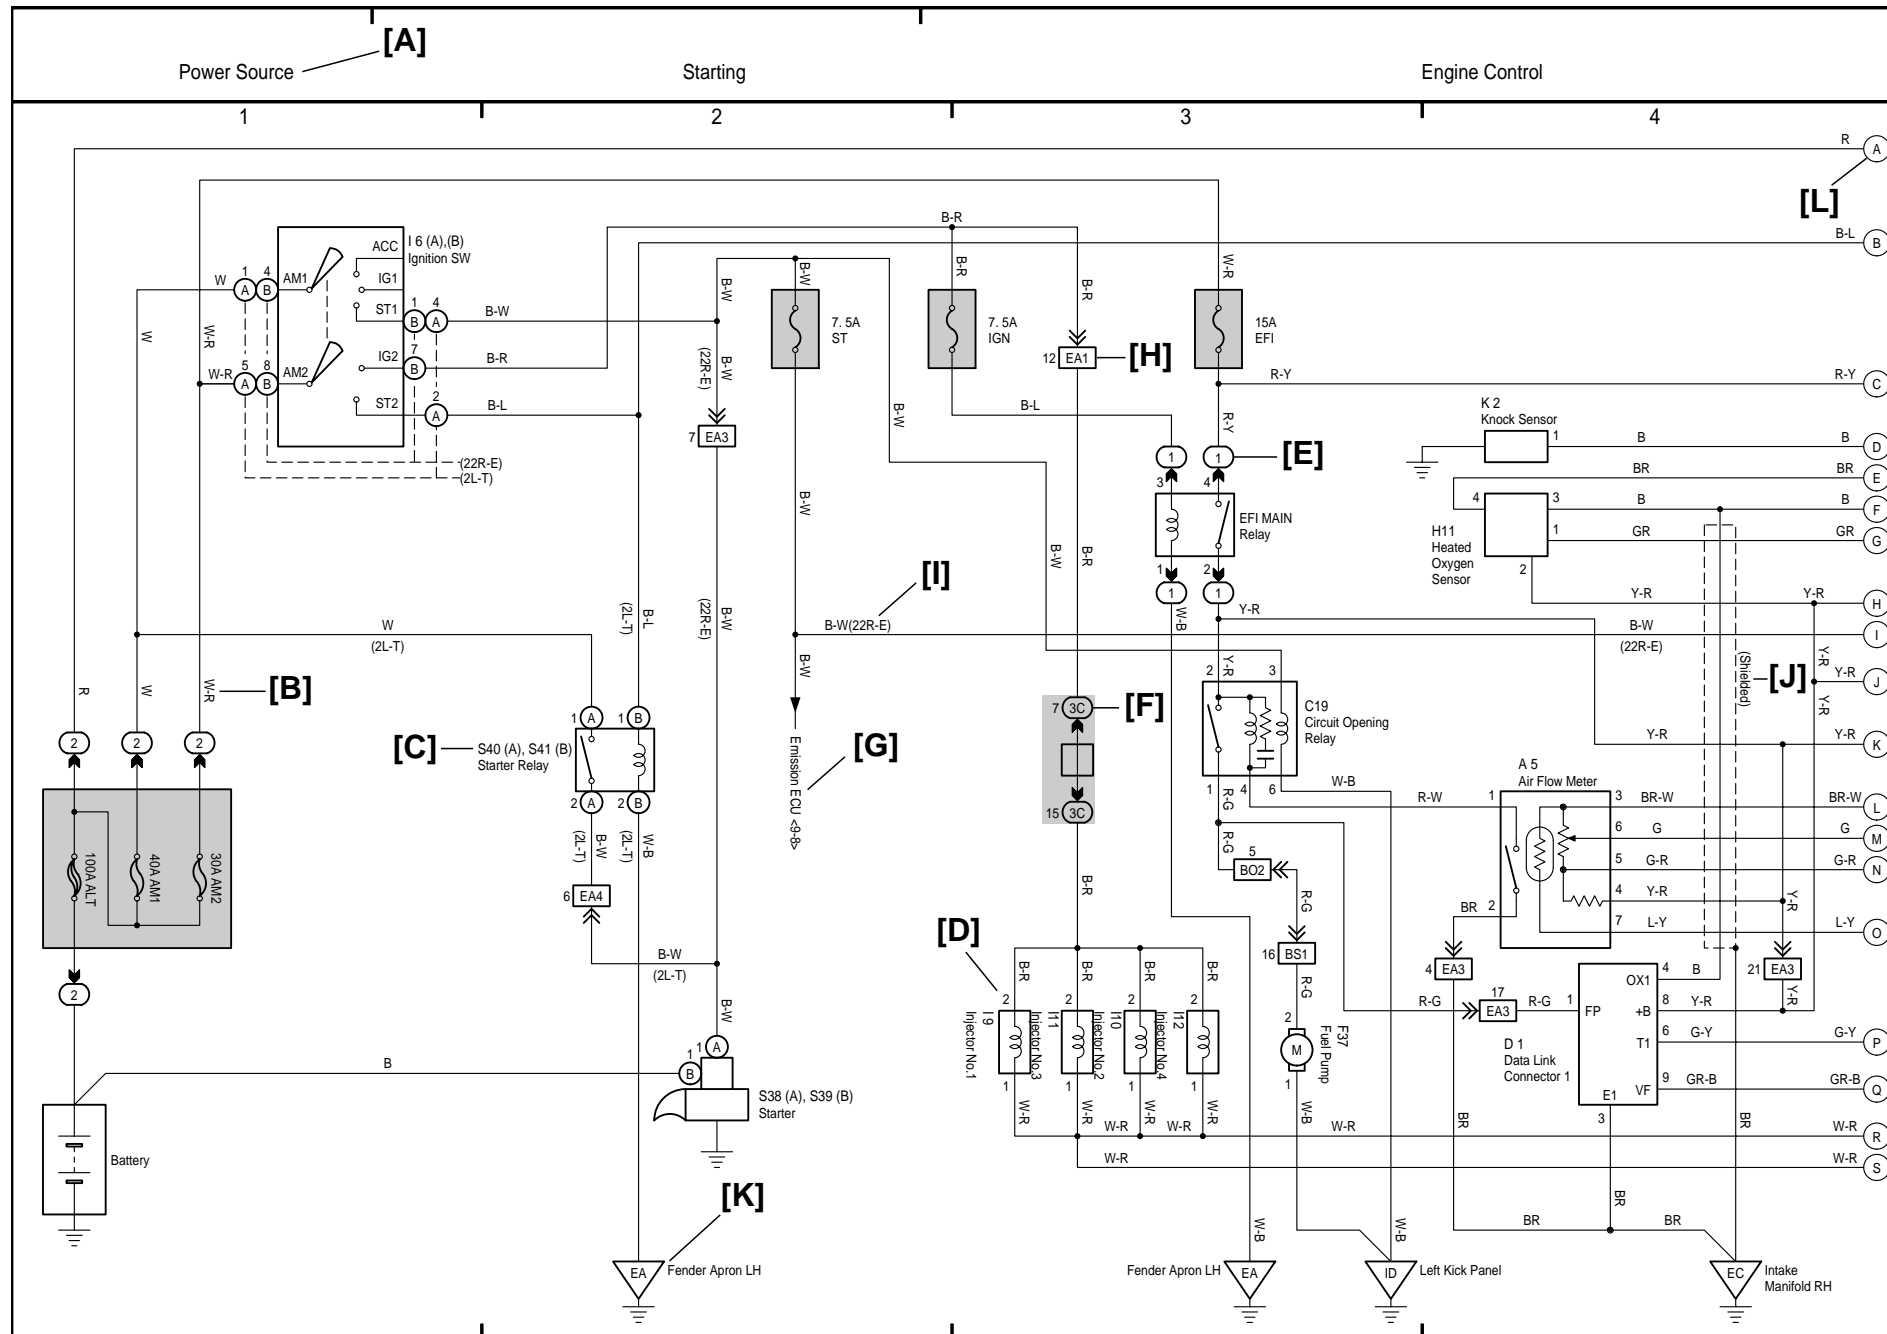

[A] : System Title


[B] : Indicates the wiring color.

Wire colors are indicated by an alphabetical code.

B = Black W = White BR = Brown
L = Blue V = Violet SB = Sky Blue
R = Red G = Green LG = Light Green
P = Pink Y = Yellow GR = Gray
O = Orange

The first letter indicates the basic wire color and the second letter indicates the color of the stripe.

Example: L – Y

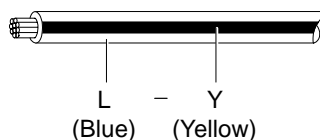


[C] : The position of the parts is the same as shown in the wiring diagram and wire routing.

[D] : Indicates the pin number of the connector.


The numbering system is different for female and male connectors.

 Example: Numbered in order from upper left to lower right



Female

 Numbered in order from upper right to lower left



Male


The numbering system for the overall wiring diagram is the same as above.

[E] : Indicates a Relay Block. No shading is used and only the Relay Block No. is shown to distinguish it from the J/B.

Example: ① Indicates Relay Block No.1

[F] : Junction Block (The number in the circle is the J/B No. and the connector code is shown beside it). Junction Blocks are shaded to clearly separate them from other parts.


Example

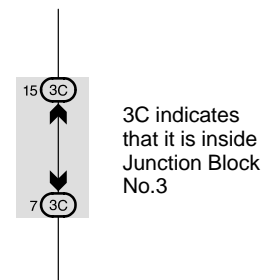

3C indicates that it is inside Junction Block No.3

[G] : Indicates related system.

[H] : Indicates the wiring harness and wiring harness connector. The wiring harness with male terminal is shown with arrows (↗). Outside numerals are pin numbers.

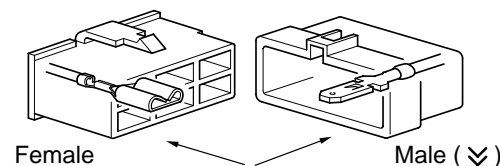

[I] : () is used to indicate different wiring and connector, etc. when the vehicle model, engine type, or specification is different.


[J] : Indicates a shielded cable.



[K] : Indicates and located on ground point.


[L] : The same code occurring on the next page indicates that the wire harness is continuous.

B HOW TO USE THIS MANUAL

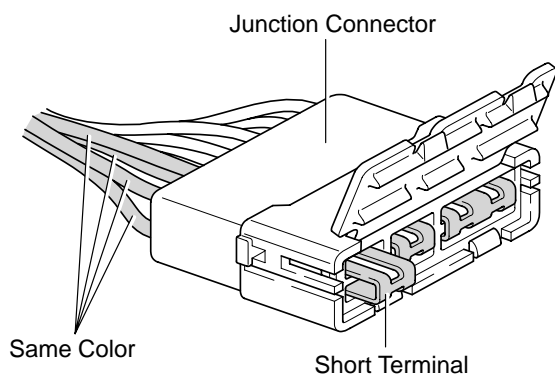

Junction connector in this manual include a short terminal which is connected to a number of wire harnesses. Always perform inspection with the short terminal installed. (When installing the wire harnesses, the harnesses can be connected to any position within the short terminal grouping. Accordingly, in other vehicles, the same position in the short terminal may be connected to a wire harness from a different part.)

Wire harness sharing the same short terminal grouping have the same color.

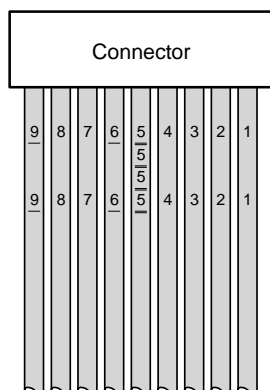

There are two types of wire harness for the instrument panel on AVENSIS VERSO / PICNIC.

Type A : The wire harness that uses the color-coded wire.

Type B : The wire harness that uses the same colored wire. (Not color-coded)

This means that there is a case where the wire harness used for even the same section may have different colored wire depending on the models.

Therefore, the wire colors are also mentioned in this manual as follows.

<Example>

Type A Type B
 \ /
 SB (G)

In case of using the same colored wires, each terminal number is printed on the wire as shown in the illustration on the left in order to distinguish each wiring.

Be sure to connect the terminal to the same place as indicated by the terminal number printed on the wire after disconnecting the terminal from the connector.