


E ELECTRICAL WIRING ROUTING

Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

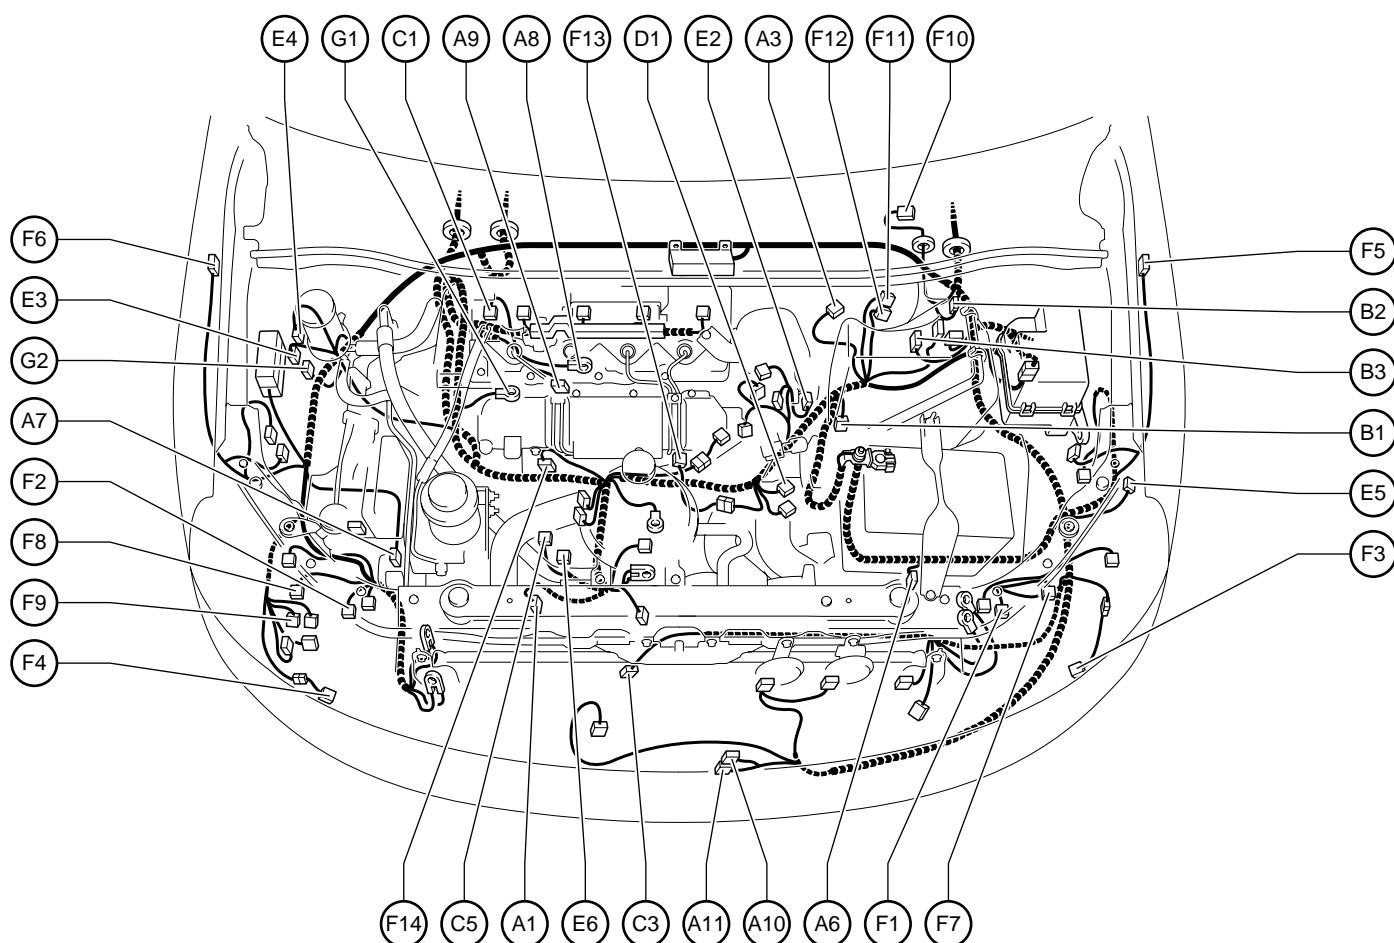

A 1 A/C Lock Sensor
A/C Magnetic Clutch

A 3 Air Flow Meter

A 6 Airbag Sensor Front LH

A 7 Airbag Sensor Front RH

A 8 Alternator

A 9 Alternator

A10 Ambient Temp. Sensor No.1

A11 Ambient Temp. Sensor No.2

B 1 Back-Up Light SW

B 2 Brake Fluid Level Warning SW

B 3 Brake Vacuum Warning SW

C 1 Camshaft Position Sensor

C 3 Condenser Fan Motor

C 5 Crankshaft Position Sensor

D 1 Diesel Throttle Control Motor

E 2 EGR Valve Control Motor

E 3 Electronic Driver Unit

E 4 Electronic Driver Unit

E 5 Engine Hood Courtesy SW

E 6 Engine Oil Level Sensor

F 1 Front Clearance Light LH

F 2 Front Clearance Light RH

F 3 Front Fog Light LH

F 4 Front Fog Light RH

F 5 Front Side Turn Signal Light LH

F 6 Front Side Turn Signal Light RH

F 7 Front Turn Signal Light LH

F 8 Front Turn Signal Light RH

F 9 Front Washer Motor

F10 Front Wiper Motor

F11 Fuel Filter Warning SW

F12 Fuel Heater

F13 Fuel Pressure Sensor

F14 Fuel Temp. Sensor

G 1 Glow Plug

G 2 Glow Plug Relay