


Position of Parts in Engine Compartment

[LHD : 1CD-FTV]

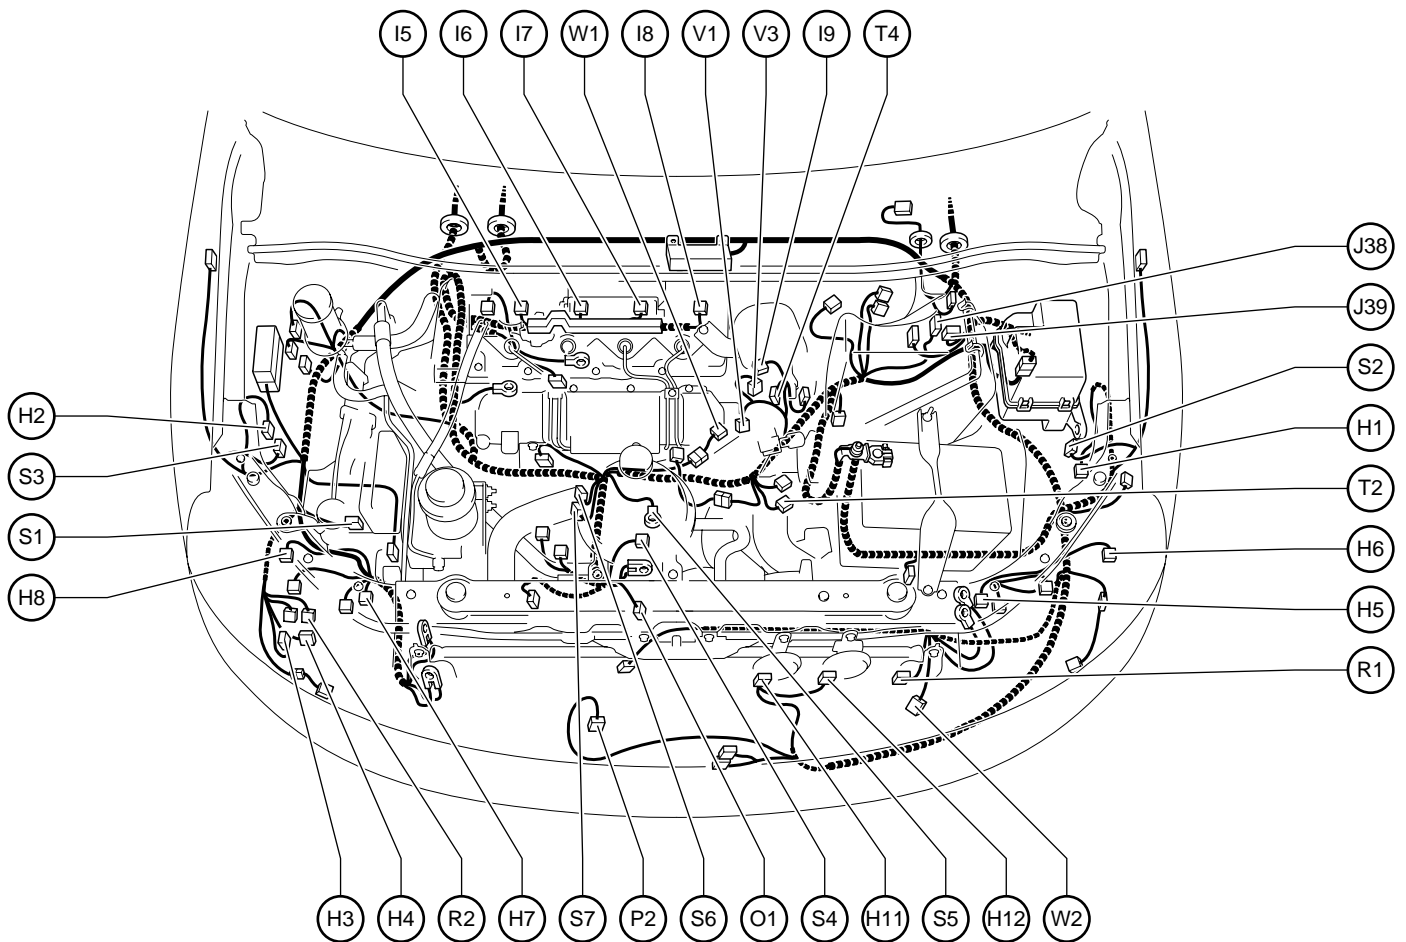

H 1 Headlight Beam Level Control Actuator LH
 H 2 Headlight Beam Level Control Actuator RH
 H 3 Headlight Cleaner Motor
 H 4 Headlight Cleaner Relay
 H 5 Headlight LH (High)
 H 6 Headlight LH (Low)
 H 7 Headlight RH (High)
 H 8 Headlight RH (Low)
 H11 Horn (High)
 H12 Horn (Low)

I 5 Injector No.1
 I 6 Injector No.2
 I 7 Injector No.3
 I 8 Injector No.4
 I 9 Intake Air Temp. Sensor

J 38 Junction Block
 J 39 Junction Block

O 1 Oil Pressure SW

P 2 Pressure SW

R 1 Radiator Fan Motor
 R 2 Rear Washer Motor

S 1 Skid Control ECU with Actuator
 S 2 Speed Sensor Front LH
 S 3 Speed Sensor Front RH
 S 4 Starter
 S 5 Starter
 S 6 Suction Control Valve No.1
 S 7 Suction Control Valve No.2

T 2 Throttle Position SW
 T 4 Turbo Pressure Sensor

V 1 VRV (EGR)
 V 3 VSV (Turbo Pressure Sensor)

W 1 Water Temp. Sensor
 W 2 Water Temp. SW