


## E ELECTRICAL WIRING ROUTING

### Position of Parts in Engine Compartment

[RHD : 1AZ-FE, 2AZ-FE]

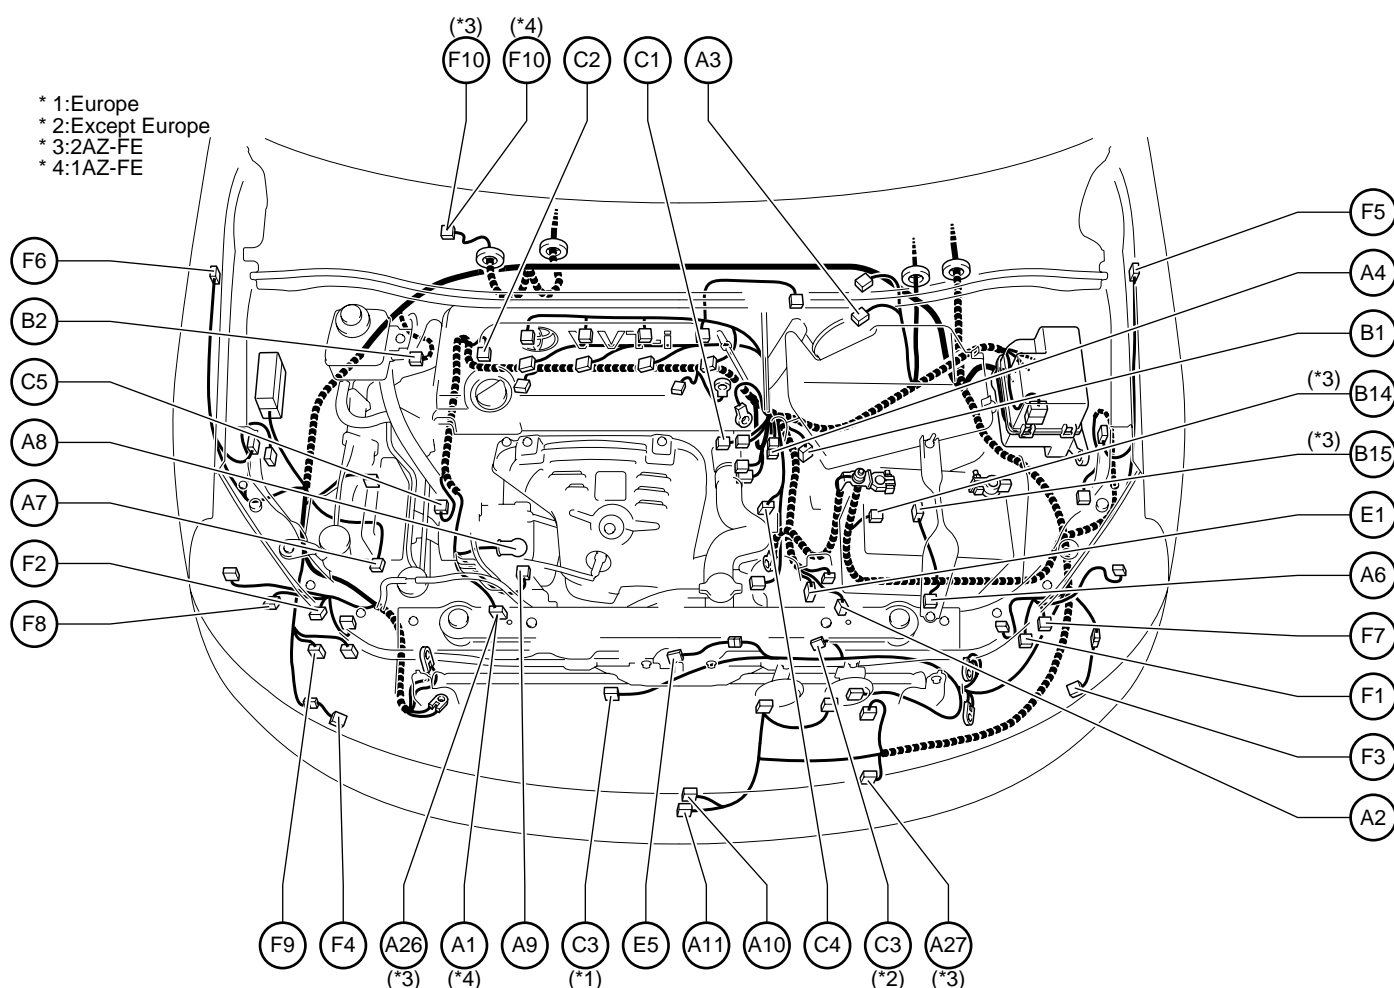

- A 1 A/C Lock Sensor  
A/C Magnetic Clutch
- A 2 A/T Indicator Light SW  
Back-Up Light SW  
Neutral Start SW
- A 3 Air Flow Meter
- A 4 Air Fuel Ratio Sensor (Bank 1 Sensor 1)
- A 6 Airbag Sensor Front LH
- A 7 Airbag Sensor Front RH
- A 8 Alternator
- A 9 Alternator
- A10 Ambient Temp. Sensor No.1
- A11 Ambient Temp. Sensor No.2
- A26 A/C Compressor
- A27 Air Conditioner Pressure Sensor
- B 1 Back-Up Light SW
- B 2 Brake Fluid Level Warning SW
- B14 Battery Current Sensor Assembly
- B15 Battery Thermometer Sensor

- C 1 Camshaft Position Sensor
- C 2 Camshaft Timing Oil Control Valve
- C 3 Condenser Fan Motor
- C 4 Counter Gear Speed Sensor
- C 5 Crankshaft Position Sensor
- E 1 ECT Solenoid
- E 5 Engine Hood Courtesy SW
- F 1 Front Clearance Light LH
- F 2 Front Clearance Light RH
- F 3 Front Fog Light LH
- F 4 Front Fog Light RH
- F 5 Front Side Turn Signal Light LH
- F 6 Front Side Turn Signal Light RH
- F 7 Front Turn Signal Light LH
- F 8 Front Turn Signal Light RH
- F 9 Front Washer Motor
- F10 Front Wiper Motor