


## Connector Joining Wire Harness and Wire Harness

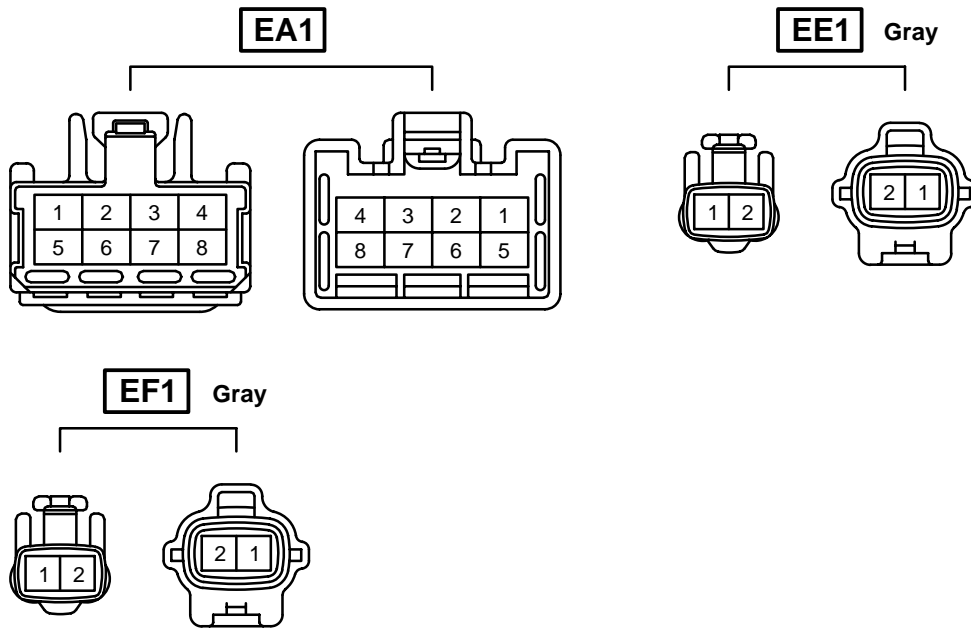

Code	Joining Wire Harness and Wire Harness (Connector Location)
EA1	Engine Wire and Engine Room Main Wire (Near the Engine Room R/B)
EE1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight LH)
EF1	Engine Room No.2 Wire and Engine Room Main Wire (Under the Headlight RH)